 




D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



1/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

LILLE 2F.OTM(OTM.2F)

M8X50



B1-2

M8X50



B2-2

M8



B3-4

M6X20



B4-12



B5-4



30 min



13



B6-6



E1-6



 
 
 
E2-1




E3-6




D1

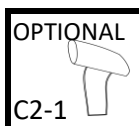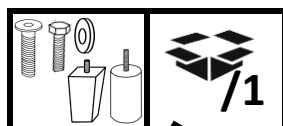


C1-2

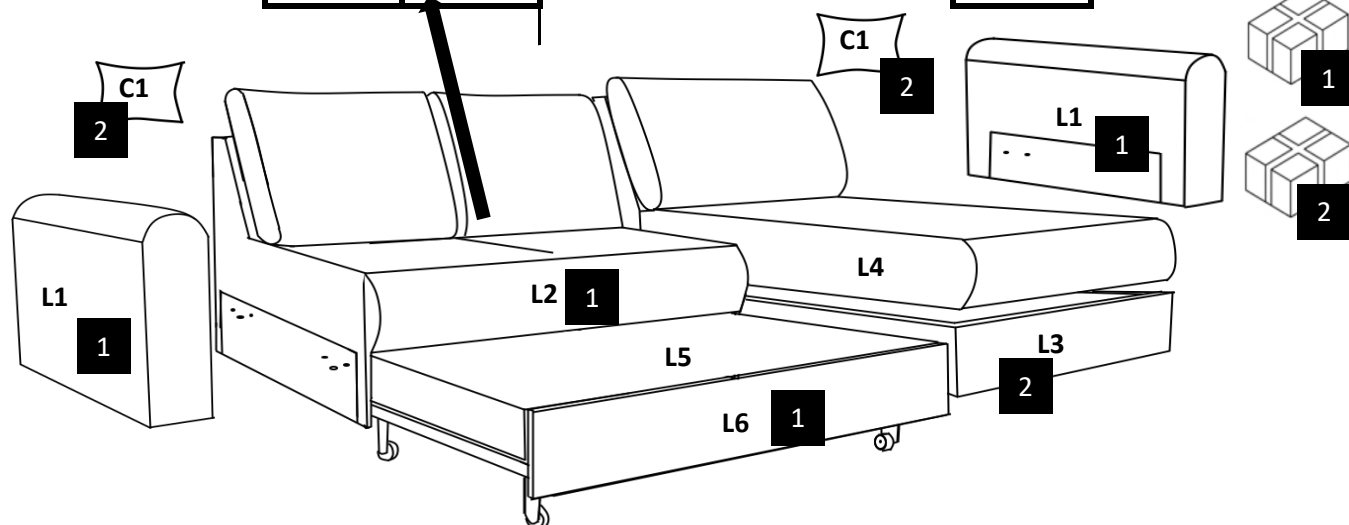 

2F.OTM

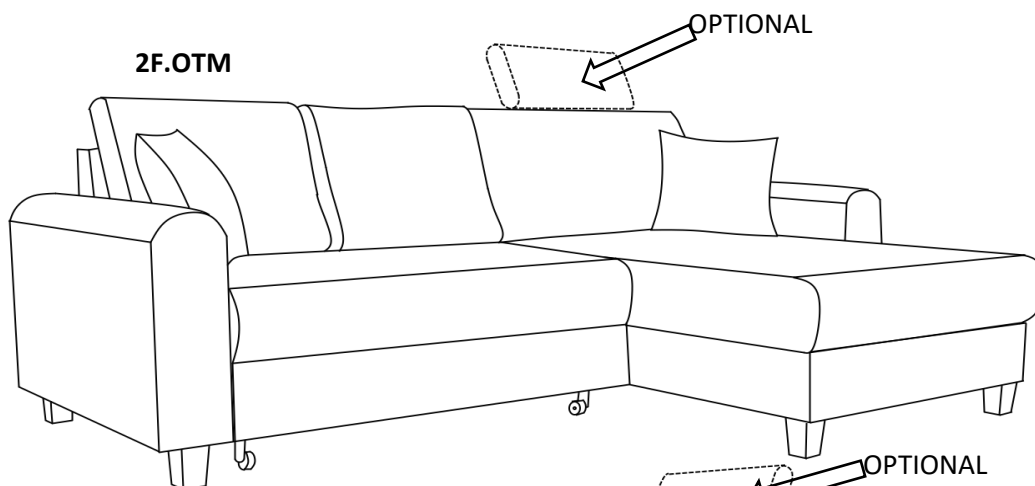 

OTM.2F

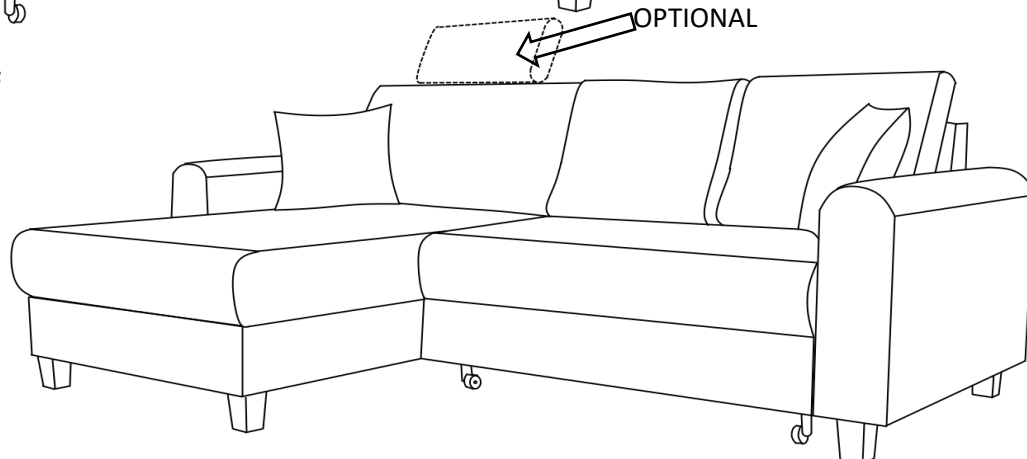 



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató




2/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

LILLE 2F.OTM(OTM.2F)

 M8X50



B1-2

M8X50



B2-2

M8



B3-4

M6X20



B4-12



B5-4



B6-6



E1-6



E2-1



 
E3-6




D1



C1-2

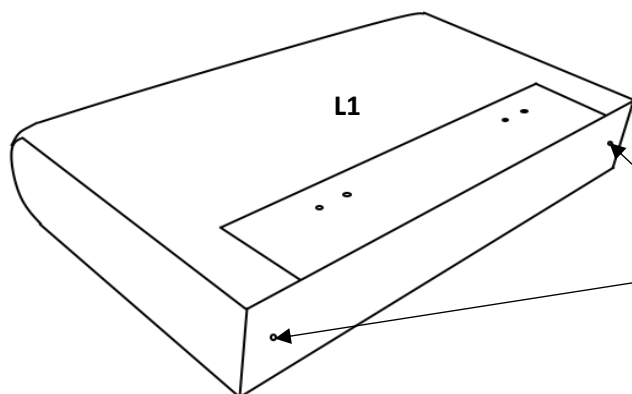


2F.OTM

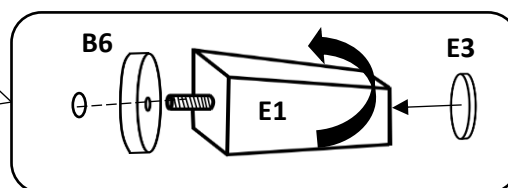 


OTM.2F

 
1.

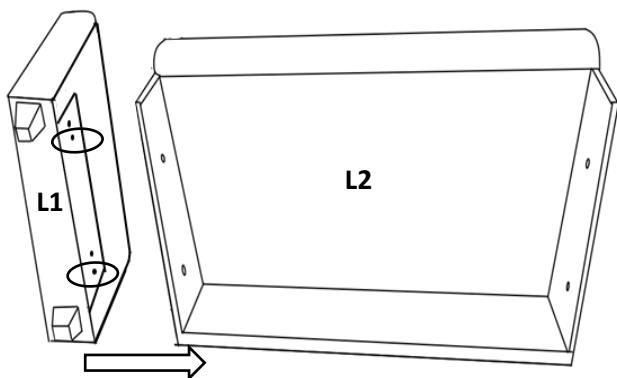

 
1.

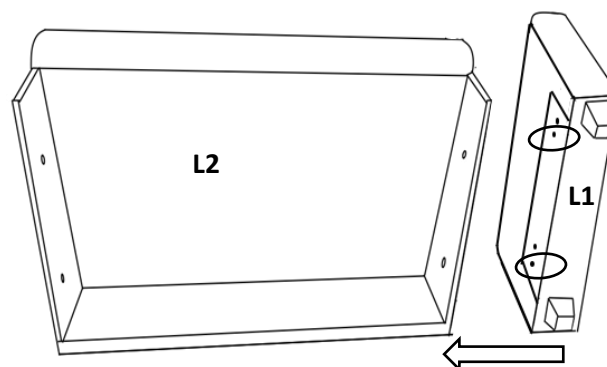

 2.

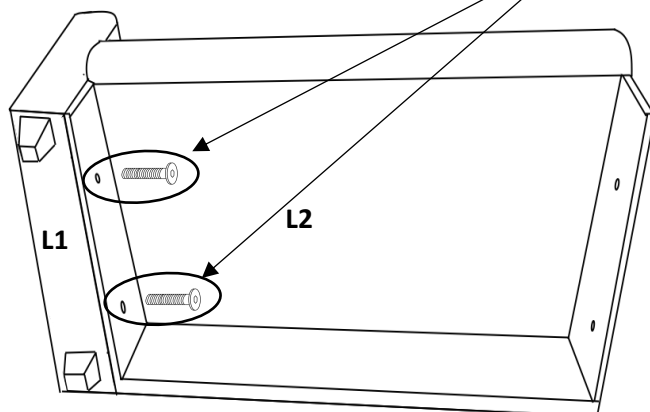

 2.

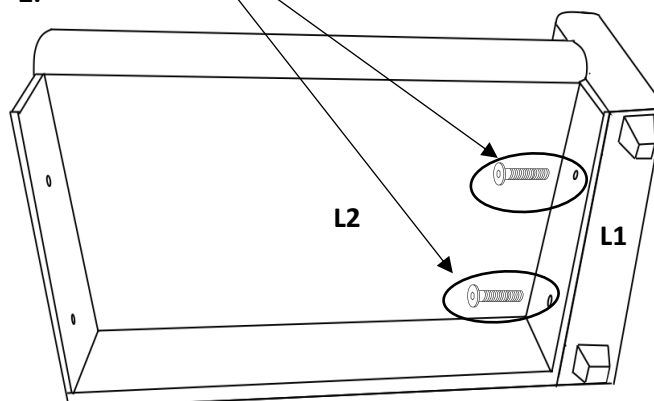



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



3/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

LILLE 2F.OTM(OTM.2F)

M8X50



B1-2

M8X50



B2-2

M8



B3-4

M6X20



B4-12



B5-4



B6-6



E1-6



E2-1



E3-6




D1




C1-2

2F.OTM

 OTM.2F

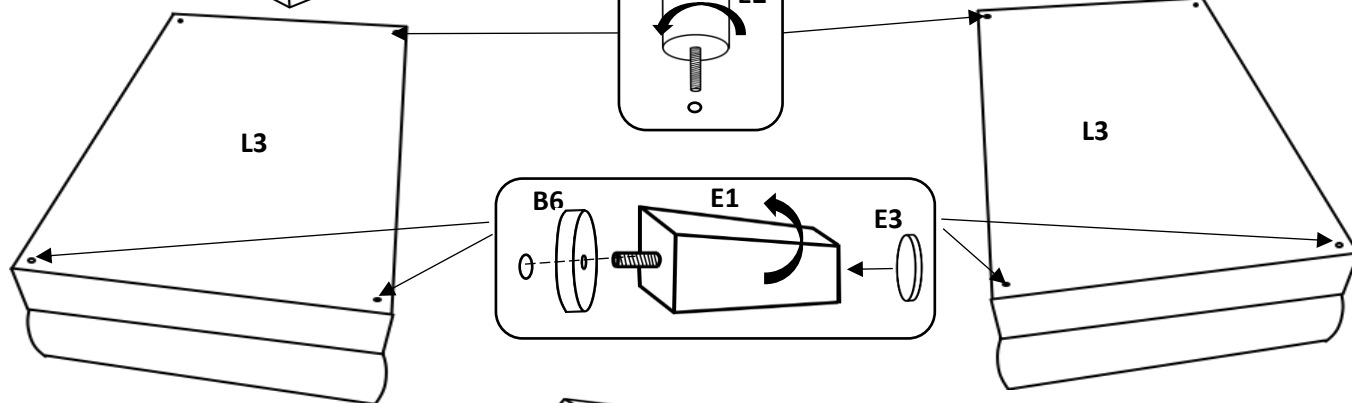


 1.

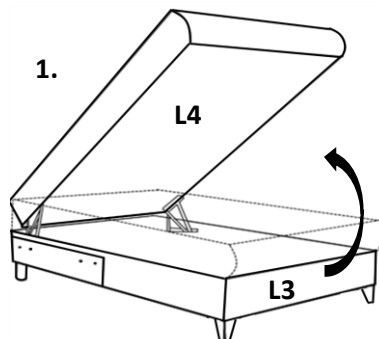


OTM.2F

 2F.OTM

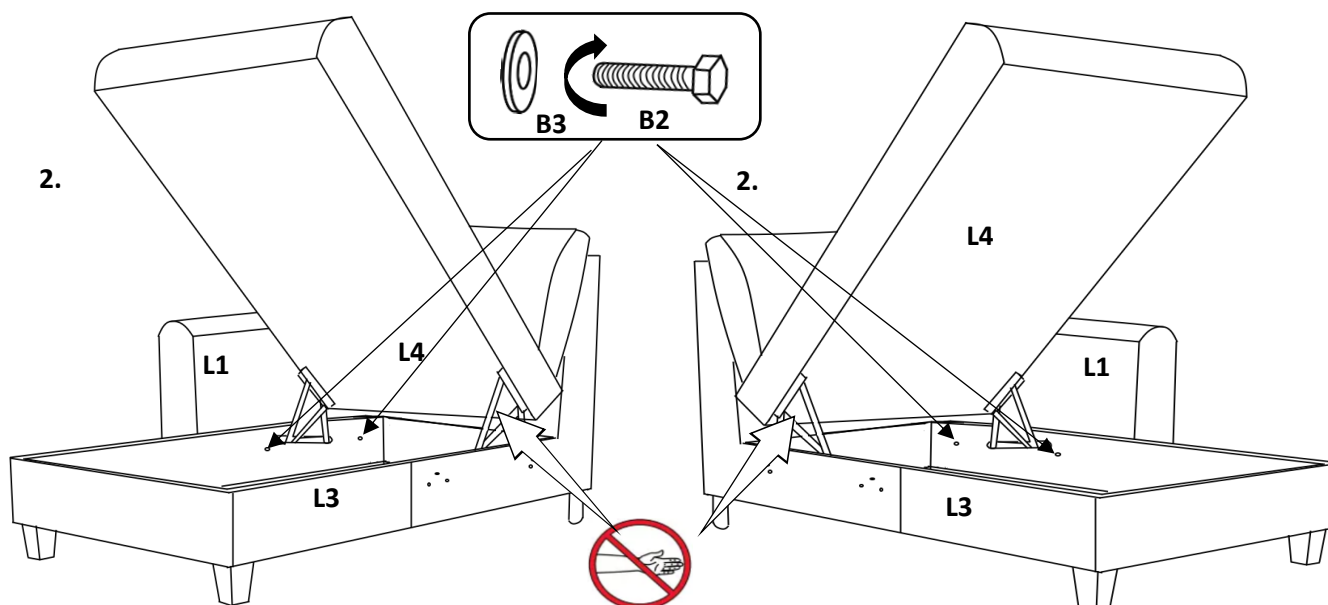



 D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



4/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

LILLE 2F.OTM(OTM.2F)

M8X50



B1-2

M8X50



B2-2

M8



B3-4

M6X20



B4-12



B5-4



B6-6



 
E1-6



E2-1



E3-6






D1



C1-2




OTM.2F

   2F.OTM

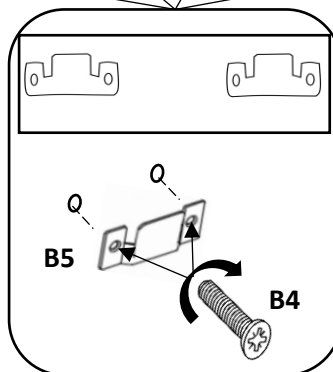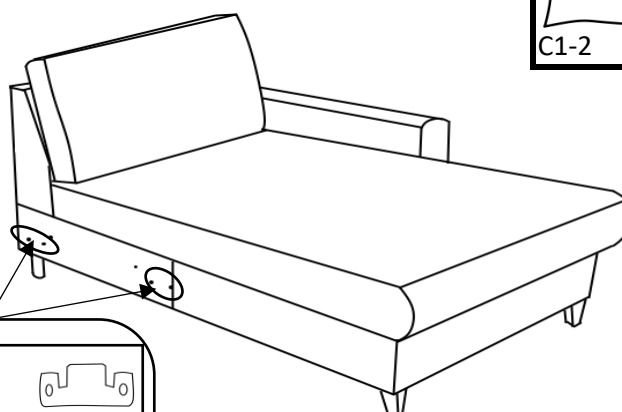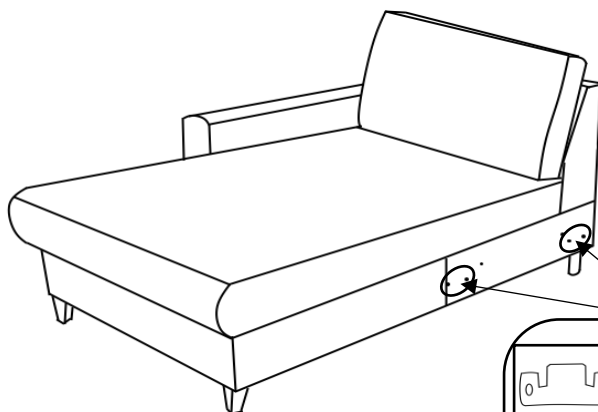

2F.OTM

   OTM.2F

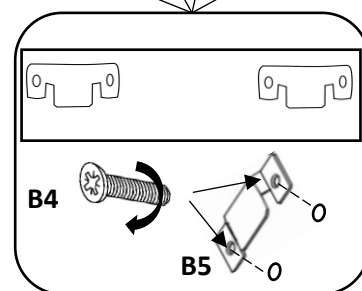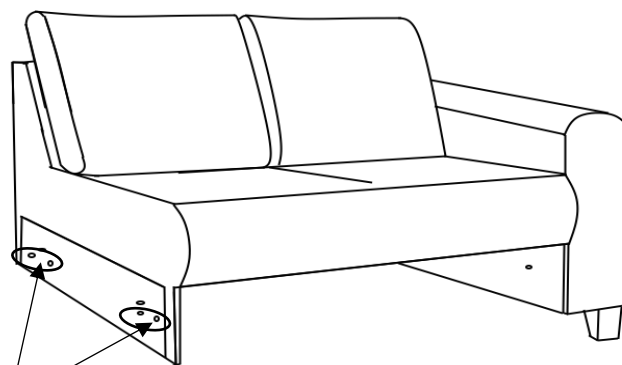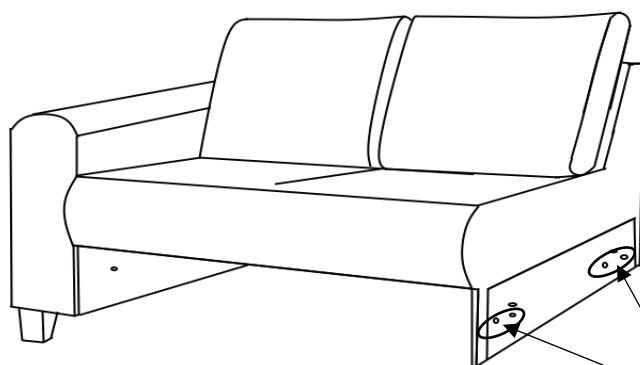



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



5/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

LILLE 2F.OTM(OTM.2F)

M8X50



B1-2

M8X50



B2-2

M8

 


B3-4

M6X20



B4-12



B5-4



2F.OTM



B6-6



 
E1-6



E2-1




E3-6



D1



 C1-2

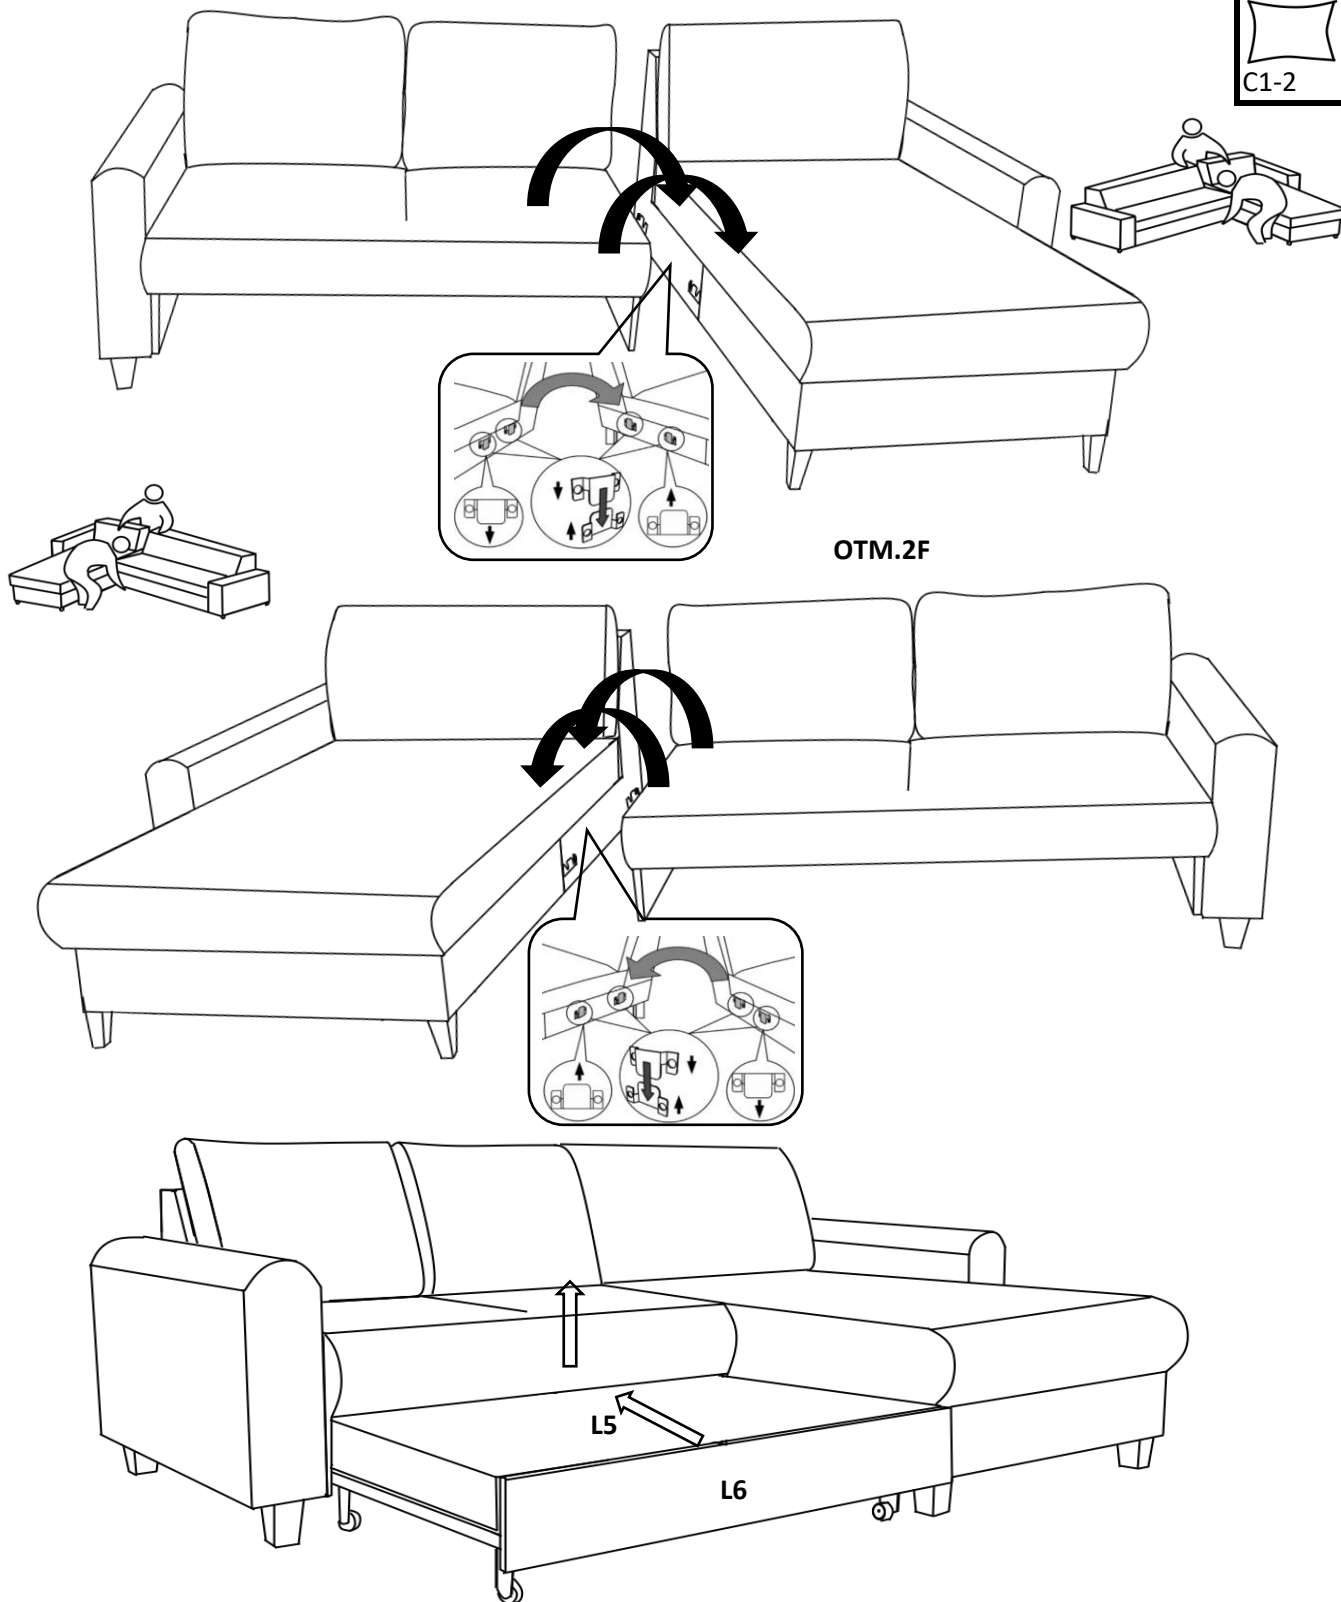

D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató

6/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

LILLE 2F.OTM(OTM.2F)

M8X50

B1-2

M8X50

B2-2

M8

B3-4

M6X20

B4-12

B5-4

B6-6

E1-6

E2-1

E3-6

D1

C1-2

1

2

3

4

1

2

3

4

Service-Dienstverlening-Serwis-Servis-Сервисная служба-Assistenza-Szerviz

B1		E1		L1		
B2		E2		L2		
B3		E3		L3		
B4		D1		L4		
B5		C1		L5		
B6				L6		