 
 
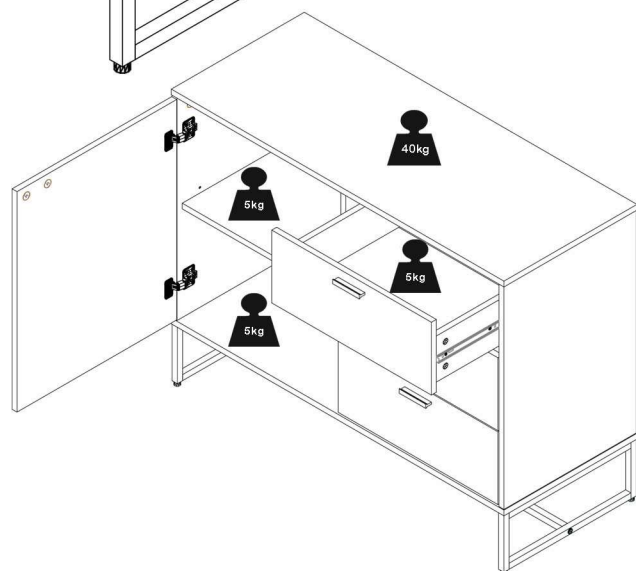 
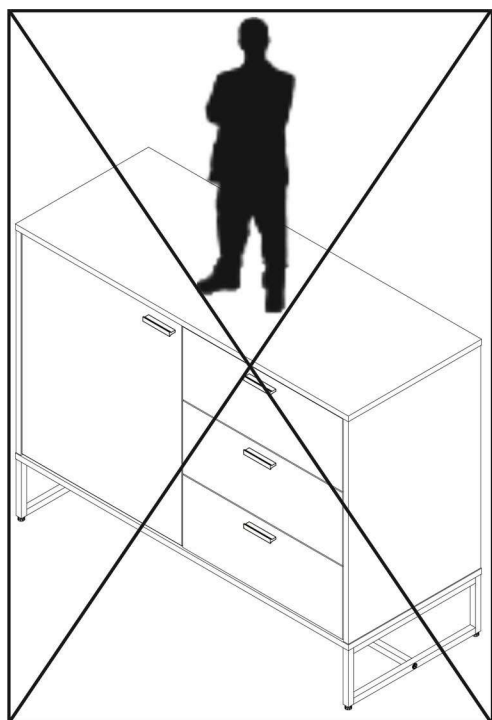 
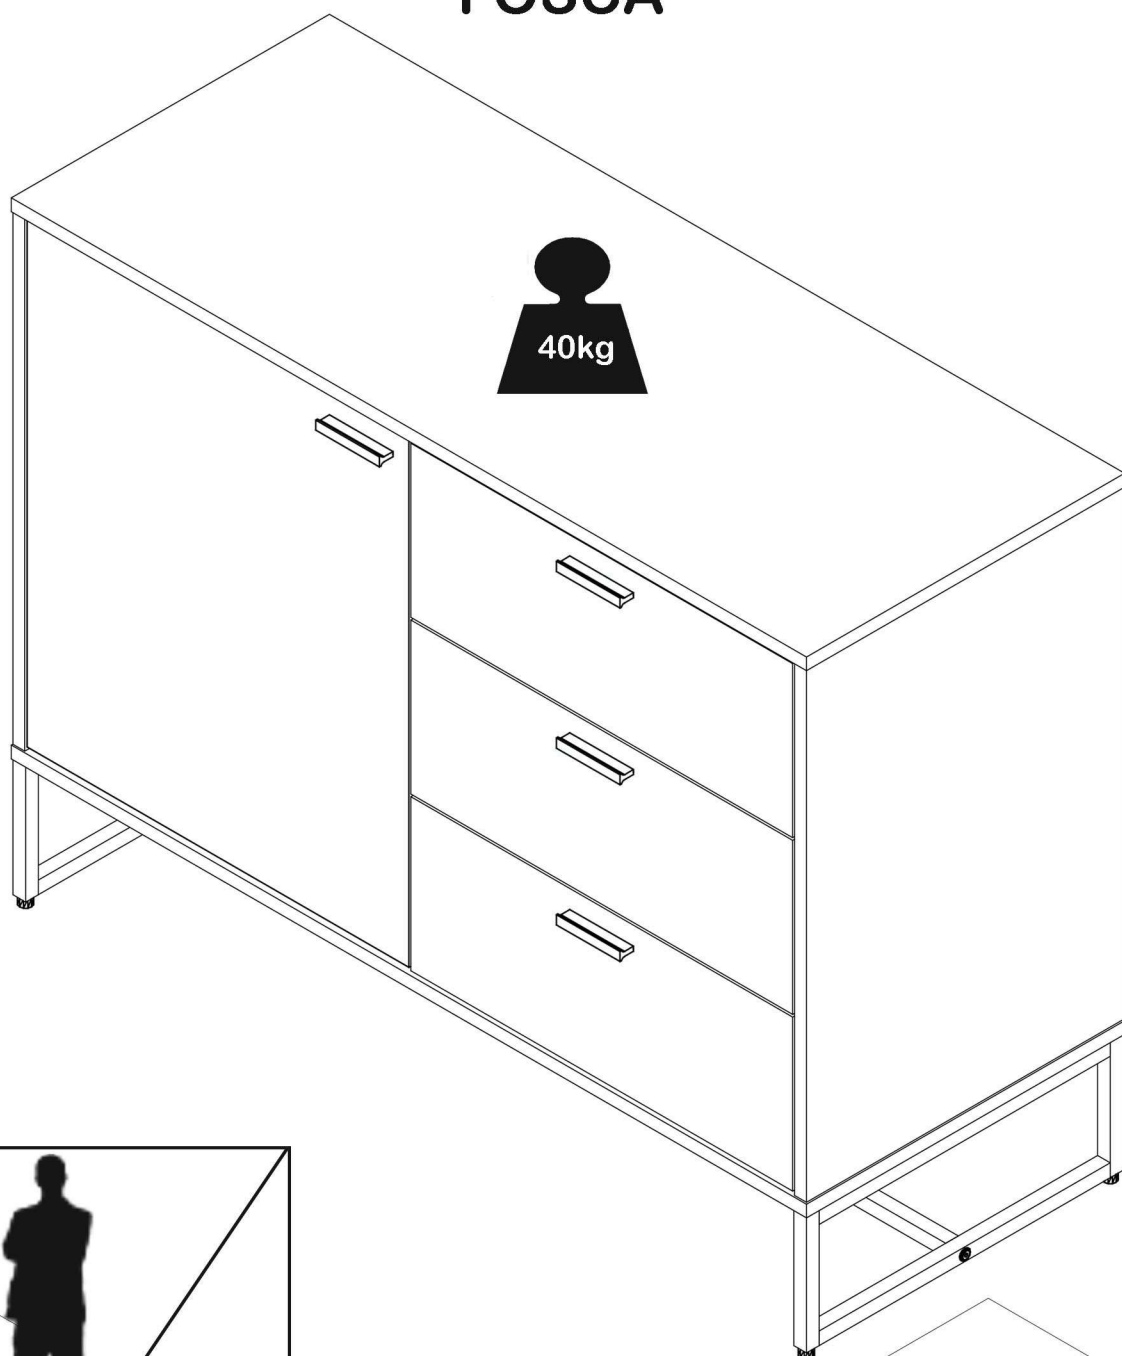 
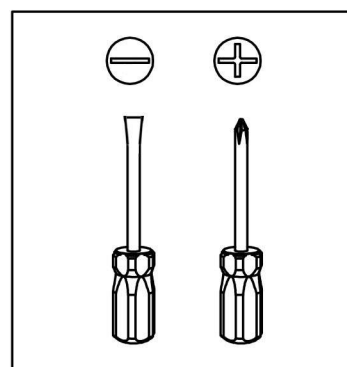 
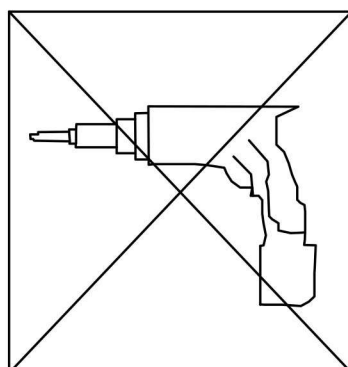 
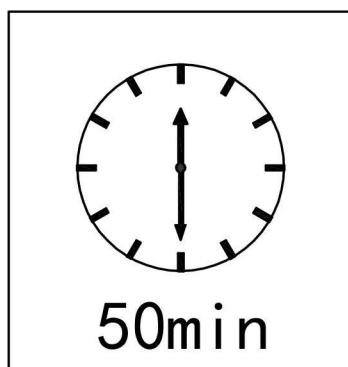 









Assemble instruction

27980042-02

    
 
 
 
FOSCA

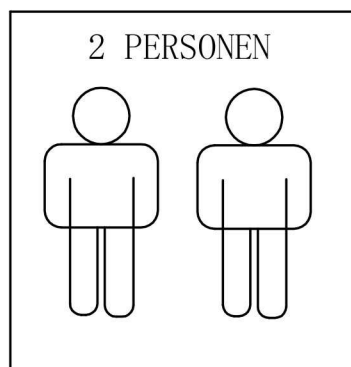

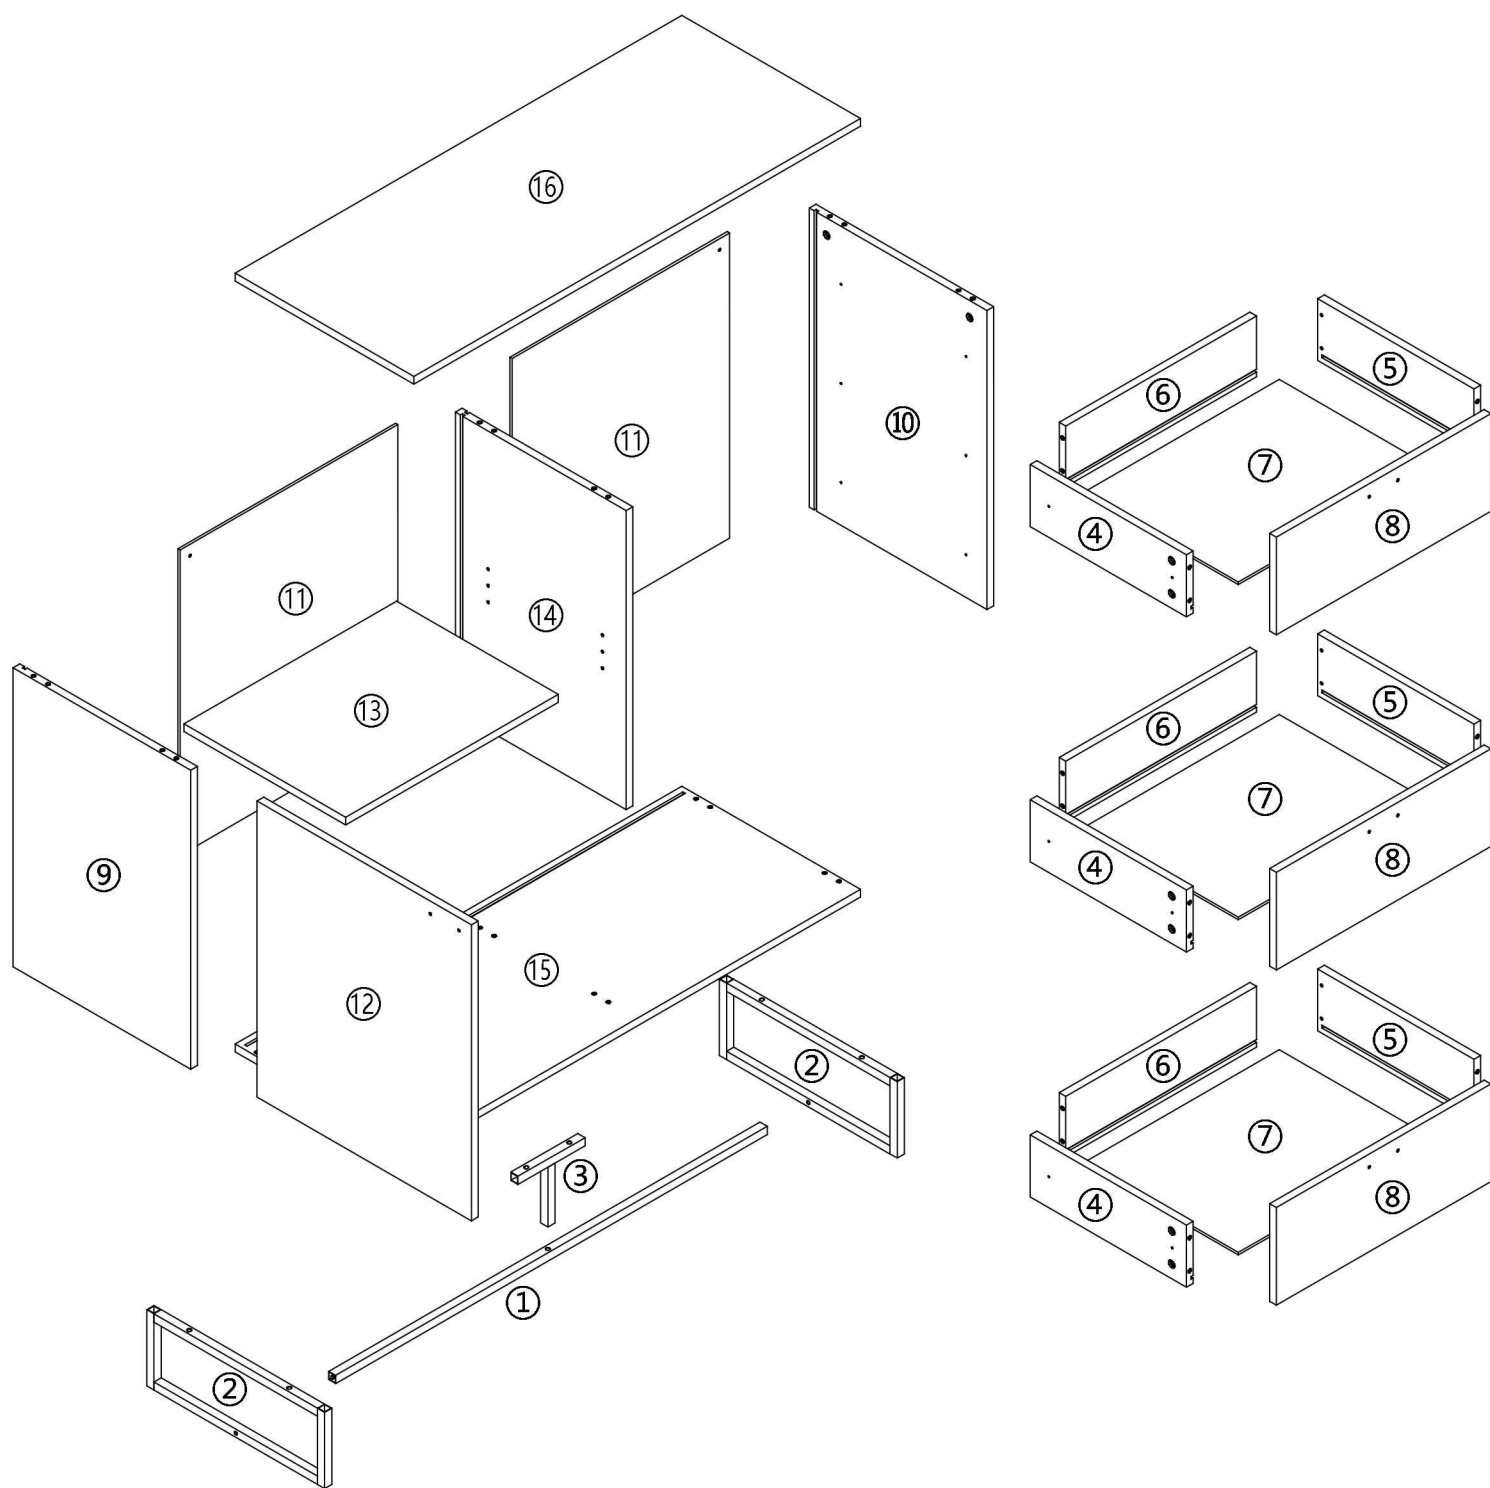

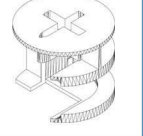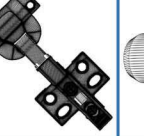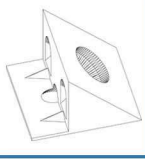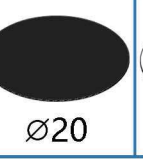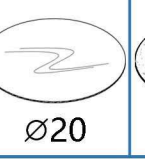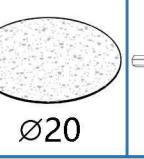
A × 12  Ø8×30	B × 6  M7×38	C × 30 	D × 30  Ø6×40	E × 3  M6×35	F × 6  M6×25	G × 5  M6×10	H × 4  L	I × 2  S	J × 4 
K × 8 	L × 6  L	M × 50  M3.5×12	N × 2  Ø4×50	O × 14  Ø20	P × 6  Ø20	Q × 6  Ø20	R × 1  L	S × 6  S	

    1

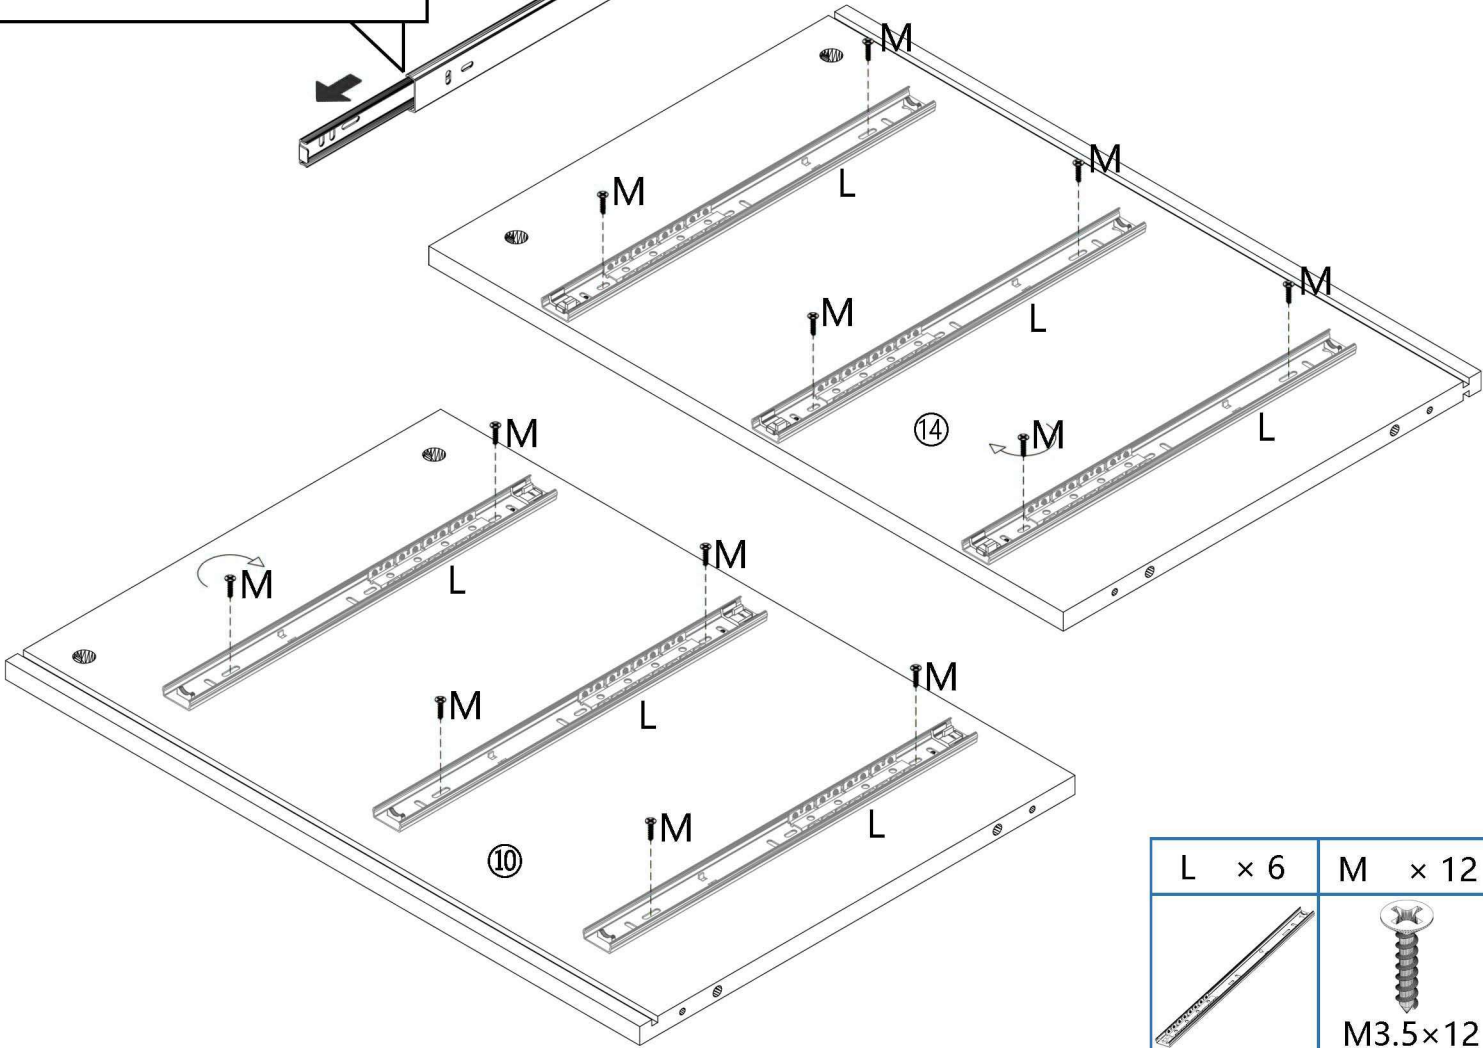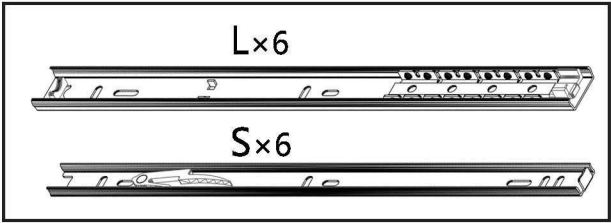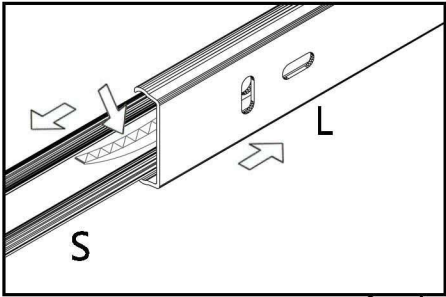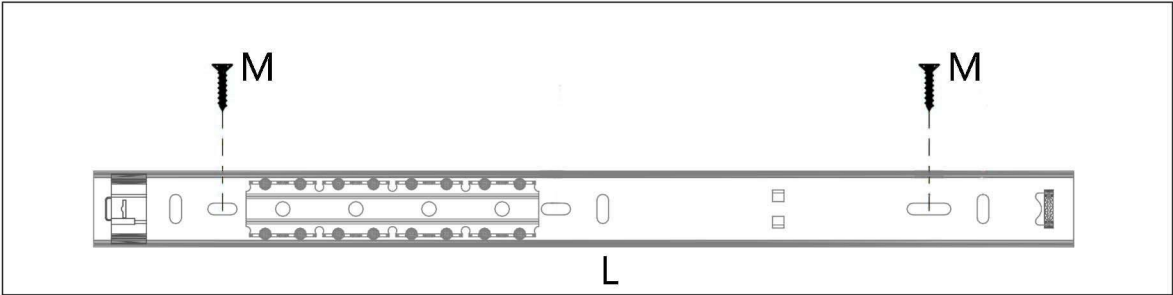


L × 6 	M × 12  M3.5×12
--	--

 2

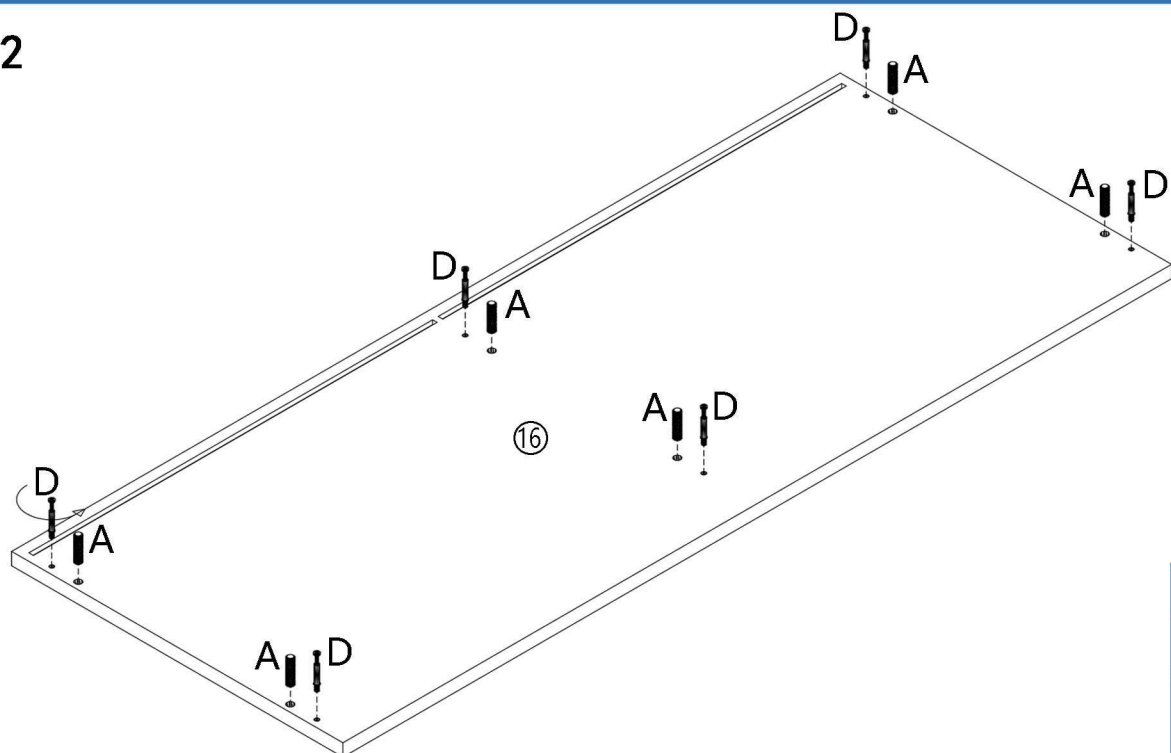


A × 6	D × 6
Ø8×30	Ø6×40

 3

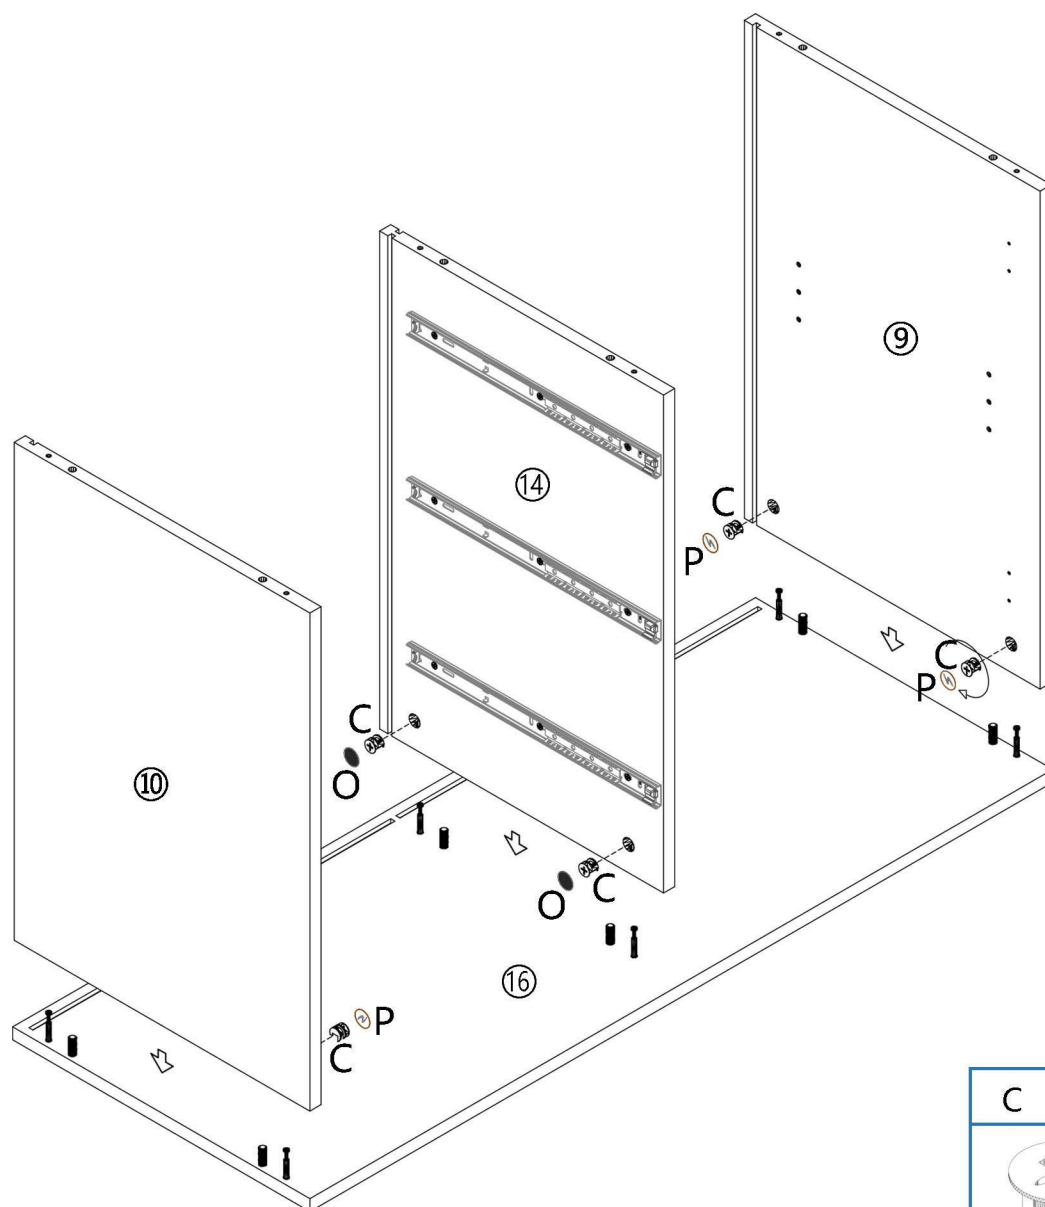


C × 6	O × 2	P × 4
	Ø20	Ø20

 4

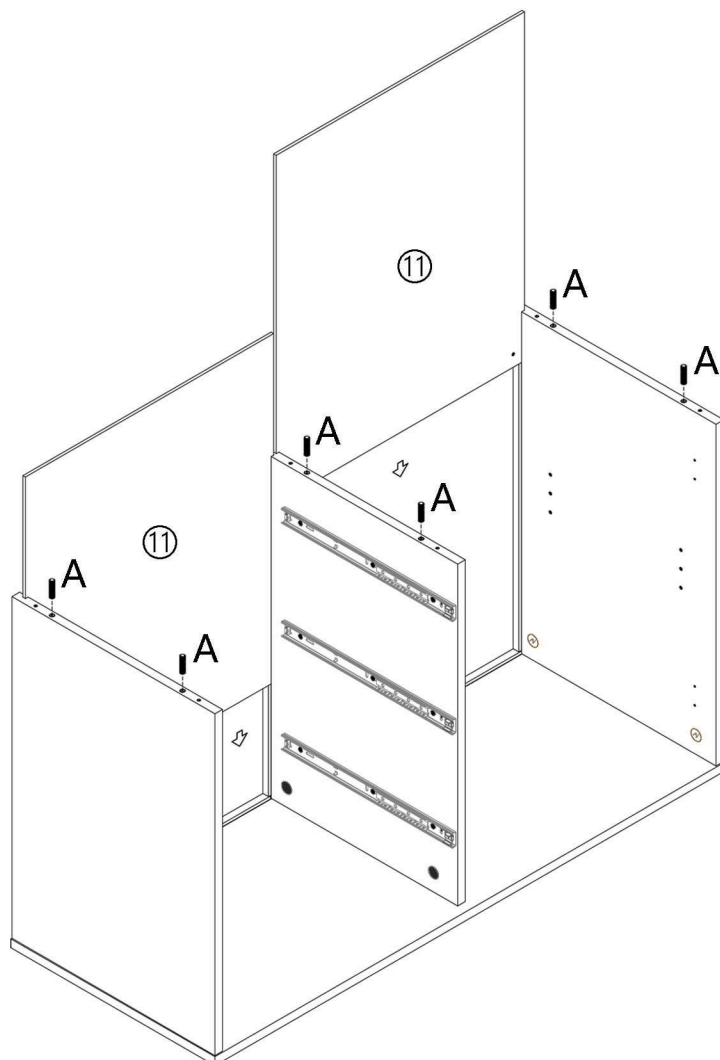


A × 6

 

Ø8×30

 5

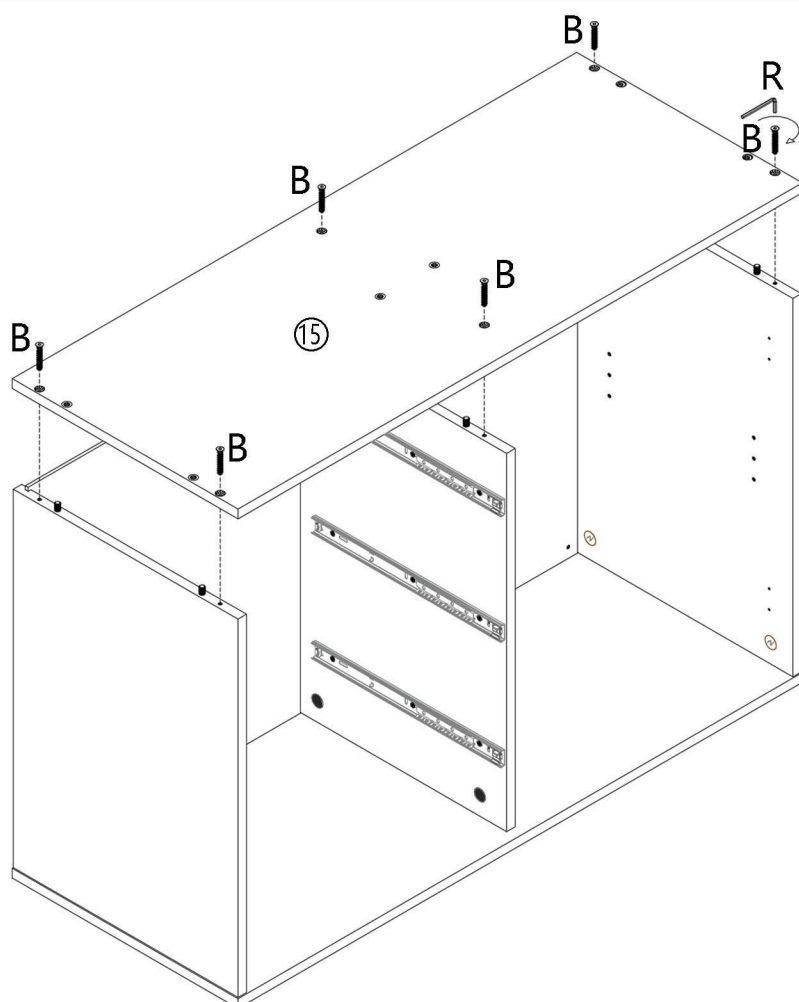

B × 6

 
R × 1




M7×38






6

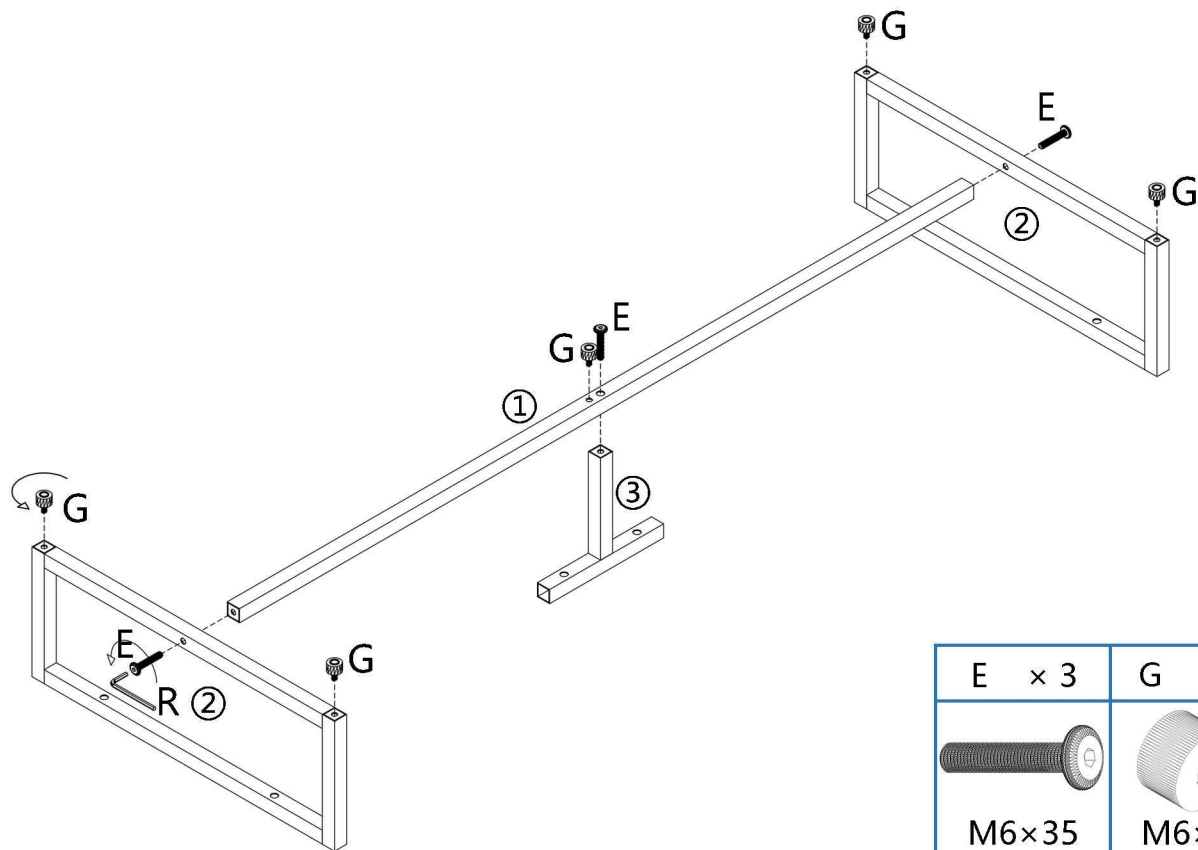

7



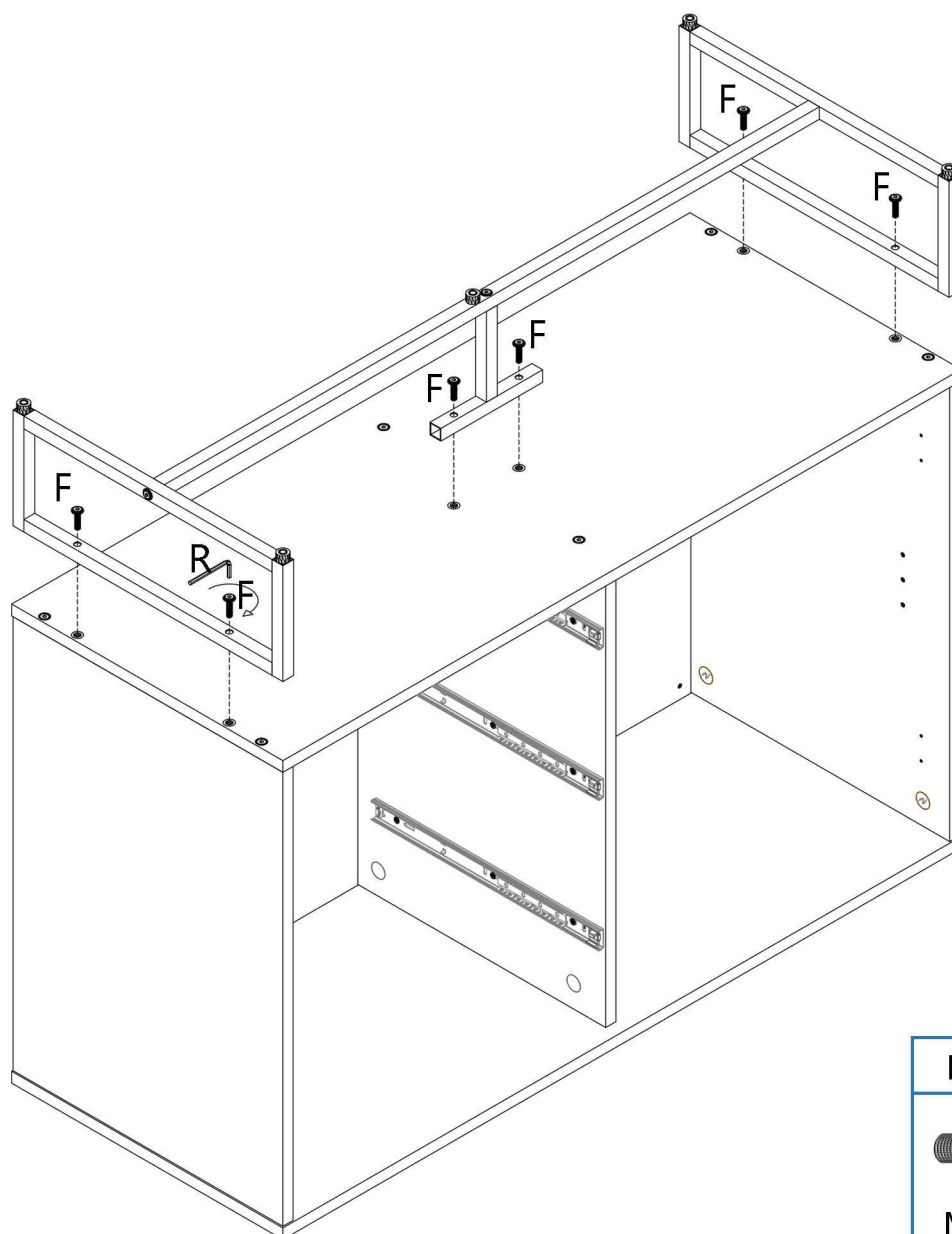 


8

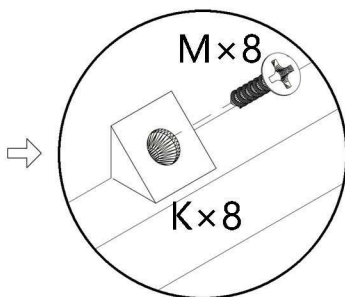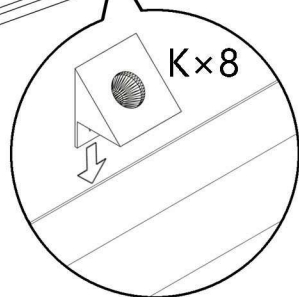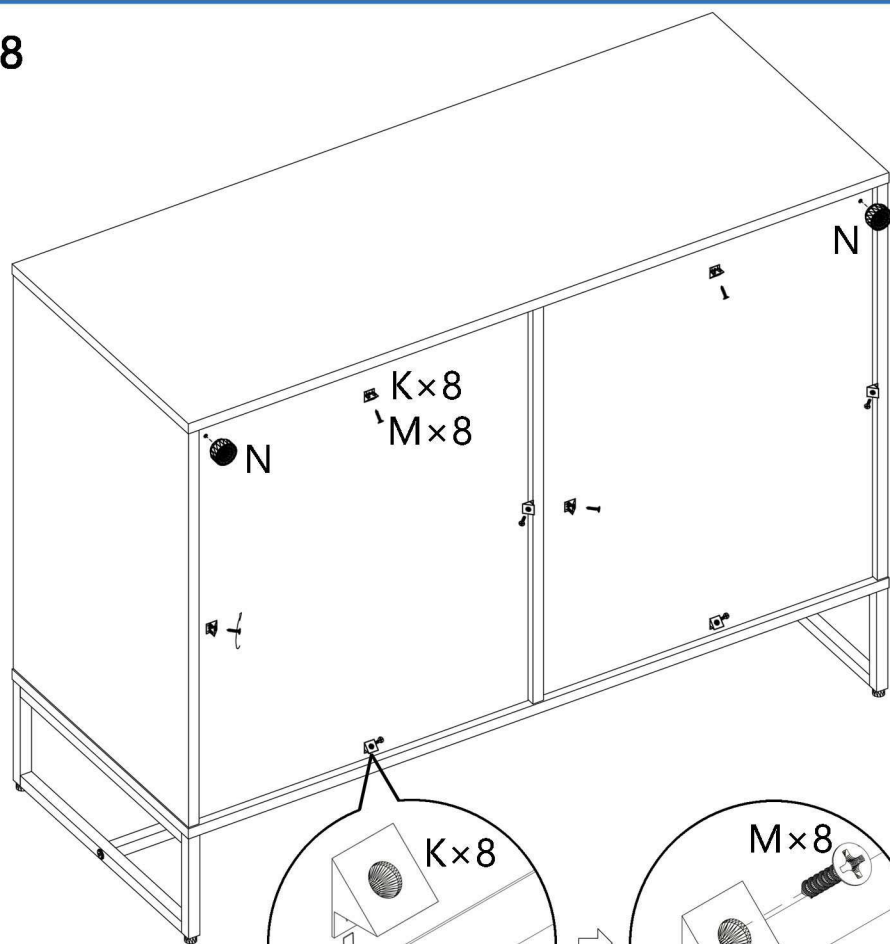   


K × 8	M × 8	N × 2
	M3.5×12	

   9

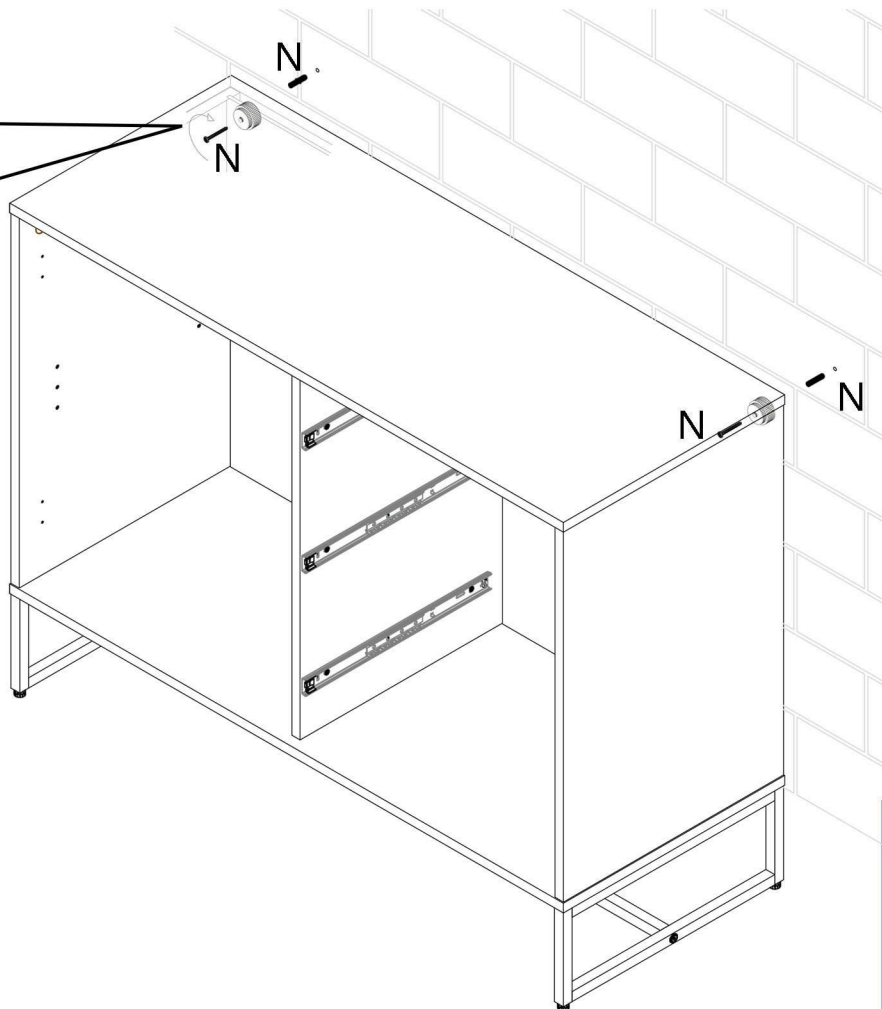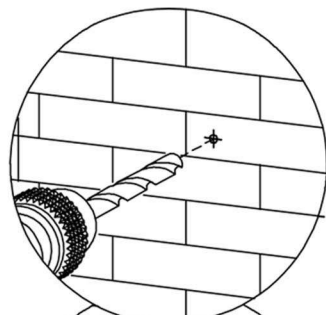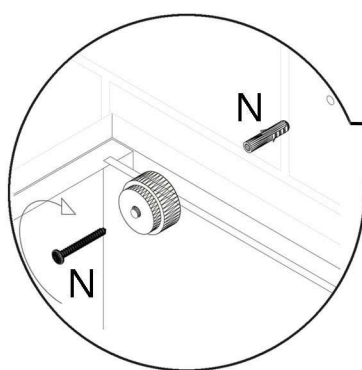


N × 2
Ø4*50

 
10

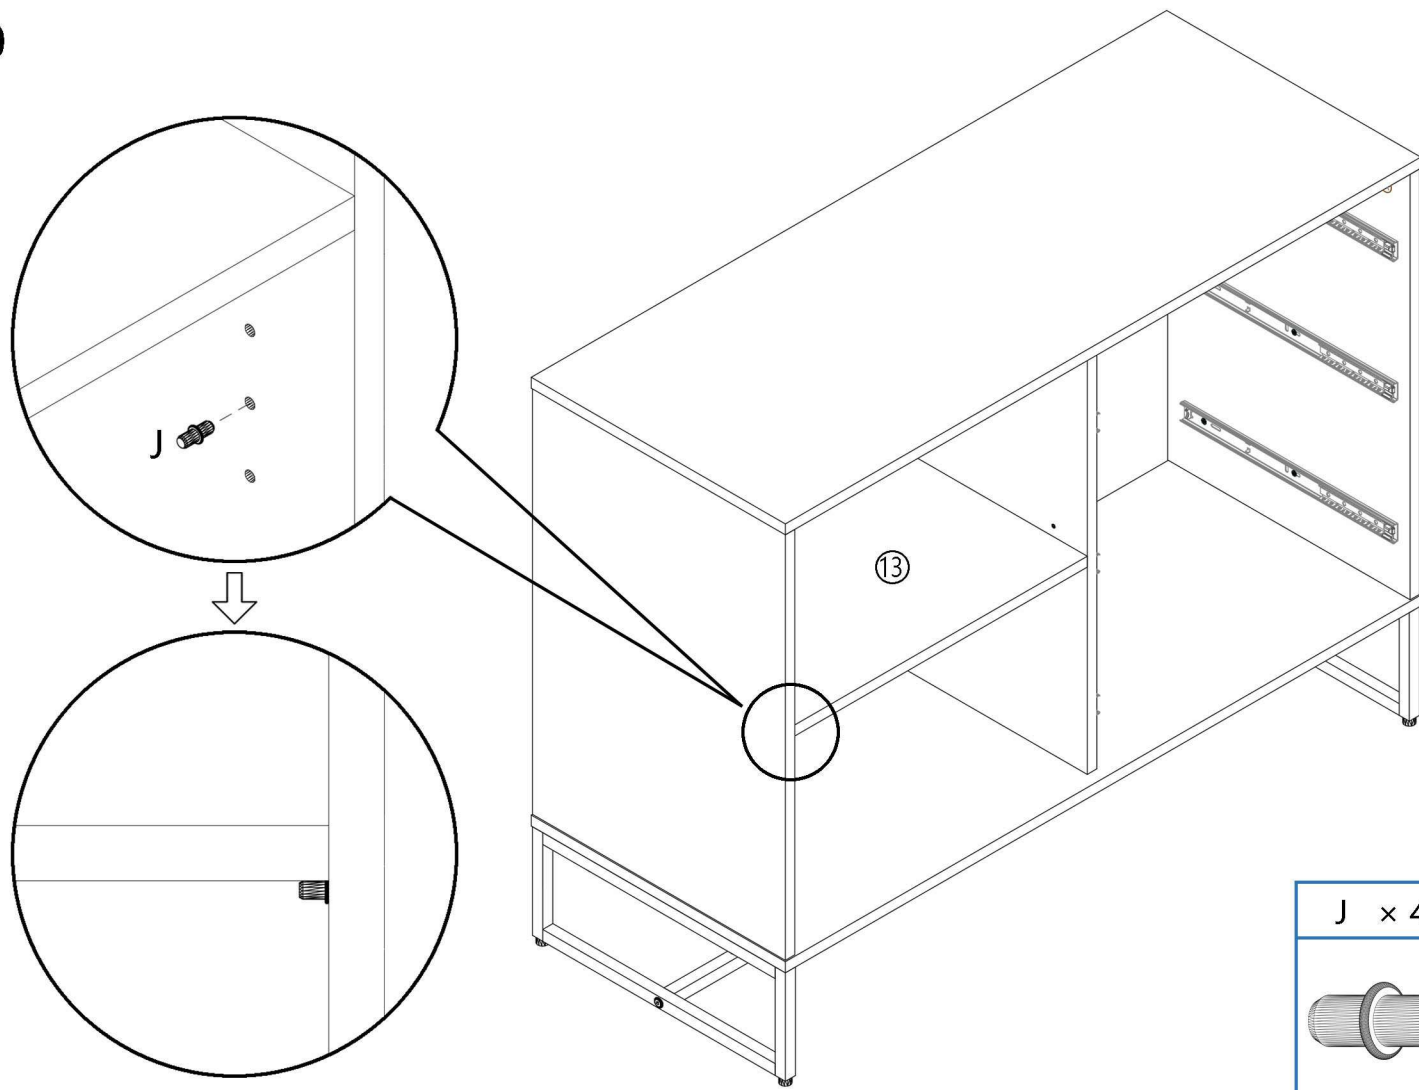

J × 4

 

11

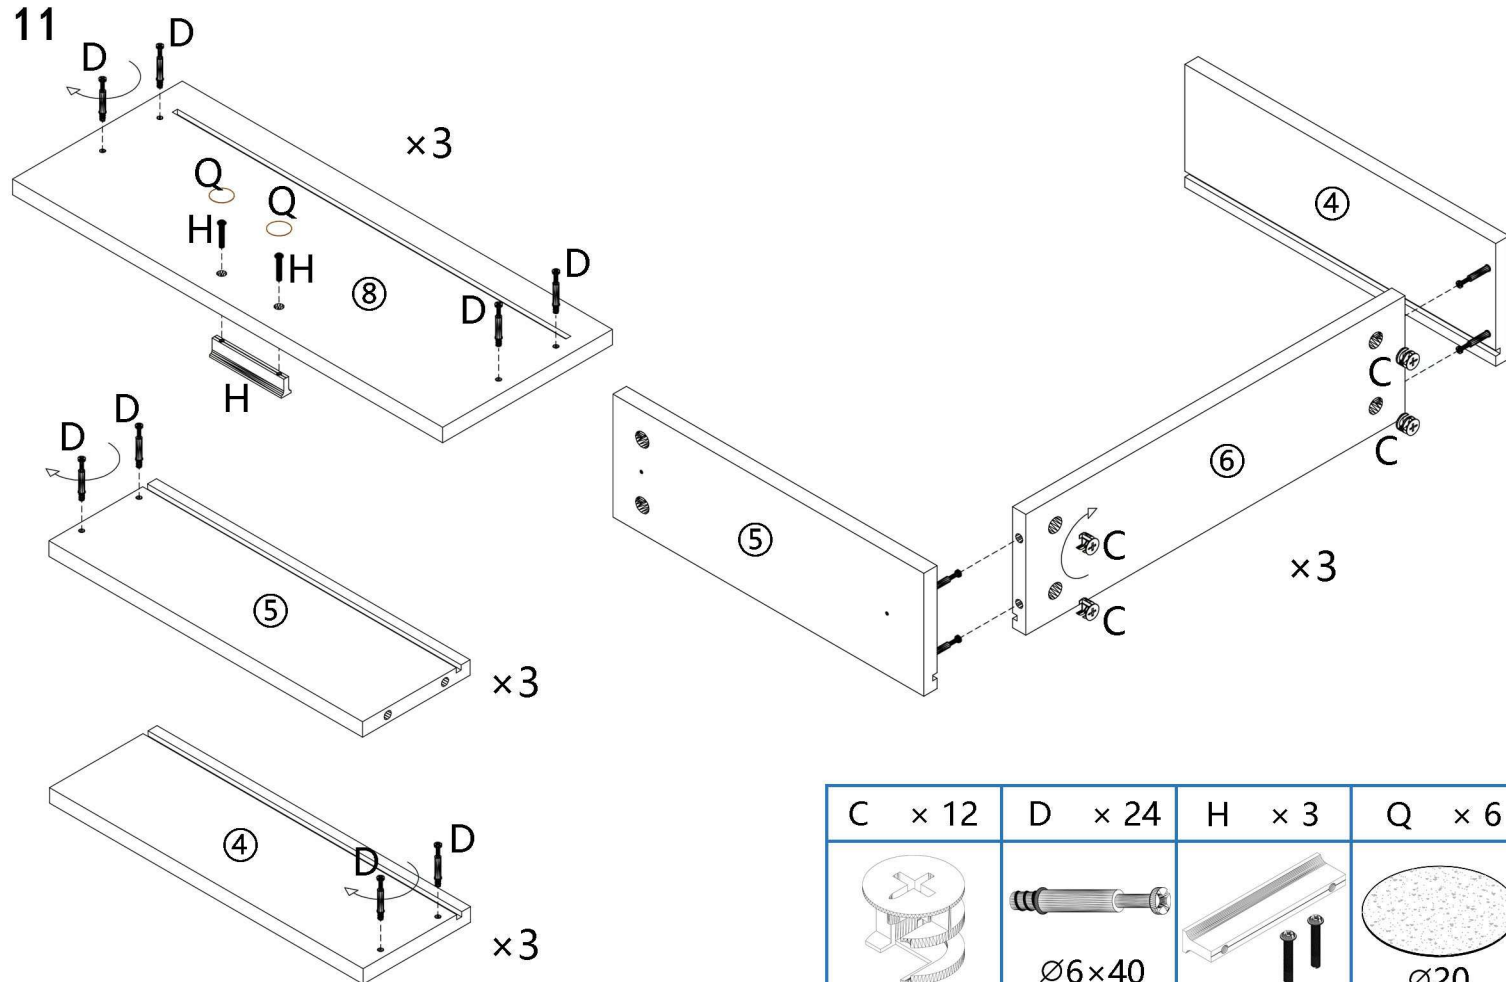 


C × 12


D × 24

H × 3

 Q × 6




Ø6×40

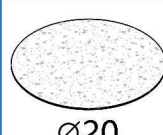 


Ø20

 
12

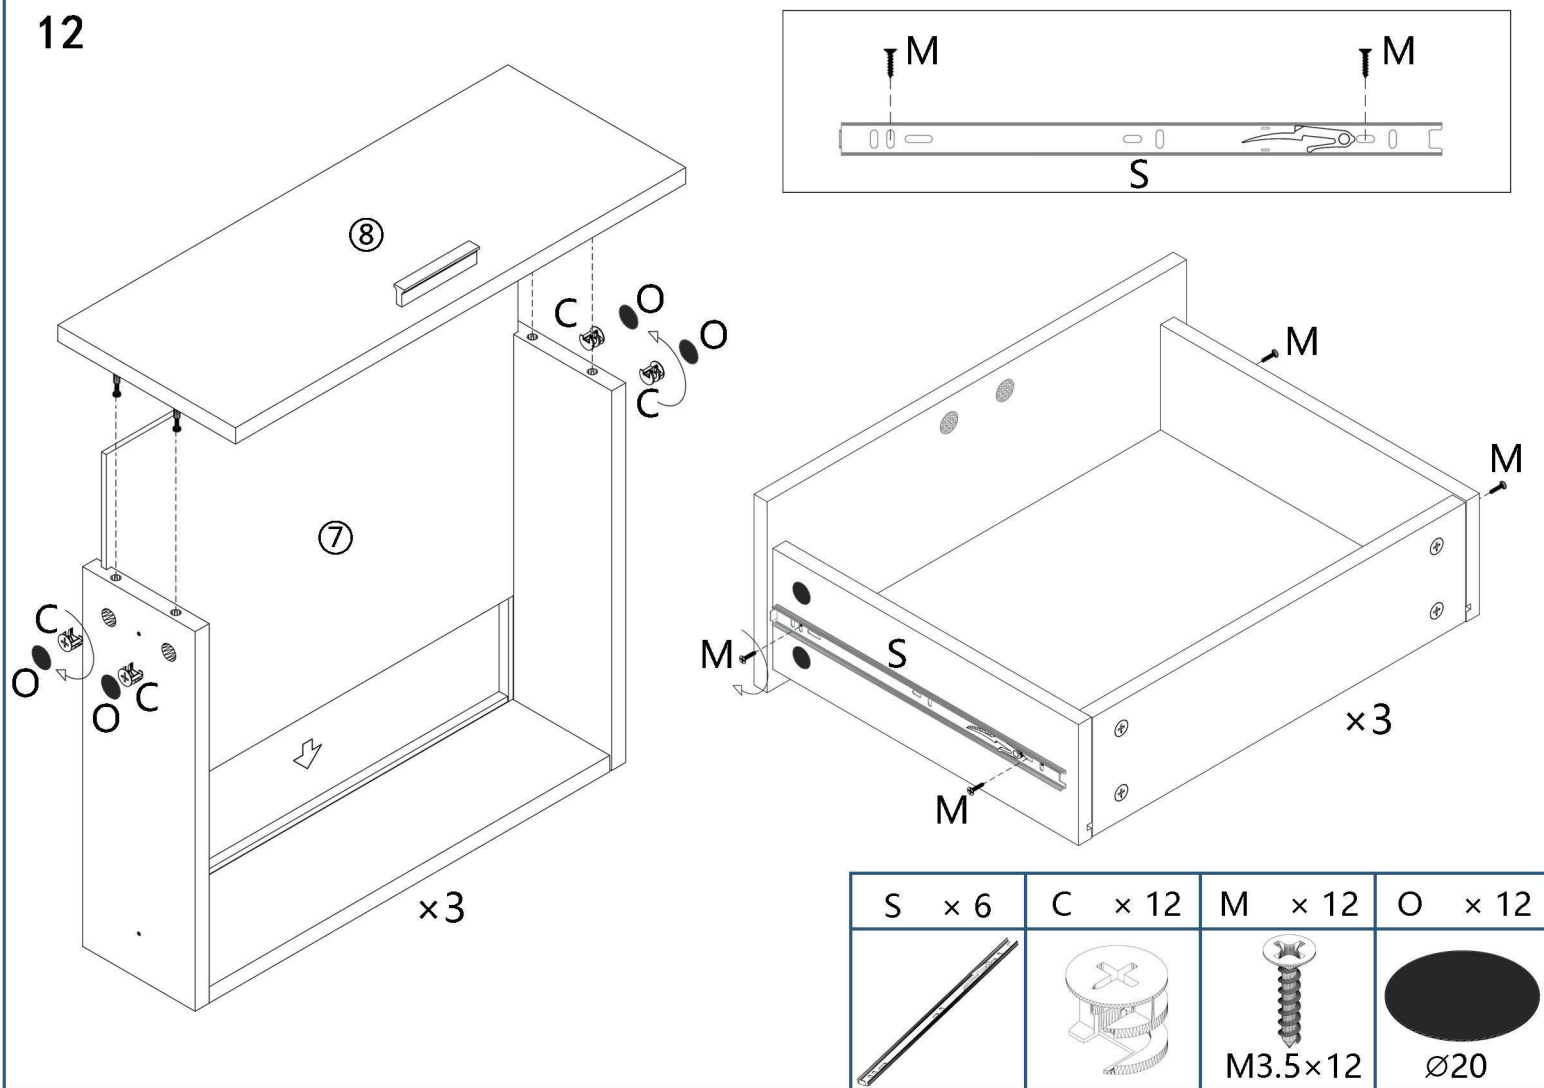






13

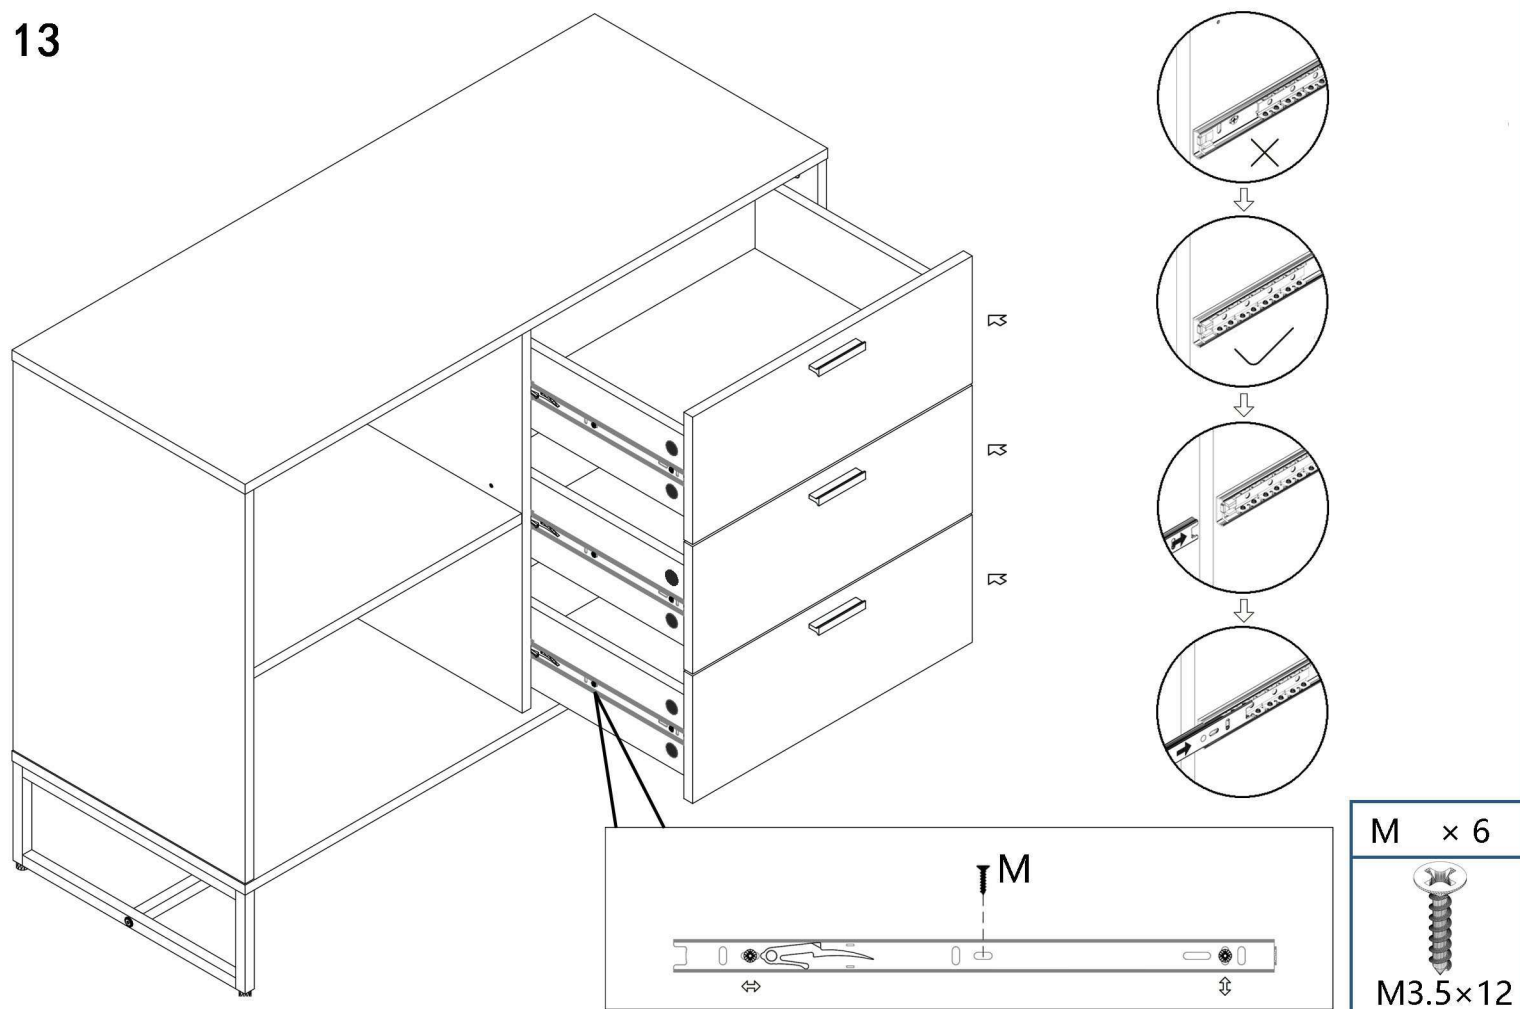 


14

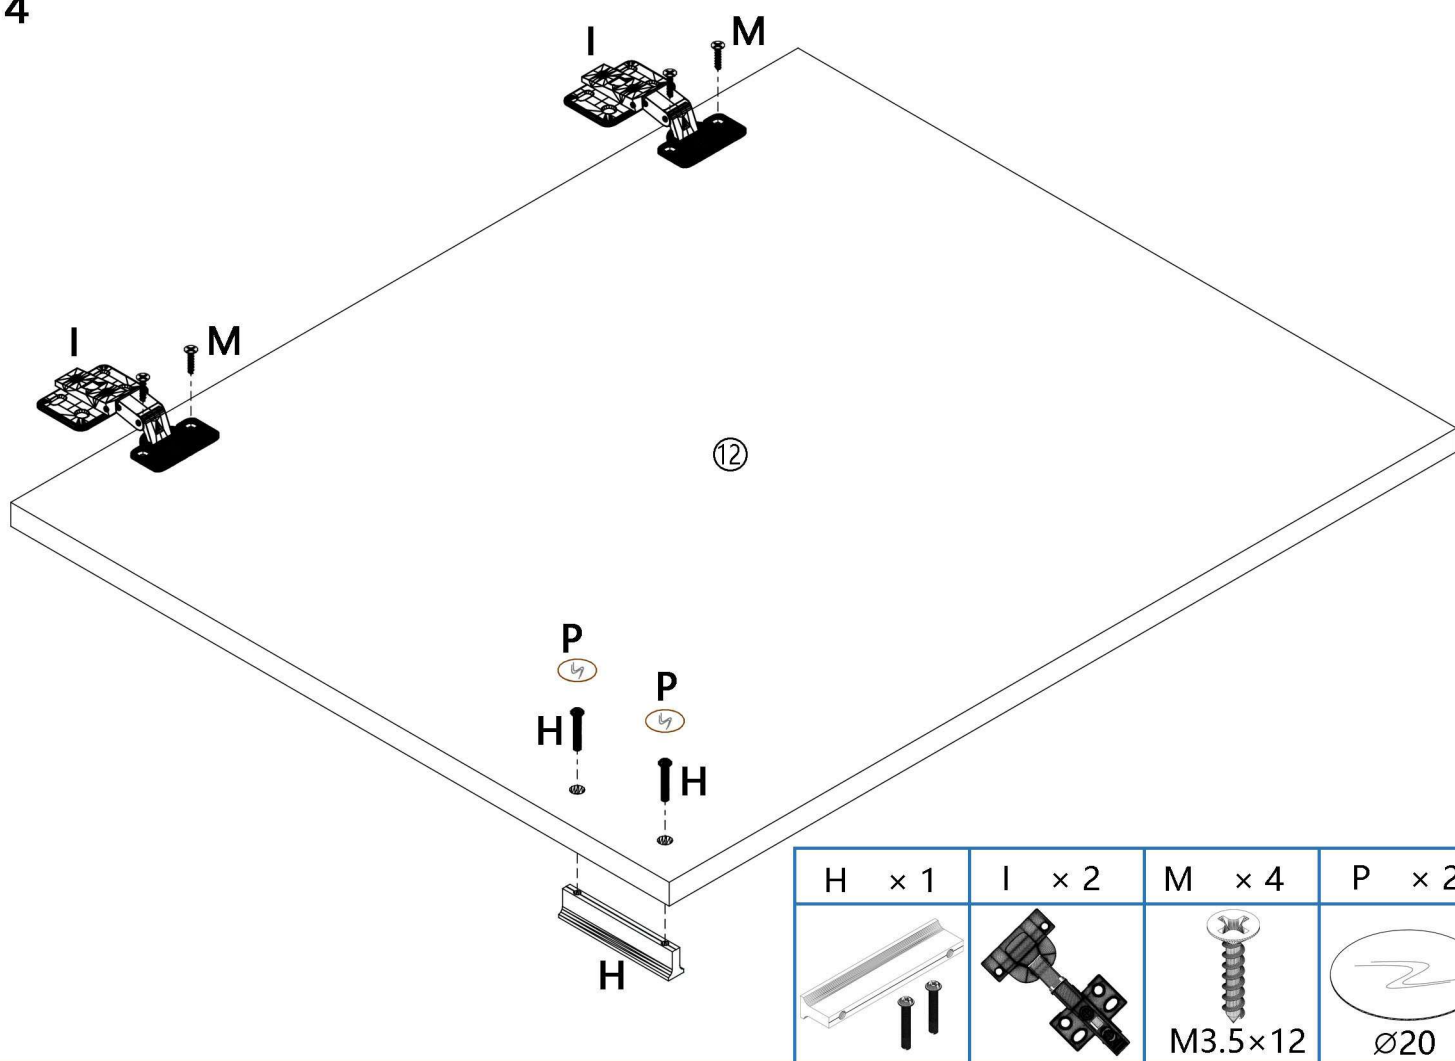 

15

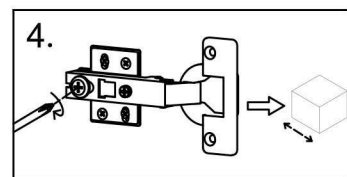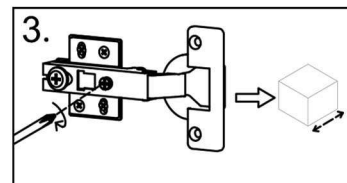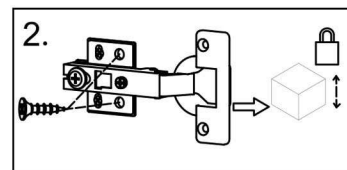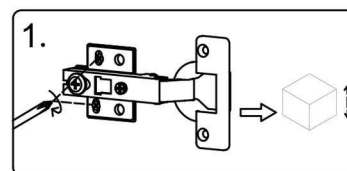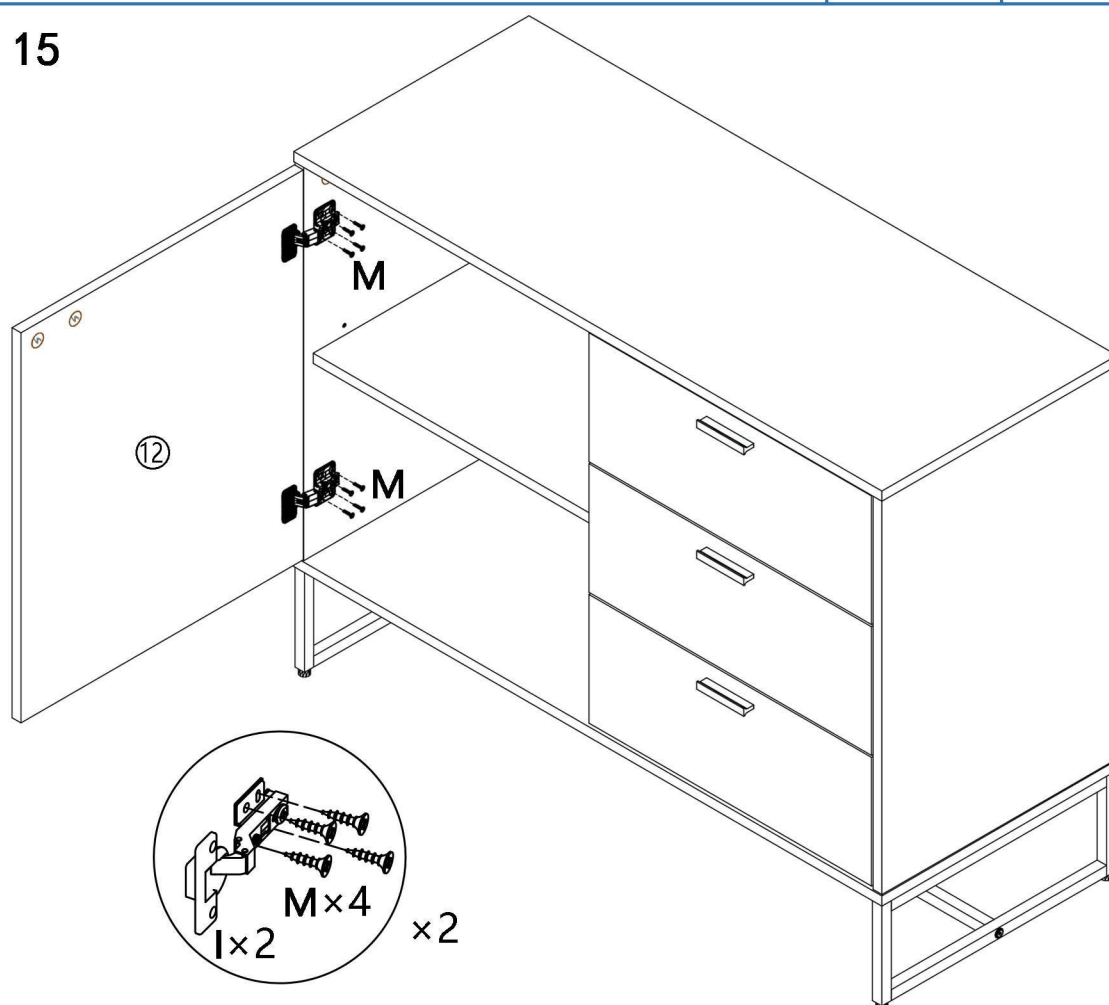     

M × 8

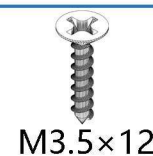 

M3.5×12