
 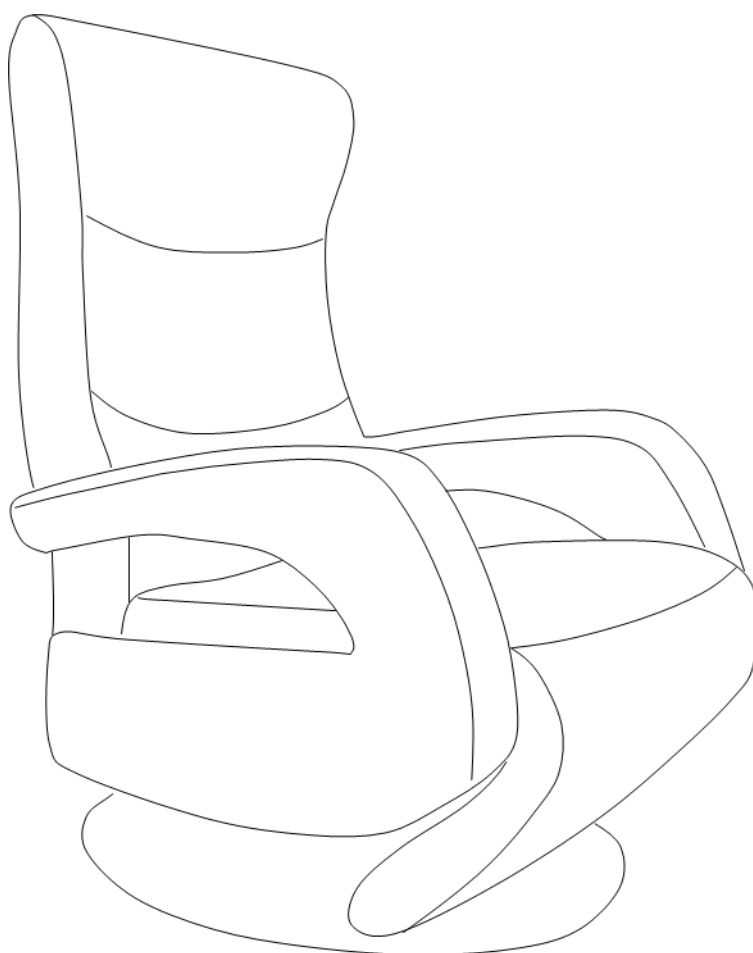



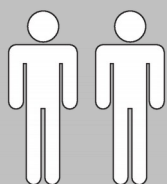

TV Sesseln
1222
V.03-03.2019

D

MONTAGEANLEITUNG

NL

HANDLEIDING VOOR DE MONTAGE

TR

MONTAJ TALIMATI

RO

INSTRUCȚIUNI DE INSTALARE

FR

NOTICE DE MONTAGE

HU

KÖZGYŰLÉS UTASÍTÁSOK

SI

NAVODILA ZA MONTAŽO

ES

INSTRUCCIONES DE MONTAJE

GB

INSTRUCTION MANUAL

PL

INSTRUKCJA MONTAŻU

RU

ИНСТРУКЦИЯ ПО МОНТАЖУ

IT

ISTRUZIONI DI MONTAGGIO

SK

MONTÁŽNY NÁVOD

CZ

MONTÁŽNÍ NÁVOD

PT

INSTRUÇÕES DE MONTAGEM



HR

UPUTE ZA MONTAŽU

Name · Naam · Nazwa · Isim · Название · Nume · Nome · Názov · Názov ·
 Název · Neve


Typ · Type · Tip · Тип · Tipo · Típus

1222

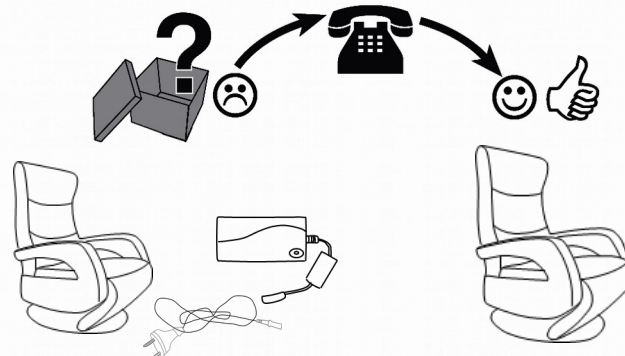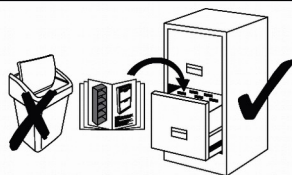

1x

X

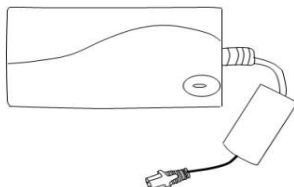


ca.31cm

Input: 100-240V~, 50/60Hz, 1.6A
 Output: 29V=2A

1x



Y

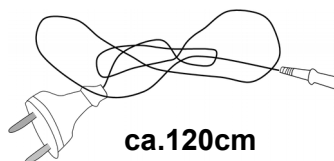

ca.120cm

1x

Z

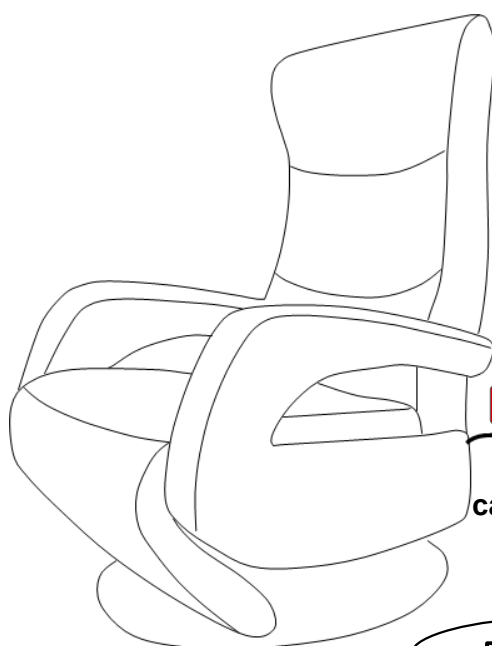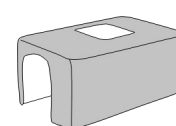

W

ca.300cm

Z

 
X

ca.31cm

Y

ca.120cm

1



W+X+Y= ca. 450cm

2

