



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



1/5

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

SALAMINA 2F.OTM(OTM.2F)

M8X30



B1-8

M8X40



B2-2

M8



B3-2

M6X20



B4-8



 
B5-4




30 min



E1-4




E2-2

 



D1



 
C1-1

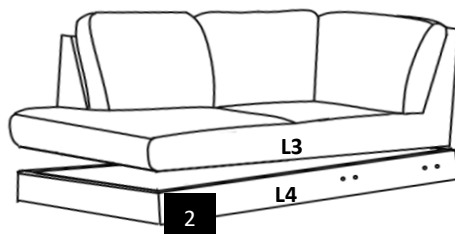



OTM.2F

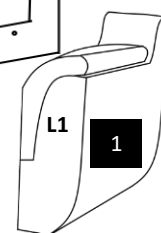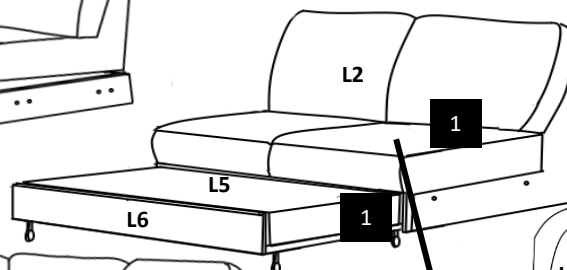  


2F.OTM

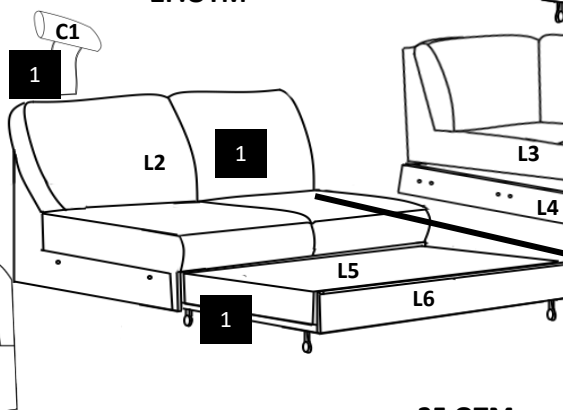 

2F.OTM

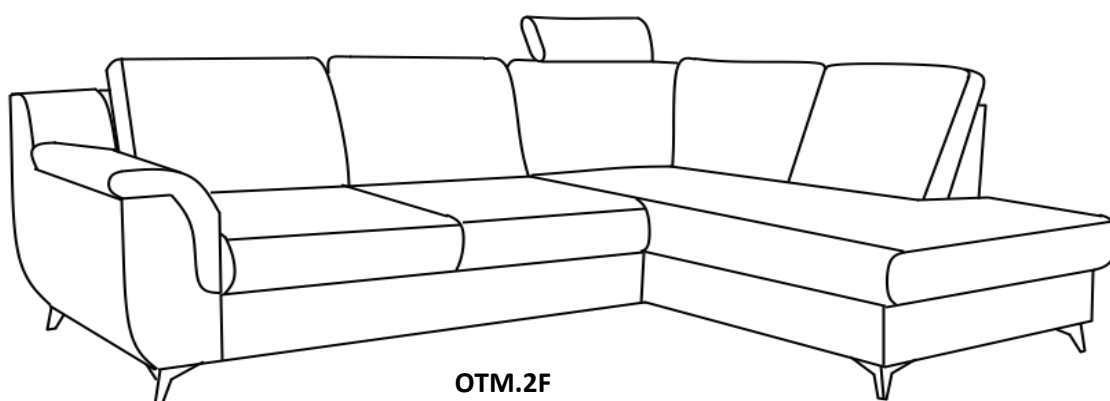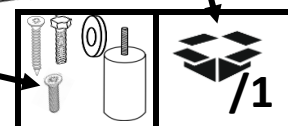  

OTM.2F

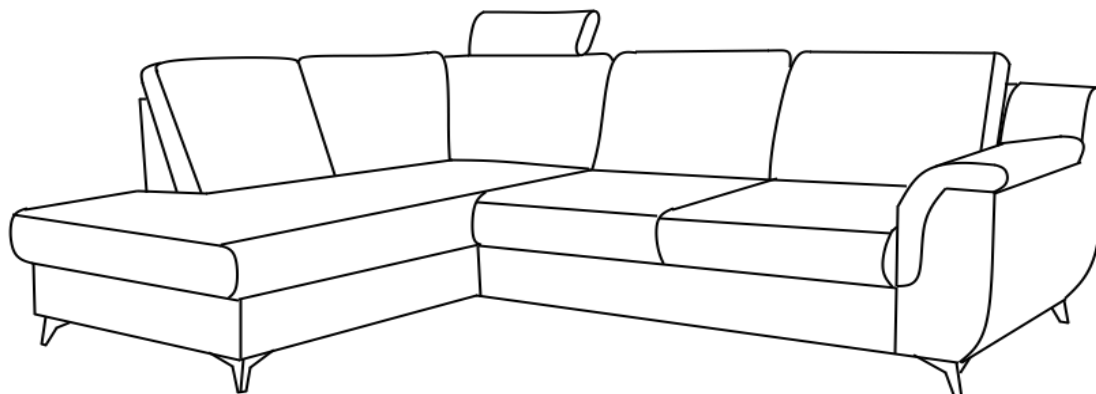 



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



2/6

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

SALAMINA 2F.OTM(OTM.2F)

M8X30



B1-8

M8X40



B2-2

M8



B3-2

 
M6X20




B4-8




B5-4



E1-4

 

E2-2

 


D1



C1-1


2F.OTM

 1.

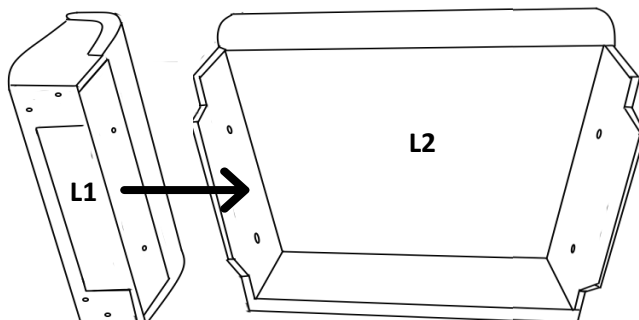


OTM.2F

 1.


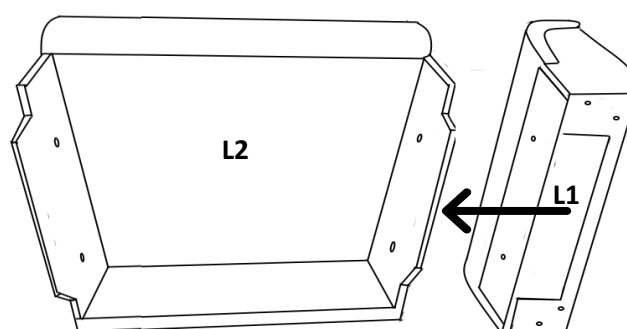


 2.

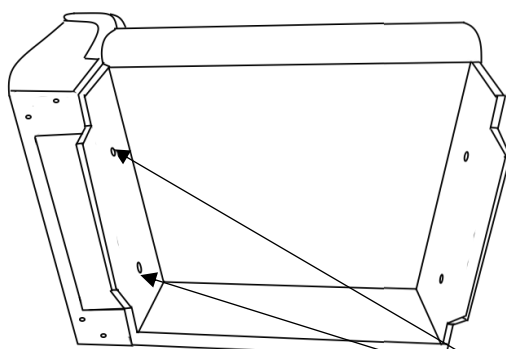


2.

  OTM.2F

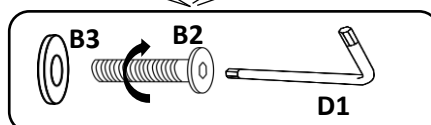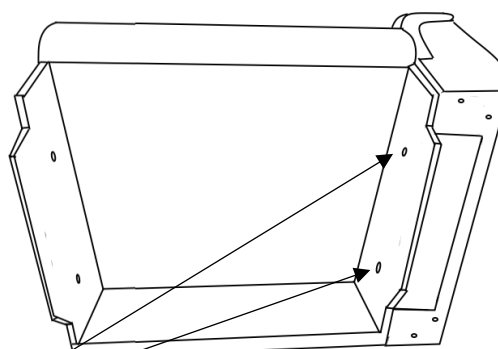


3.

 2F.OTM

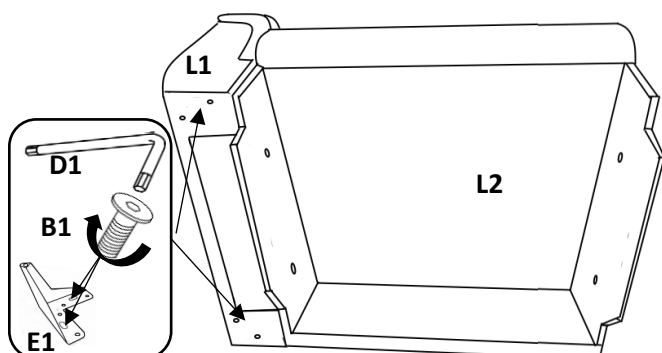

 3.

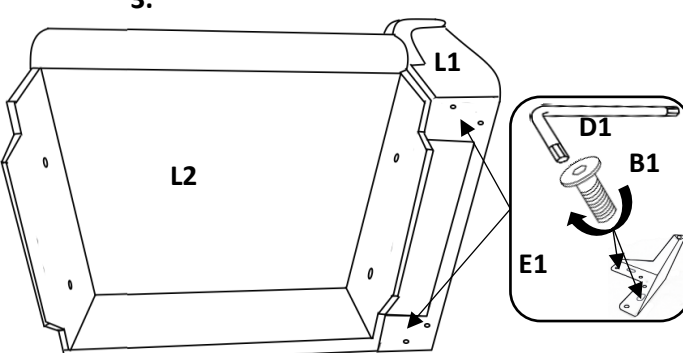



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



3/5

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

SALAMINA 2F.OTM(OTM.2F)

M8X30



B1-8

M8X40



B2-2

M8



B3-2

M6X20



 
B4-8




B5-4



E1-4



E2-2

 


D1





C1-1

 
2F.OTM

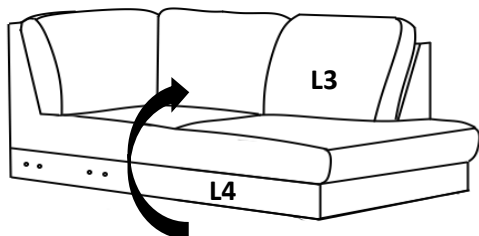



OTM.2F

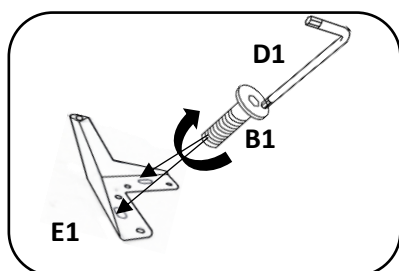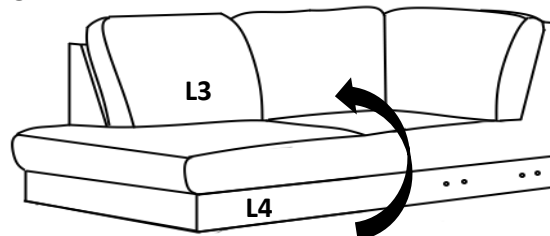  


OTM.2F

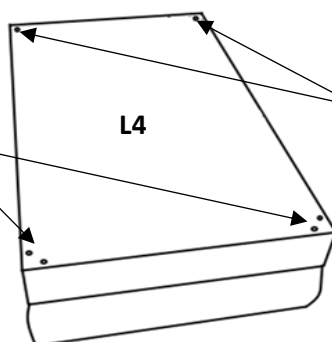 




2F.OTM

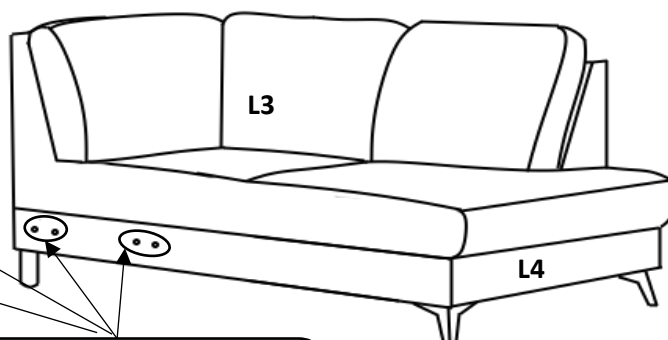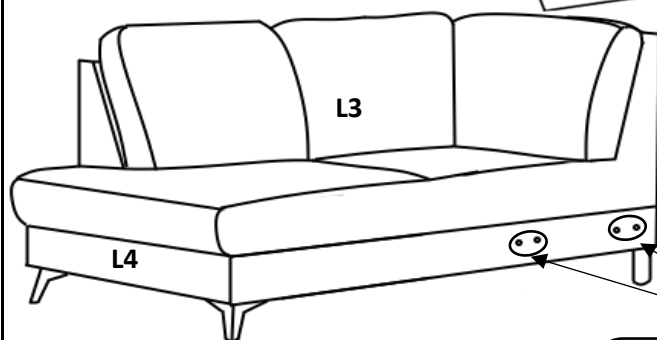  

2F.OTM

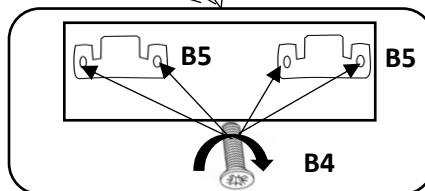 


OTM.2F

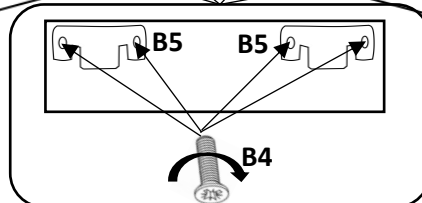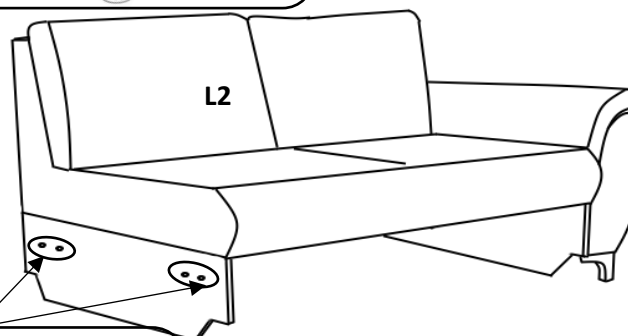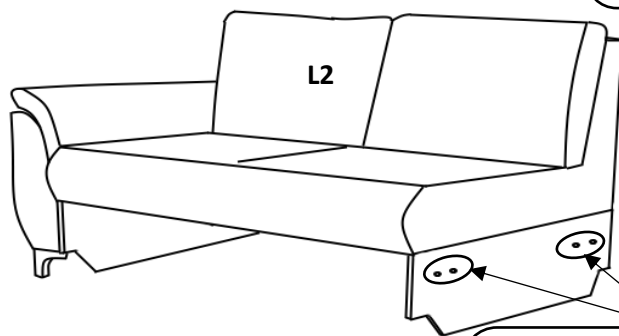   



 D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



4/5

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

SALAMINA 2F.OTM(OTM.2F)

M8X30



B1-8

M8X40



B2-2

M8



B3-2

 
 
M6X20




B4-8




B5-4

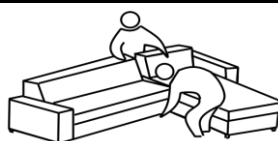


E1-4

 

E2-2

 


D1


 


C1-1

 2F.OTM

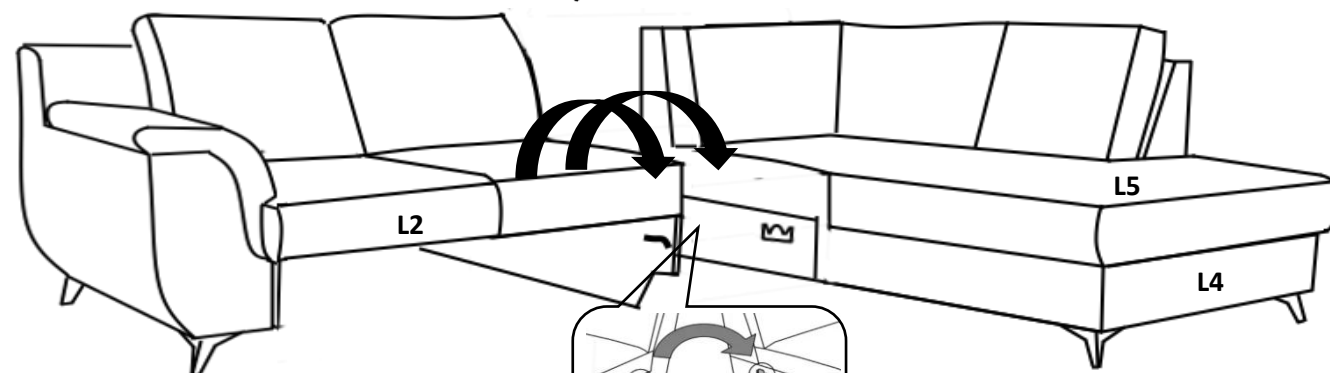

OTM.2F

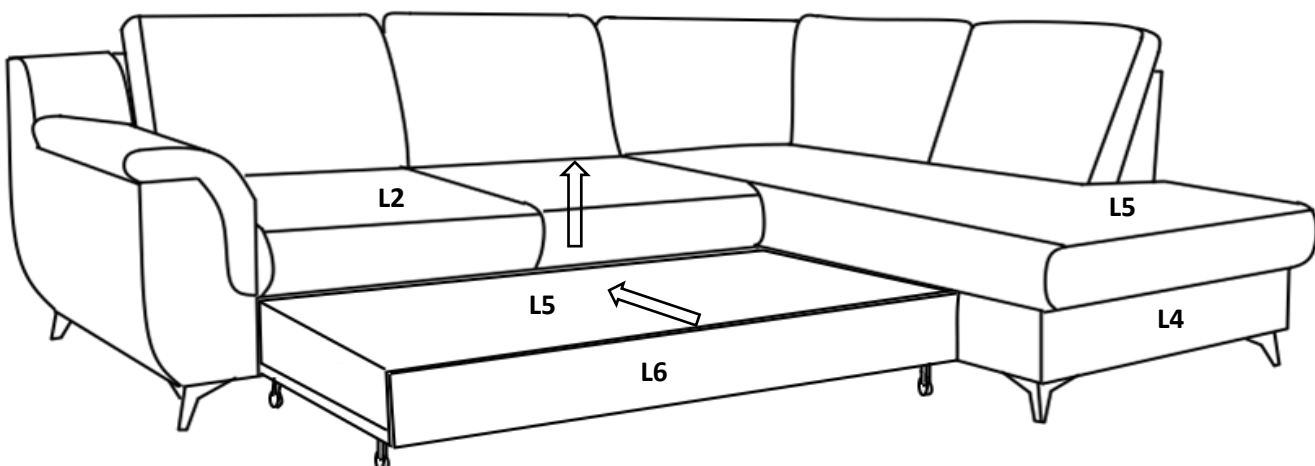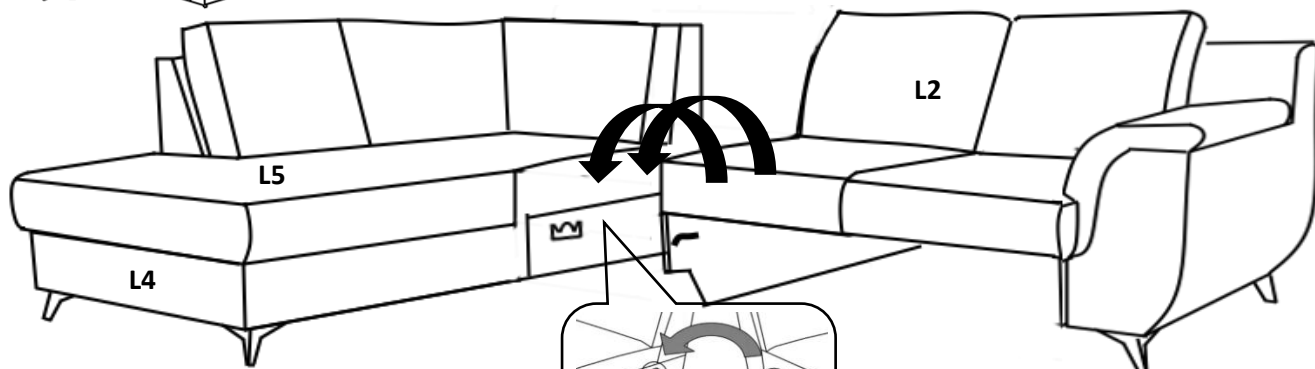  



D - Montageanleitung GB - Assembly instructions NL - Handleiding voor de montage
 PL - Instrukcja montażu TR - Montaj talimatı RU - Инструкция по монтажу
 RO - Instrucțiuni de montaj IT - Istruzioni di montaggio FR - Notice de montage
 SK - Návod na montáž CZ - Montážní návod HU - Szerelési útmutató



5/5

Name-Naam-Nazwa-Isim-Название-Nom-Nome-Názov-Név

SALAMINA 2F.OTM(OTM.2F)

M8X30



B1-8

M8X40



B2-2

M8



B3-2

M6X20



 
B4-8



B5-4



E1-4













E2-2



D1



          C1-1

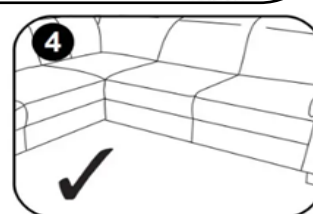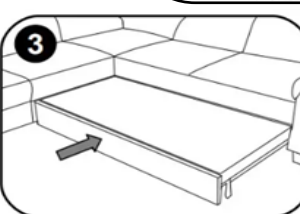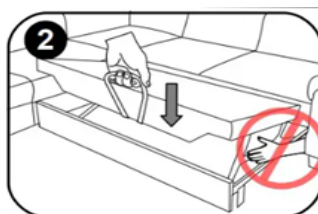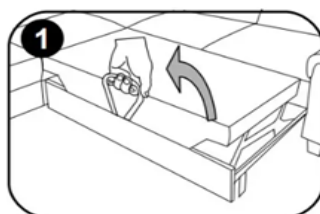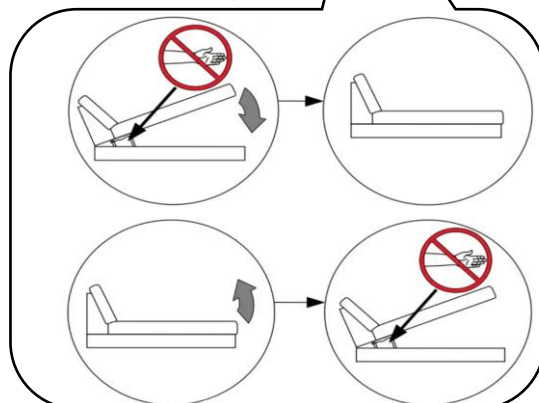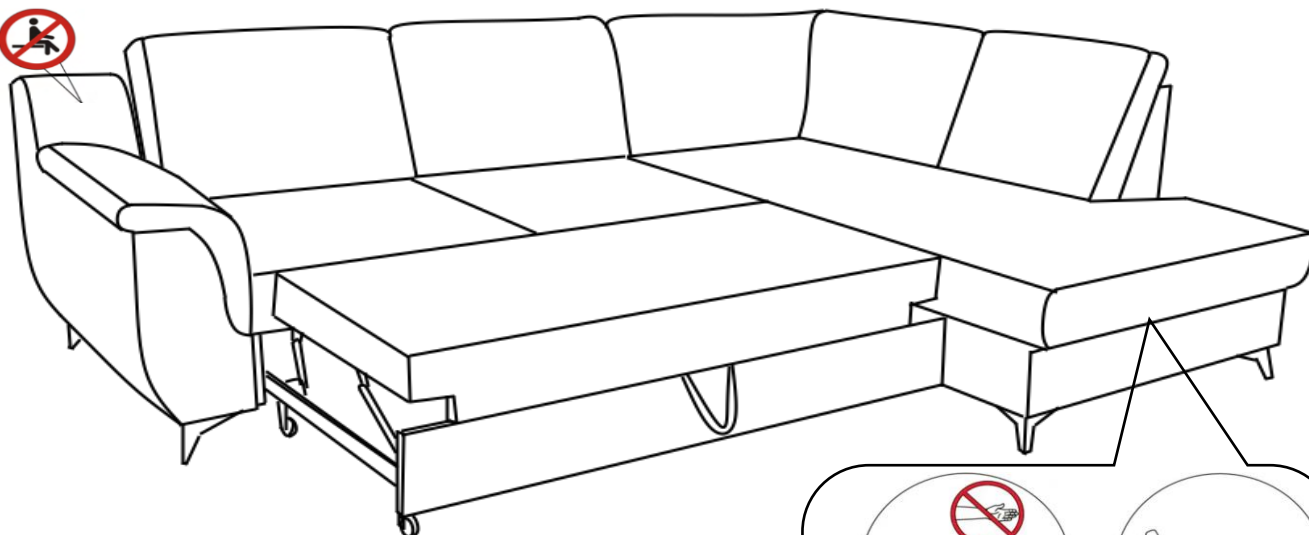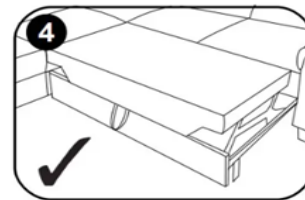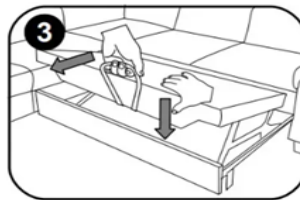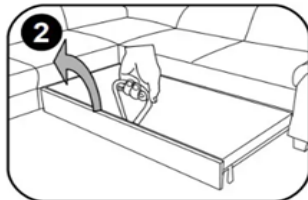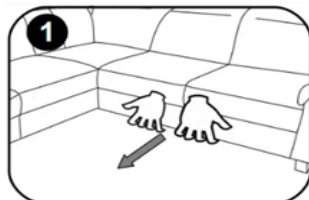

Service-Dienstverlening-Serwis-Servis-Сервисная служба-Assistenza-Szerviz

B1		C1				
B2		L1				
B3		L2				
B4		L3				
B5		L4				
E1		L5				
E2		L6				
D1						

