



(D) Montageanleitung

(GB) Assembly instructions

(FR) Notice de montage

(TR) Montaj talimatı

(IT) Istruzioni di montaggio

(NL) Handleiding voor de montage

(RU) Инструкция по монтажу

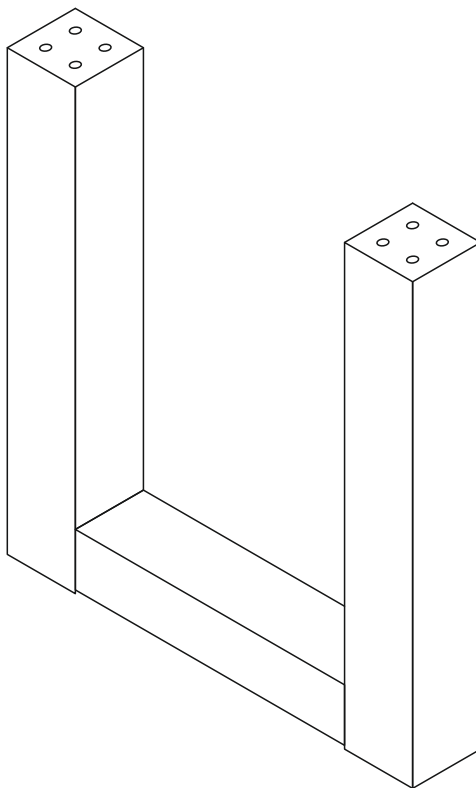 
(CZ) Montážní návod

(HU) Szerelési útmutató

(RO) Instrucțiuni de montaj

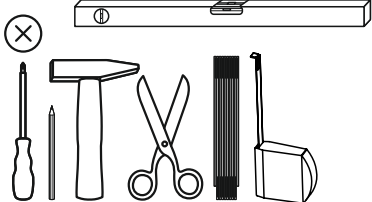 
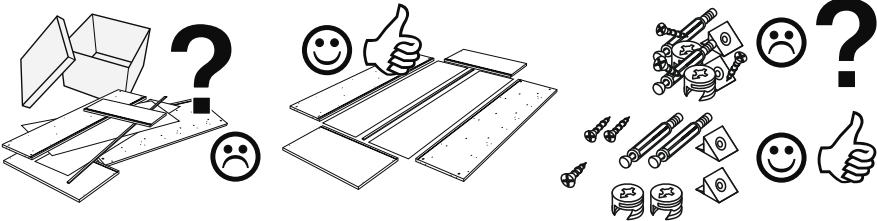 
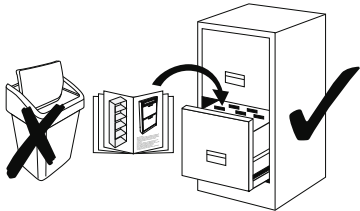 
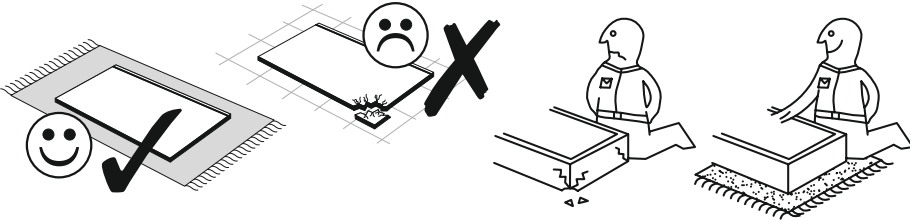 
 
(PL) Instrukcja montażu

(SK) Návod na montáž

 


0547_U P2 Undergestell/U

 
 
 
 
 
Service • Assistenza • Dienstverlening • Servis
Servis • Szerviz • Сервисная служба

 
				
				
			Colli 1/1 : (1) (2) Beutel 1/2, 2/2	

Beutel 1/2

 
 
1-184	
16x	6x70

 
Beutel 2/2

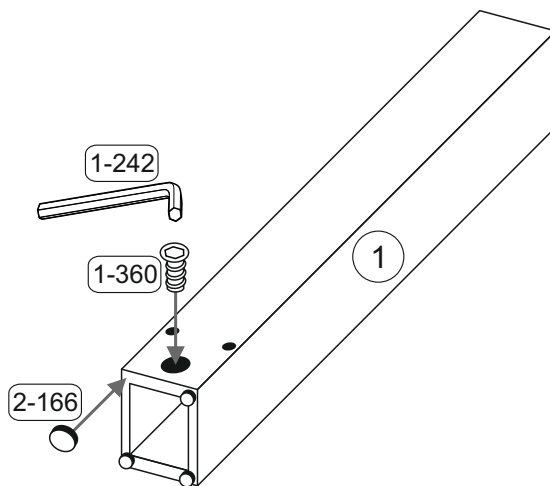 
1-241		1-242		1-360		1-362		1-364		2-104	
1x	SW 5	1x	SW 6	4x		4x	6x50	4x		8x	8x40
2-166		5-130									
16x		1x									

 


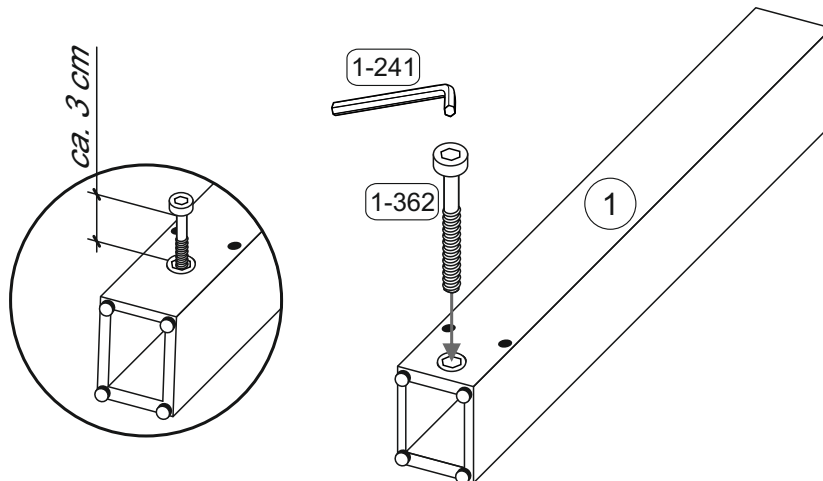 
Colli 1/1

 


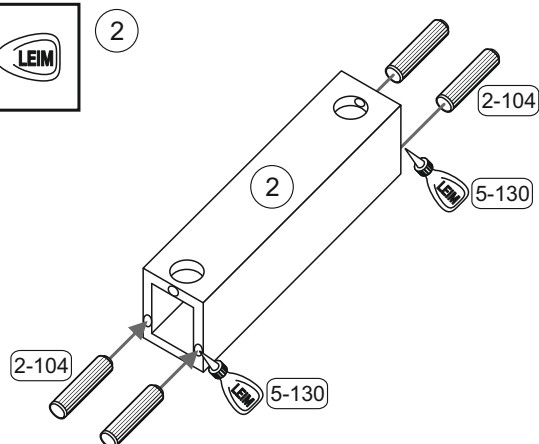 
1	1-242		1-360		2-166		1
	1x	SW 6	4x		16x		



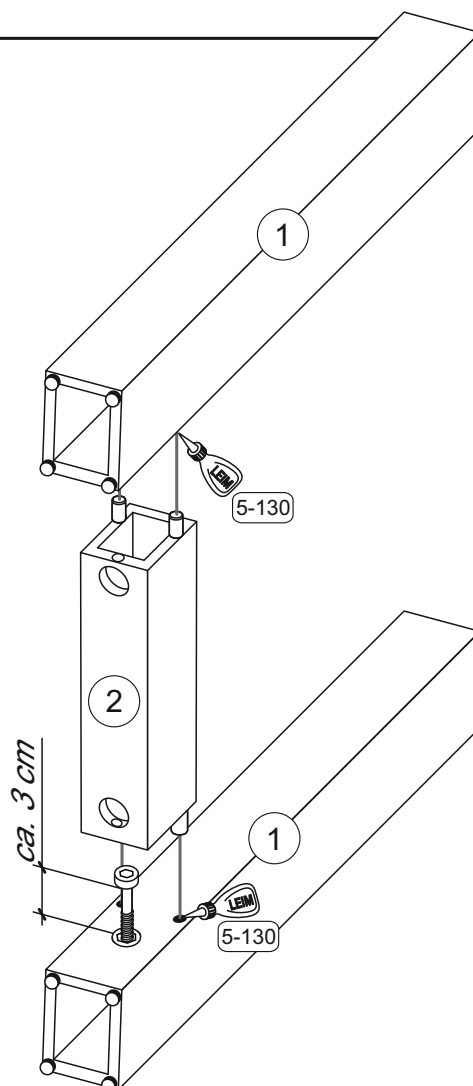 
2	1-241	 SW 5
	1x	
	1-362	 6x50
	4x	

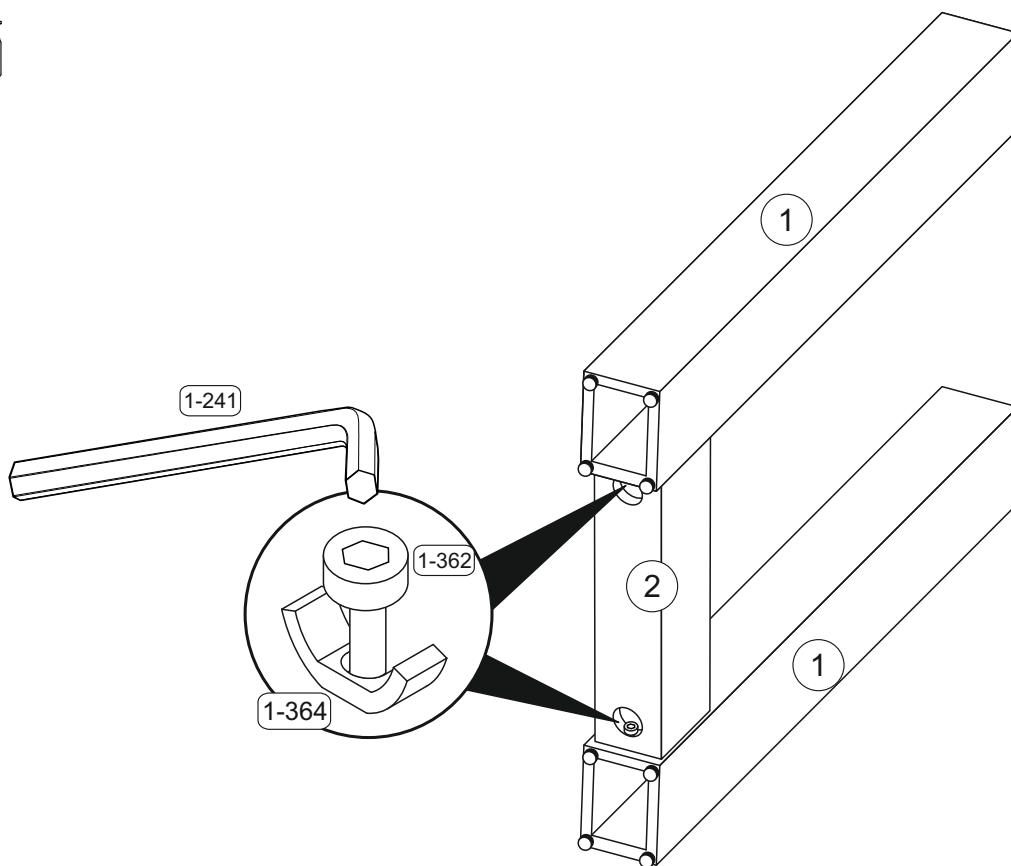 
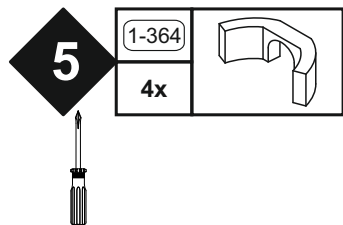 


3	2-104	 8x40	5-130	 LEIM
	8x		1x	



4	5-130	 LEIM
	1x	





6

