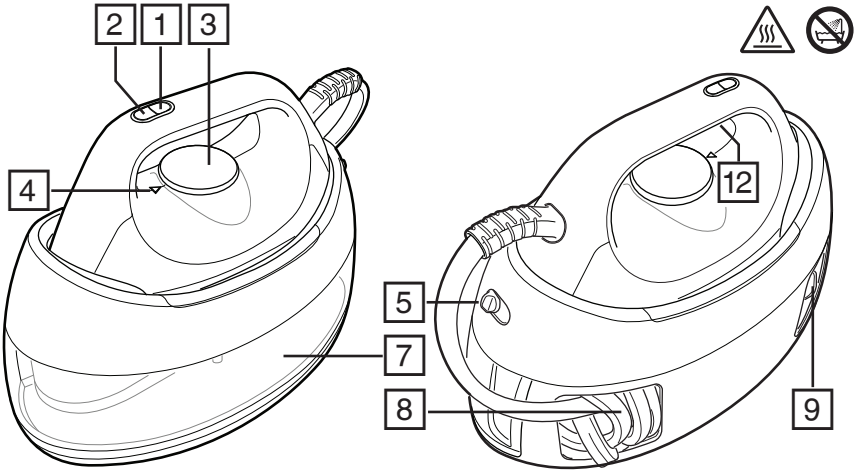


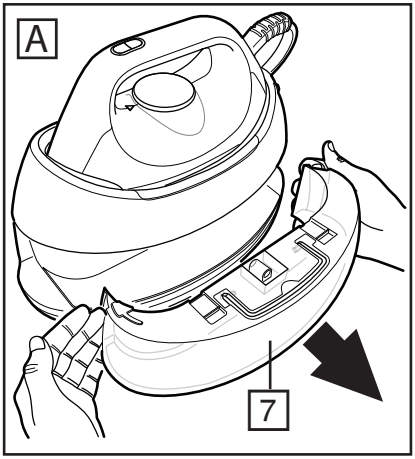

# Russell Hobbs®

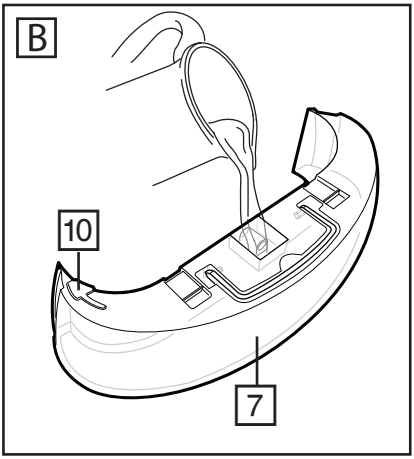
A BRITISH ICON SINCE 1952

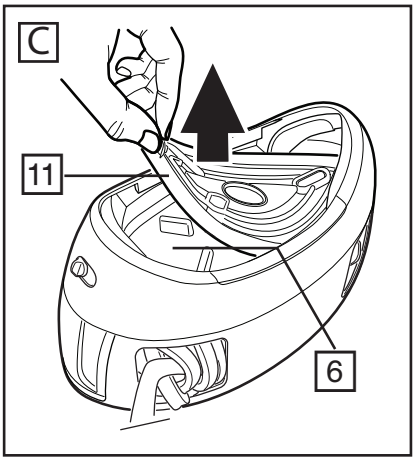
**28560**

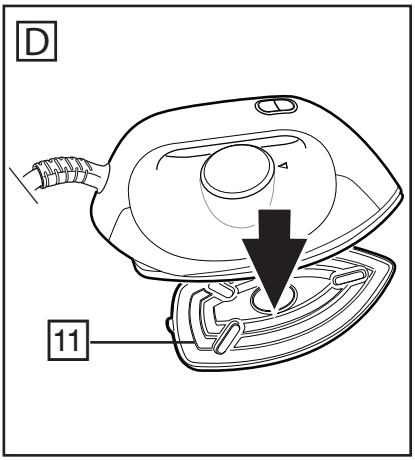
www.russellhobbs.com


2
1
3
4
12
5
7
8
9


A
7


B
10
7


C
11
6


D
11

Read these instructions carefully. Retain them for future use. If the appliance is transferred to another user, these instructions must be included.

## IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/ instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energised or cooling down.
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Rest the iron only on the base unit.
- **Do not** leave the iron unattended while plugged in or standing on the ironing board.
- **Do not** use the iron if it's dropped, damaged, malfunctions or leaks.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The surfaces of the appliance will get hot.
- **Do not** immerse in liquid. **Do not** use in a bathroom, near water, or outdoors.
- Ensure the appliance is unplugged during filling and emptying.
- Do not store until appliance has cooled.
- Ensure the cable is routed securely to prevent it from overhanging or becoming a trip hazard
- Do not iron clothing while it's being worn.
- Do not touch the soleplate, and keep away from the steam coming from it.
- Do not use the iron in the vicinity of children.
- Do not sit the base unit on a soft, carpeted, or upholstered surface, as this may block the vents underneath the base unit.
- Keep the cables and steam pipe away from hot parts.
- Do not use the iron for any purpose other than those described in these instructions.
- Take care not to scratch the soleplate – avoid buttons, zips, etc.
- The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.

**HOUSEHOLD USE ONLY**

## DIAGRAMS

1. Power Button
2. Calc Button
3. Heat Dial
4. Indicator Light
5. Iron Docking Lock
6. Docking Plate
7. Reservoir Tank
8. Iron Cable storage
9. Mains Plug Storage
10. Air release valve
11. Iron Rest
12. Steam Trigger Switch (not shown)

## BEFORE FIRST USE

- Remove any labels, stickers or packaging from the appliance.
- Before using the iron for the first time, or if it's not been used for a long time, iron a scrap piece of cotton (an old towel is ideal) to remove any accumulated residues.
- **Note:** When you use the iron for the first time, it can make smoke. This smoke is normal. It will stop after a short time. The smoke comes from the removal of manufacturing residue.
- **Note:** You may see a small quantity of water in the tank before first use.
- This water is from factory testing. It is normal and does not show a fault.

## FILLING/REFILLING

**Do not** use water with any additives. This will reduce the longevity of the appliance.

1. Remove the reservoir by pulling it away from the body of the steam generator using the indented grips on the side of the **Reservoir Tank (7)** (Fig A).
2. Fill the reservoir to the **max** mark. **Do not** exceed the **max** mark.
3. Refit the **Reservoir Tank (7)**.

## USE

- Slide the **Iron Docking Lock (5)** to the **unlock** position.
- Remove the **Iron** and the **Iron Rest (11)** from the **Docking plate (6)**.
- Seat the **Iron Rest (11)** on a flat and stable surface.
- Rest the **Iron** on the **Iron Rest (11).**
- Plug into the mains.
- Press **Power Button (1)** on the **iron** to switch on the appliance. The **Power Button (1)** and **Indicator Light (4)** will flash until selected mode on **Heat Dial (3)** has reached operating temperature.

## HEAT DIAL

4. Rotate the **Heat Dial (3)** aligning chosen setting with **Indicator Light (4)**.
5. The **Indicator Light (4)** will flash until the iron has reached its desired temperature. Once the temperature has been reached the light will remain illuminated. **This will take 60-80 seconds after you first switch on your steam station.**

| Heat Dial setting | Clothing Label marking |
|---|---|
| • | cool – nylon, acrylics, polyester |
| •• | warm – wool, polyester mixtures |
| •••/max | hot – cotton, linen |
| | do not iron |

**Tips:**

- Check for textile care symbols ()..
- Iron fabrics needing low temperatures first, then those that need medium temperatures , and finish with those needing high temperatures (or max).

If the instructions on the fabric label differ from this guide, follow the instructions on the label.

## STEAM TRIGGER

| Trigger Position | Status | Action | Function |
|---|---|---|---|
| Forward | Unlocked | Press + Hold | Continuous Steam |
| Back | Locked | / | Continuous Steam |
| **Forward** | Unlocked | Press + Hold (x2) | Steam Shot |

**Note:** Steam Shot can be activated every 10 seconds.

## STEAM IRONING

1. Set the temperature control to **• • •/max**
2. Squeeze the steam trigger to produce steam, release it to stop.

**Note: When you first start your steam generator and pull the trigger for steam ironing, there will be a delay as your steam generator pumps water from the reservoir to prime the system. This is normal and may take 20-30 seconds. This will also occur after refilling the reservoir.**

## DRY IRONING

You can dry iron by just not pressing the steam button, but if you want to make sure you do not press it accidentally, then you should iron with an empty reservoir. You can do your dry ironing first, then switch off, fill the reservoir and do your steam ironing.

## VERTICAL STEAMING

Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.

- Check that there is adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.
- Ensure there is nothing behind the fabric that may be damaged by the steam.
- Ensure that pockets, turn-ups, and cuffs are empty.
- Check that the temperature control is at **• • •/max**
- Hold the iron close to (but not touching) the fabric. Hold it well away for delicate fabrics.

We recommend using the steam trigger to produce steam for smaller areas, as it gives you better control.

## CALC CLEANING

Calc Clean reduces build up of limescale. This operation will flush out the soleplate to maintain optimum performance and longevity.

This will activate after 2 hrs of continous operation.

The **Calc Button (2)** will illuminate indicating a calc clean is required.

Once the appliance is powered off, the appliance will not operate until the Calc Cleaning has been done.

**IMPORTANT:** Before initiating the Calc Clean function, ensure the iron is removed from the **Docking Plate**

**(6)**. Hold the iron at approximately 45° from horizontal, positioned over a suitable receptacle (e.g., sink or container), ensuring that any discharge of hot water or steam is directed safely away from the user.

**Activate Calc Clean**

Hold the **Calc Button(2)** down for 2 sec to activate cleaning. This can be activated at any point during operation.

The **Calc Button(2)** will flash during the cleaning process. Once the button terminates flashing, the process is complete.

## AUTO SHUT-OFF MODE

**Inactive mode**

After 8 minutes of inactivity, the unit will change to auto shut off mode. The **Power button (1)** will be flashing. To re-activate the appliance, press **Steam Trigger Switch (12)**

**Trigger lock mode**

After 15 minutes of continous steam trigger in lock position the unit will change to Auto Shut Off mode. This is a safety feature. To de-activate, unlock trigger to activate switch.

## AUTO POWER-OFF MODE

30 minutes of inactivity after Auto Shut Off Mode has been activated, the unit will power off.

**Do not** leave the appliance plugged into the mains for extended periods of inactivity.

## IRON REST/SILICONE REST

**Resting the iron while rearranging your garment (D)**

When rearranging your garment, rest the iron on the **Iron Rest (11)** provided.

**Never** rest the iron in the **Docking plate (6)** without the **Iron Rest (11)** in place.


## AFTER USE

1. Rotate **Heat Dial (3)** to **MIN**.
2. Press **Power Button (1)** on the **Iron** to switch off.
3. When cooled to room temperature, place the **Iron Rest (11)** into the **Docking plate (6)**.
4. Place the iron onto the **Iron Rest (11)** in the **Docking plate (6)**.
5. Remove the **Reservoir Tank (7)**.
6. Empty the **Reservoir Tank (7)** ensuring to unplug the **Air Release Valve (10)**. Reattach once emptied.
7. Ensure the Iron cable is neatly placed into the **Iron Cable storage (8)**.
8. Ensure the Mains Plug is neatly placed into the **Mains Plug Storage (9)**.
9. Seat the iron back into the **Docking plate (6)** and switch the **Iron Docking Lock (5)** to the **lock** position.

## CARE AND MAINTENANCE

- Wipe outer surfaces with a warm damp cloth.
- When cooled to room temperature, remove spots from the soleplate with a little vinegar.
- **Do not** use abrasives on the soleplate.
- Small amounts of steam is released after you release the trigger. This may cause mould to form in the **Docking Plate (6)**. We recommend to wipe clean the **Iron Rest (11)** and **Docking Plate (6)** after each use.

## RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

## ERP

For ErP energy consumption information, please refer to website **en.russellhobbs.com/erp**

## SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

## GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase. Register at: **uk.russellhobbs.com/product-registration**

Consumables are guaranteed only for their recommended lifecycle. Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

## ONLINE

**www.russellhobbs.com** for more products

T22-9004350