

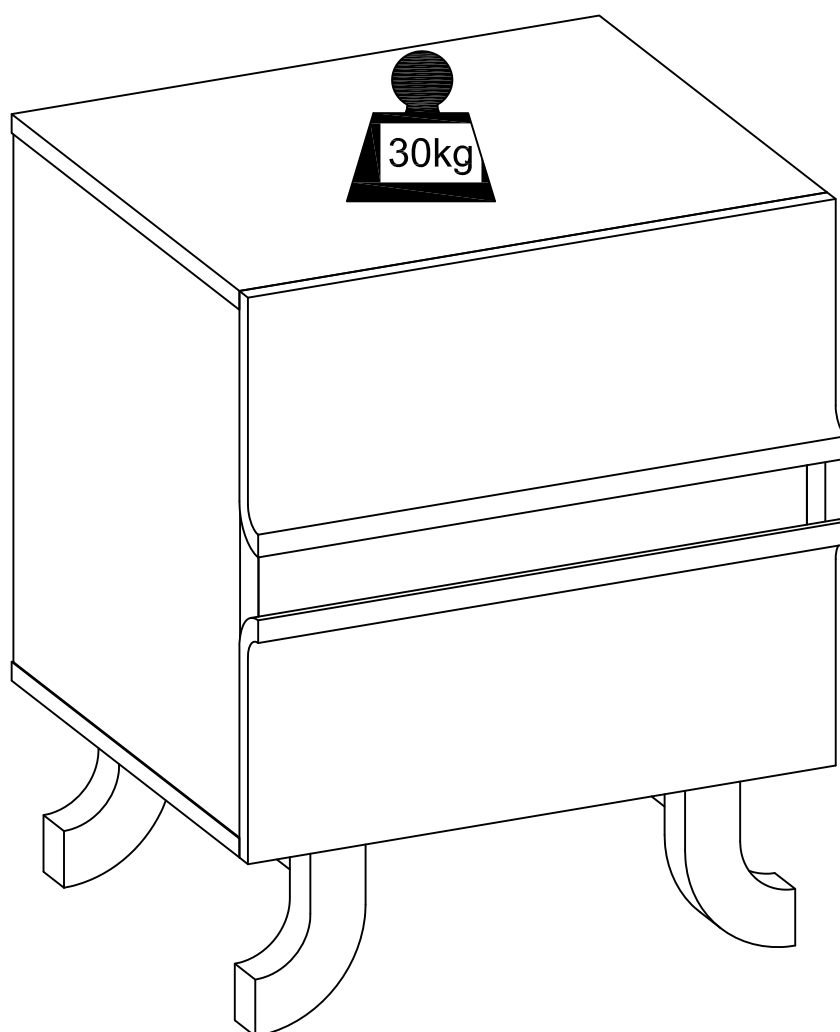






Assemble instruction

VIRA


27980065-01

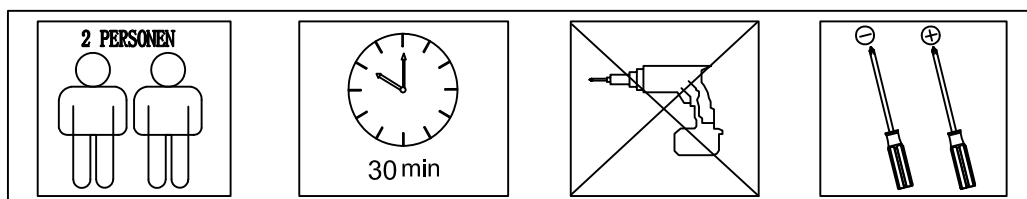


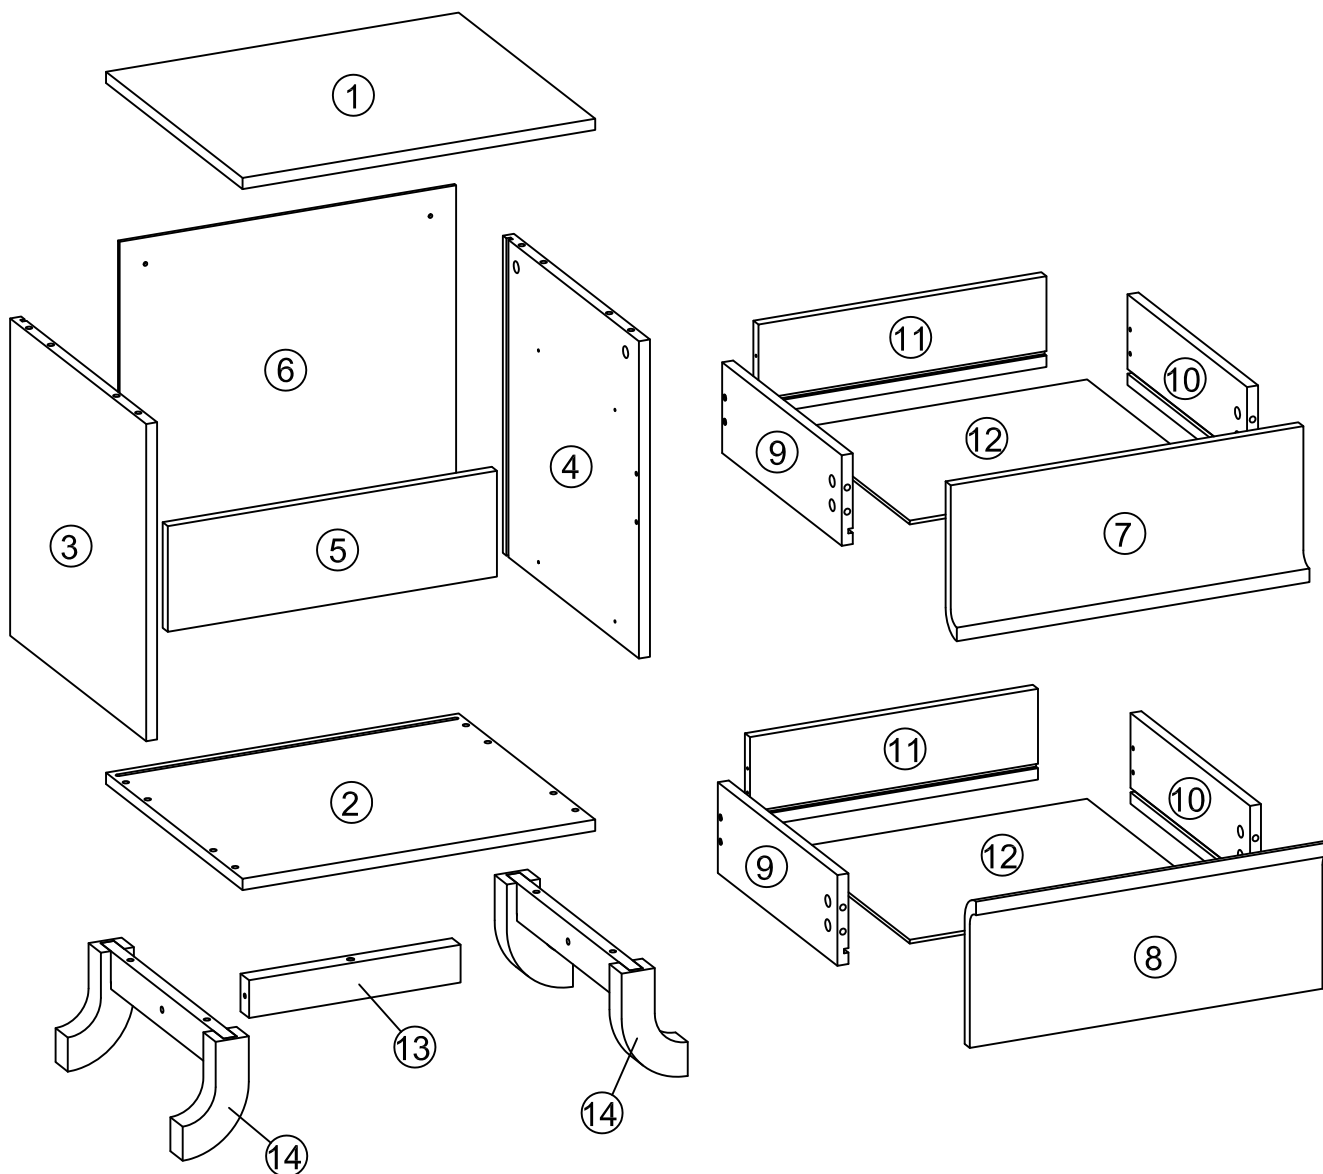






A	×16	B	×16	C	×4	D	×1	E	×2	F	×4	G	×4	H	×8
															
M6*35mm		ø15mm		M7*50mm		M6*60mm		M6*35mm		M6*50mm				ø8*30mm	
I	×24	J	×8	K	×8	L	×1	M	×4	N	×2	O	×2	P	×2
															
ø3*14mm		M4*35mm													
Q	×2	R	×2	S	×2	T	×2								
															
						M4*45mm									


1

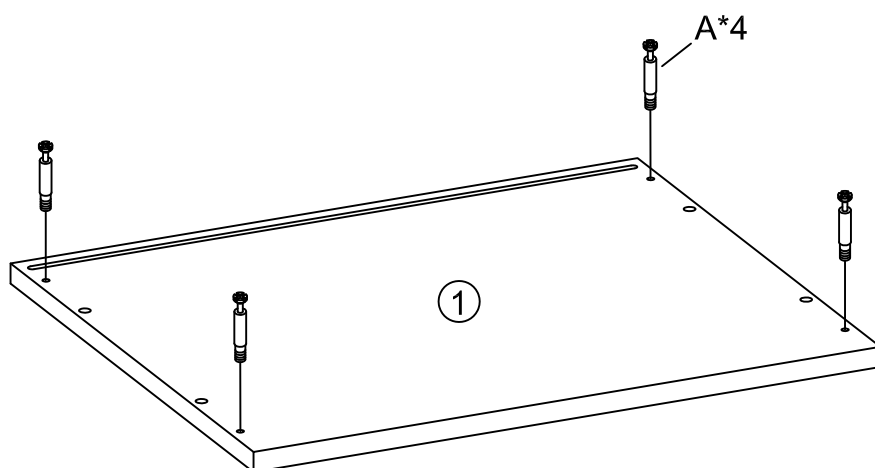


A	×4
	
M6*35mm	

2

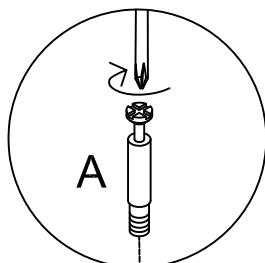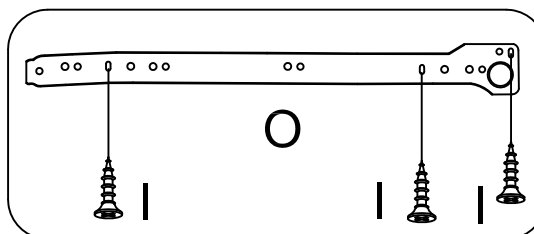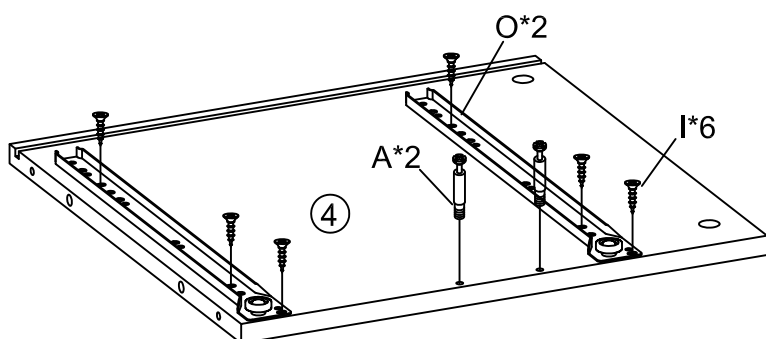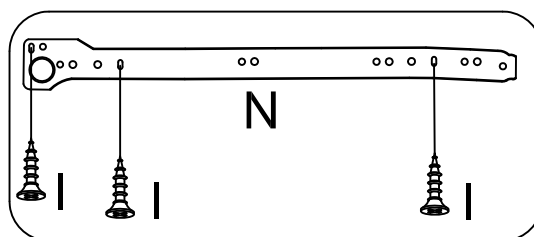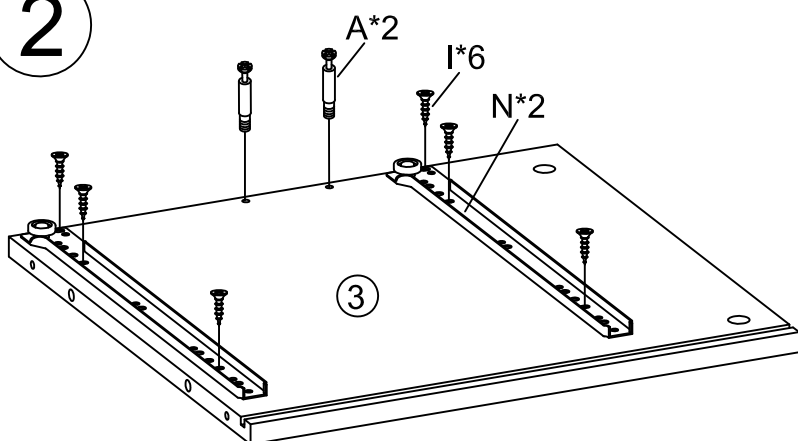


A	×4	I	×12	N	×2	O	×2
							
M6*35mm		ø3*14mm					

3

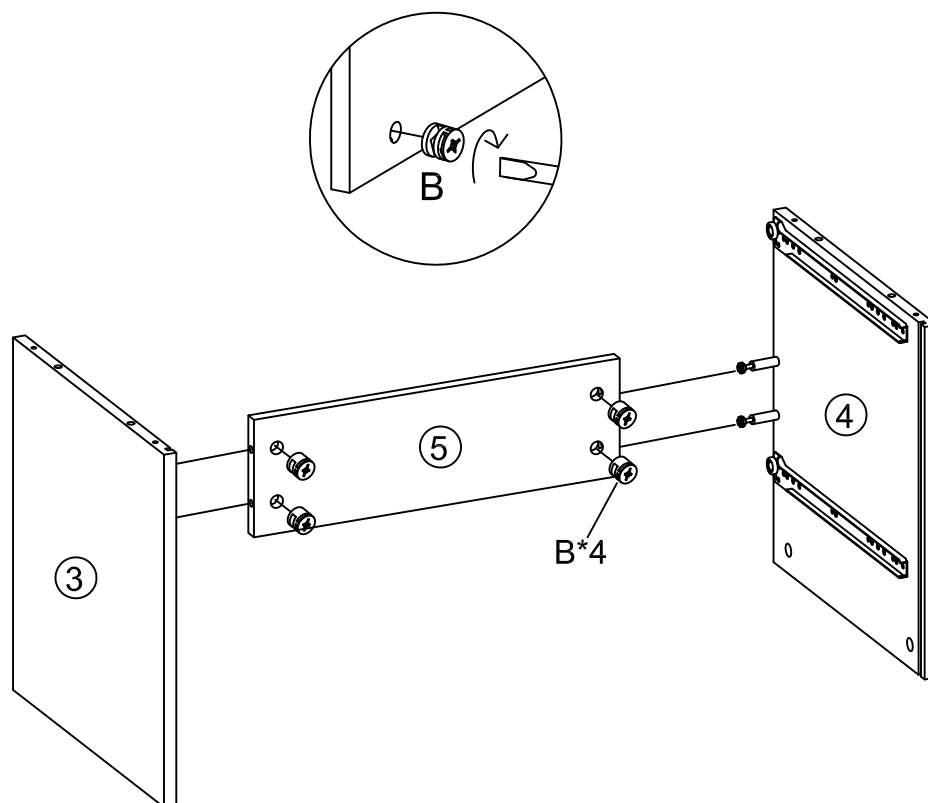


B	×4
	
ø15mm	

4


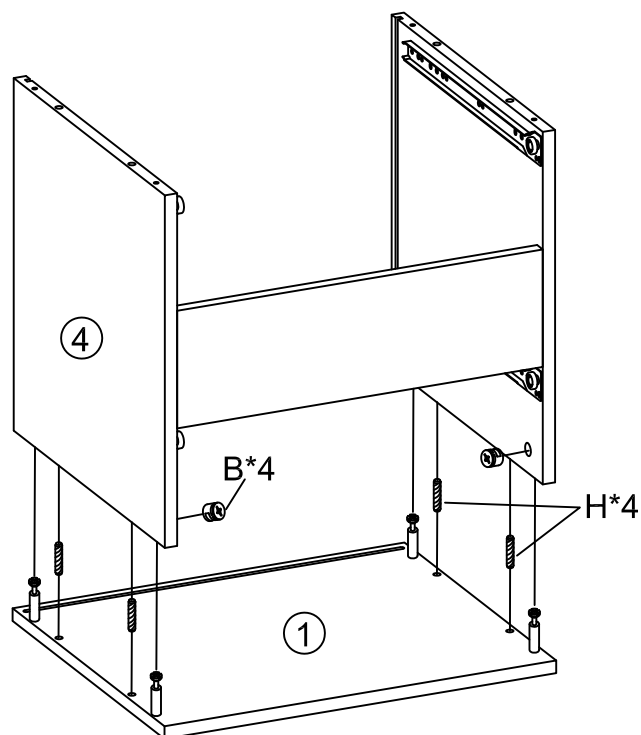


B	×4	H	×4
			
ø15mm		ø8*30mm	

5




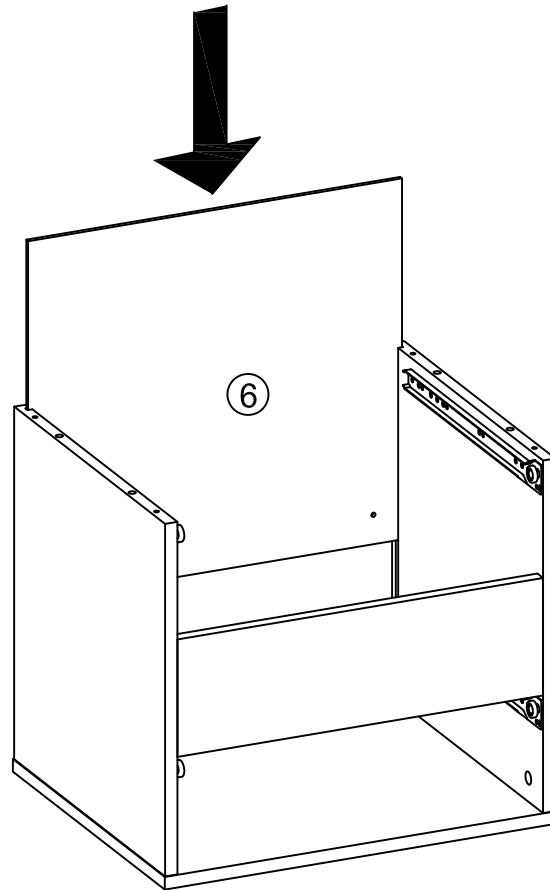


6

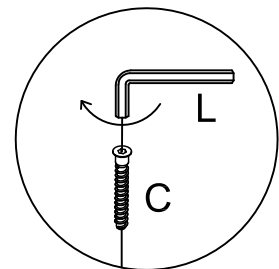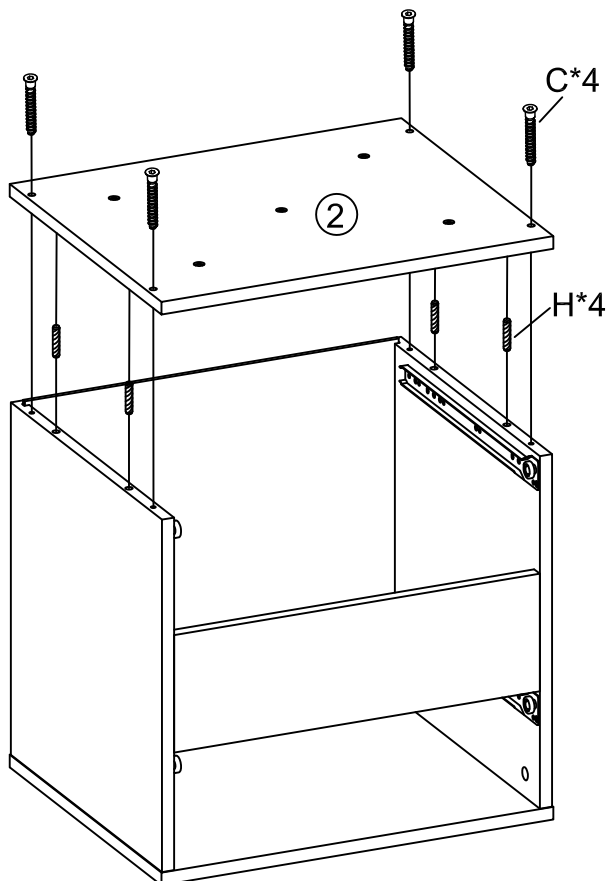





C	x4	H	x4	L	x1
					
M7*50mm		ø8*30mm			

7

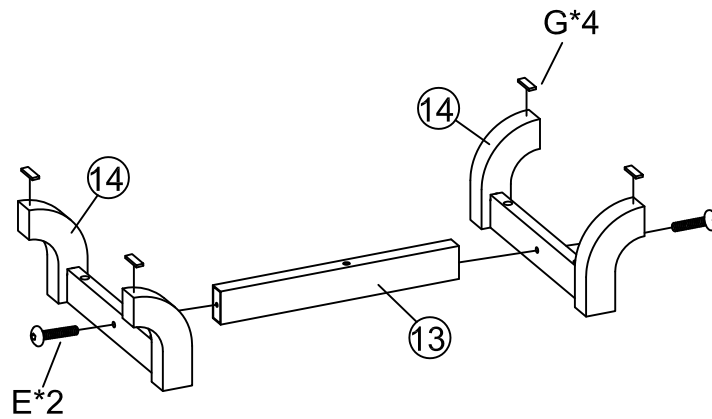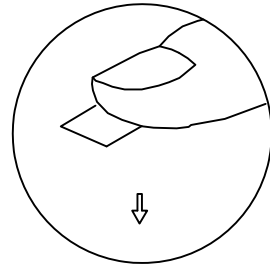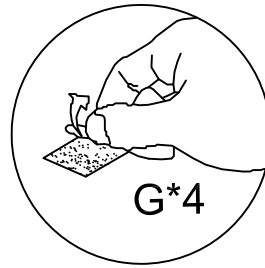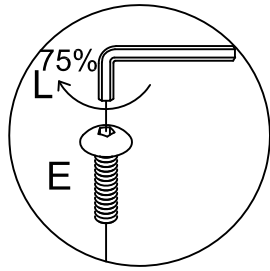






E	×2	G	×4	L	×1
M6*35mm					


8

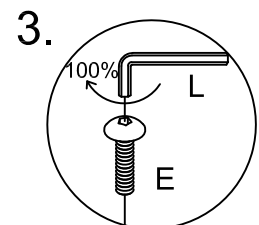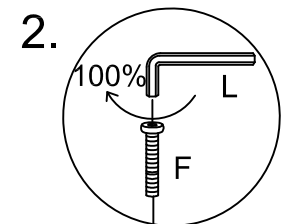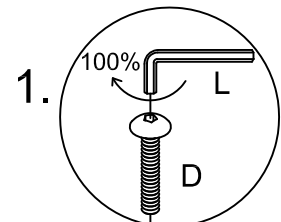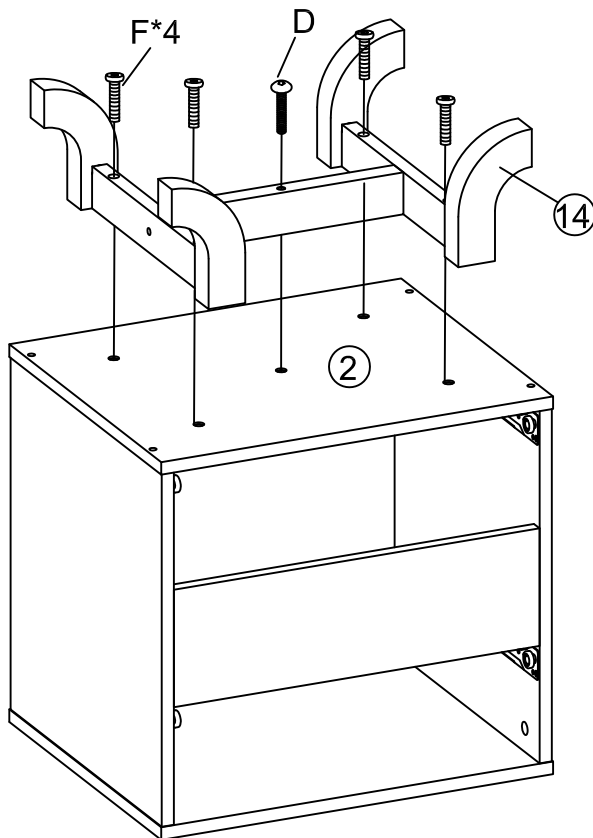



D	×1	F	×4	L	×1
M6*60mm		M6*50mm			


9

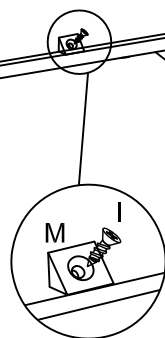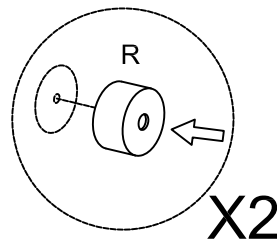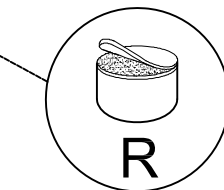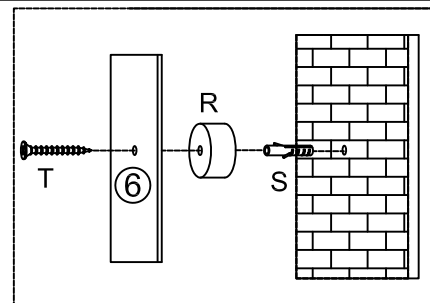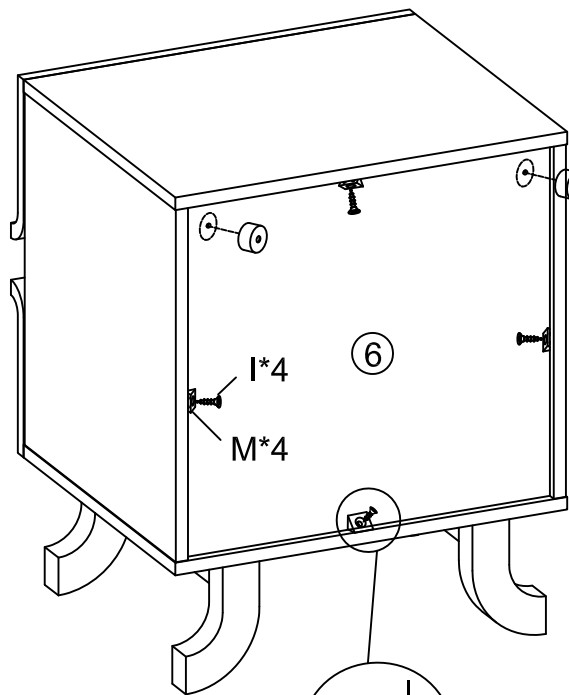




I	x4	M	x4	R	x2	S	x2	T	x2
									
ø3*14mm								ø4*45mm	


10

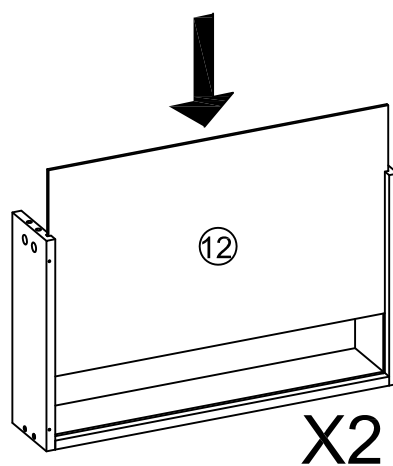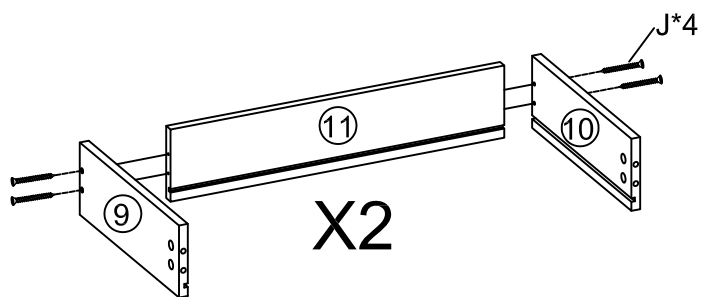





J	x8
	
ø4*35mm	

11

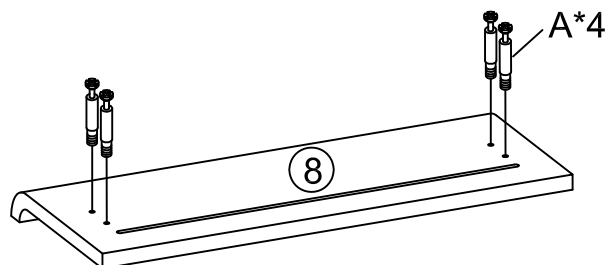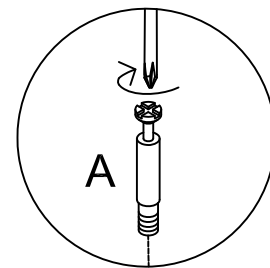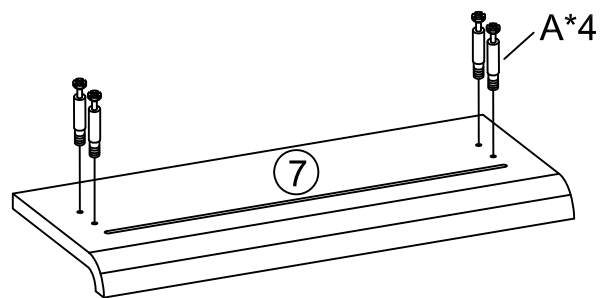





A	×8
	
M6*35mm	

12

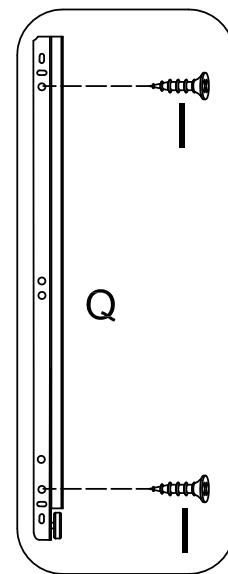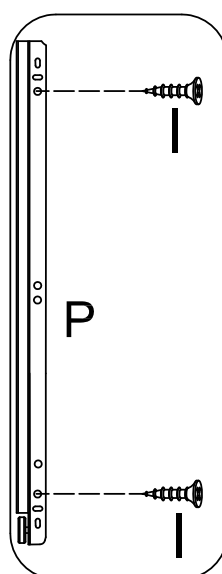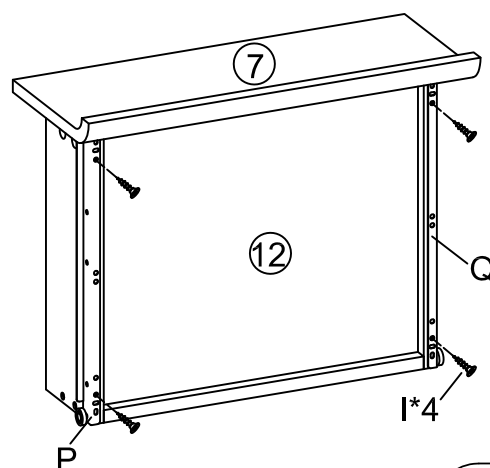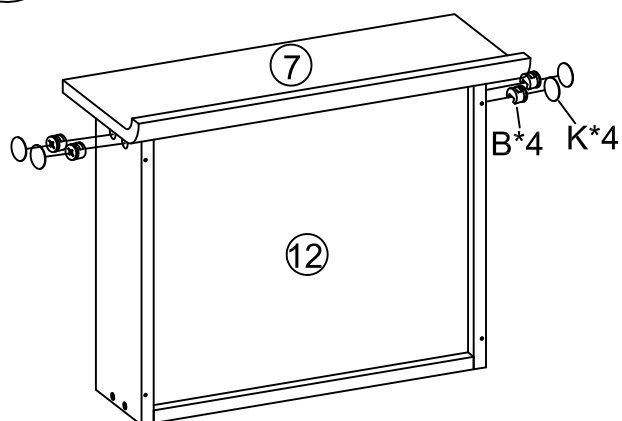

B	×4	I	×4	K	×4	P	×1	Q	×1
									
ø15mm		ø3*14mm							

13

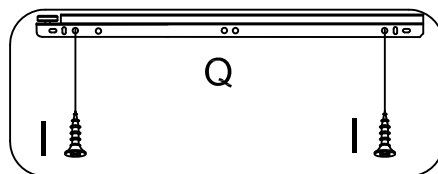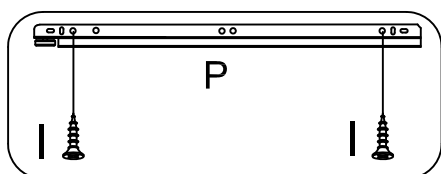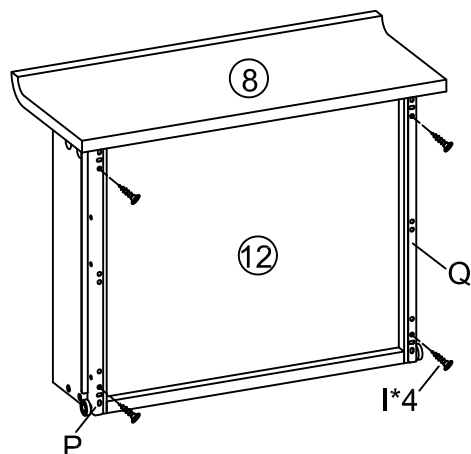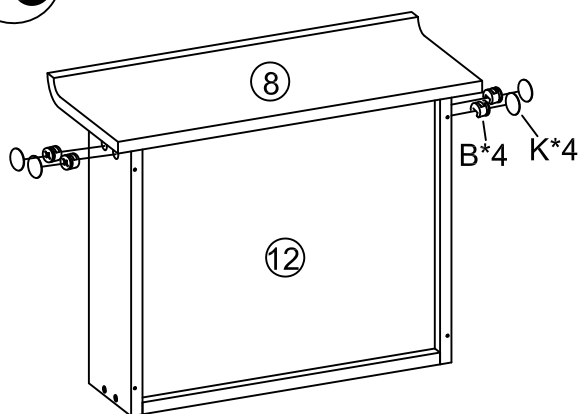

B	x4	I	x4	K	x4	P	x1	Q	x1
ø15mm		ø3*14mm							

14

