


INSTRUCTIONS

26870326-01

26870326-01
AMY - EXKLUSIV
VITRINE

BDSK Handels GmbH & Co.KG
Mergentheimer Straße 59
DE-97084 Würzburg Germany
Info@moemax.at


















mömax

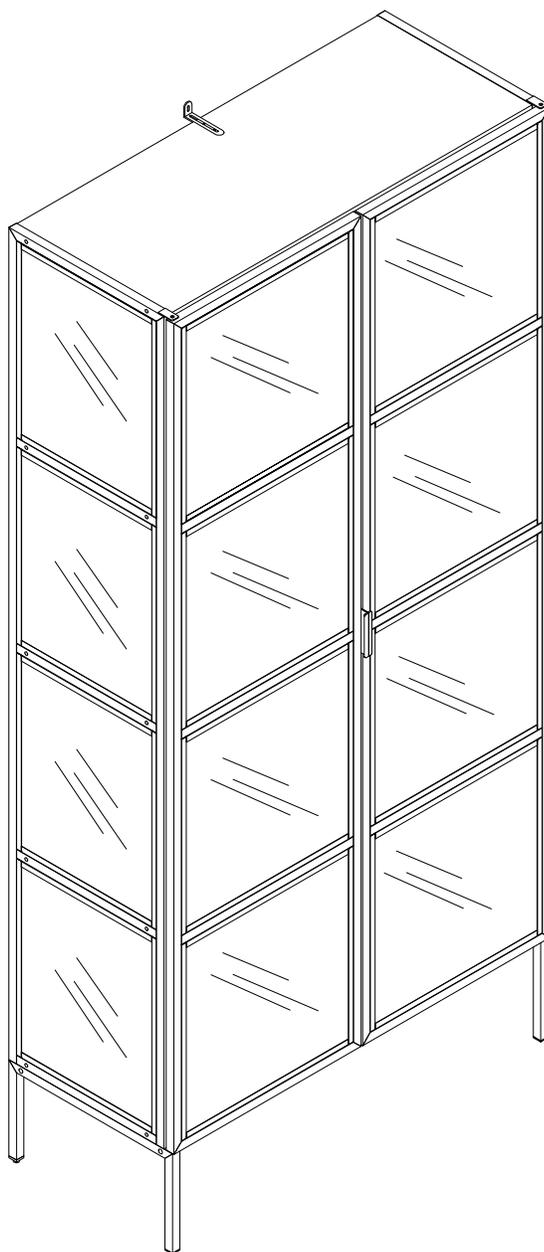


BDSK Handels GmbH & Co.KG
Mergentheimer Straße 59
DE-97084 Würzburg Germany

26870326-01

1/19

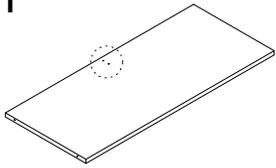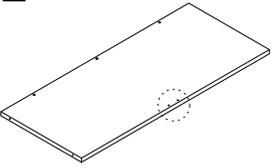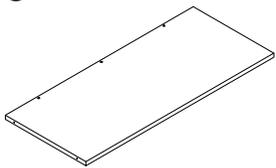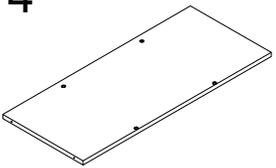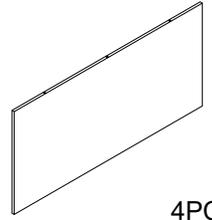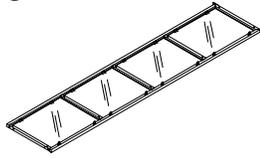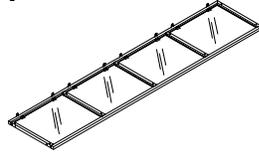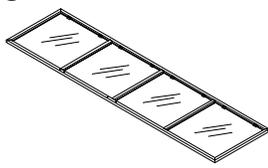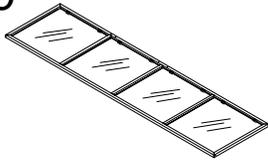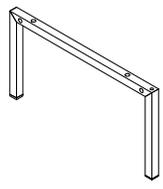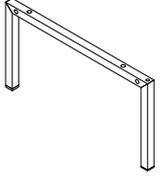
A $\varnothing 13 \times 15 \text{mm}$  2PCS	B $\varnothing 6 \times 20 \text{mm}$  2PCS	C $\varnothing 5.8 \times 35 \text{mm}$  2PCS	D  1PC	E  2PCS
F $75 \times 25 \times 15$  1PC	G $80 \times 32 \times 18$  2PCS	H $M4 \times 14 \text{mm}$  2PCS	I $M3.5 \times 14 \text{mm}$  16PCS	J $M3.5 \times 10 \text{mm}$  16PCS
K $M6 \times 25 \text{mm}$  8PCS	L $M6 \times 35 \text{mm}$  4PCS	M $M5 \times 38 \text{mm}$  20PCS	N $\varnothing 5 \times 30 \text{mm}$  24PCS	O $M5 \times 35 \text{mm}$  2PCS
P  2PCS	Q 3mm  1PC	R 4mm  1PC		
1  1PC	2  1PC	3  2PCS	4  1PC	
5  4PCS	6  1PC	7  1PC	8  1PC	
9  1PC	10  1PC	11  1PC	12  2PCS	

Step 1

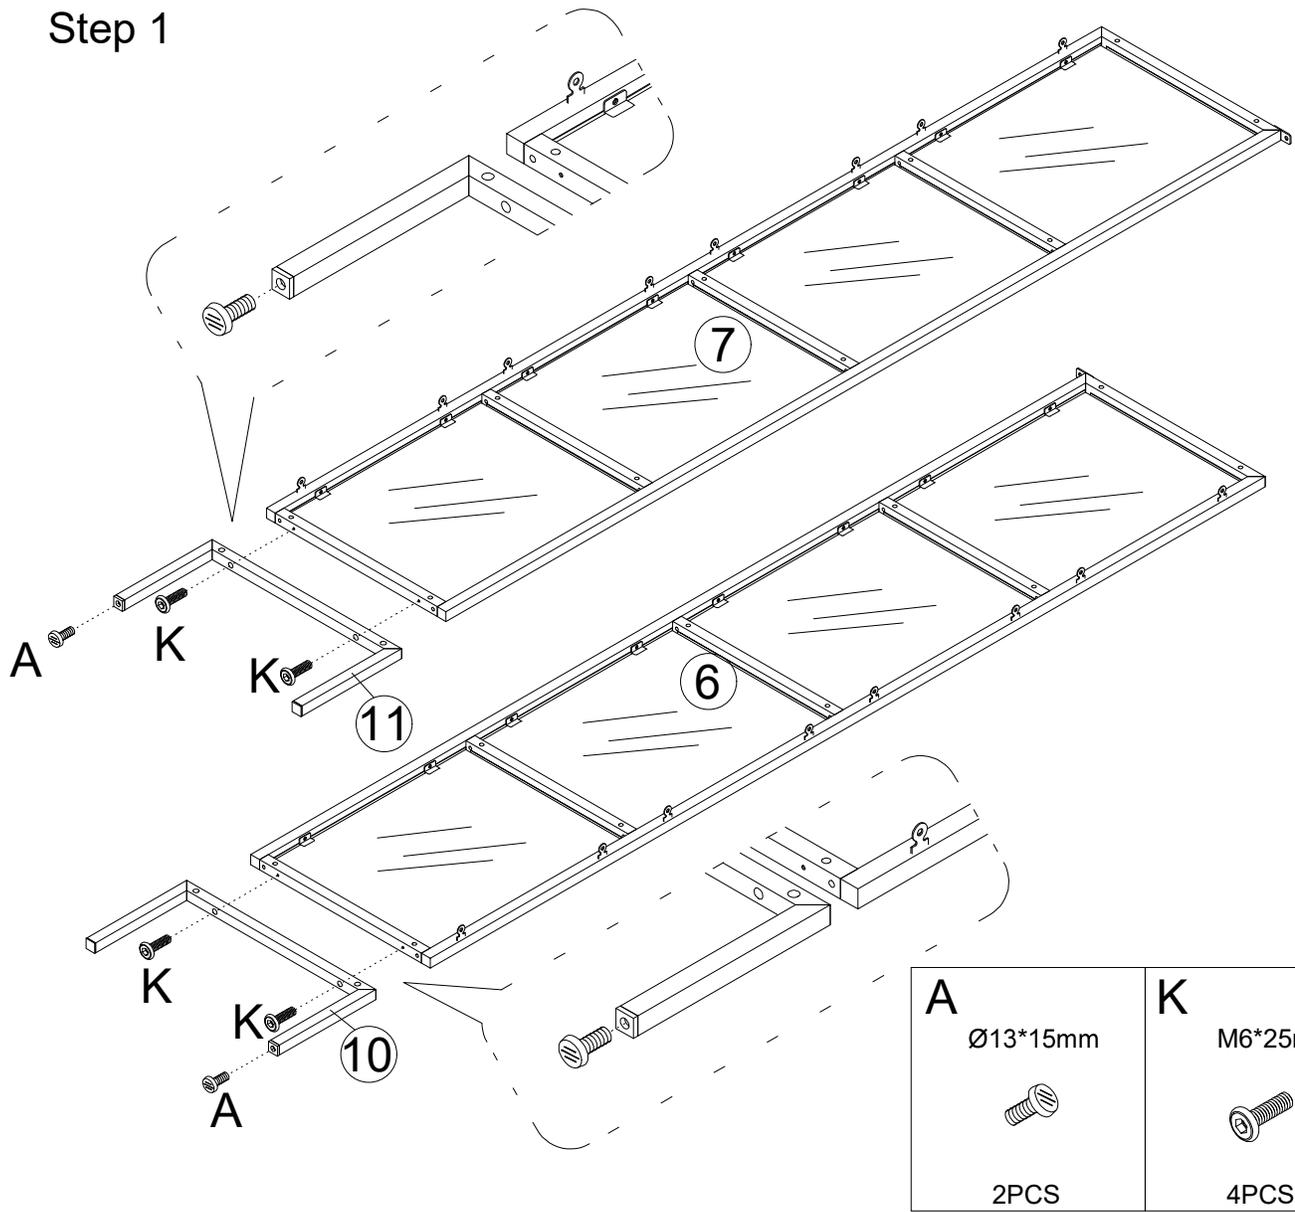


<p>A Ø13*15mm</p>  <p>2PCS</p>	<p>K M6*25mm</p>  <p>4PCS</p>
--	---

Step 2

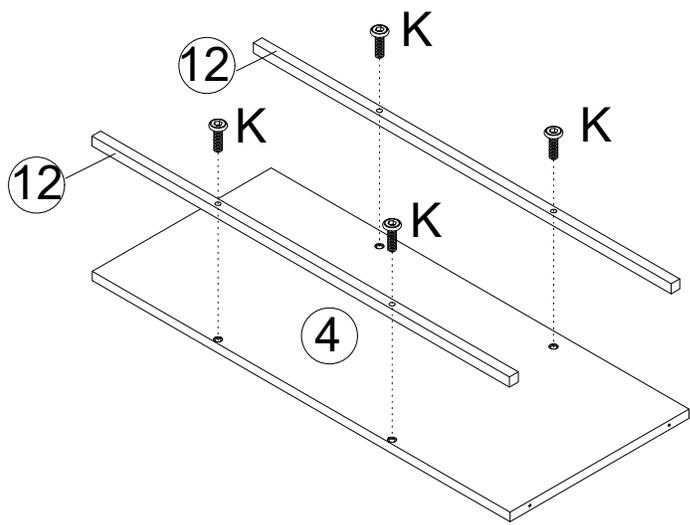


<p>K M6*25mm</p>  <p>4PCS</p>


Step 3

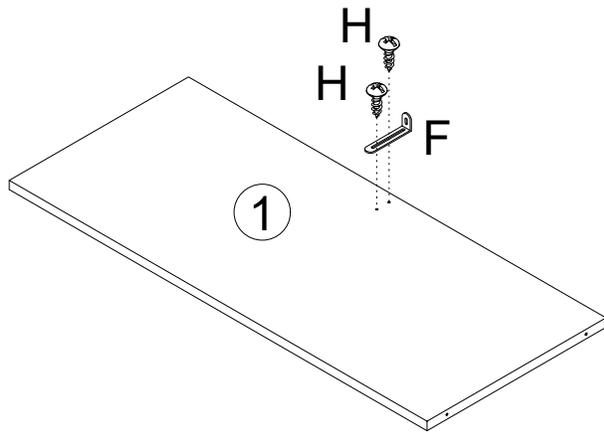


<p>F</p> <p>75*25*15</p>  <p>1PC</p>	<p>H</p> <p>M4*14mm</p>  <p>2PCS</p>
--	--


Step 4

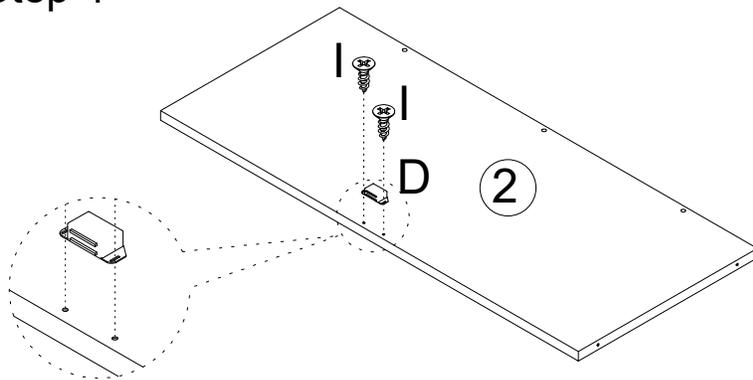



<p>D</p>  <p>1PC</p>	<p>I</p> <p>M3.5*14mm</p>  <p>2PCS</p>
--	--

Step 5

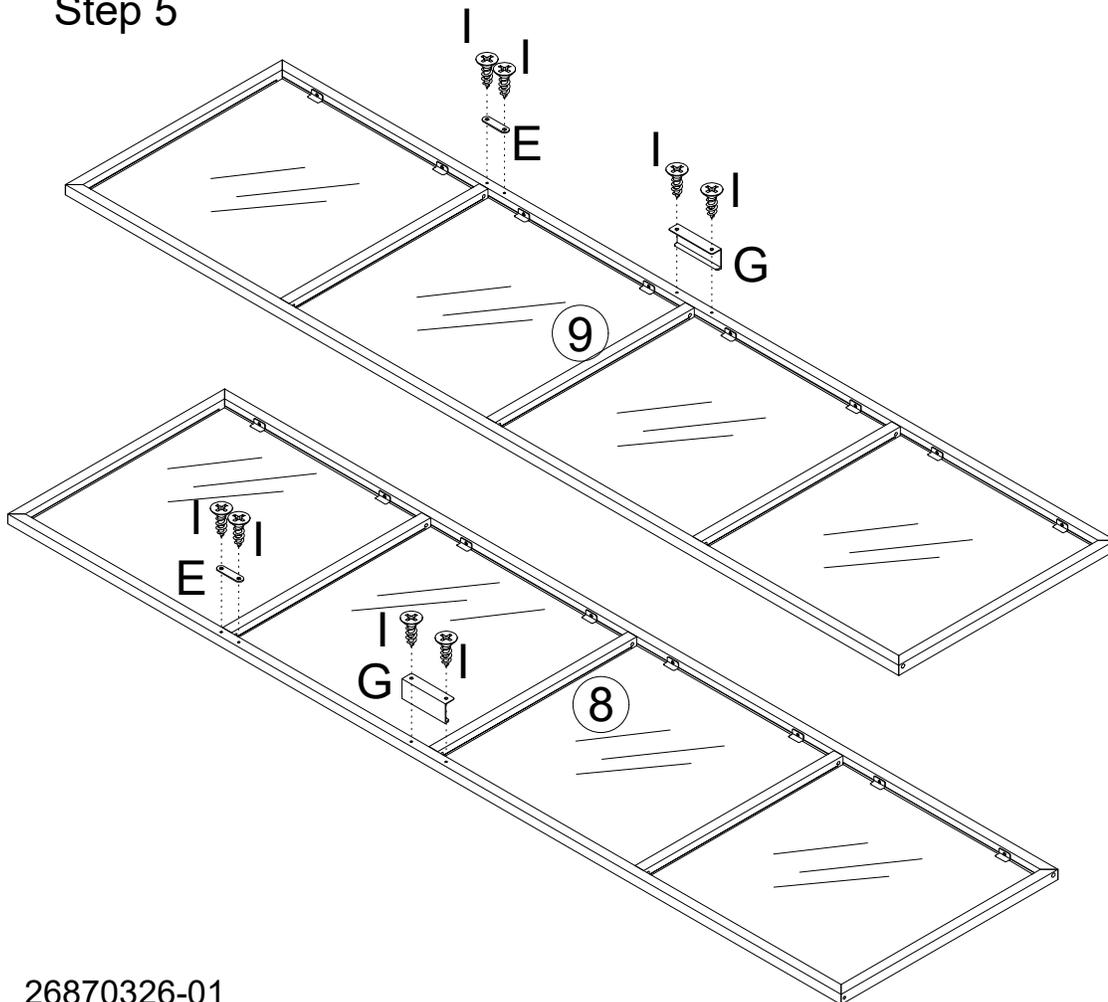


<p>E</p>  <p>2PCS</p>
<p>G</p> <p>80*32*18</p>  <p>2PCS</p>
<p>I</p> <p>M3.5*14mm</p>  <p>8PCS</p>

Step 6

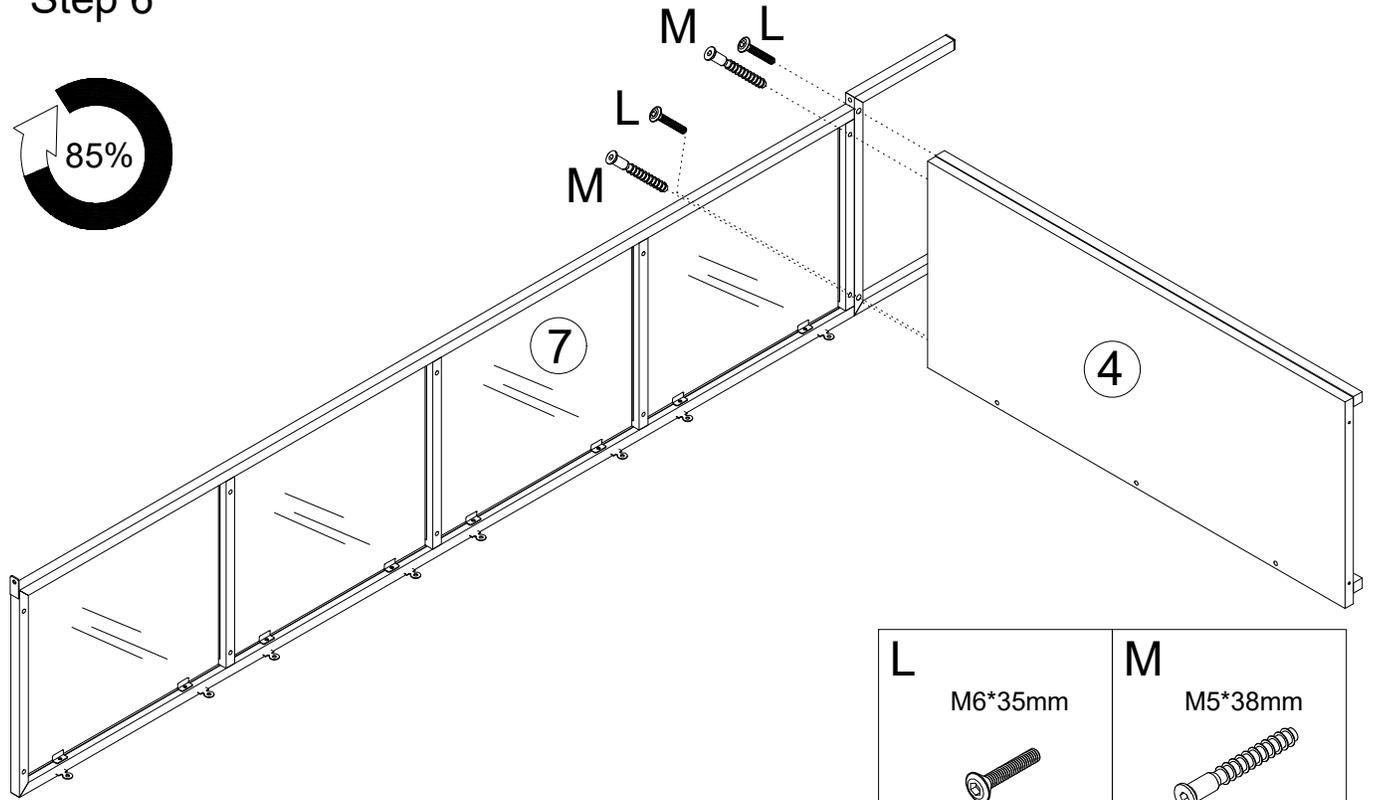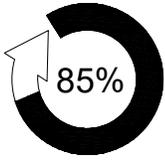

L	M
M6*35mm	M5*38mm
	
2PCS	2PCS

Step 7


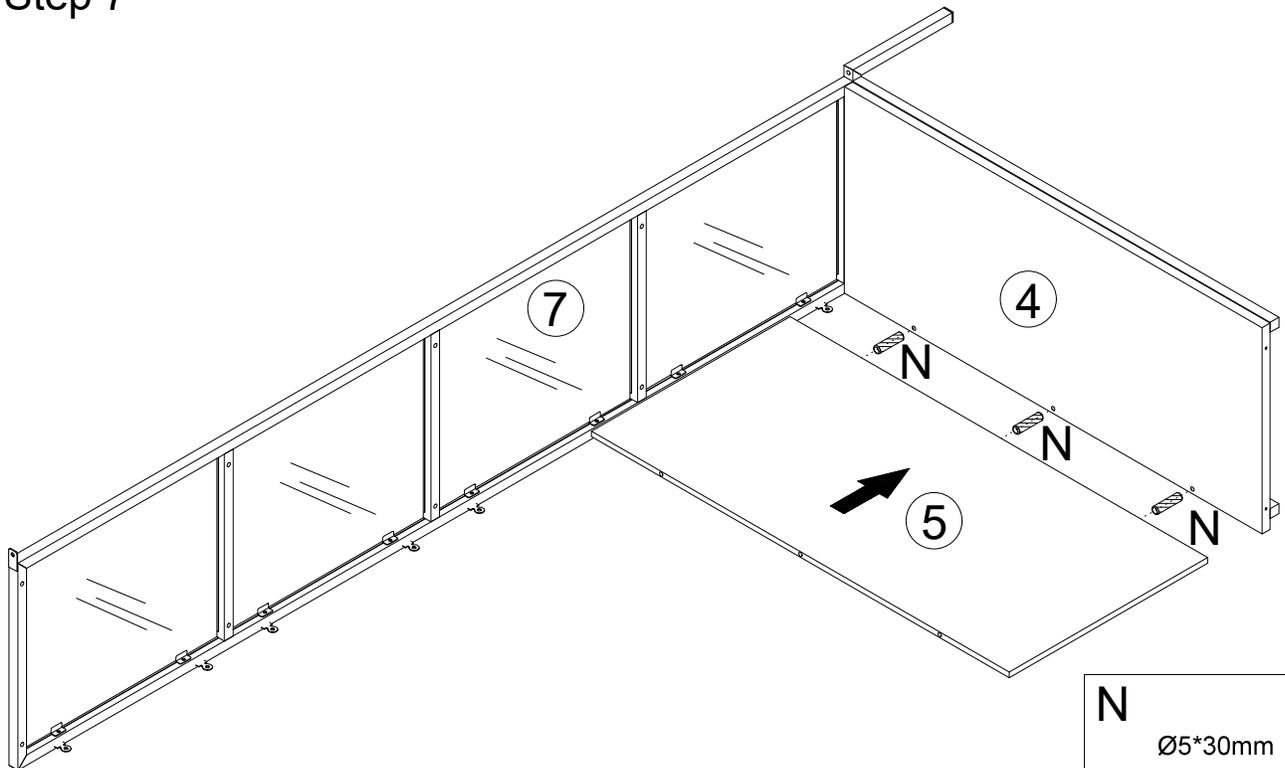


N
Ø5*30mm

3PCS


Pls make sure there is no any gap when you assembly between the Part#5 with Part #4.

Step 8

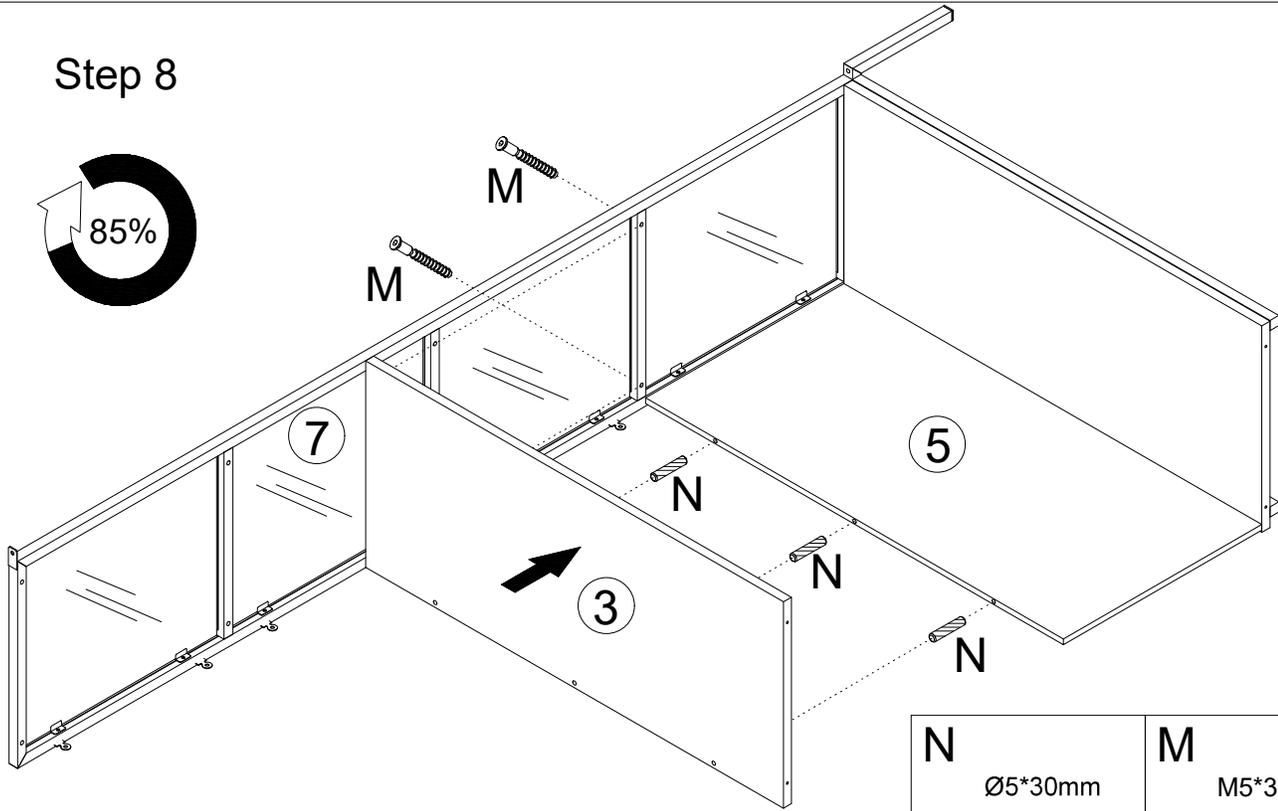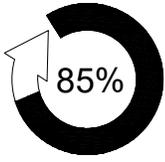

N Ø5*30mm  3PCS	M M5*38mm  2PCS
--	--



Step 9

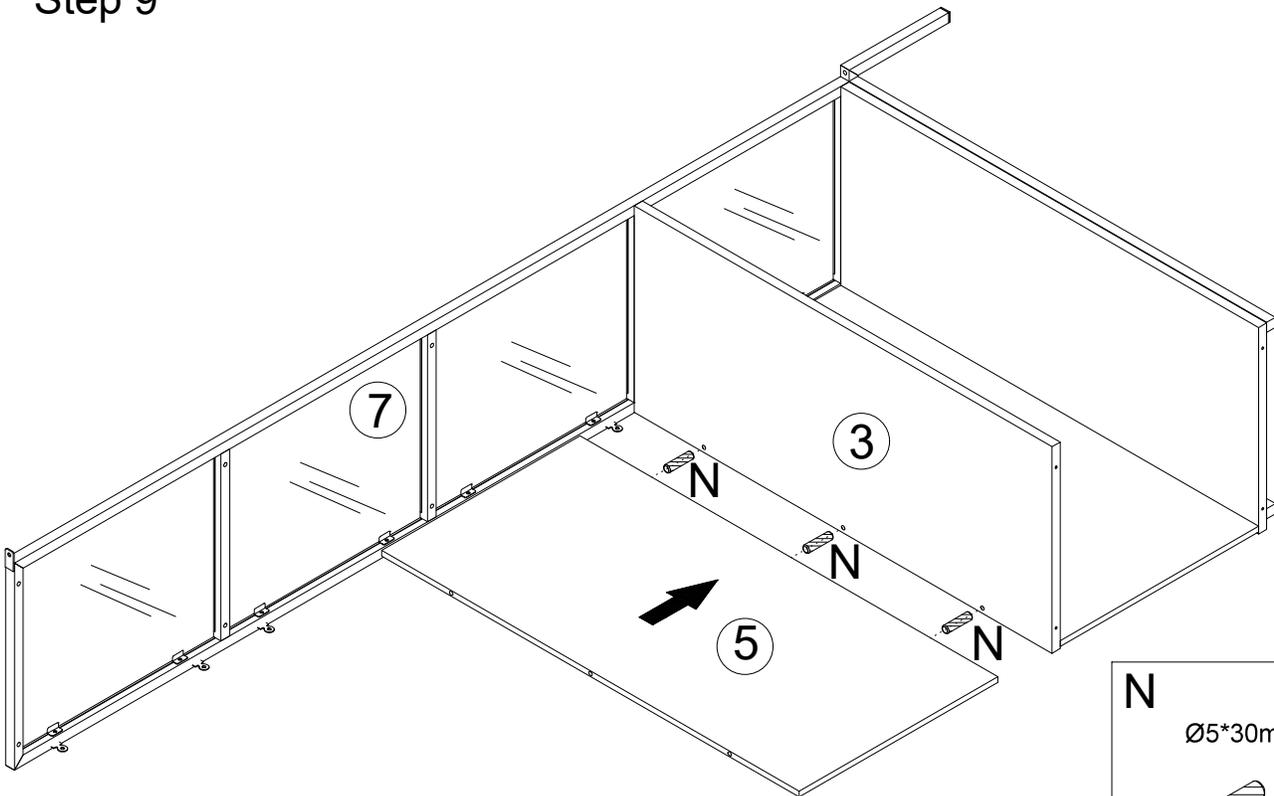

N Ø5*30mm  3PCS
--



Pls make sure there is no any gap when you assembly between the Part#5 with Part #3.

Step 10

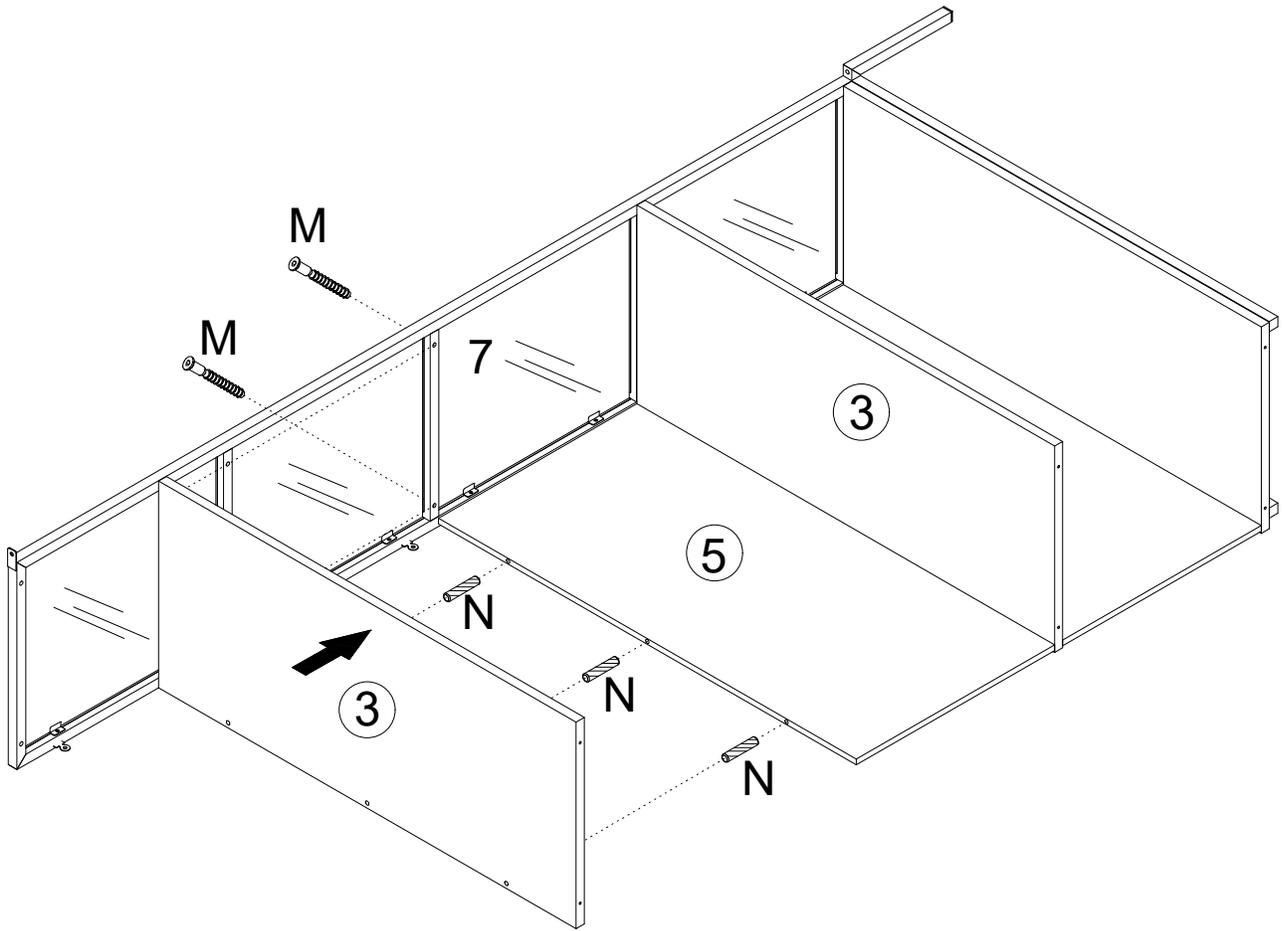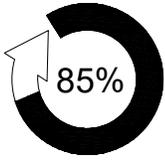



N	M
Ø5*30mm	M5*38mm
	
3PCS	2PCS

Step 11

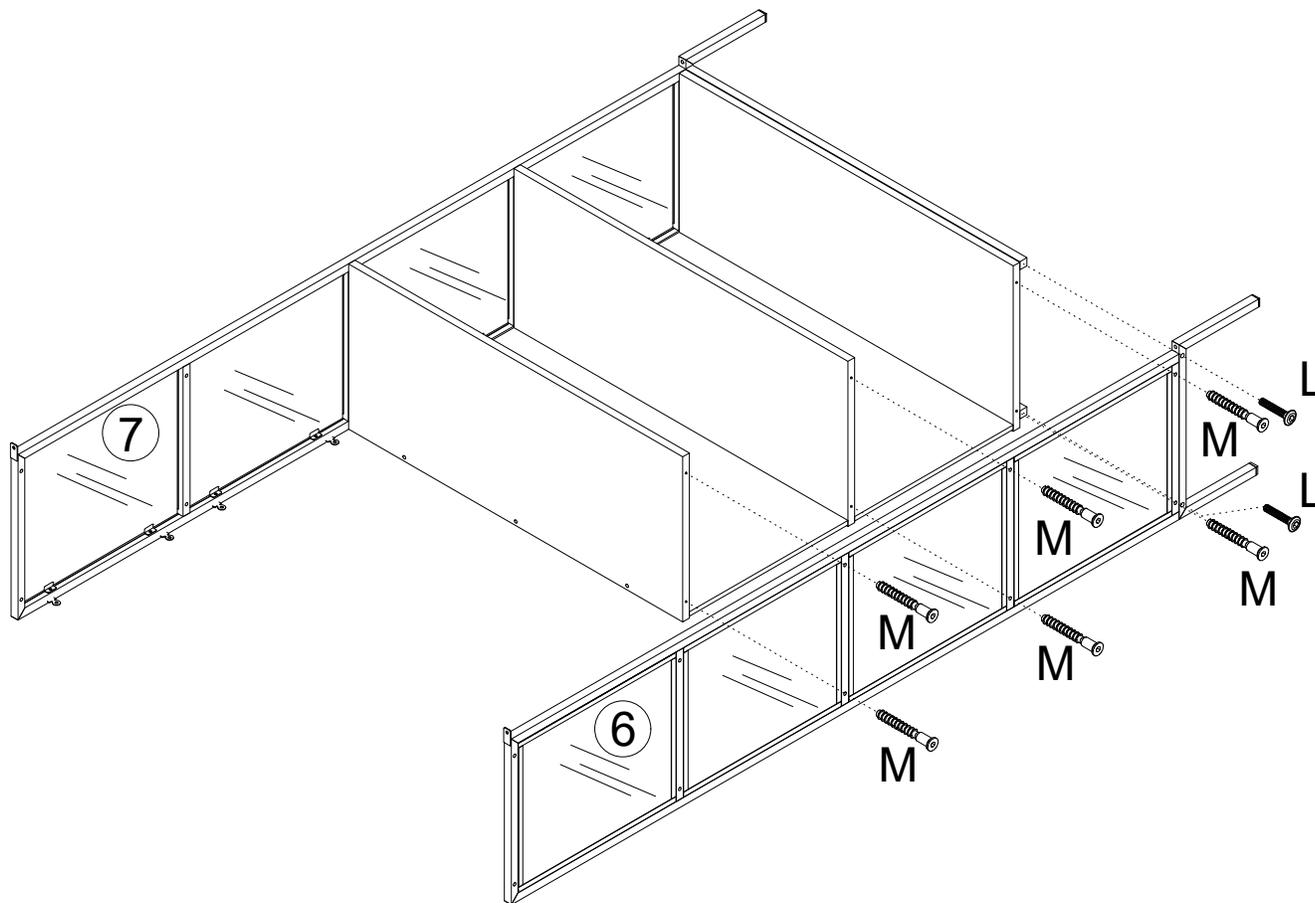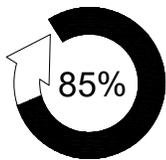


L	M
M6*35mm	M5*38mm
	
2PCS	6PCS


Step 12

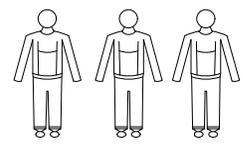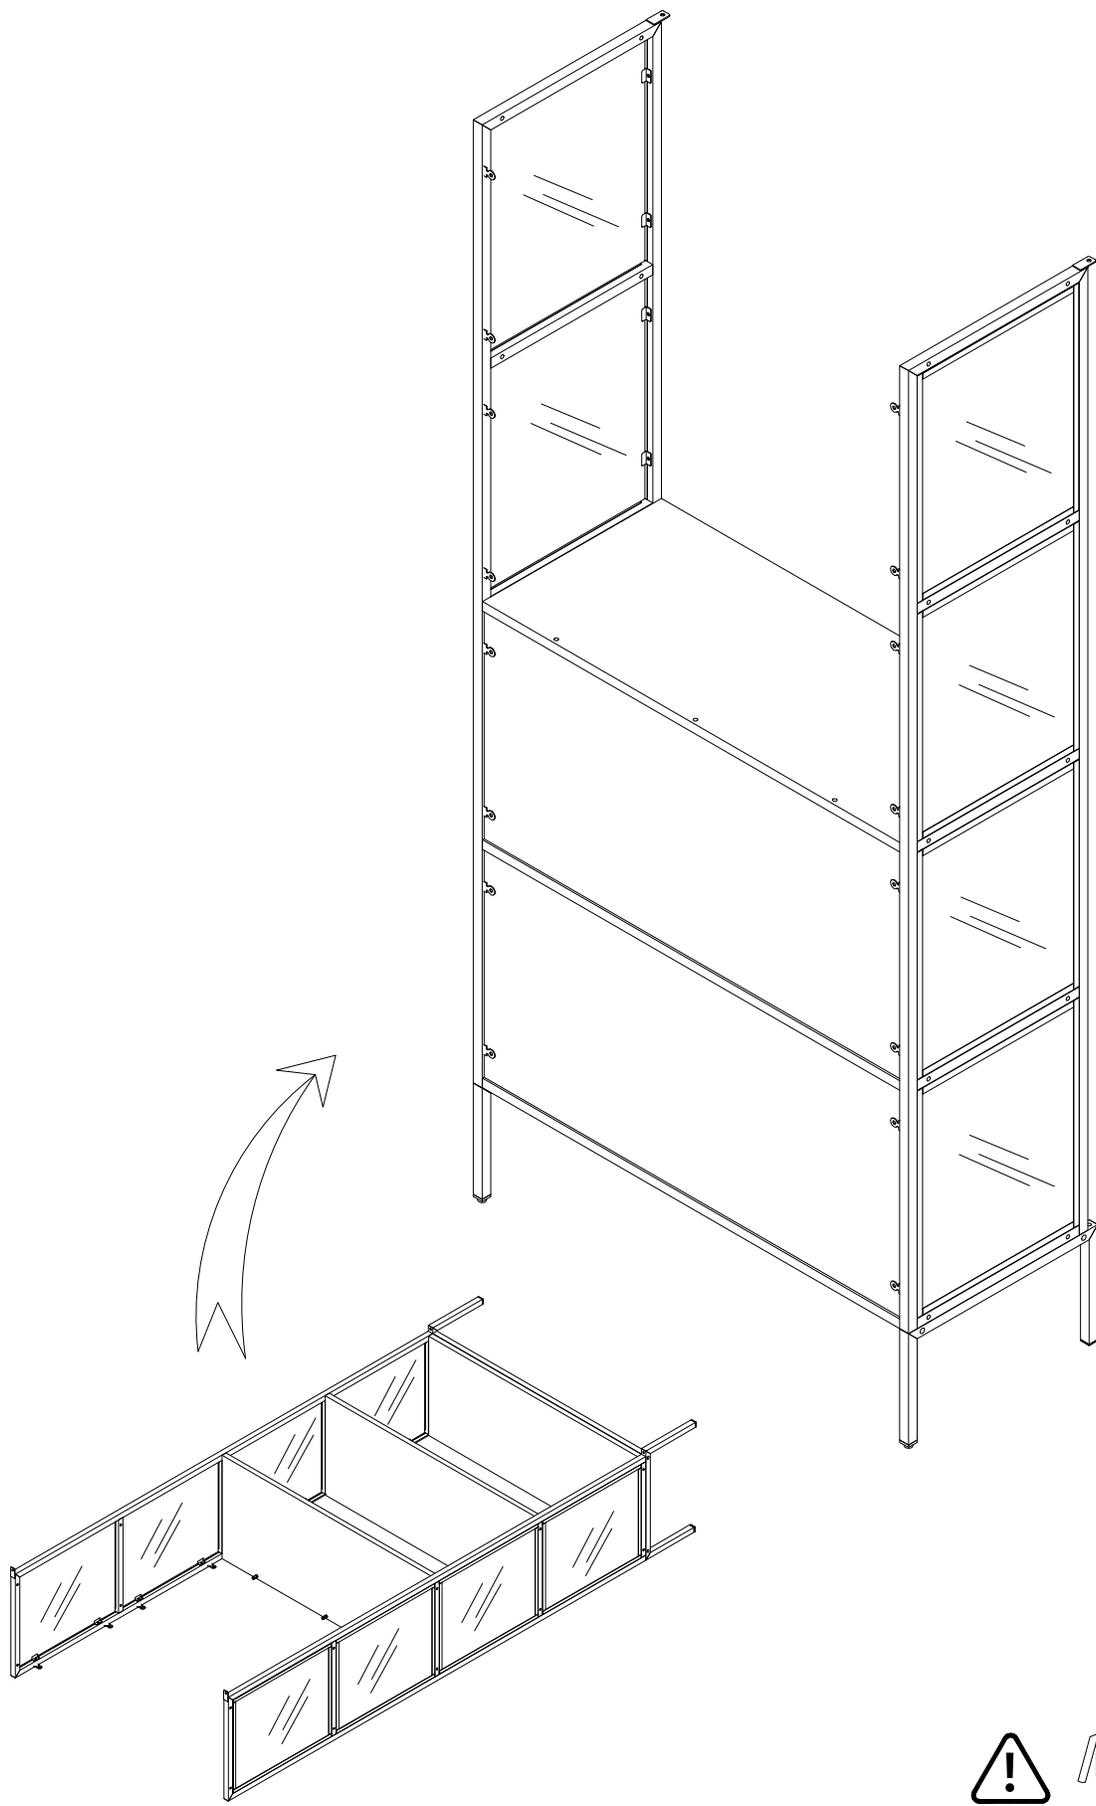




Step 13

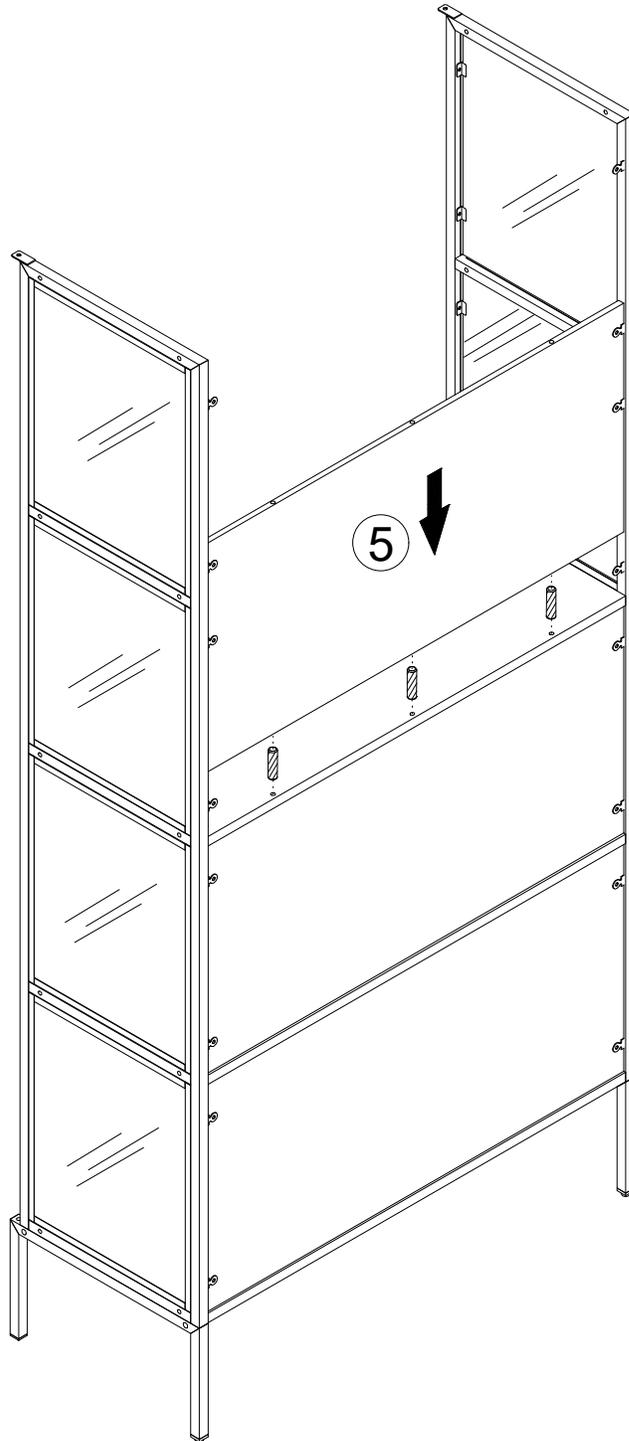

Pls make sure there is no any gap when you assembly between the Part#5 with Part #3.

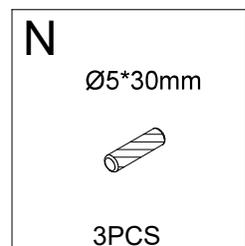


Step 14

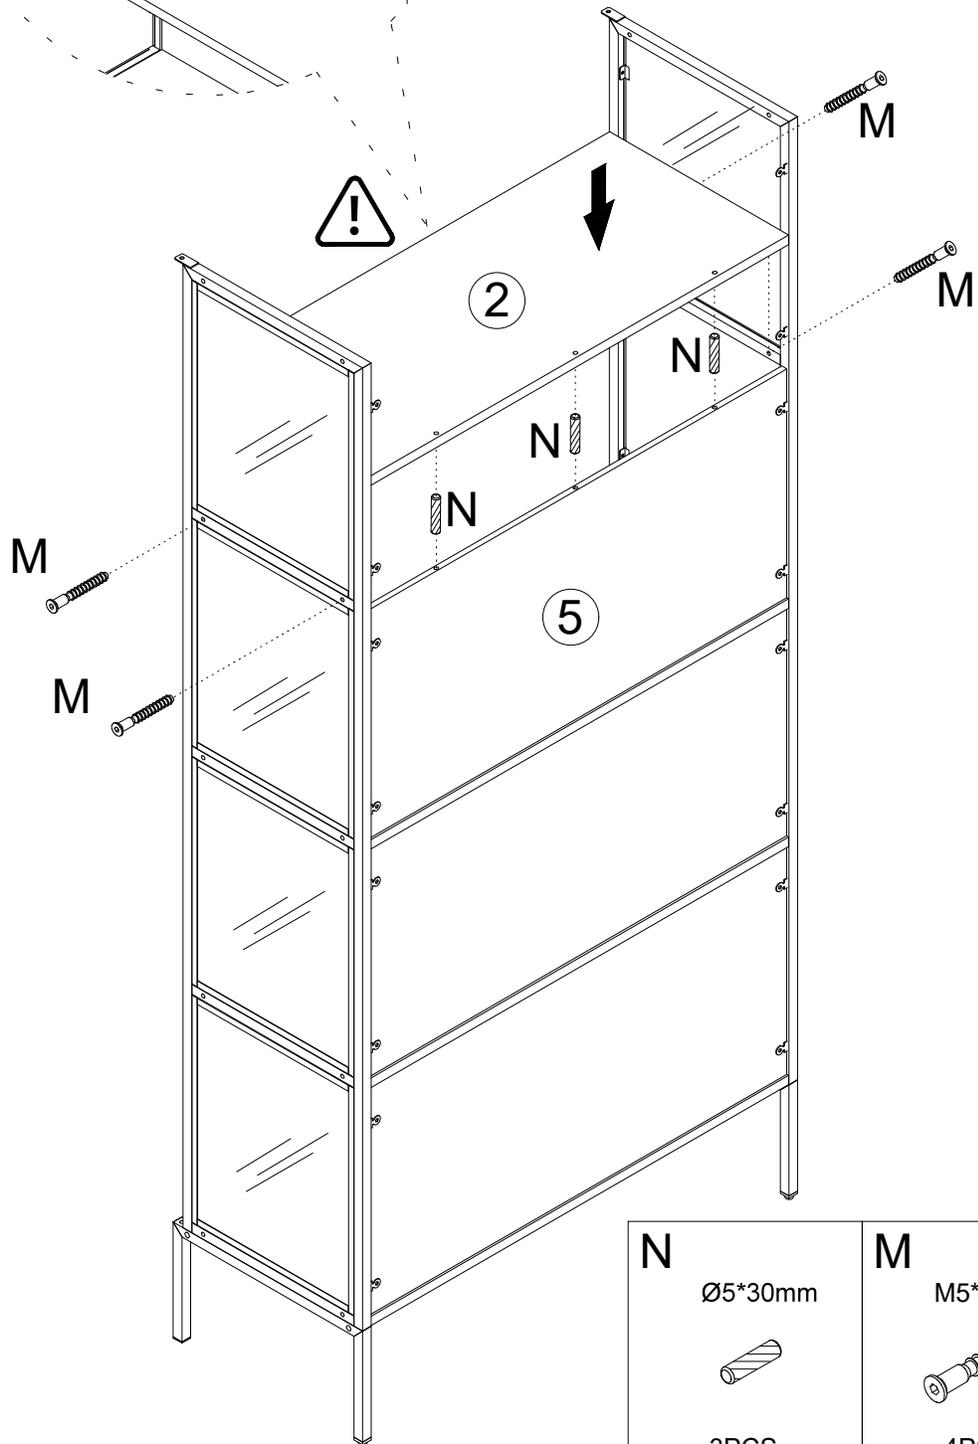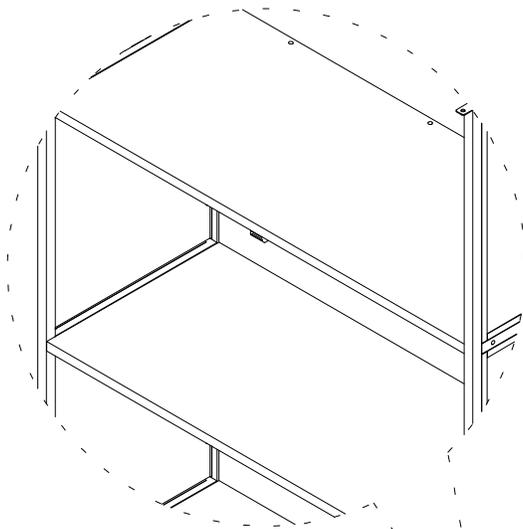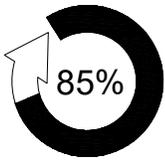


N	M
Ø5*30mm	M5*38mm
	
3PCS	4PCS



Step 15

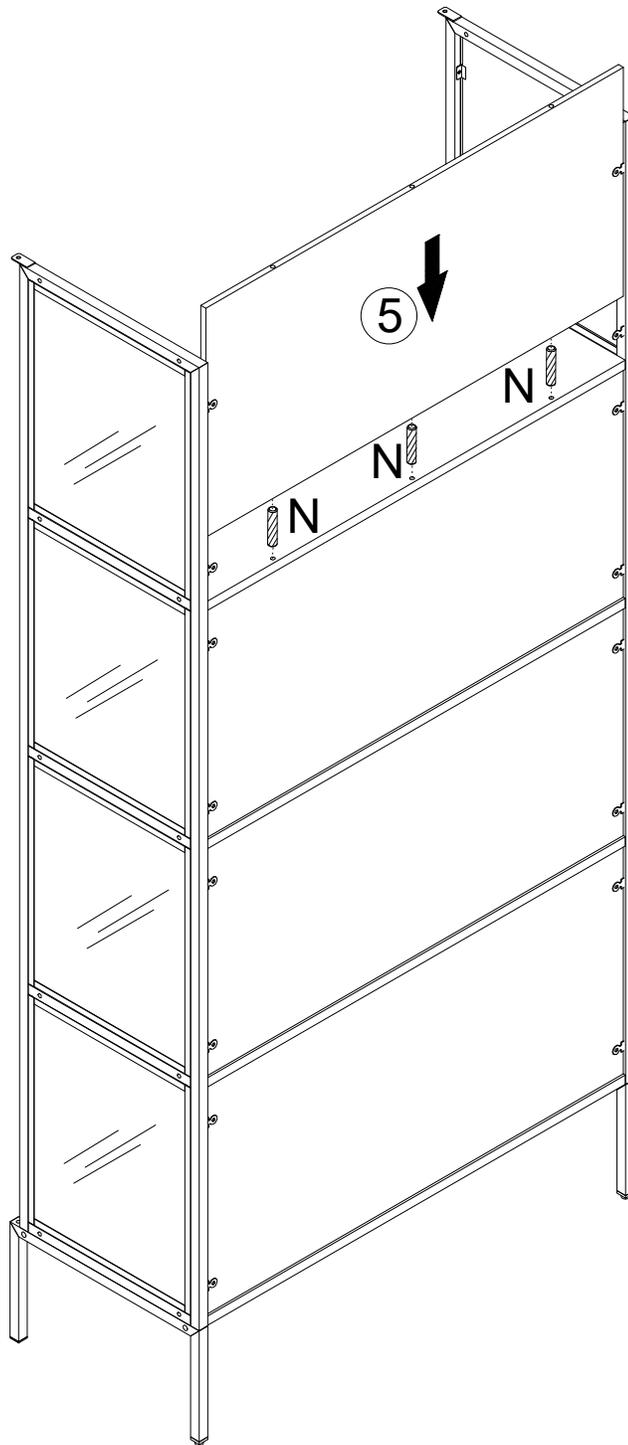

Pls make sure there is no any gap when you assembly between the Part#5 with Part #2.

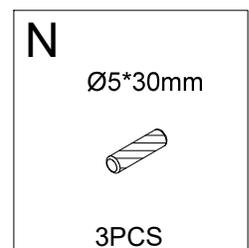


Step 16

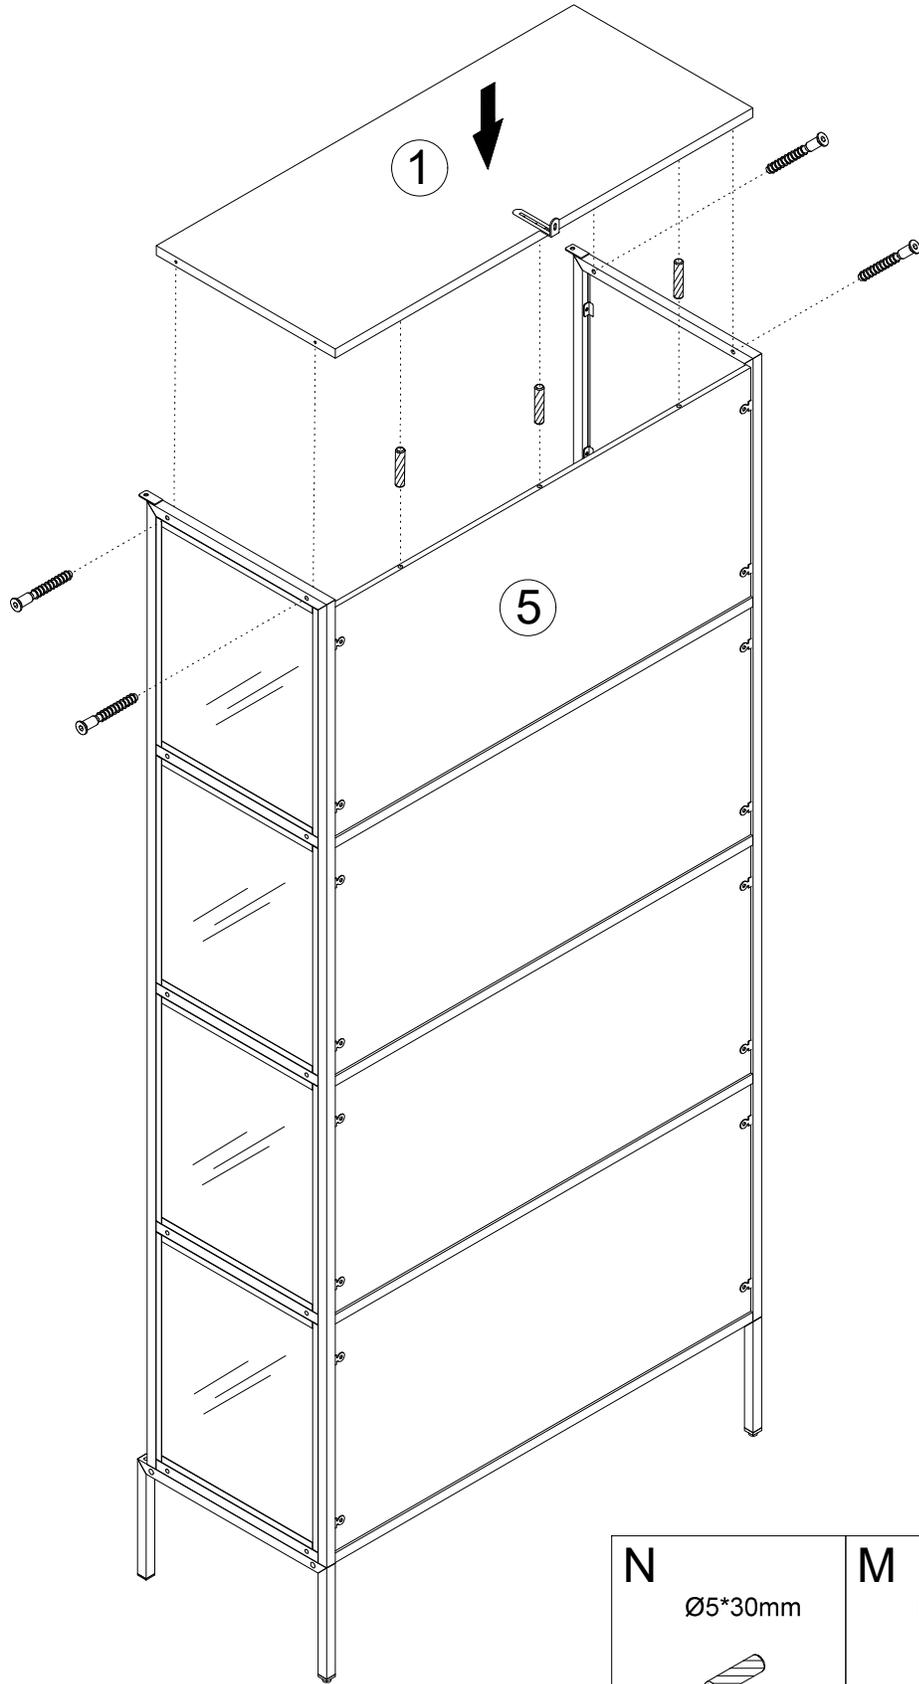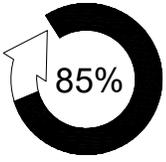


N	M
Ø5*30mm	M5*38mm
	
3PCS	4PCS


Step 17

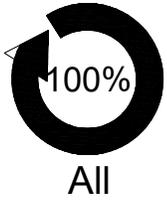


X1=Y1
X2=Y2

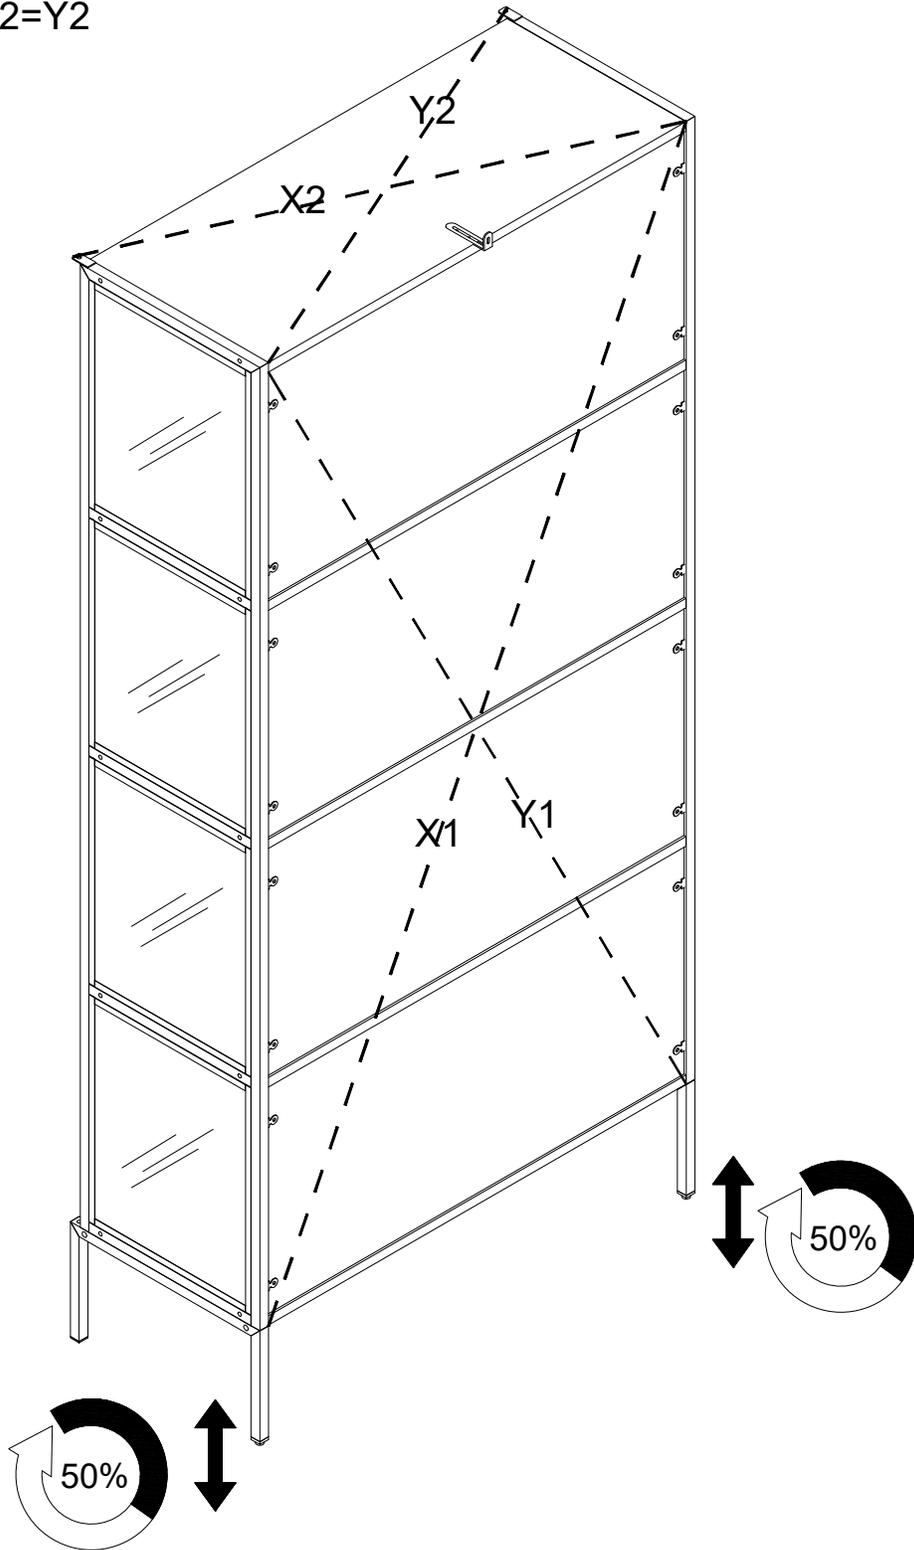

Step 18

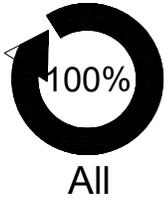


X1=Y1
X2=Y2

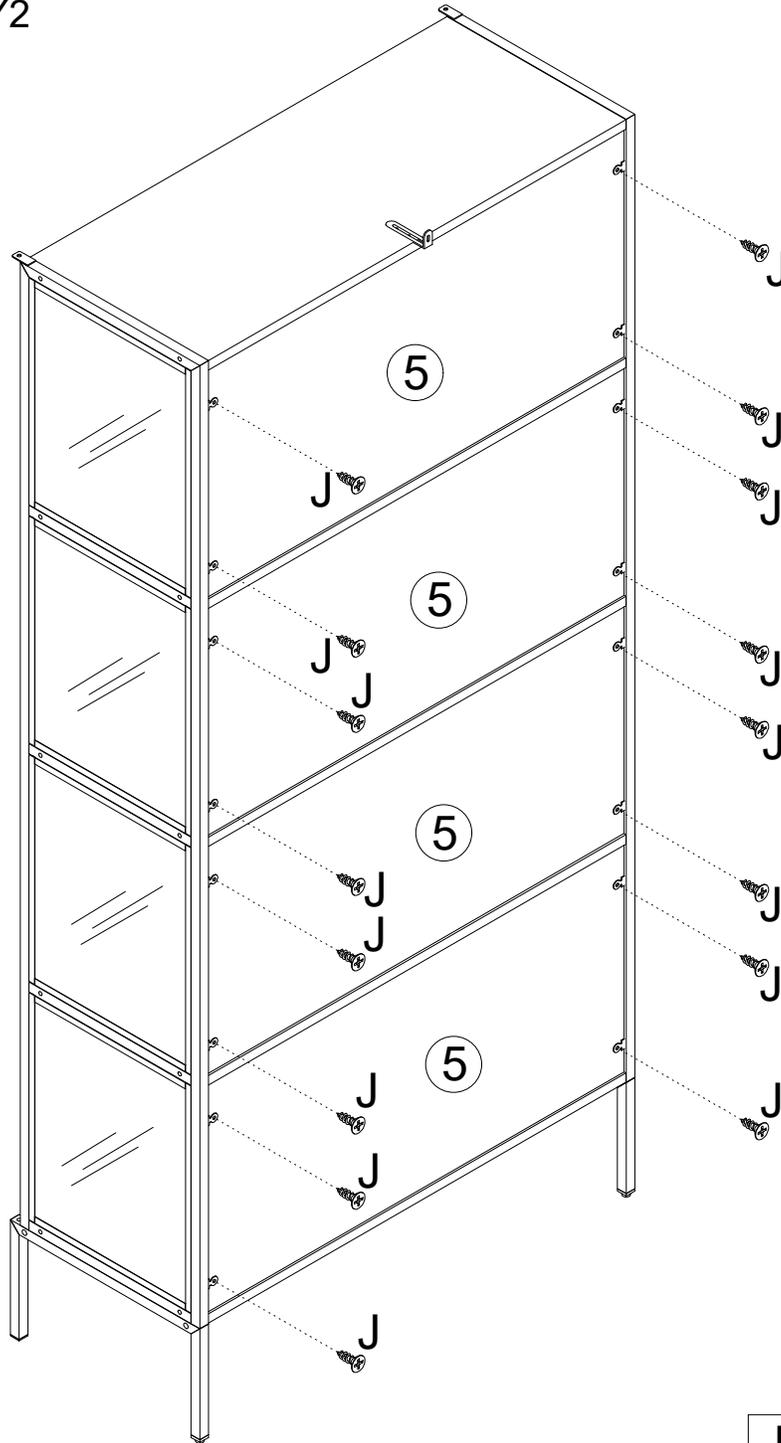

J
M3.5*10mm

16PCS


Step 19

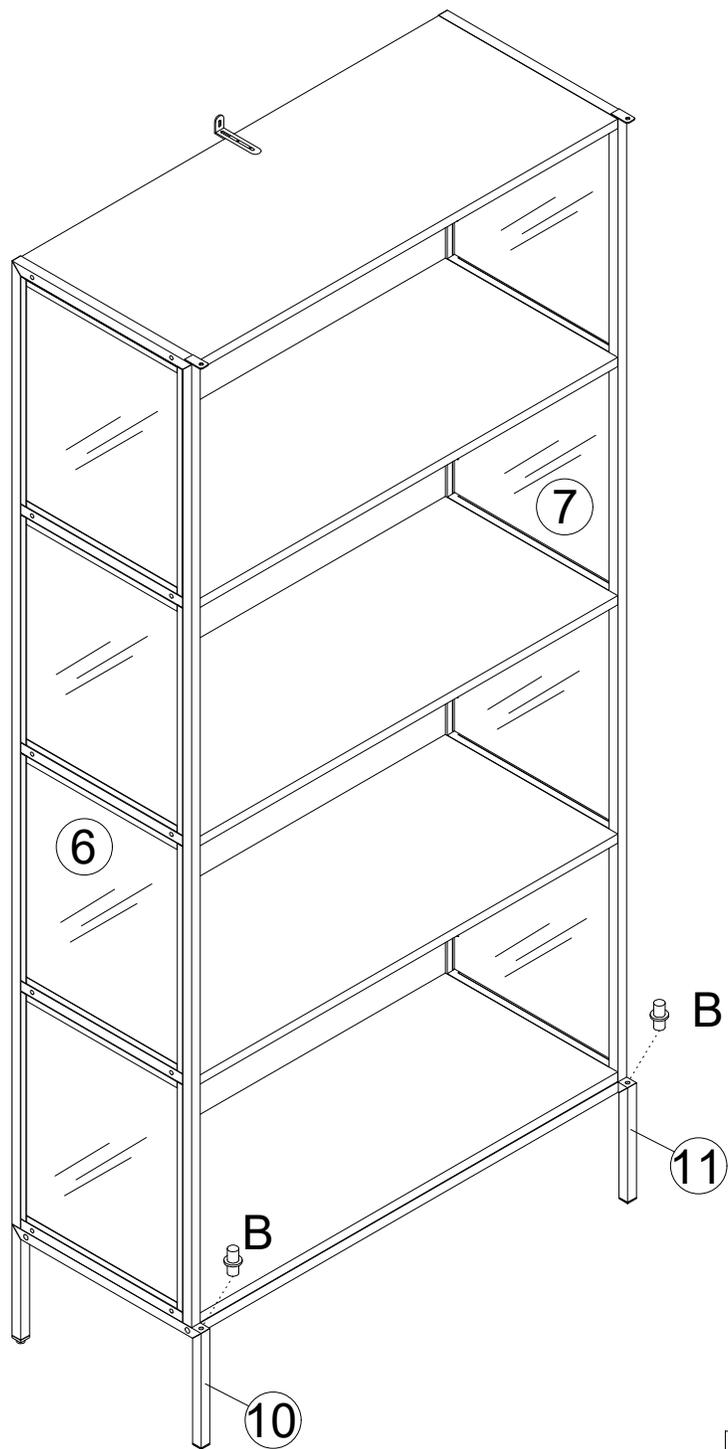

B
Ø6*20mm

2PCS

Step 20

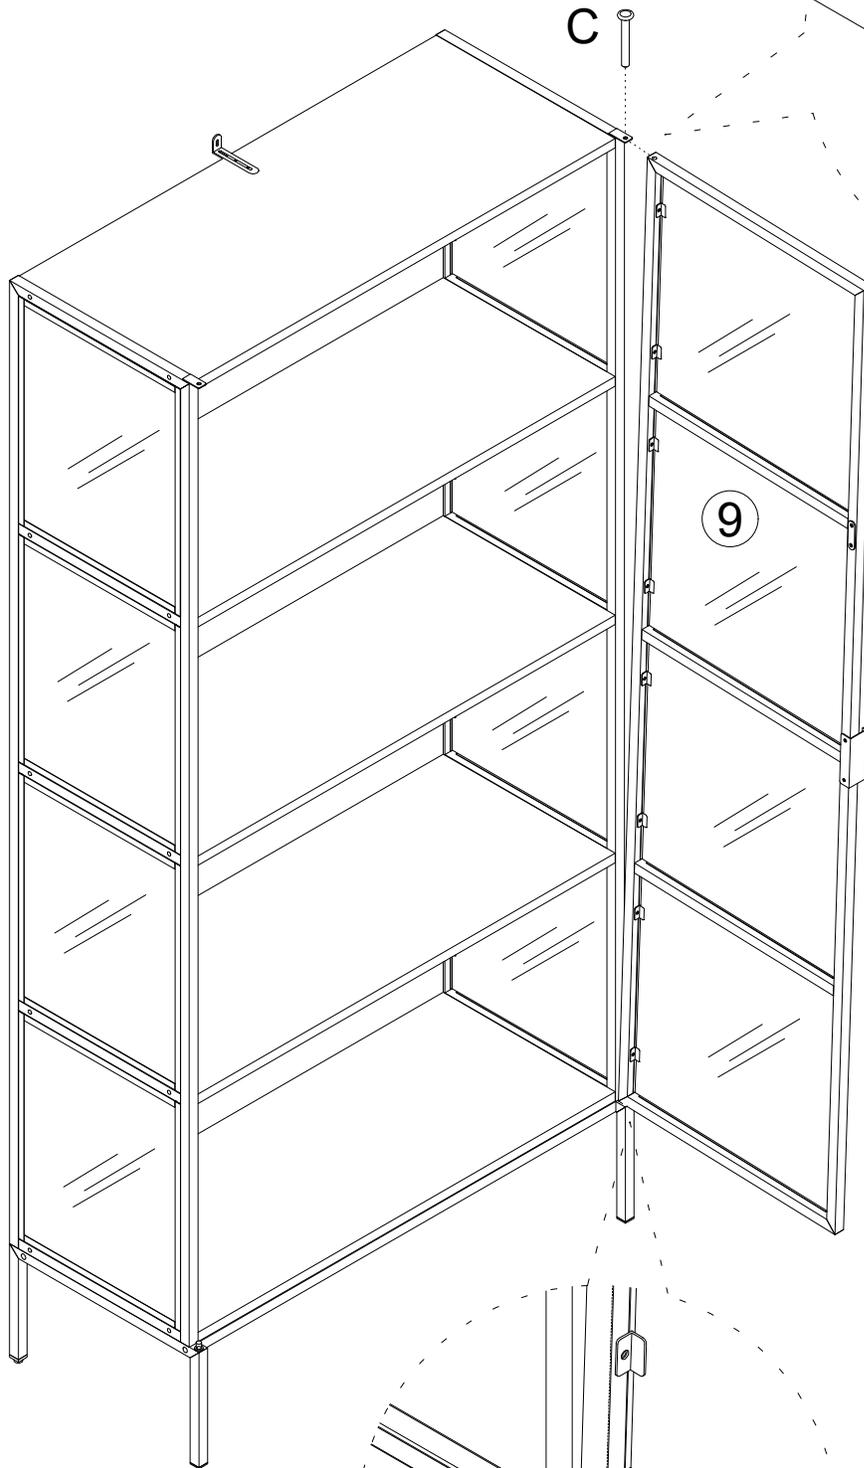




9

C
Ø5.8*35mm



1PC



Step 21

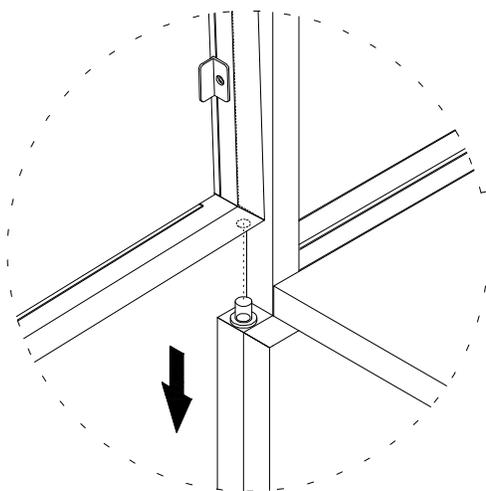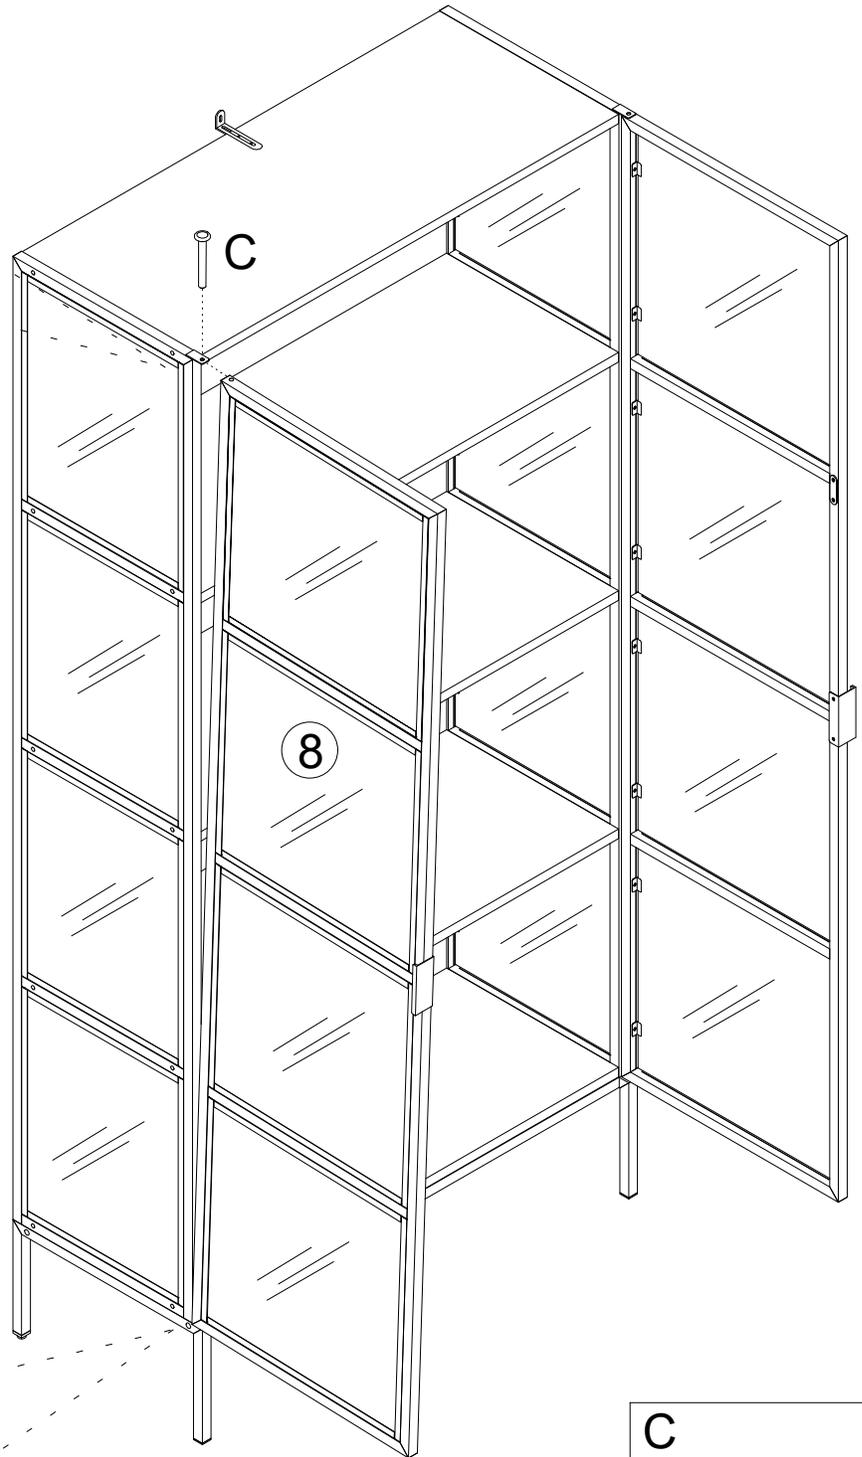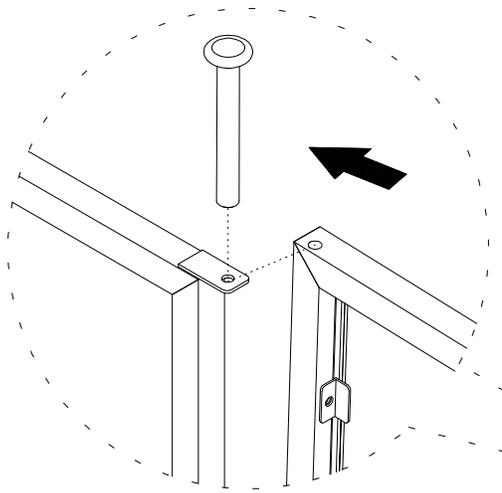


C
Ø5.8*35mm

1PC

Step 22

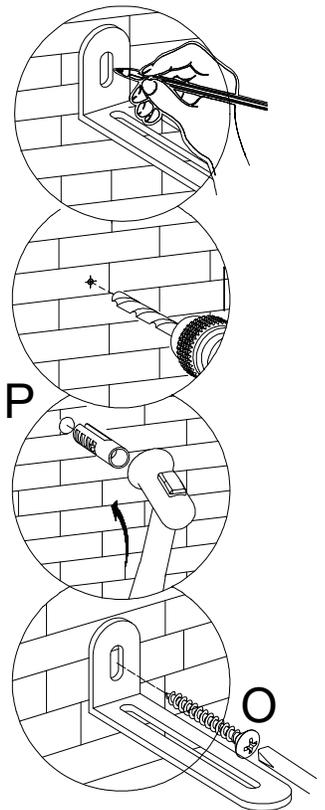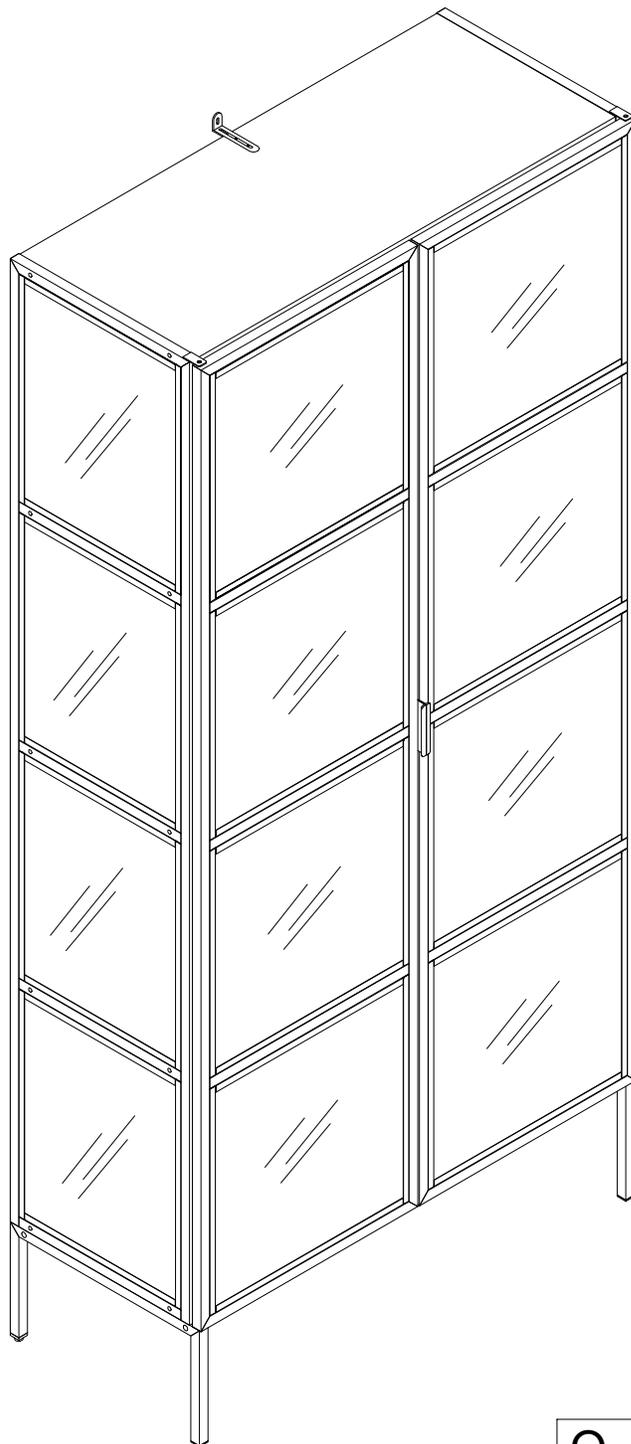

<p>O</p> <p>M5*35mm</p>  <p>2PCS</p>	<p>P</p>  <p>2PCS</p>
--	---