
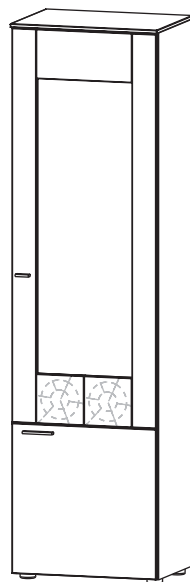


Type 730-104

Sie brauchen:
You need:

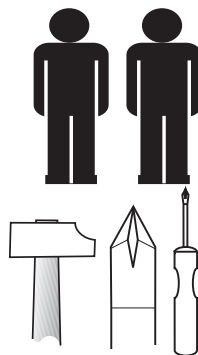

Type 730-105

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.











Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!














Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Stockholm 730_104 / 06.22

 3x ak1	 1x ak9	 10x s4	 12x e2	 3x RW3
 8x gs3s	 4x hbak2	 5x d4	 4x fu	 5x c3



Beschlagliste Fittings

 14x s7	 4x fo	 2x wd	 2x s5
 14x rh	 8x tg	 4x ak4a	 2x rv
 16x p1	 1x gr35	 1x gr36	 4x t4
			 3x rwk


A

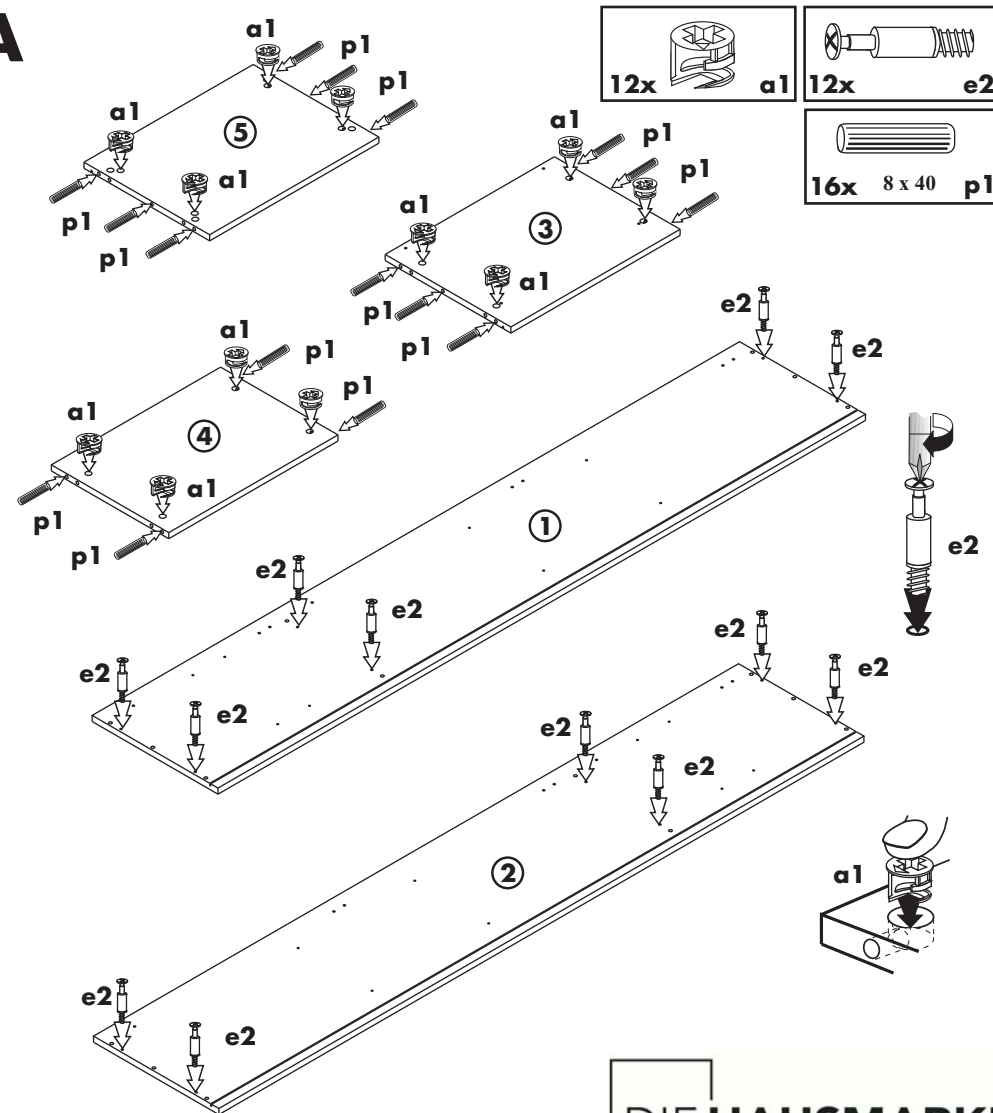



B

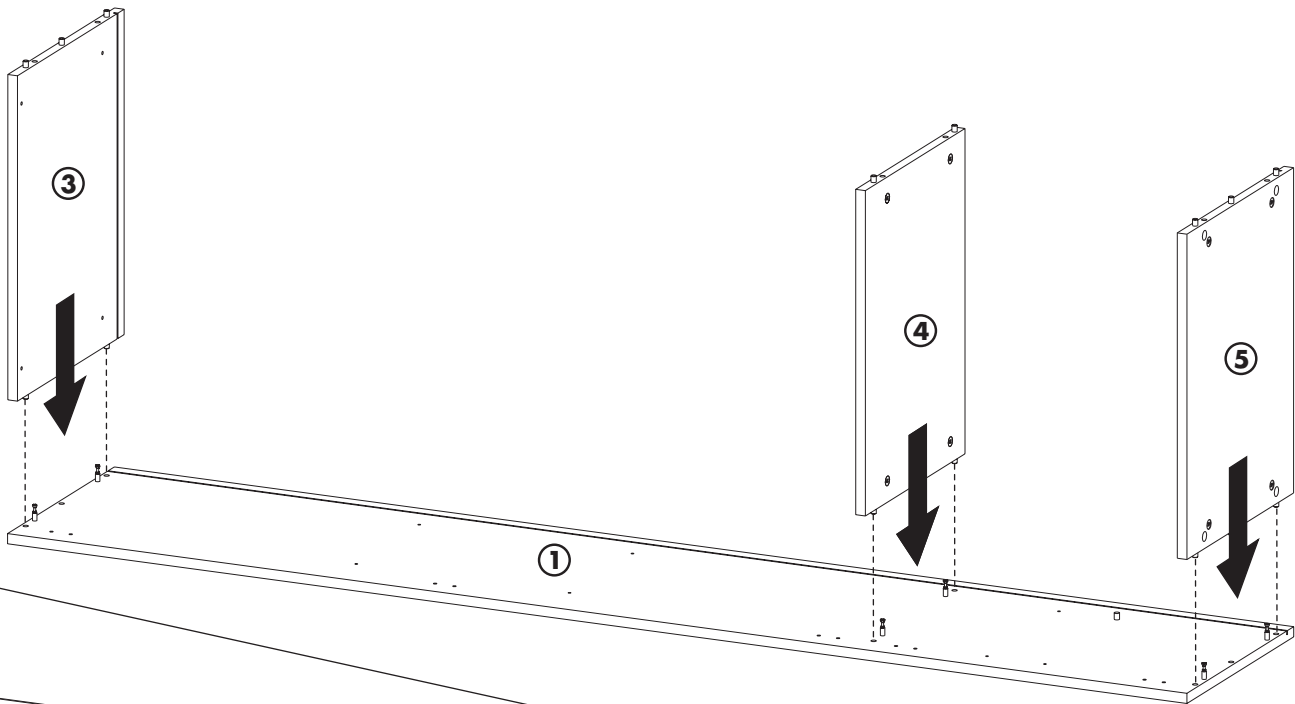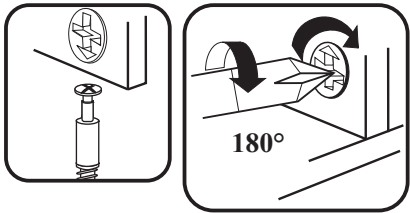


C

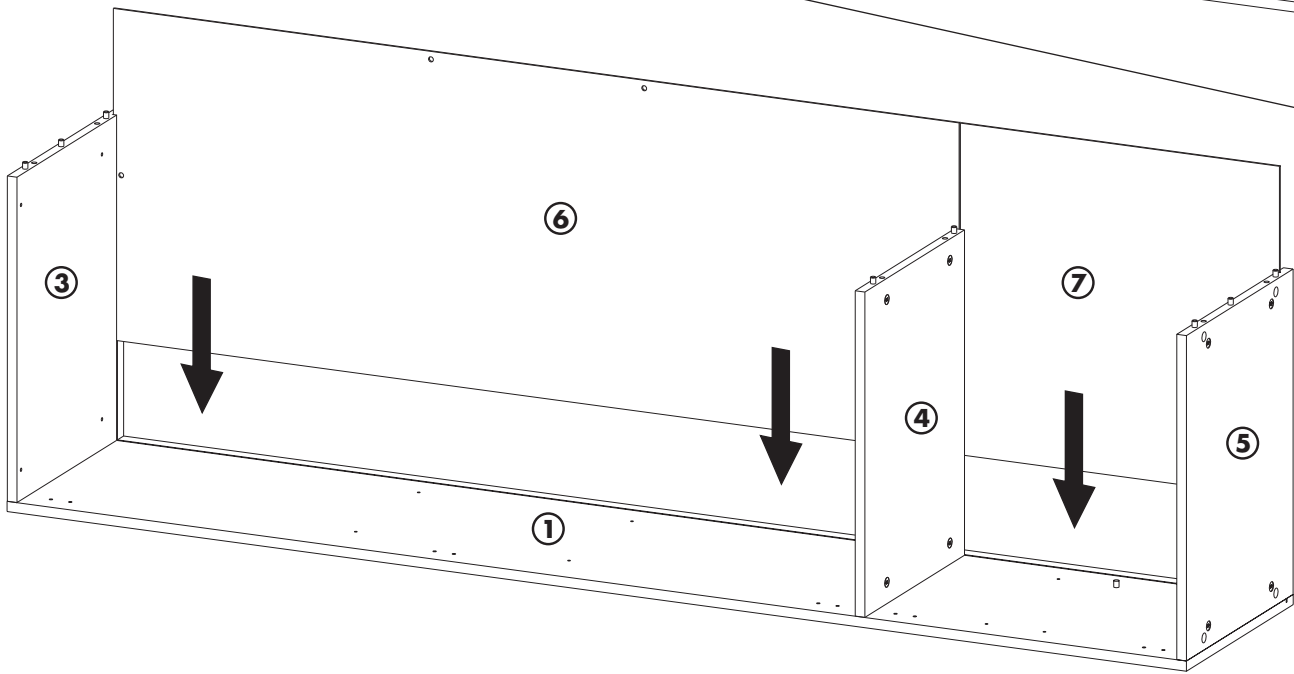


C

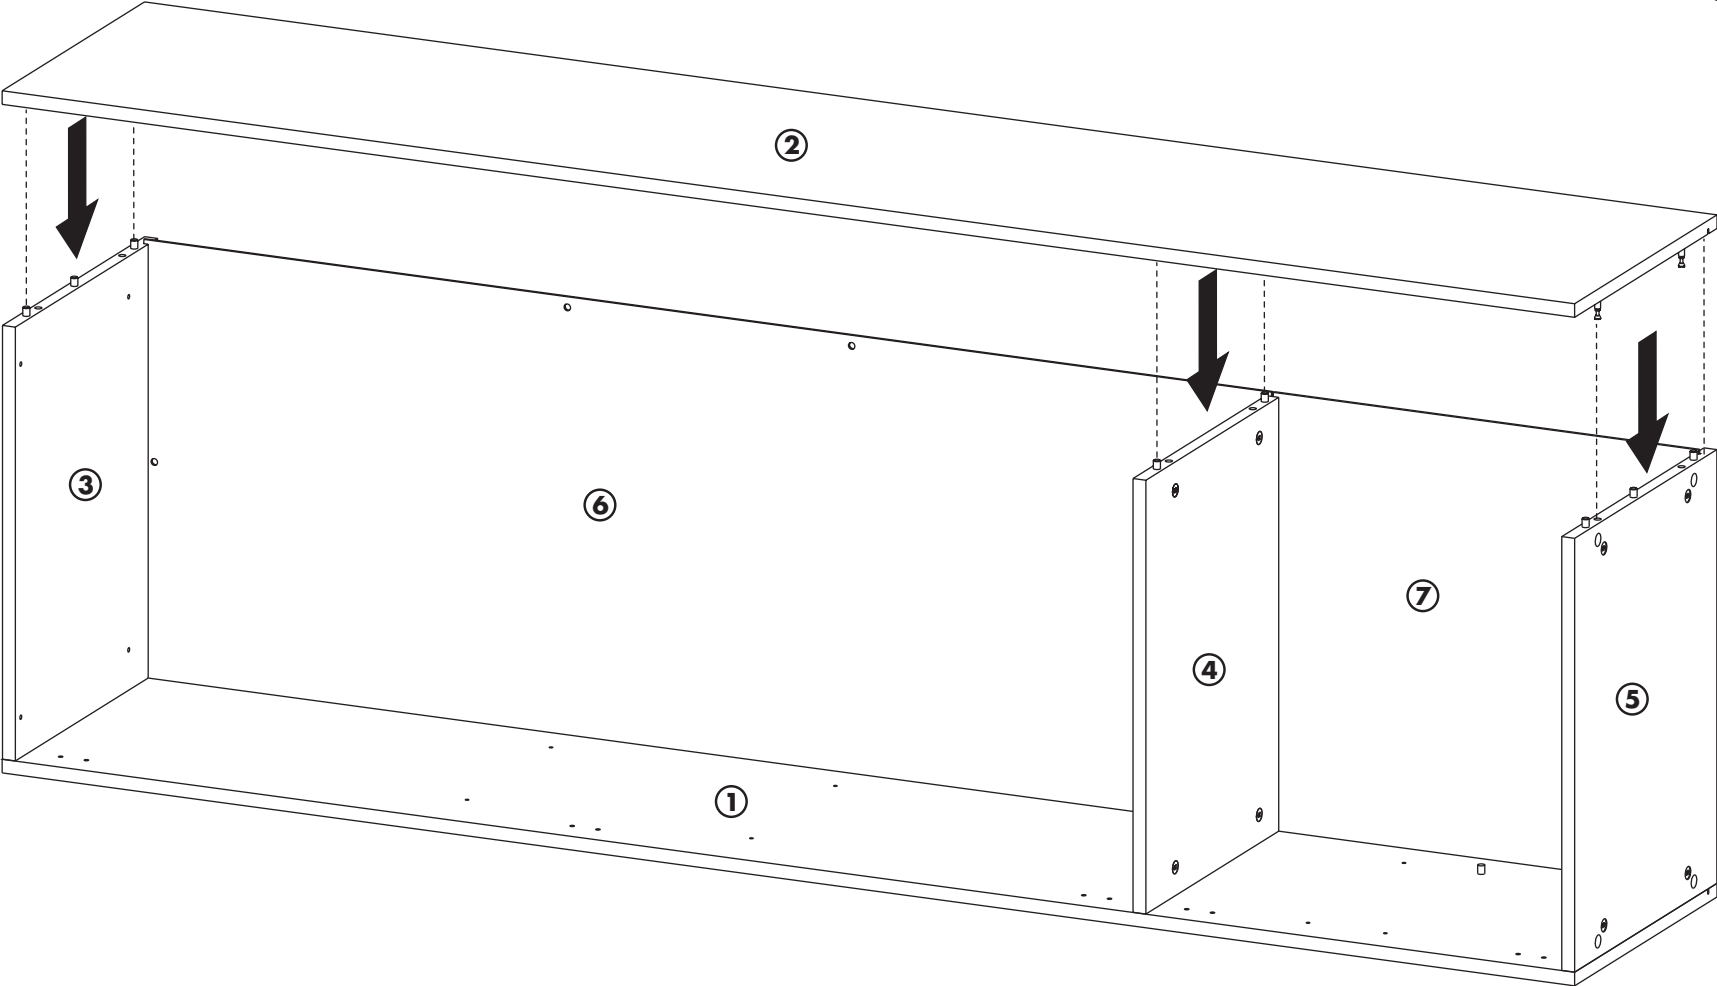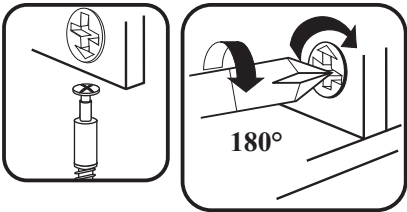


D

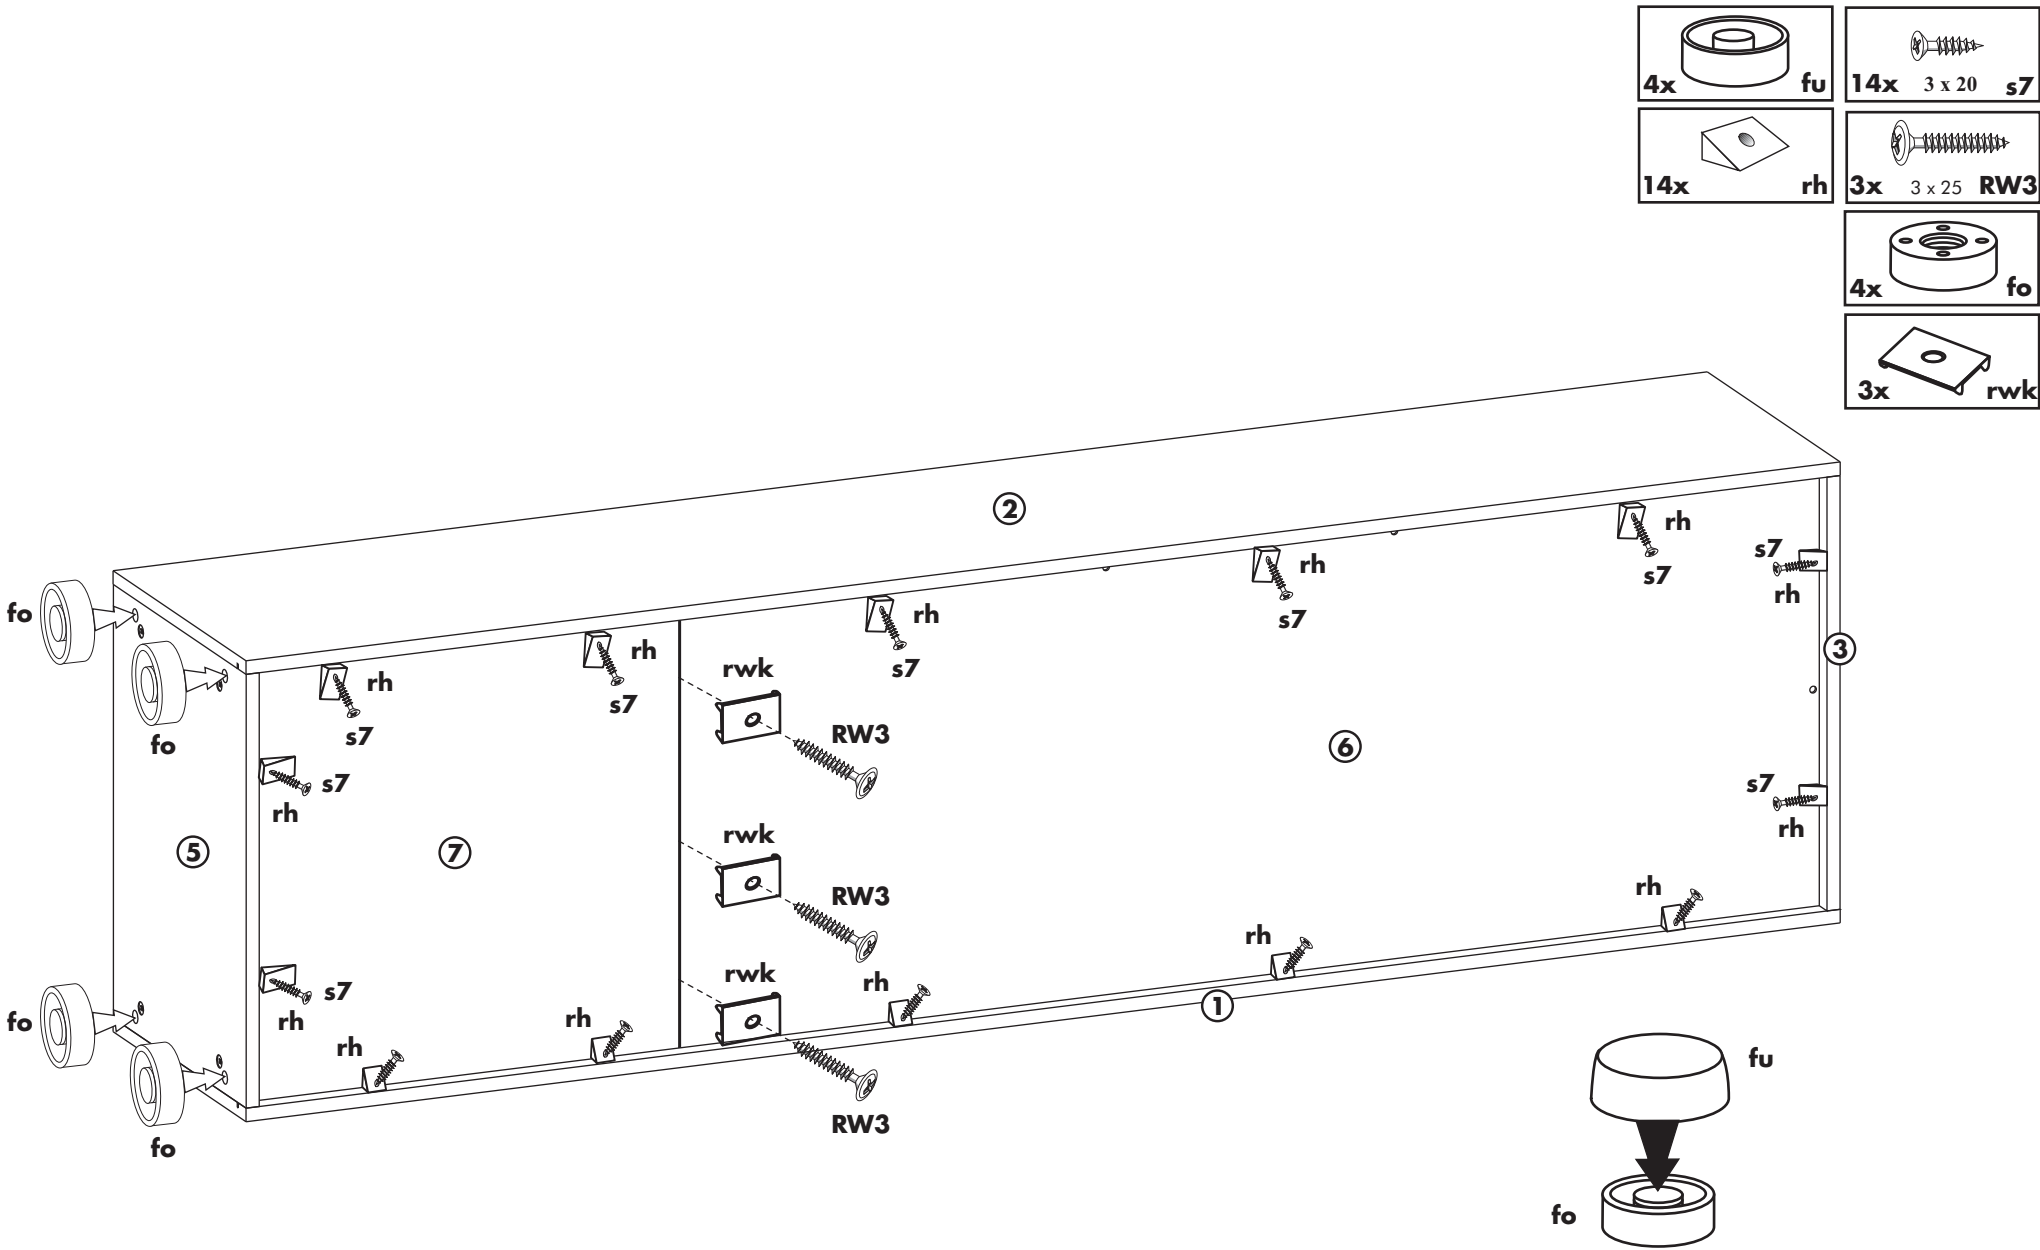



E

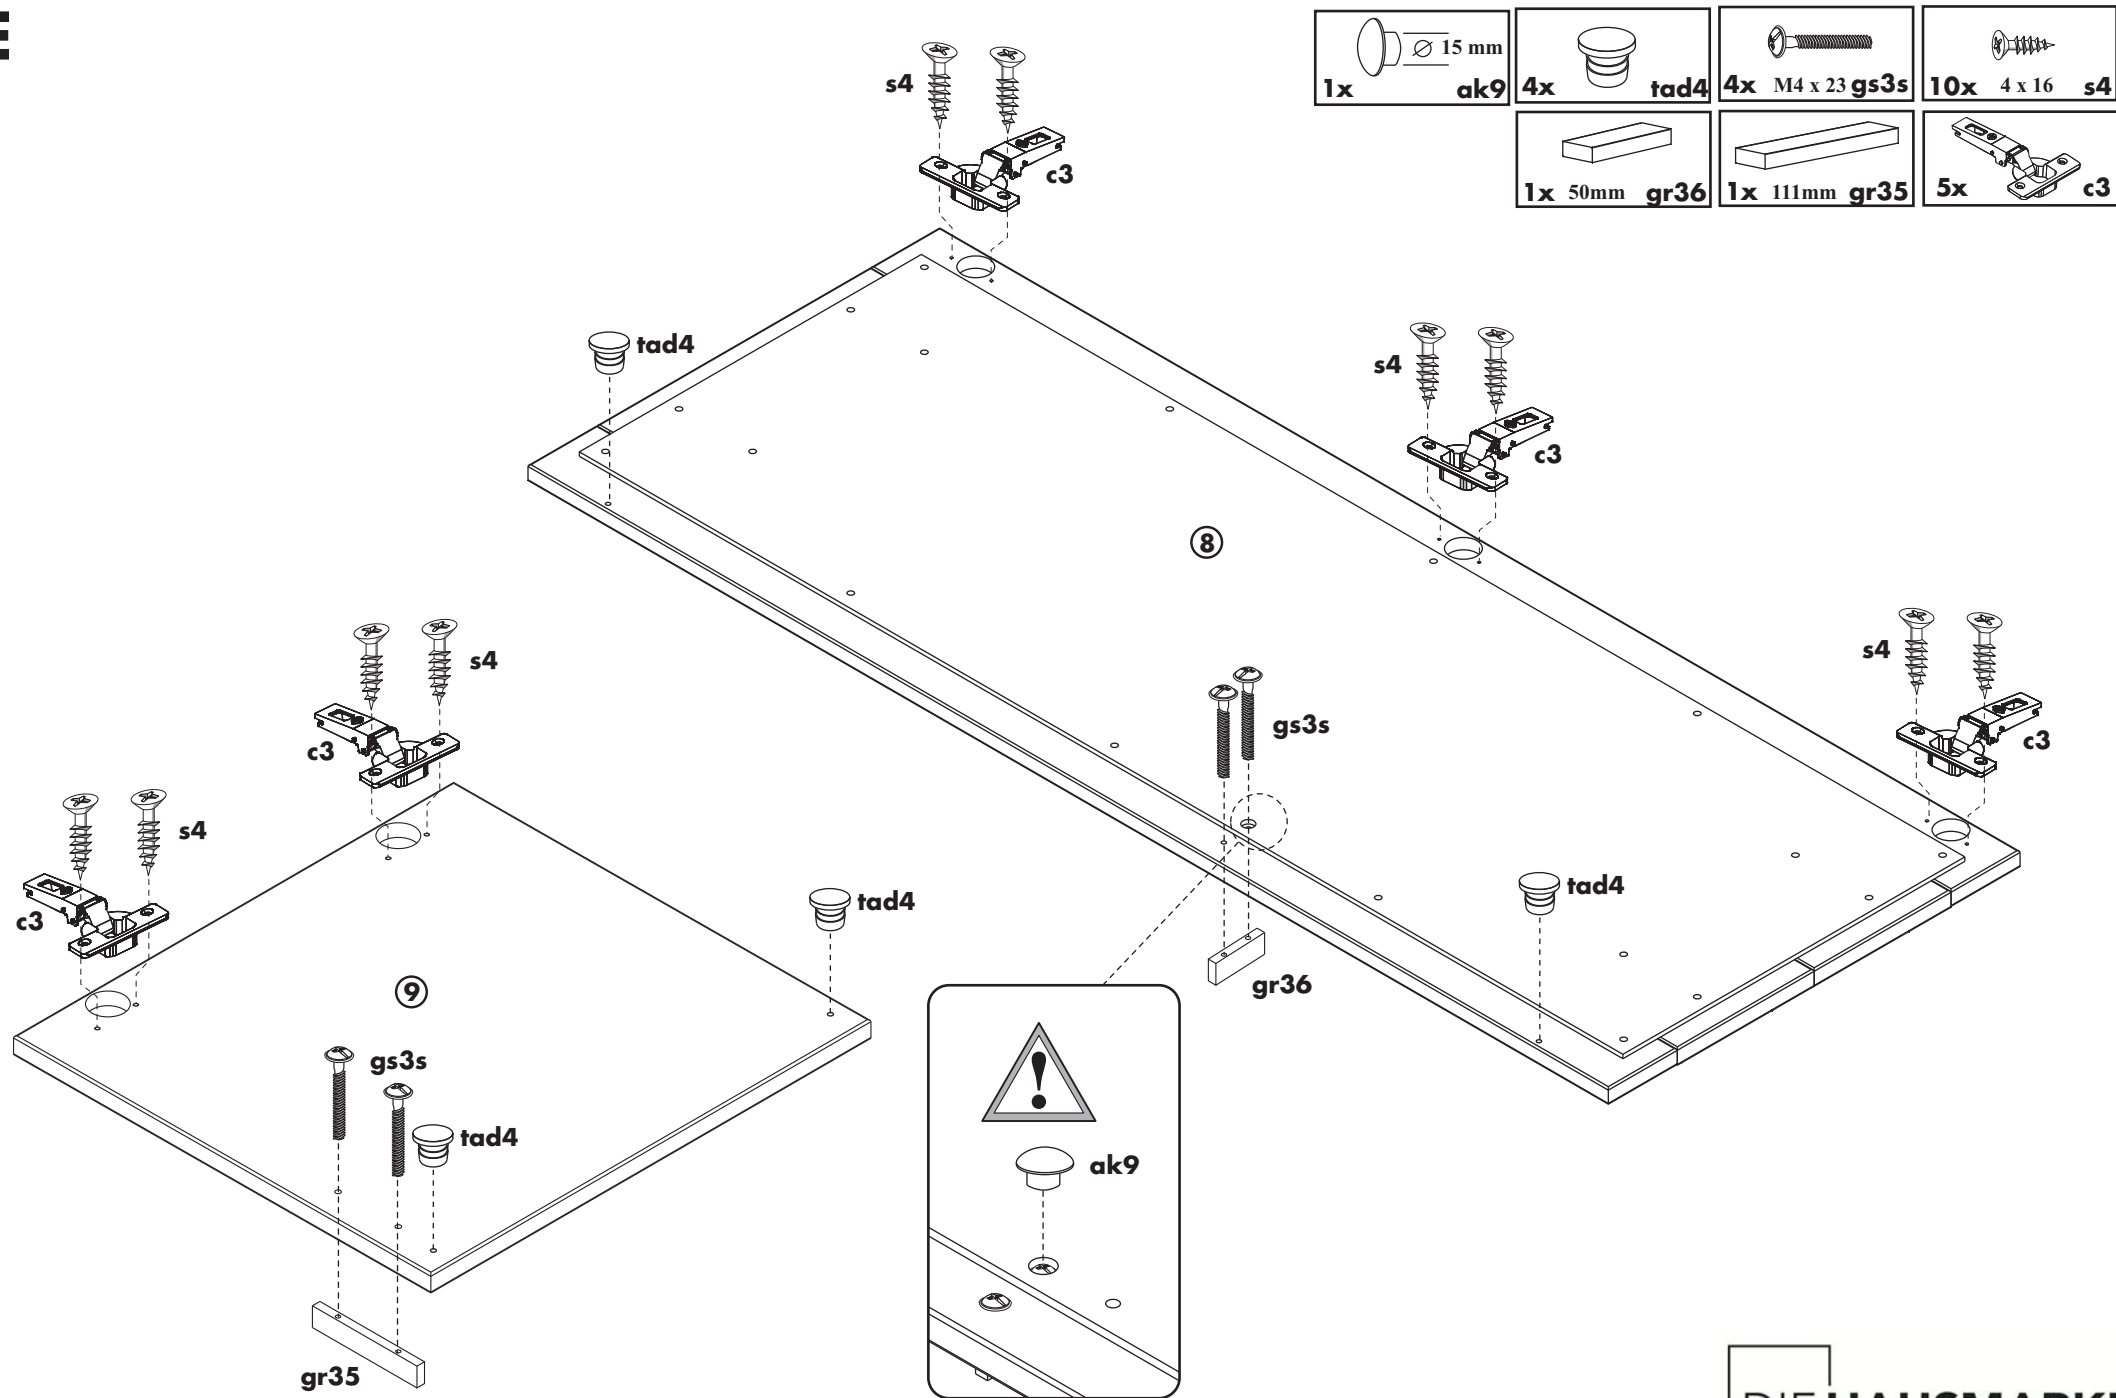


F

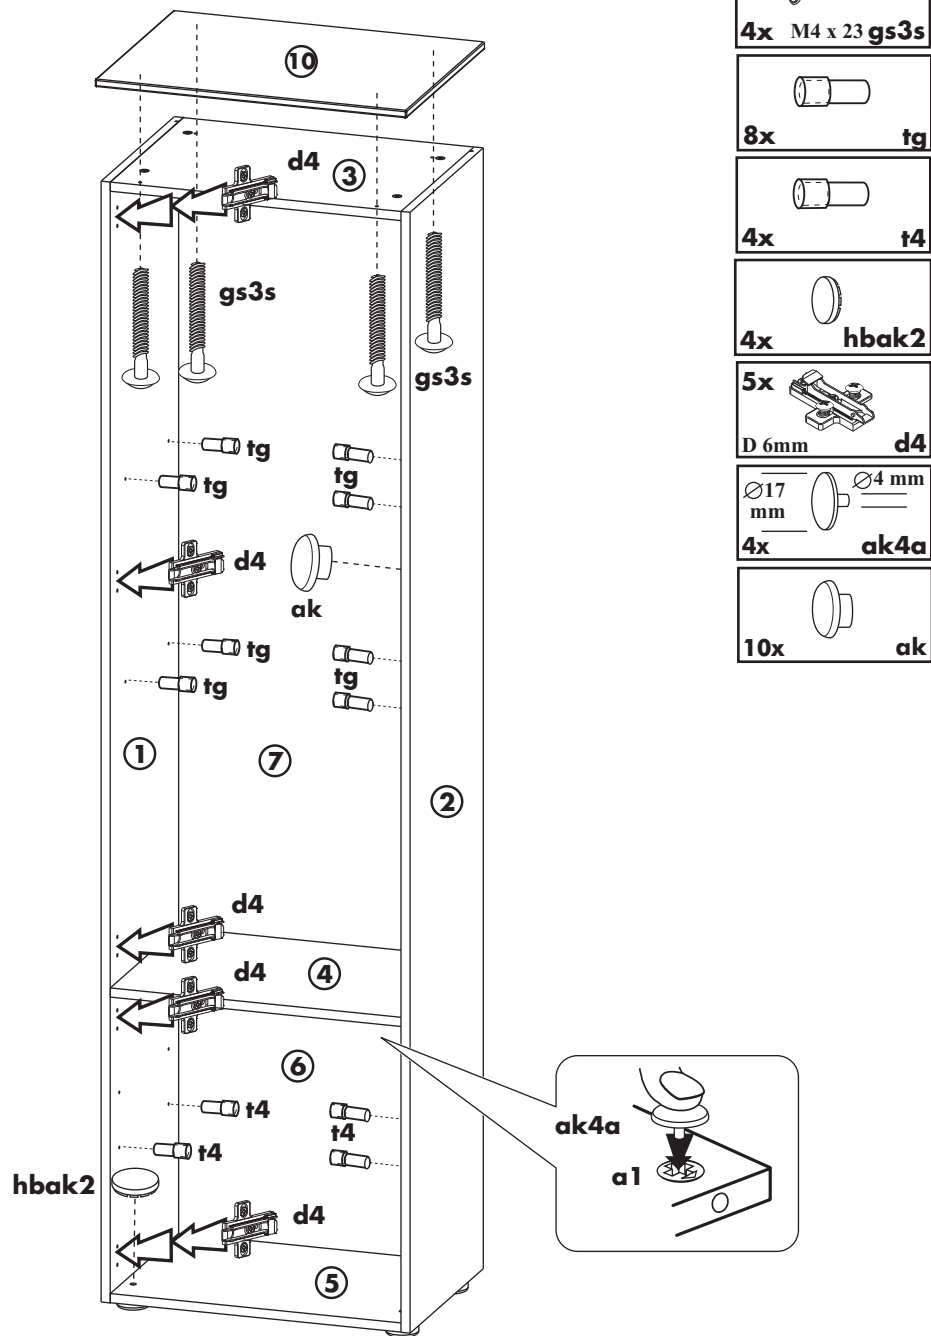

G

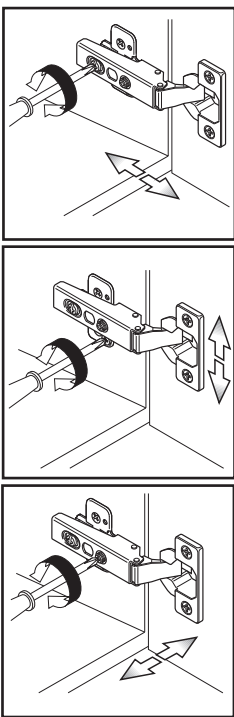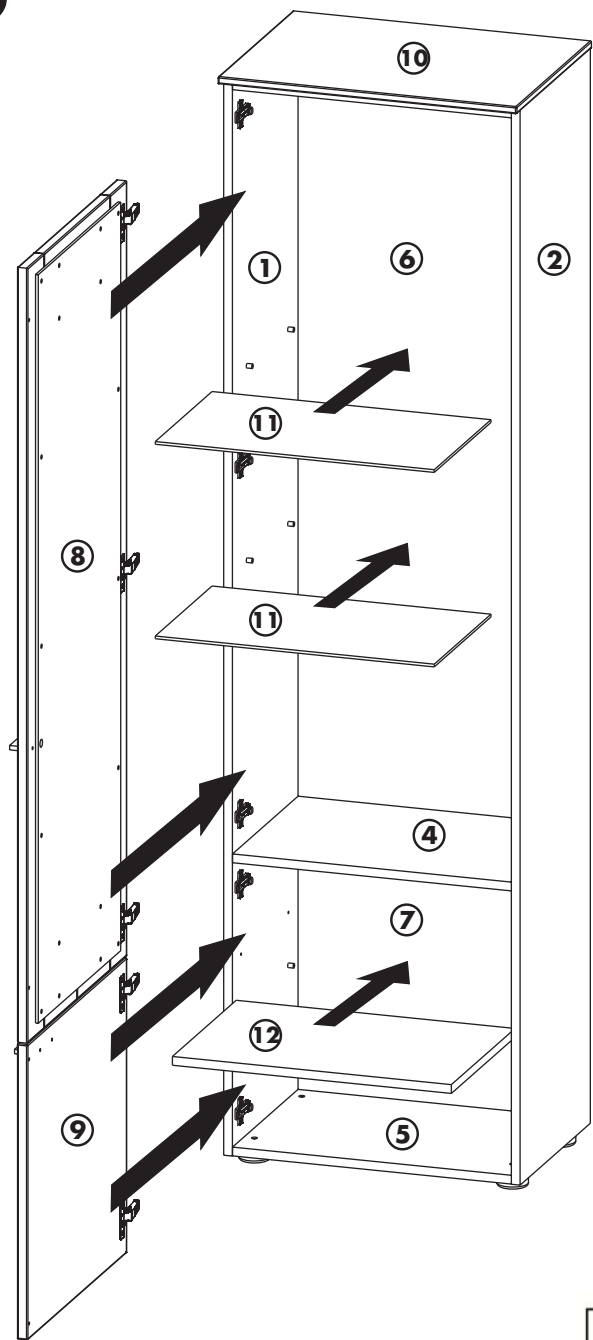

H

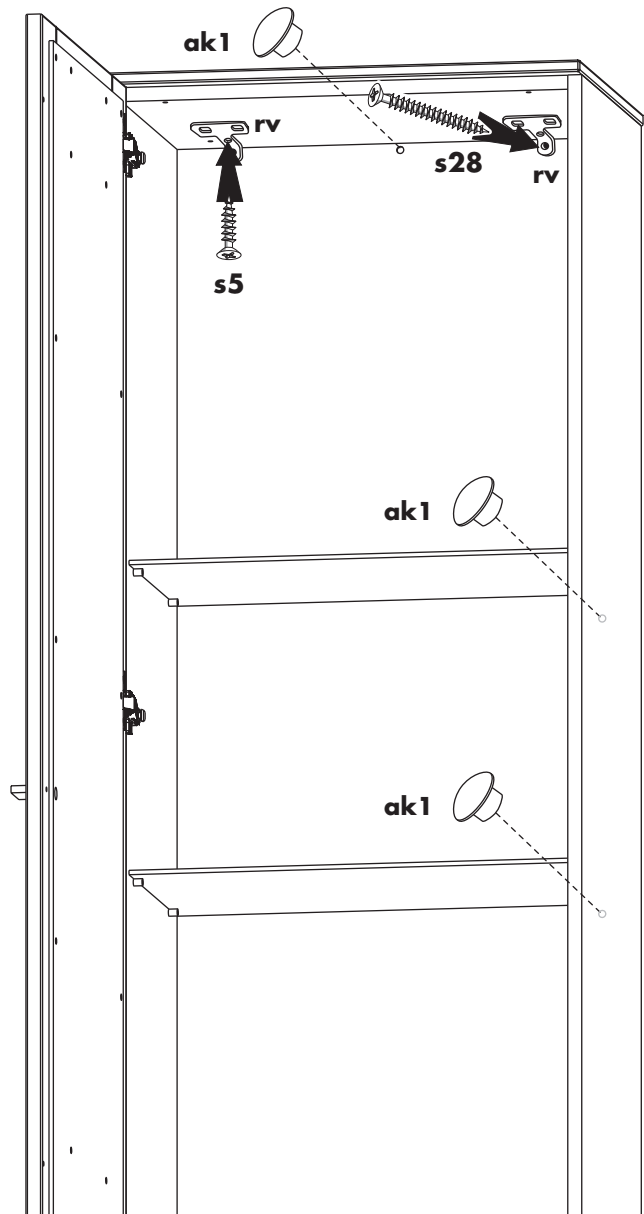

① Kippsicherung links und rechts anbringen
Install anti-tip device left and right

② Wand markieren
mark wall

③ 8mm

④ wd

⑤ Schraube eindrehen
Mount screw

2x	wd	2x	3,5 x 15	s5
2x	rv	2x	5 x 100	s28
3x	ak1			