
Assembly instruction - Double bed Super S 140

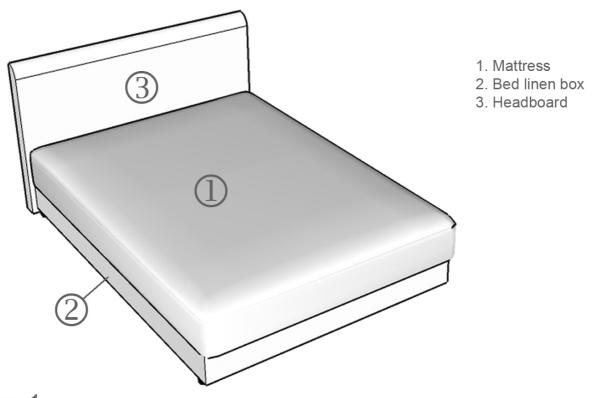

Step 1.

Put headboard in vertical position and align metal connectors on headboard in line with metal connectors

