



Type 730-103

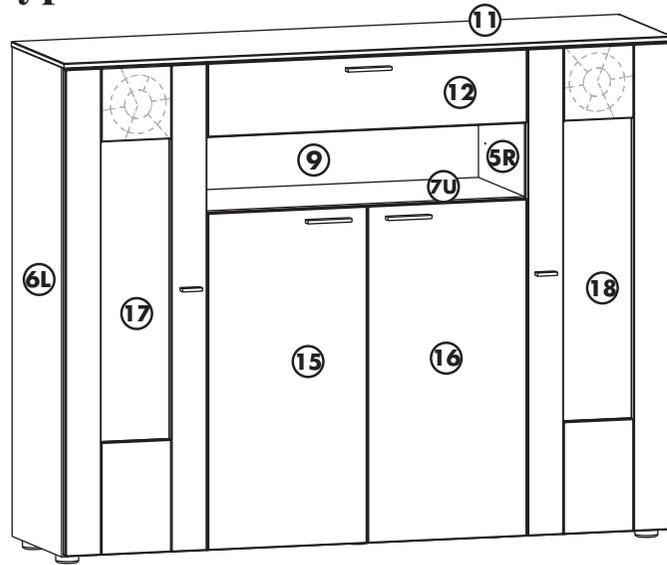

Sie brauchen:
You need:

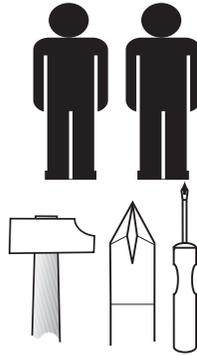

Beschlagliste Fittings

CAD und Design
Stockholm 700_100 / 06.22

5x ak1	24x e5	8x tg	20x 4 x 16 s4	16x t4
2x ak9	16x ak4b	4x 6,3 x 13 es4	10x tad4	16x ak
1x sl3	1x sr3	20x ak4a	20+2x e2	15x 3 x 25 RW3
16x M4 x 23 gs3s	7x hbak2	10x D 6mm d4	7x fu	2x ak4
40x rh	40x 3 x 20 s7	7x fo	2x wd	2x 3,5 x 15 s5
20x 8 x 40 p1	2x 13 mm a3	1x le	2x rv	2x 5 x 100 s28
44x a1	3x 111mm gr35	2x 50mm gr36	4x gedämpft c4	4x rwk

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.


If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.


After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.


A1

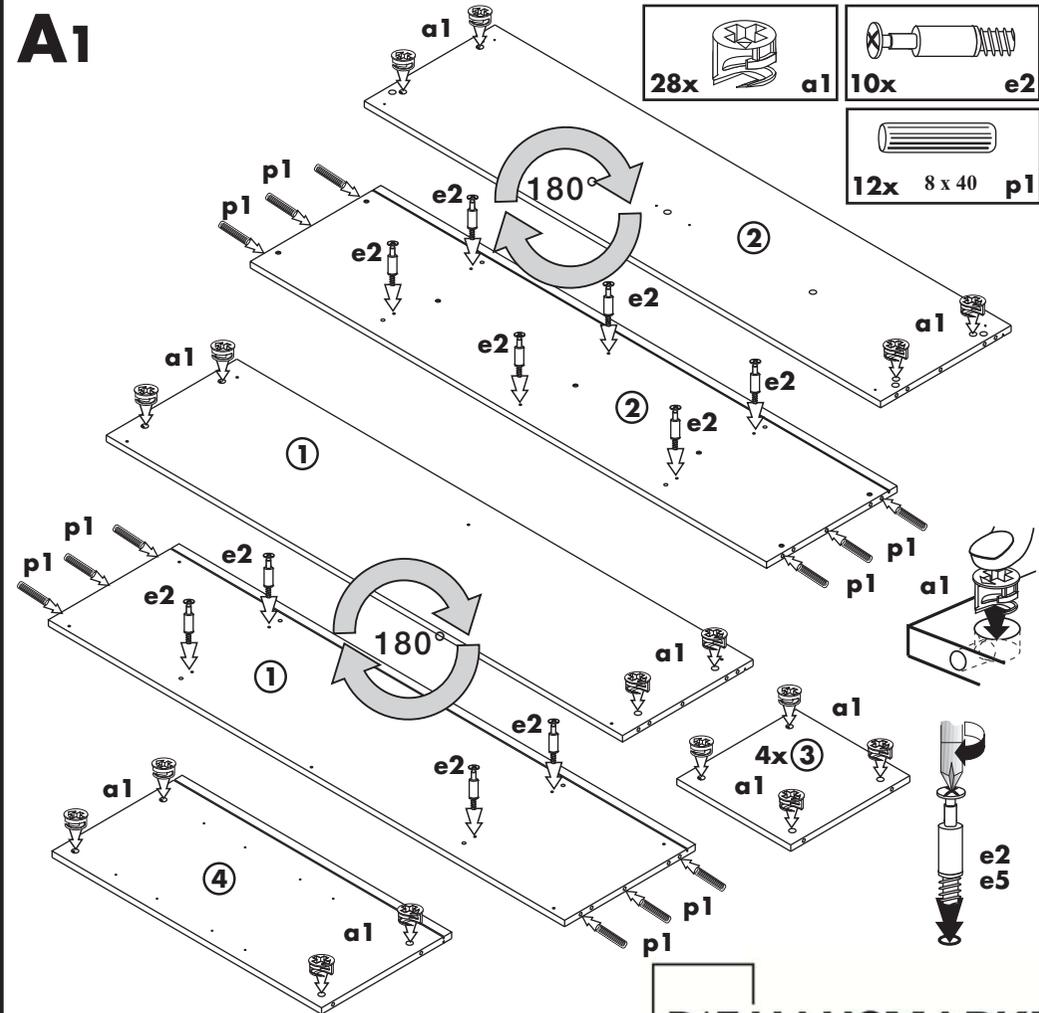




A2

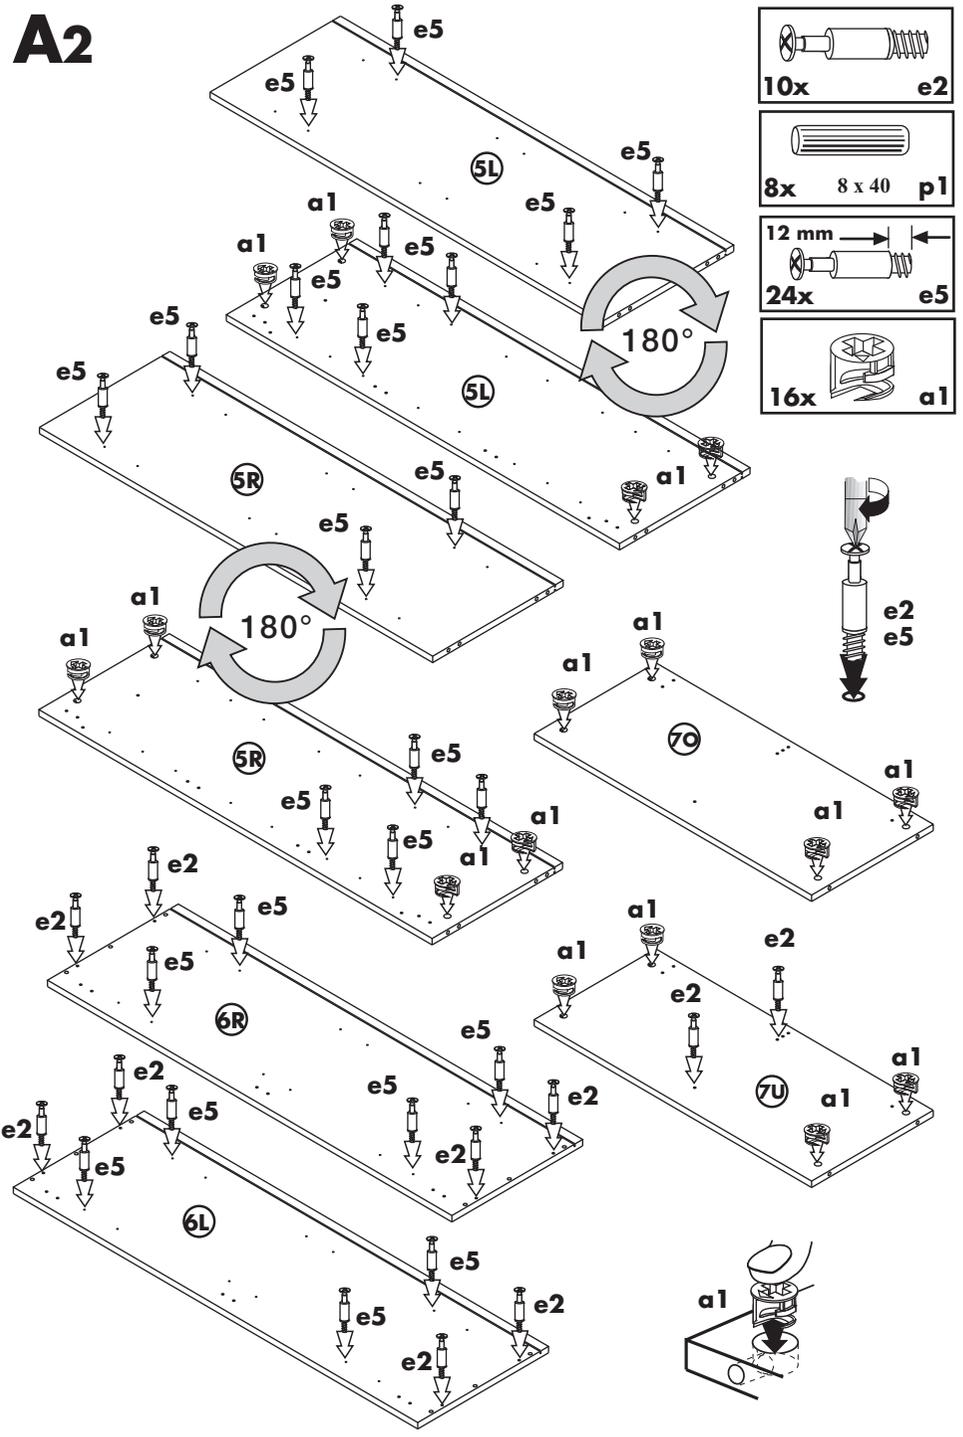


B

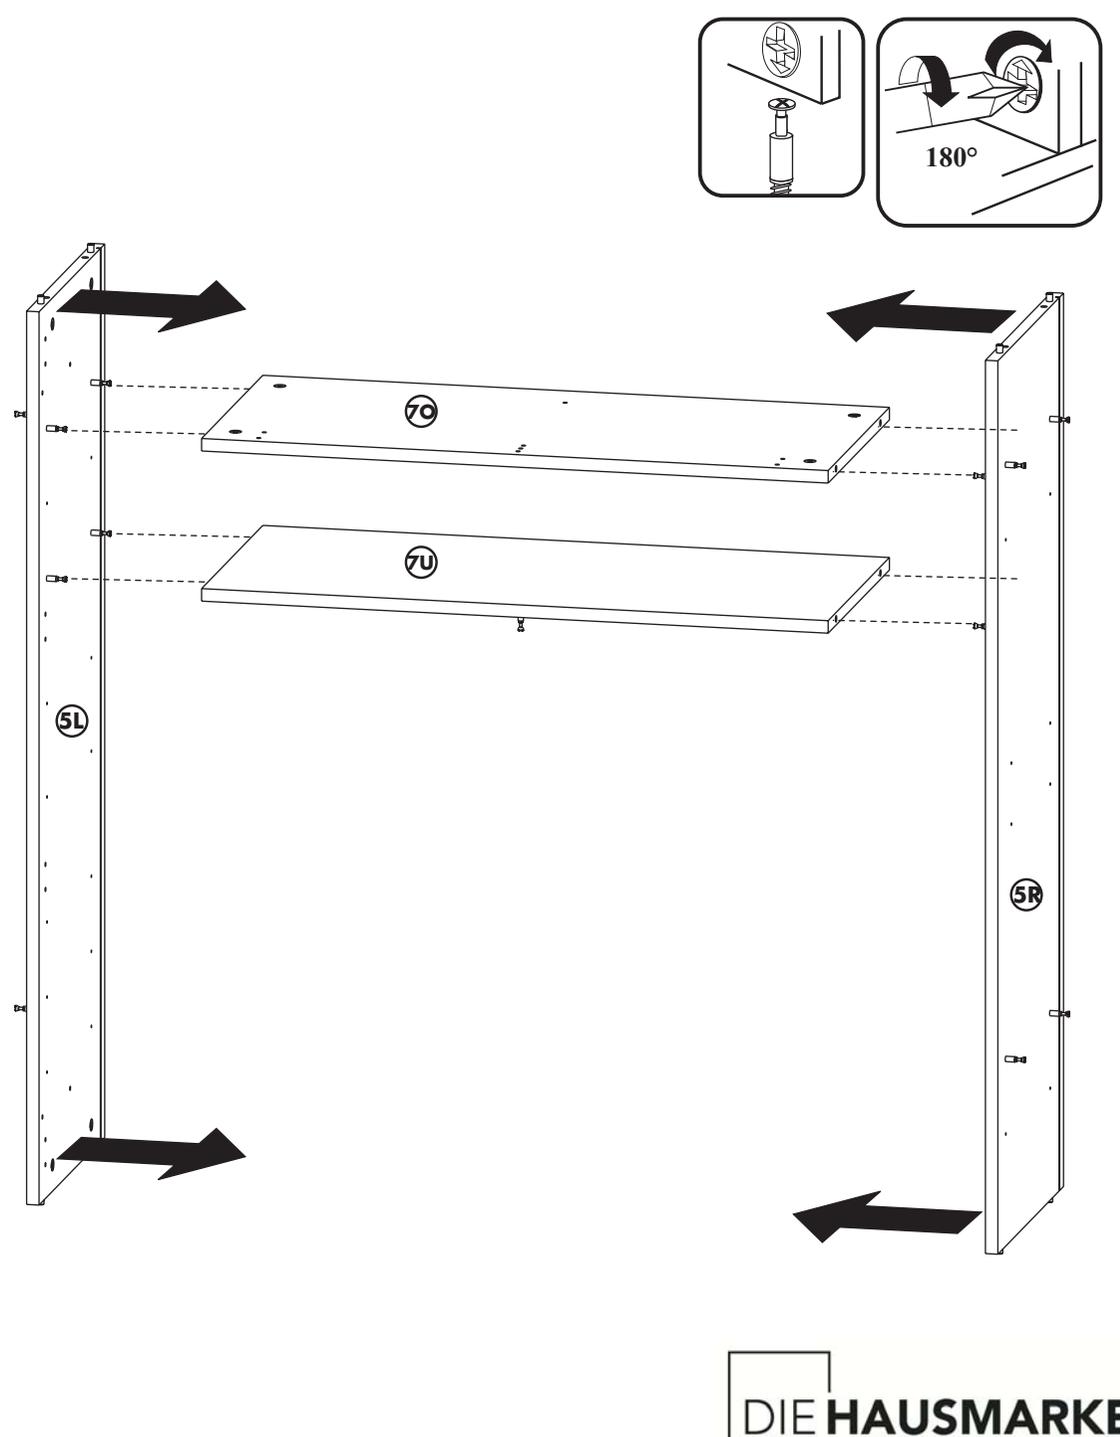




C

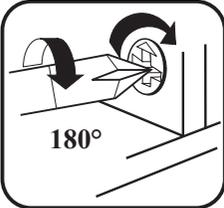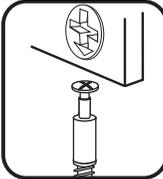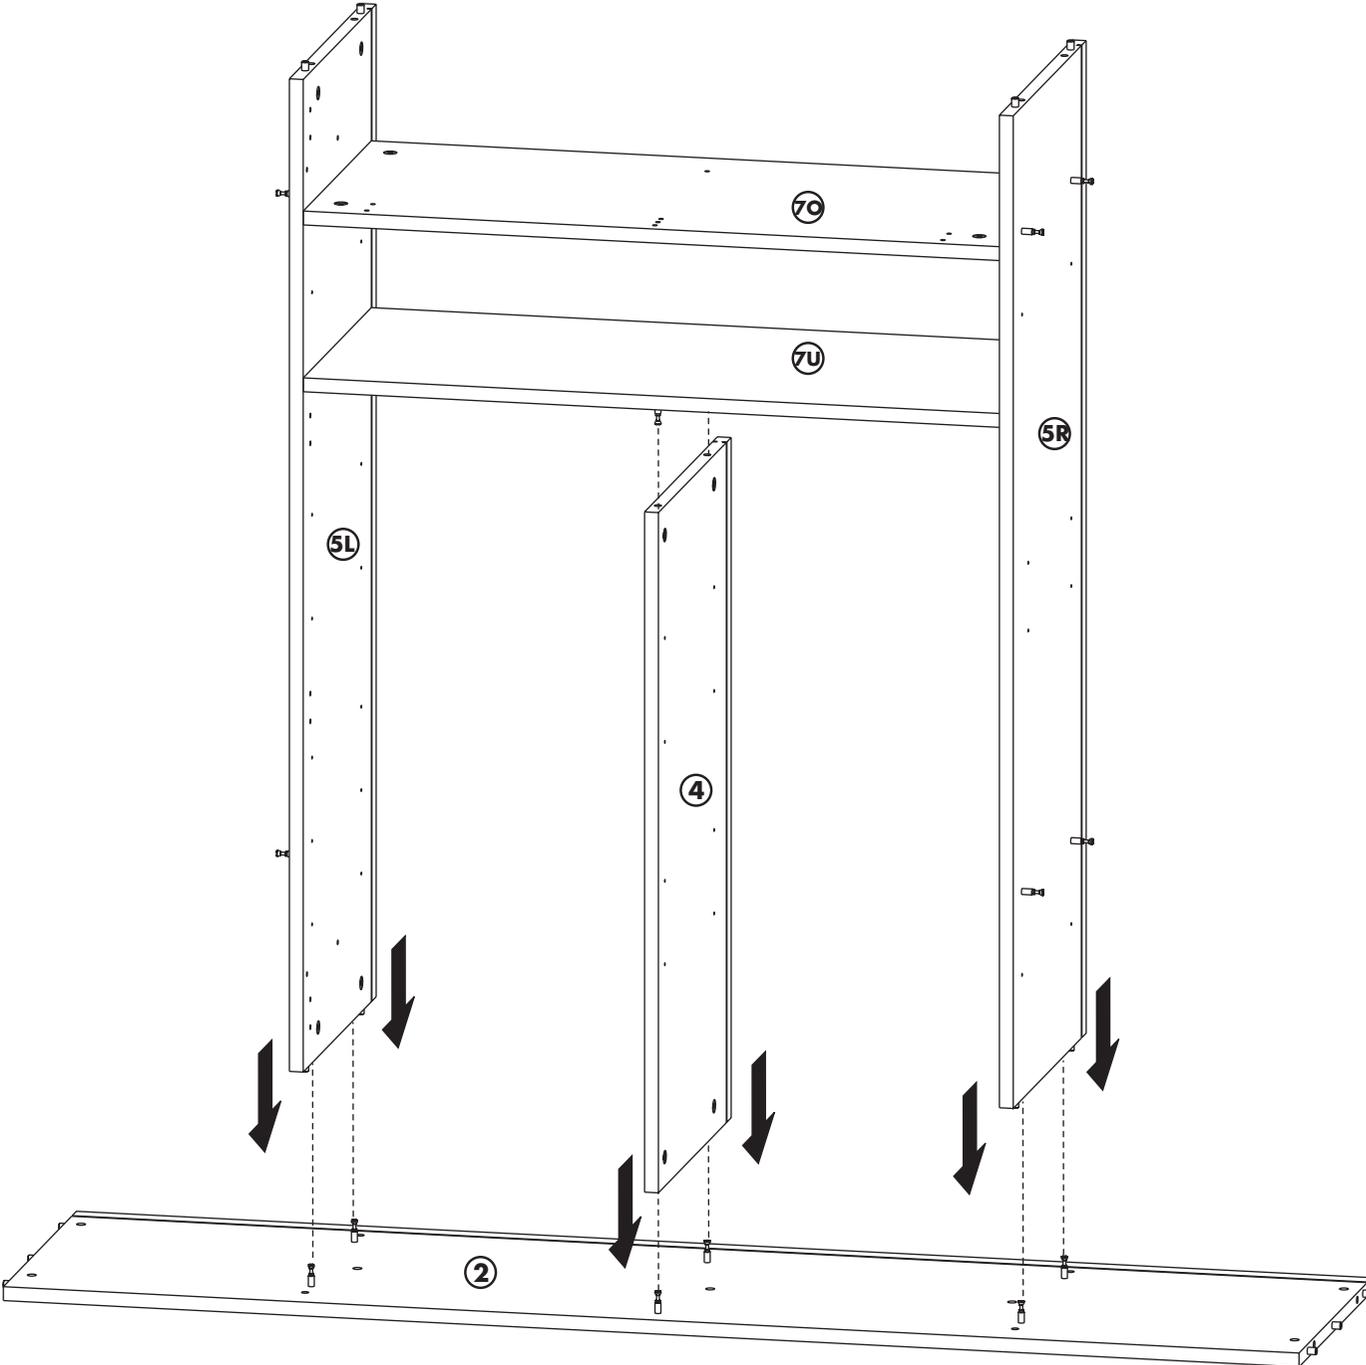




D

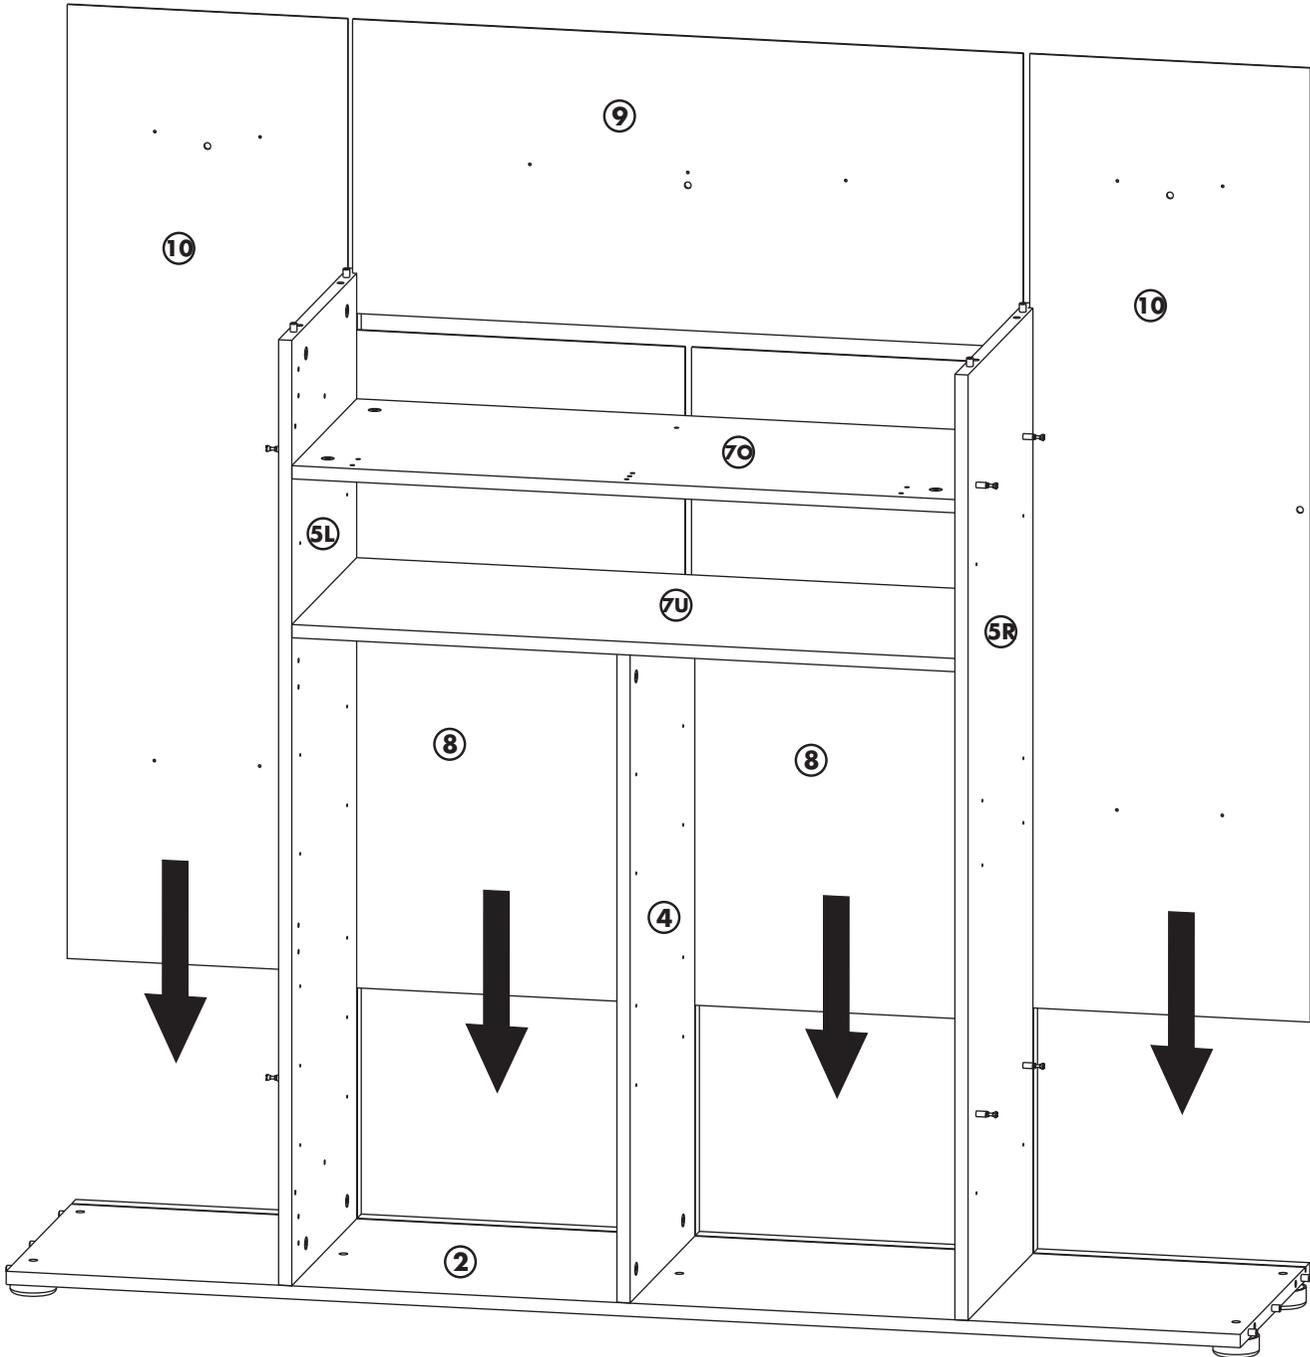










E

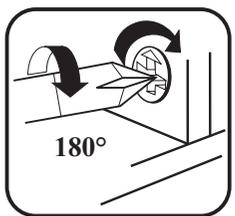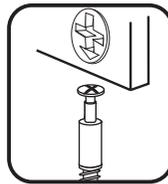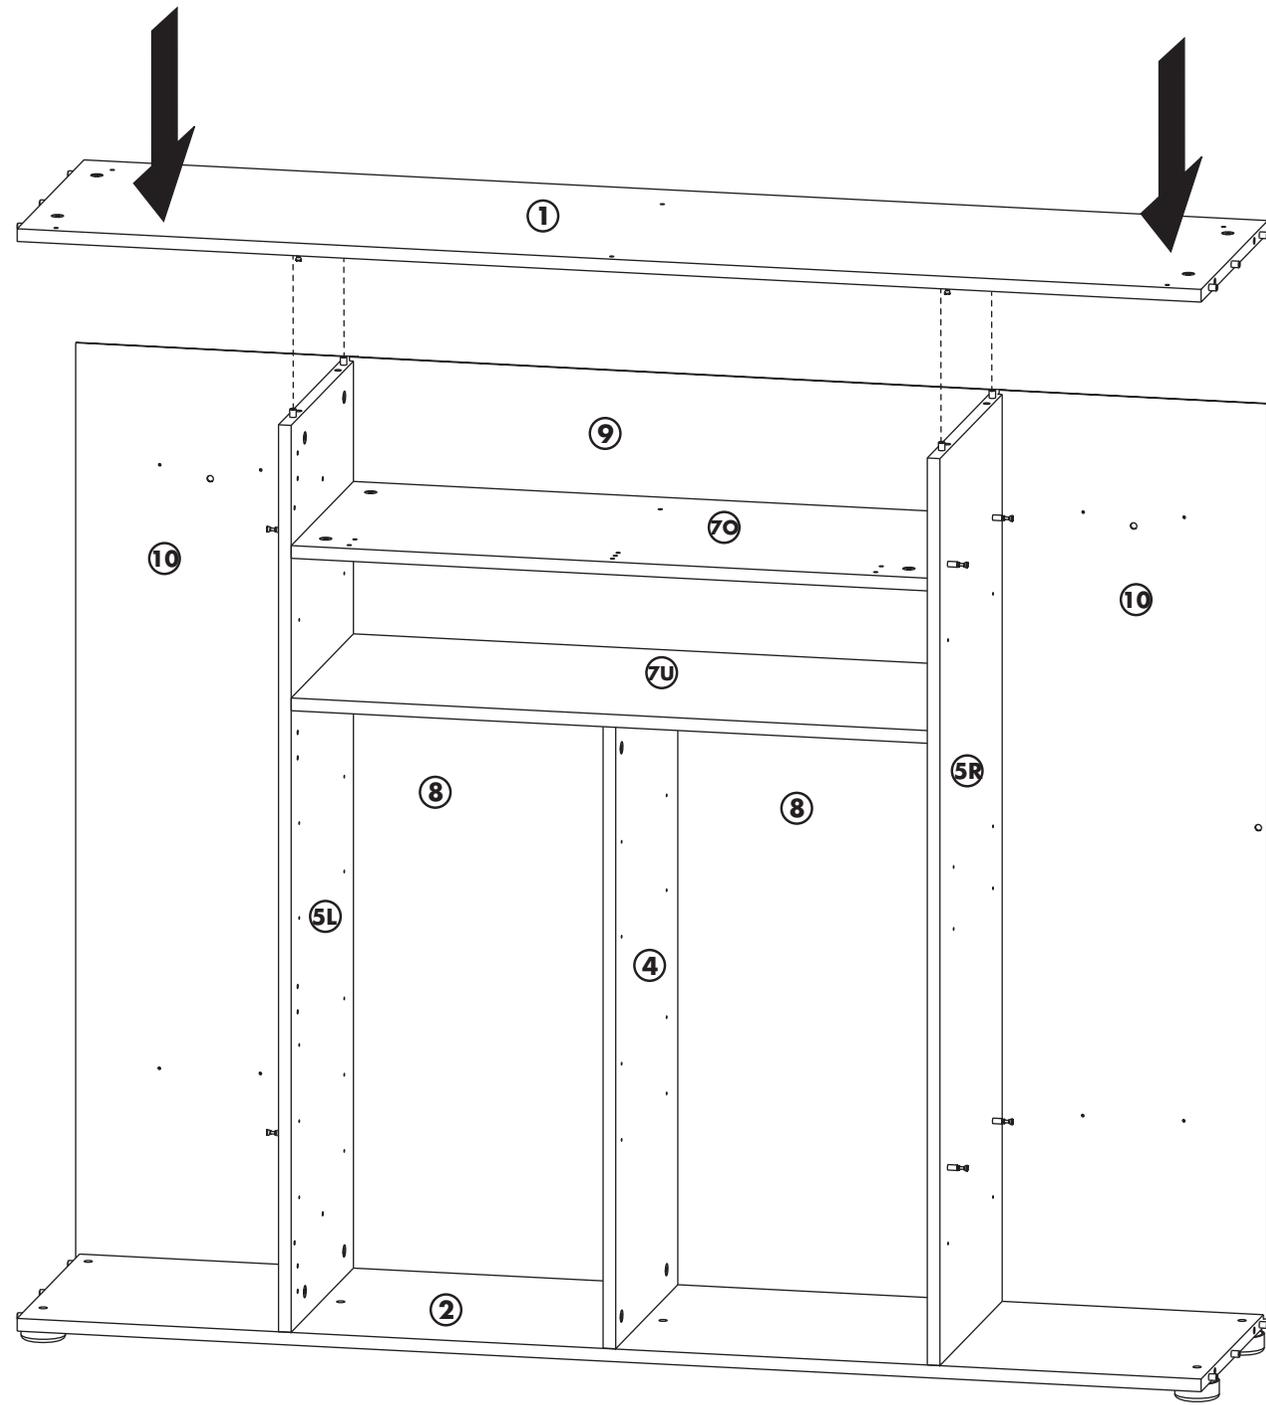



F

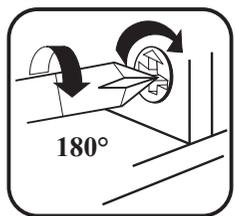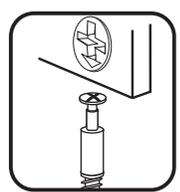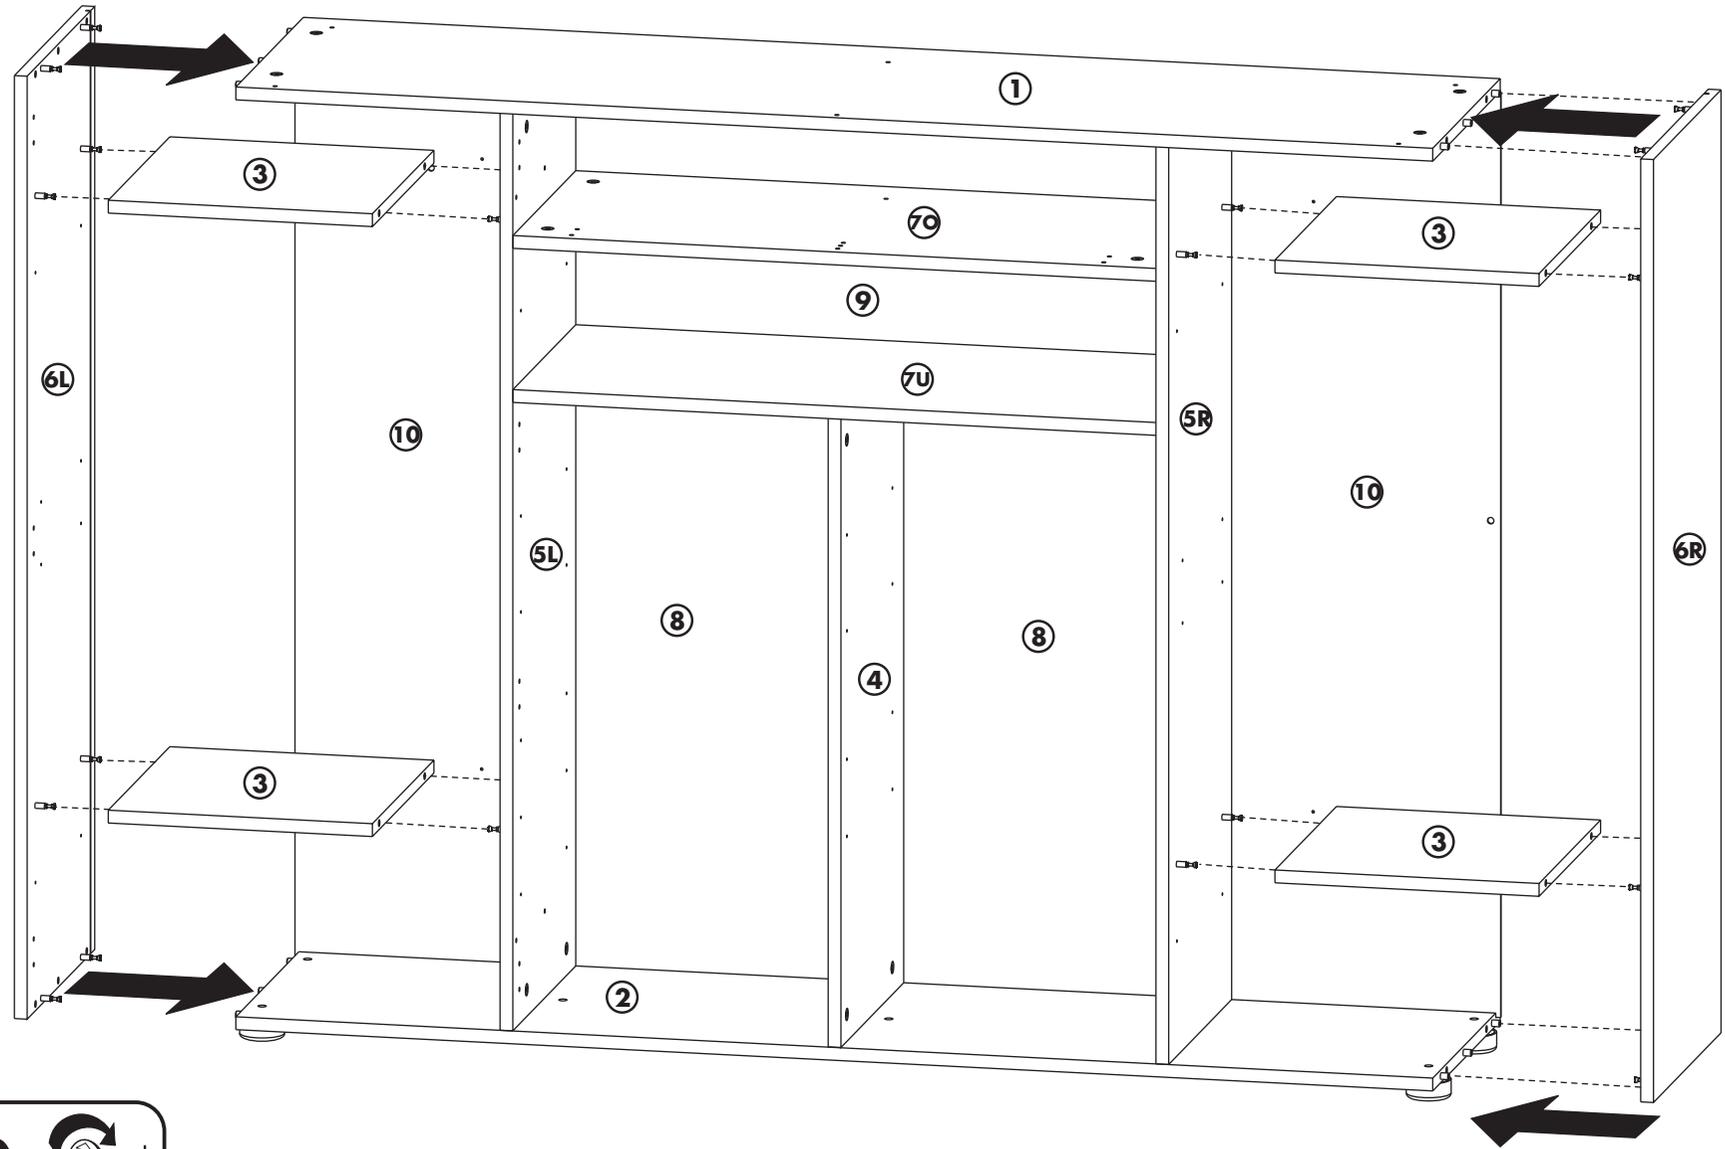

G

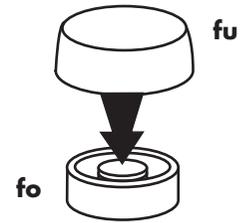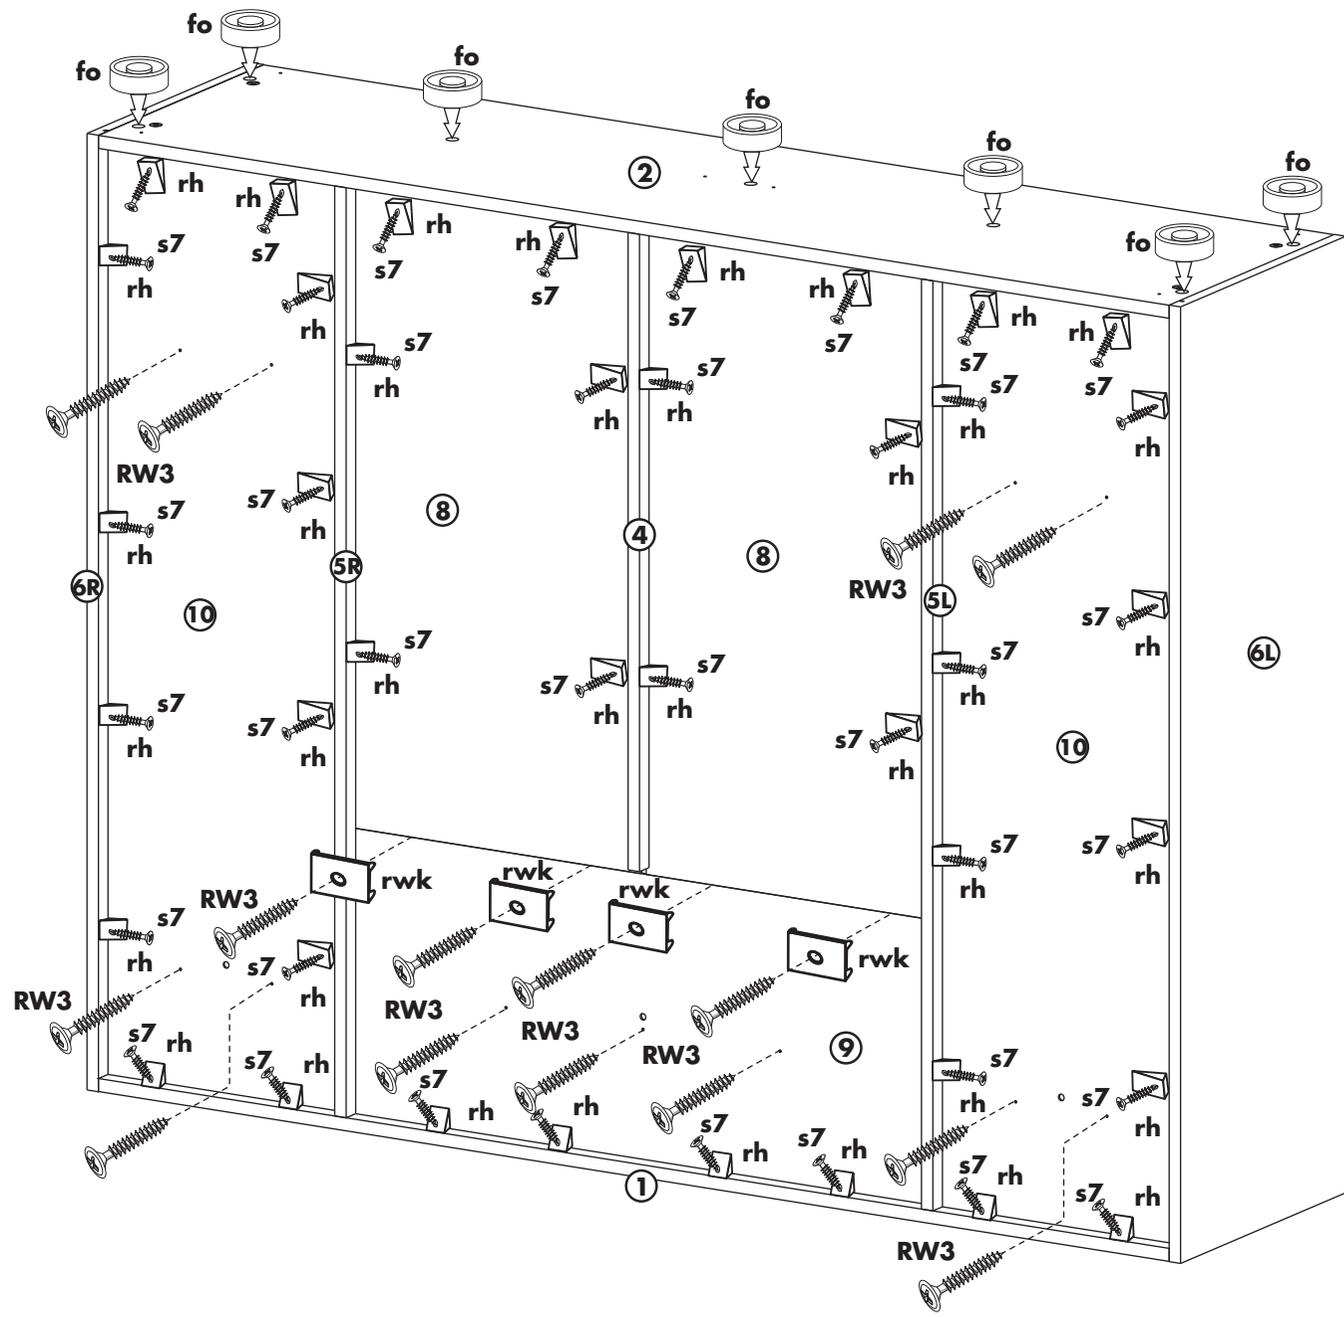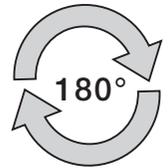

H

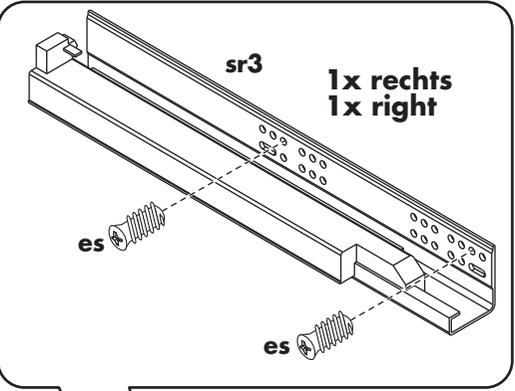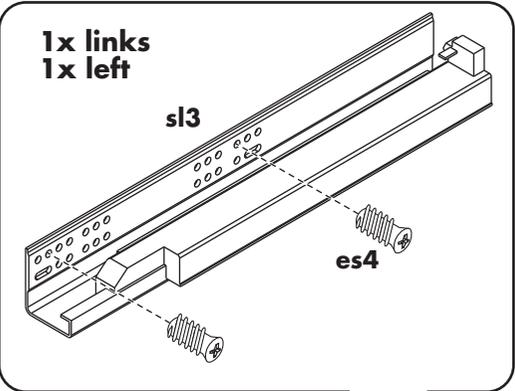



4x 6,3 x 11 es


1x sr3

1x sl3


6x M4 x 23 gs3s

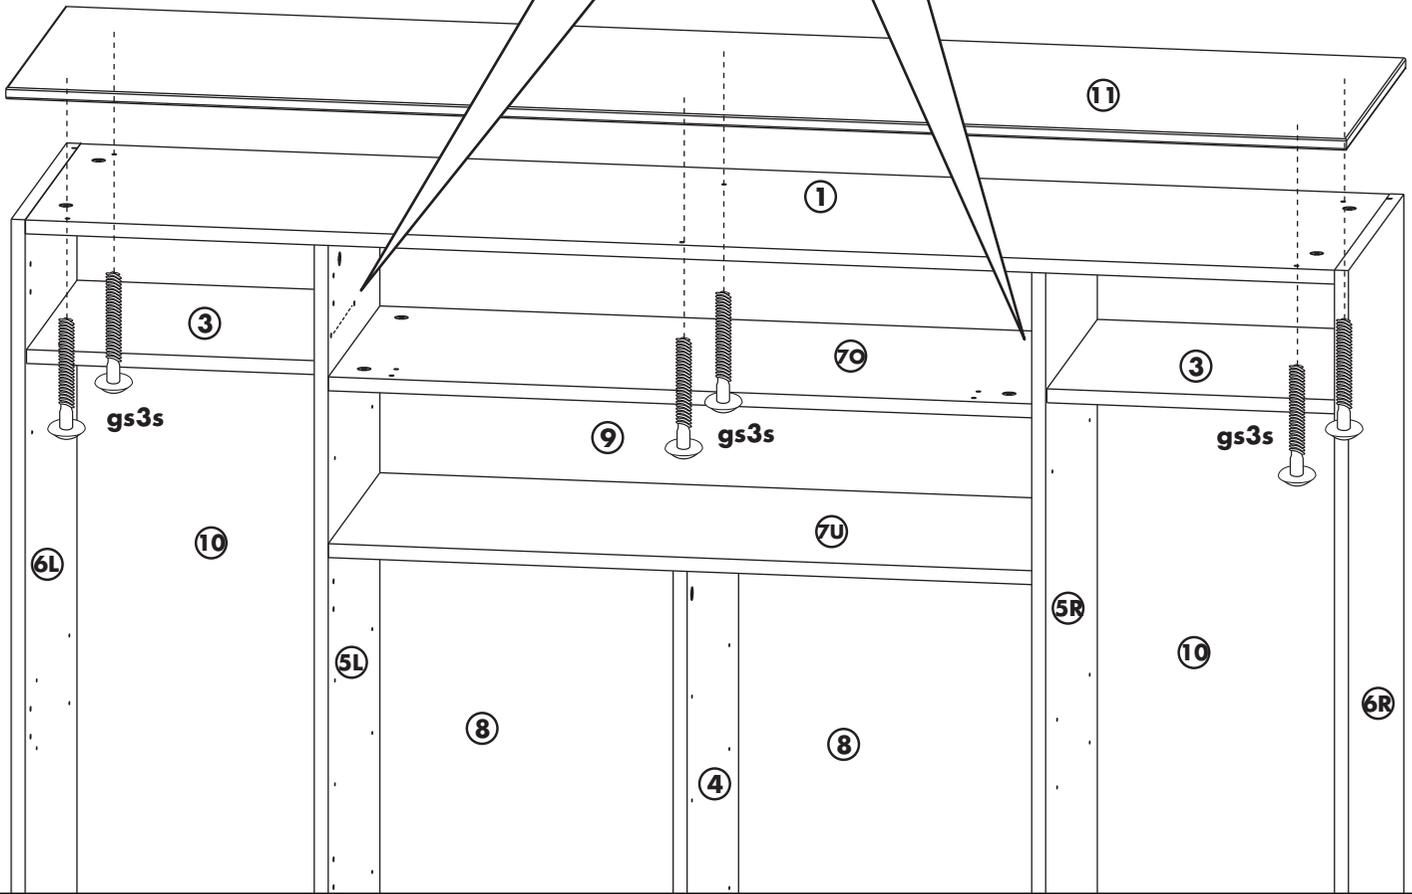


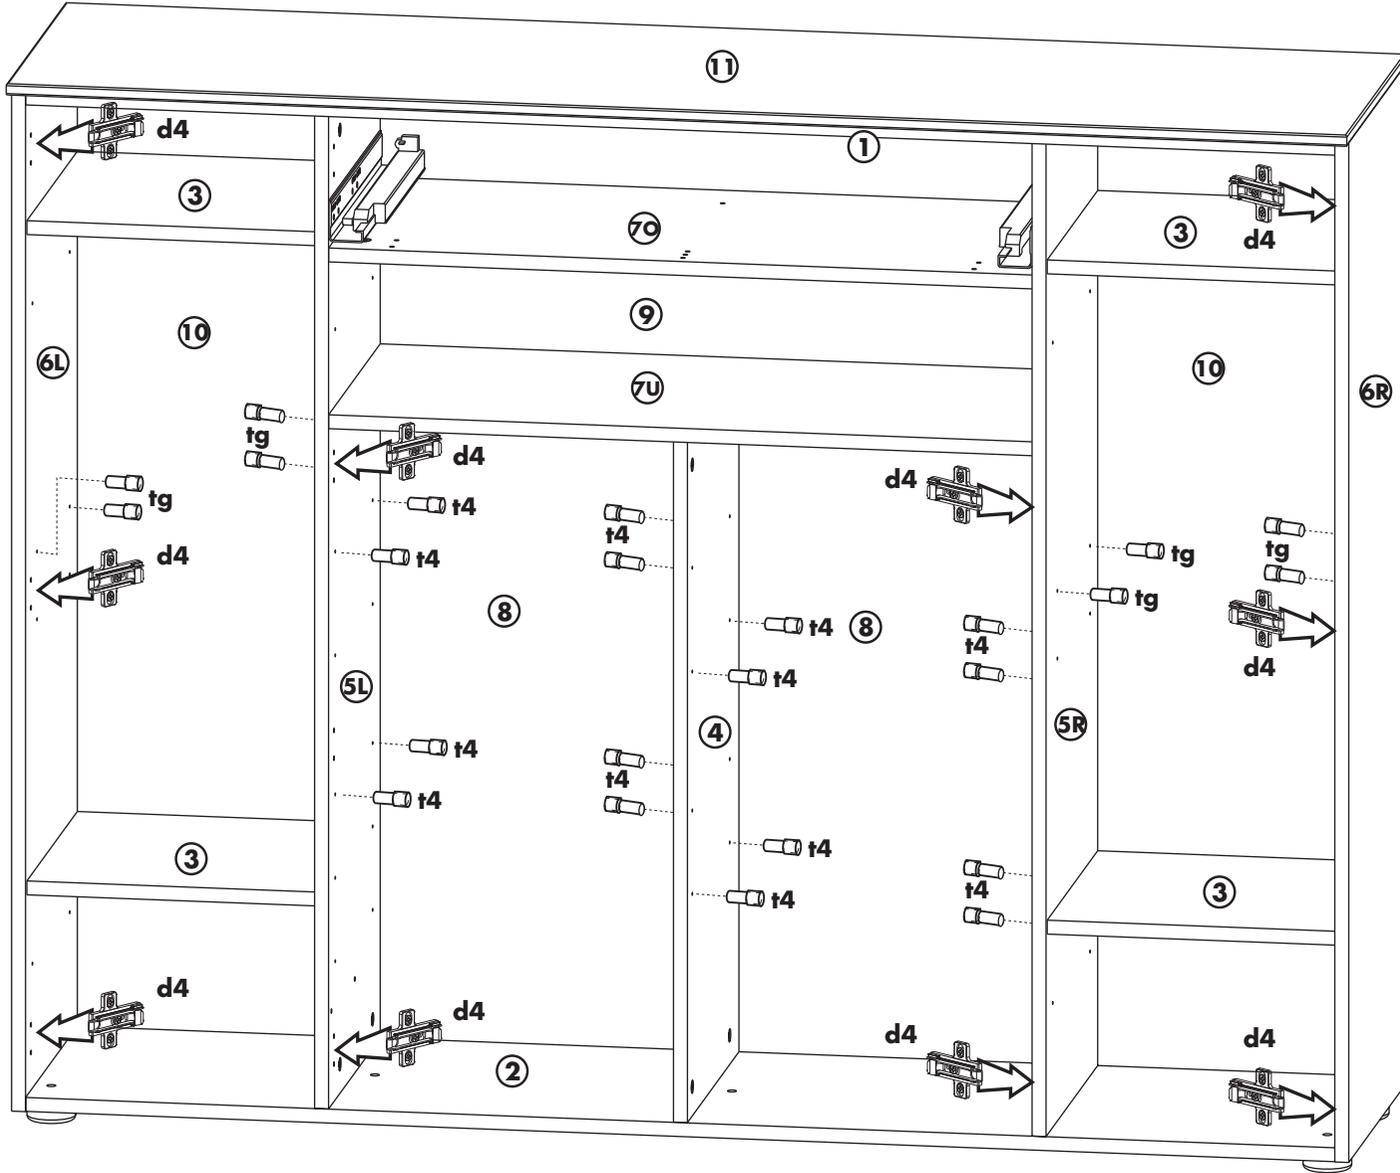


- 10x  **d4**
D 6mm
- 16x  **t4**
- 8x  **tg**

J

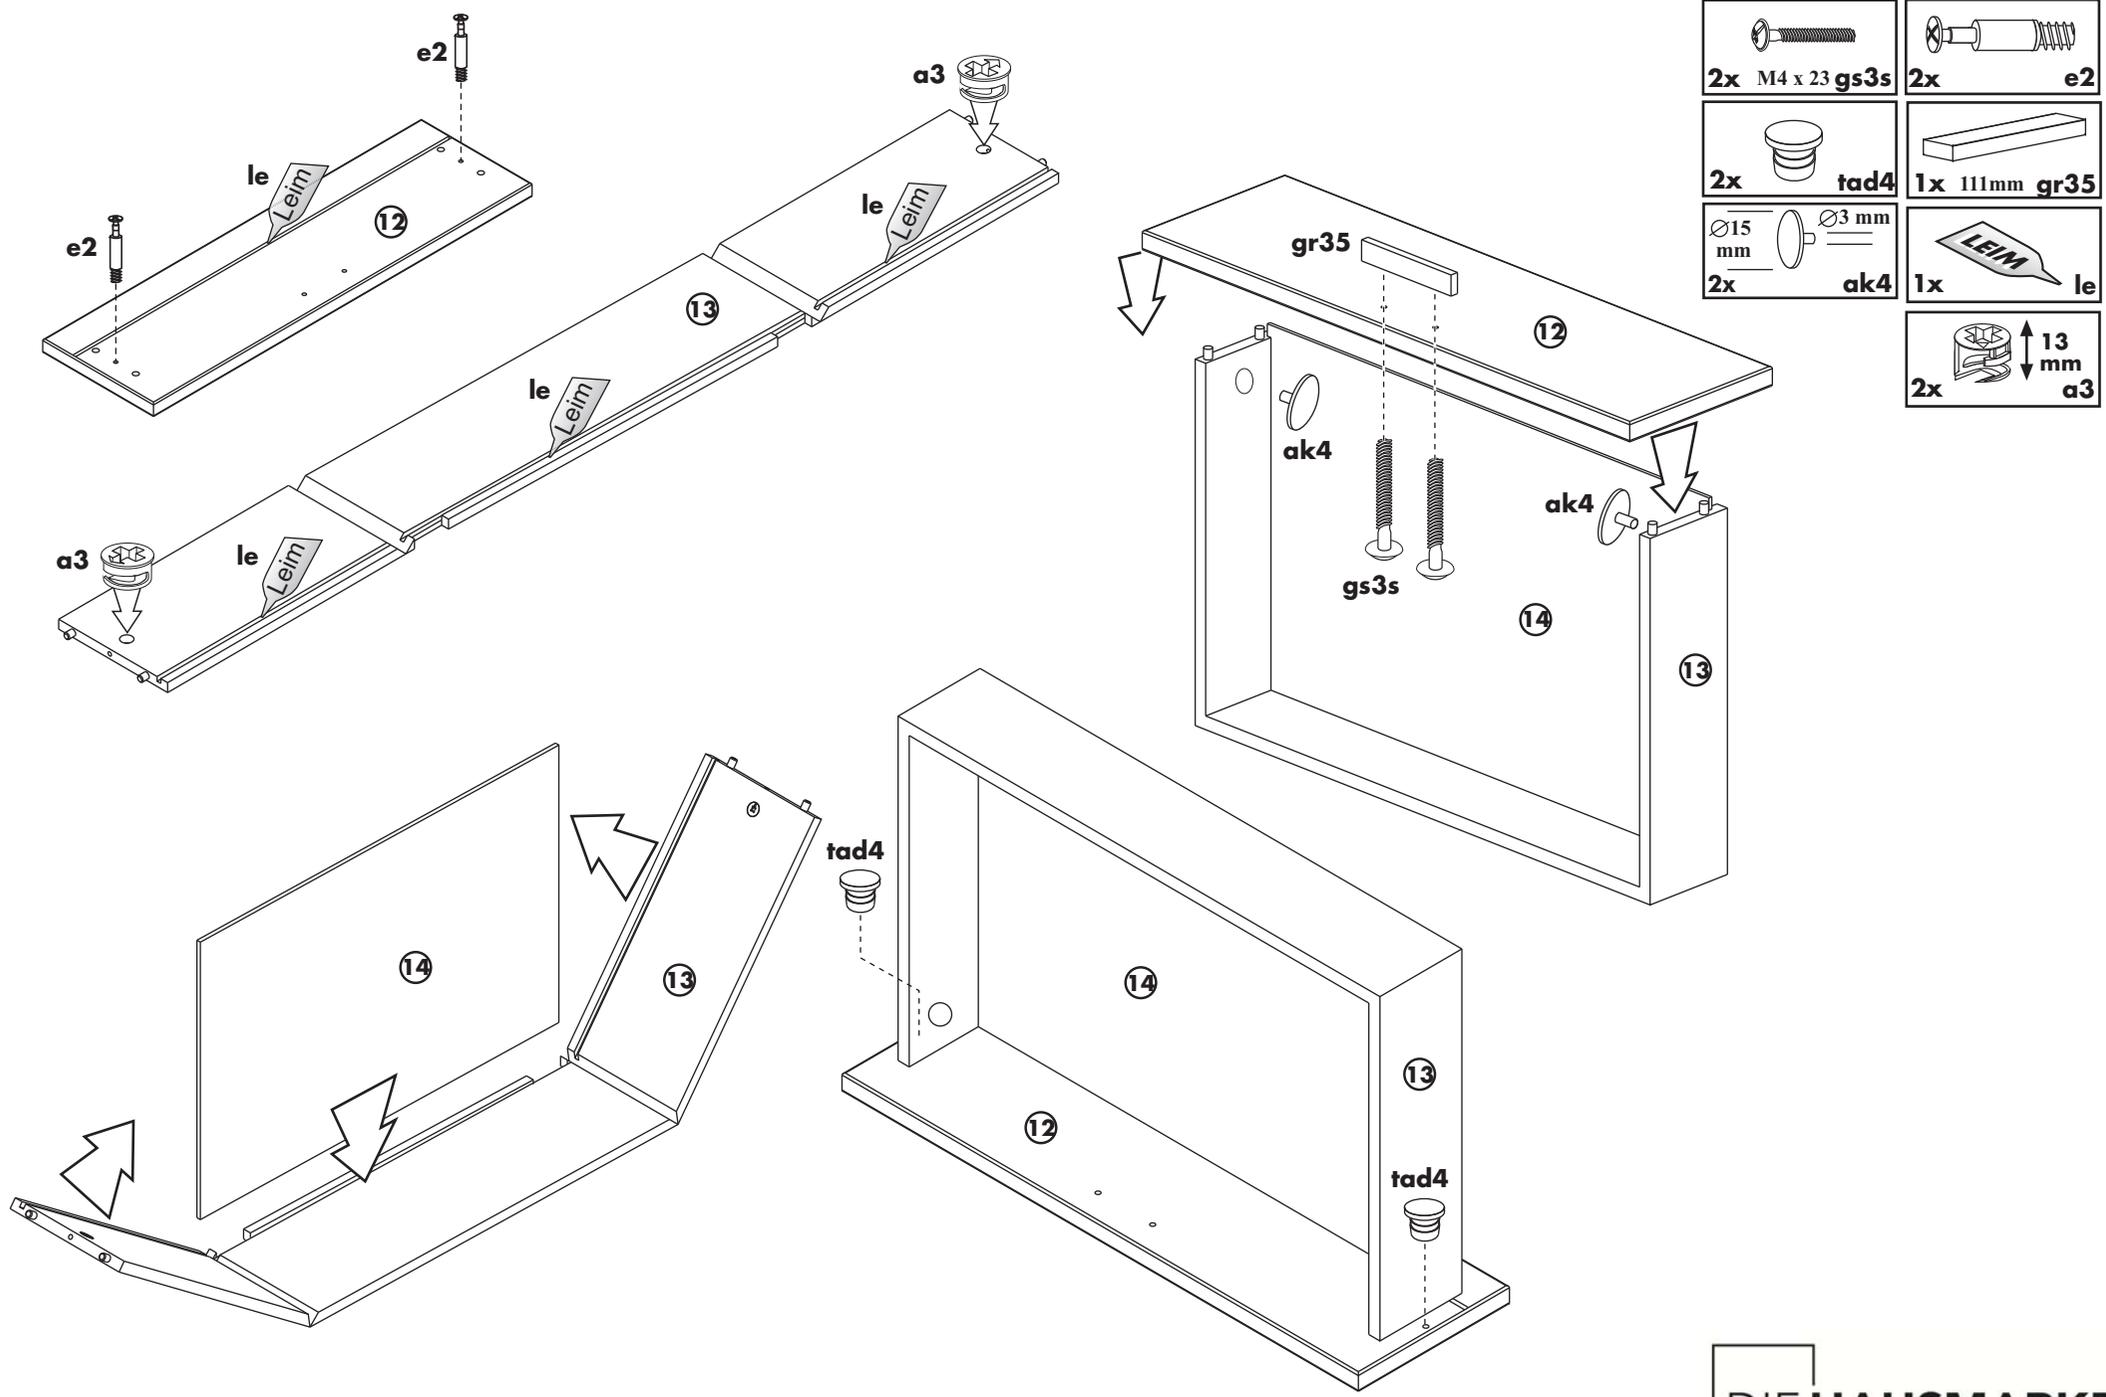


- | | |
|--|--|
| 
2x M4 x 23 gs3s | 
2x e2 |
| 
2x tad4 | 
1x 111mm gr35 |
| 
2x ak4 | 
1x le |
| 
2x a3 | |




K

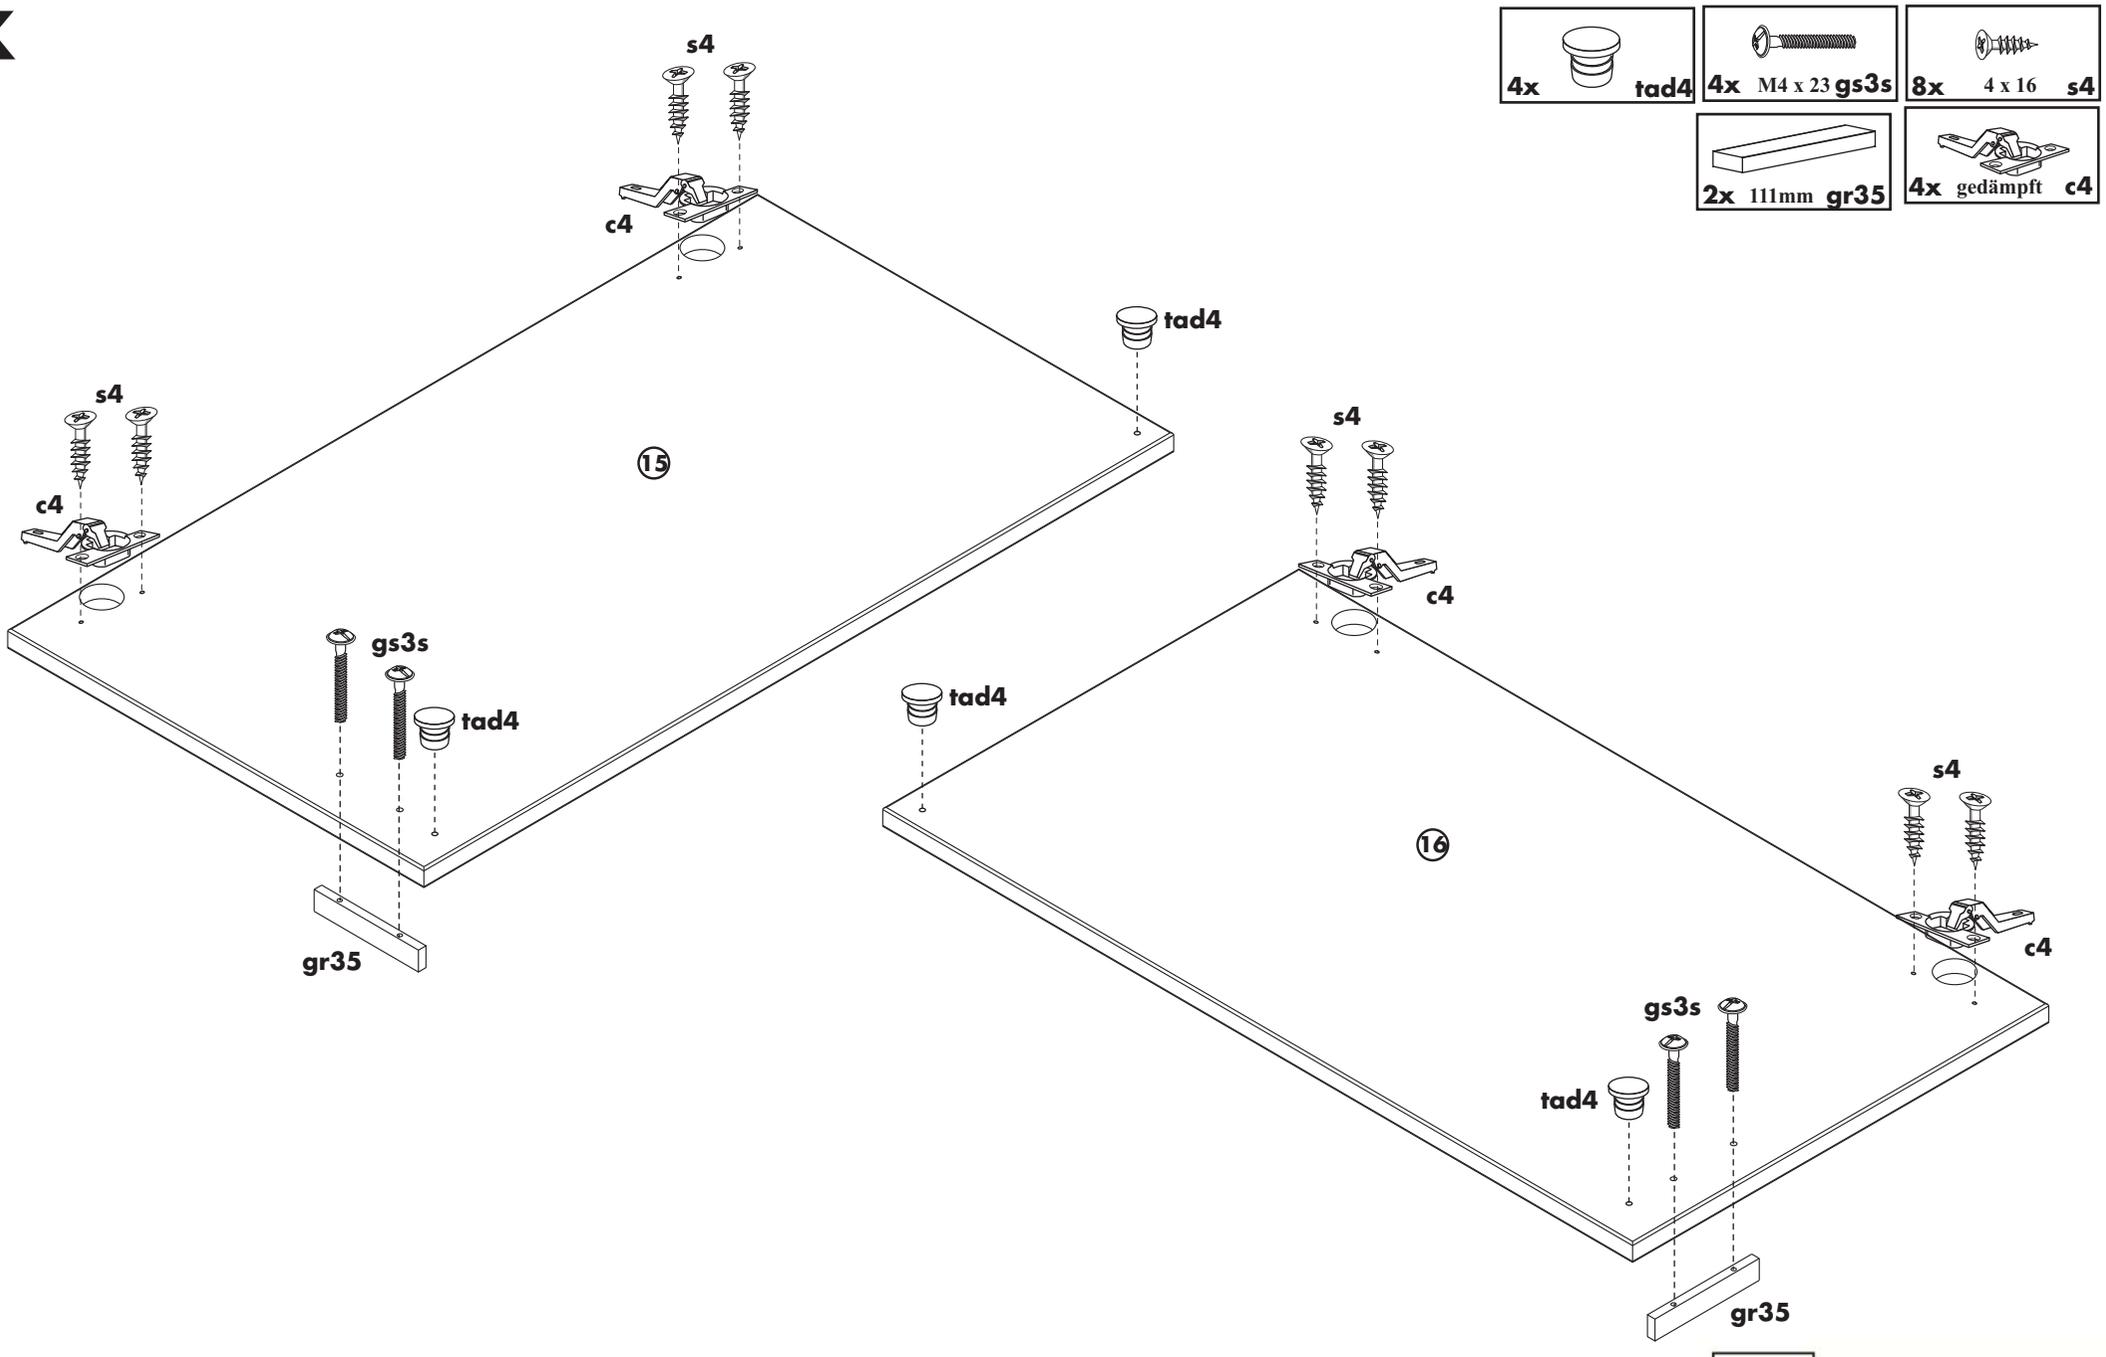

- | | | |
|---|---|--|
| 4x  tad4 | 4x  M4 x 23 gs3s | 8x  4 x 16 s4 |
| 2x 111mm  gr35 | 4x  gedämpft c4 | |


L

4x  tad4	4x  M4 x 23 gs3s	12x  4 x 16 s4
2x  50mm gr36	2x  15 mm ak9	6x  c3

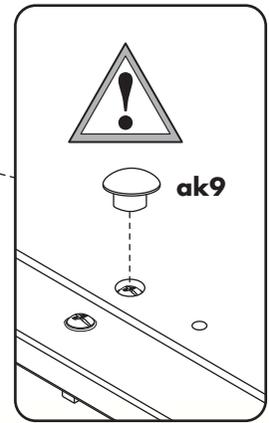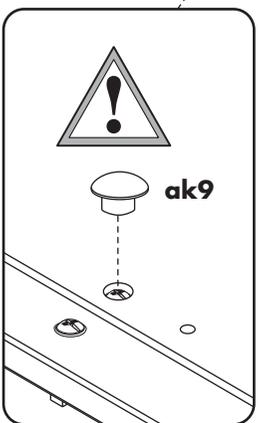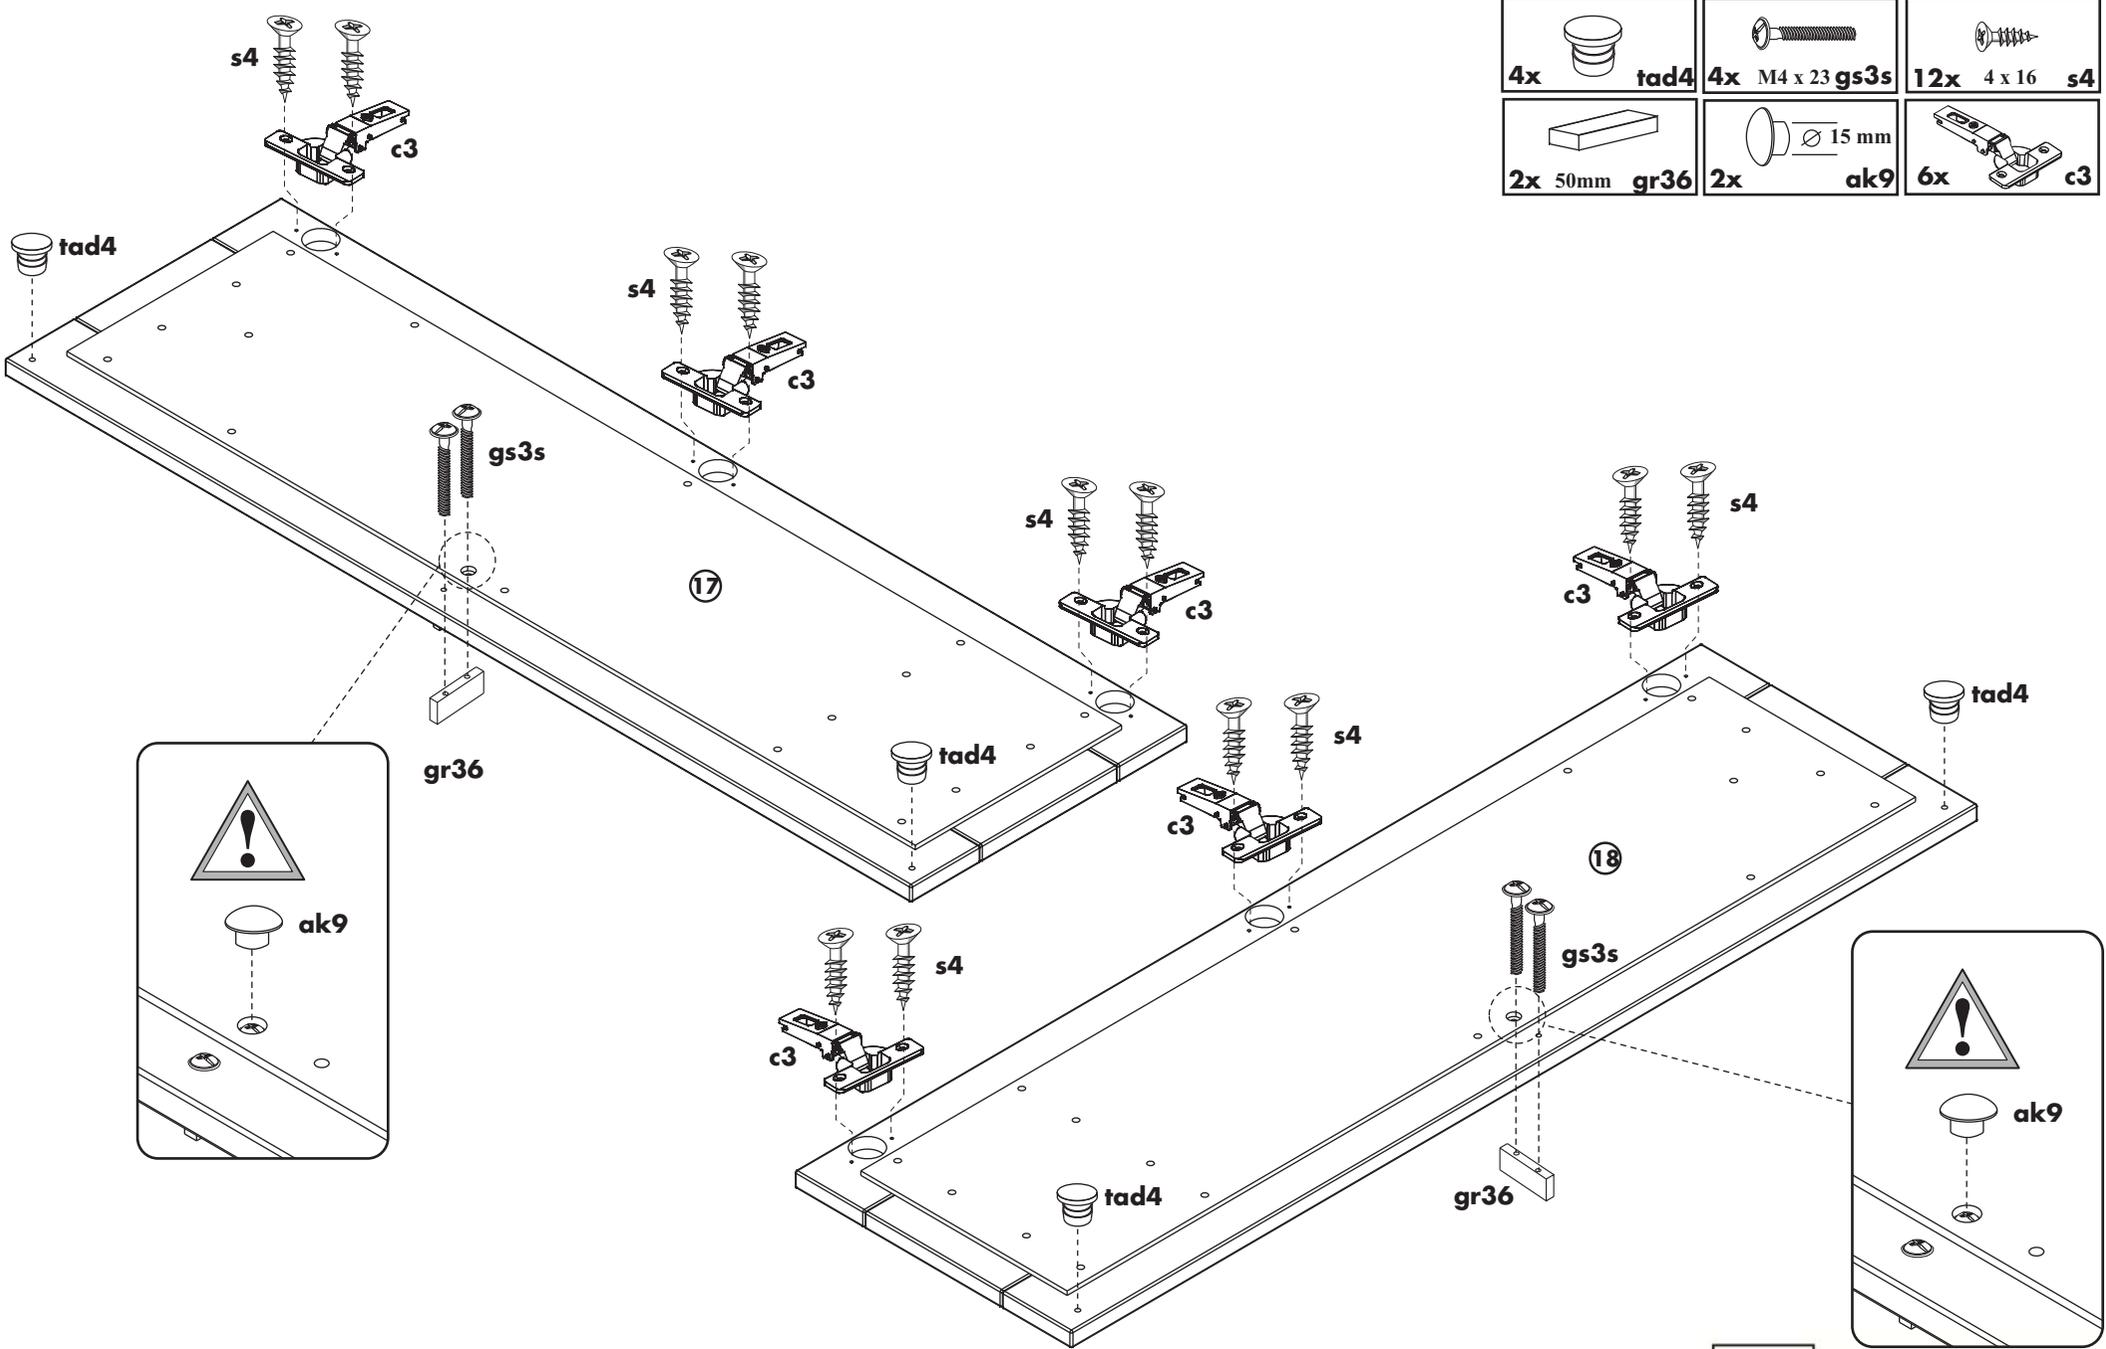


M





16x		ak
6x		hbak2

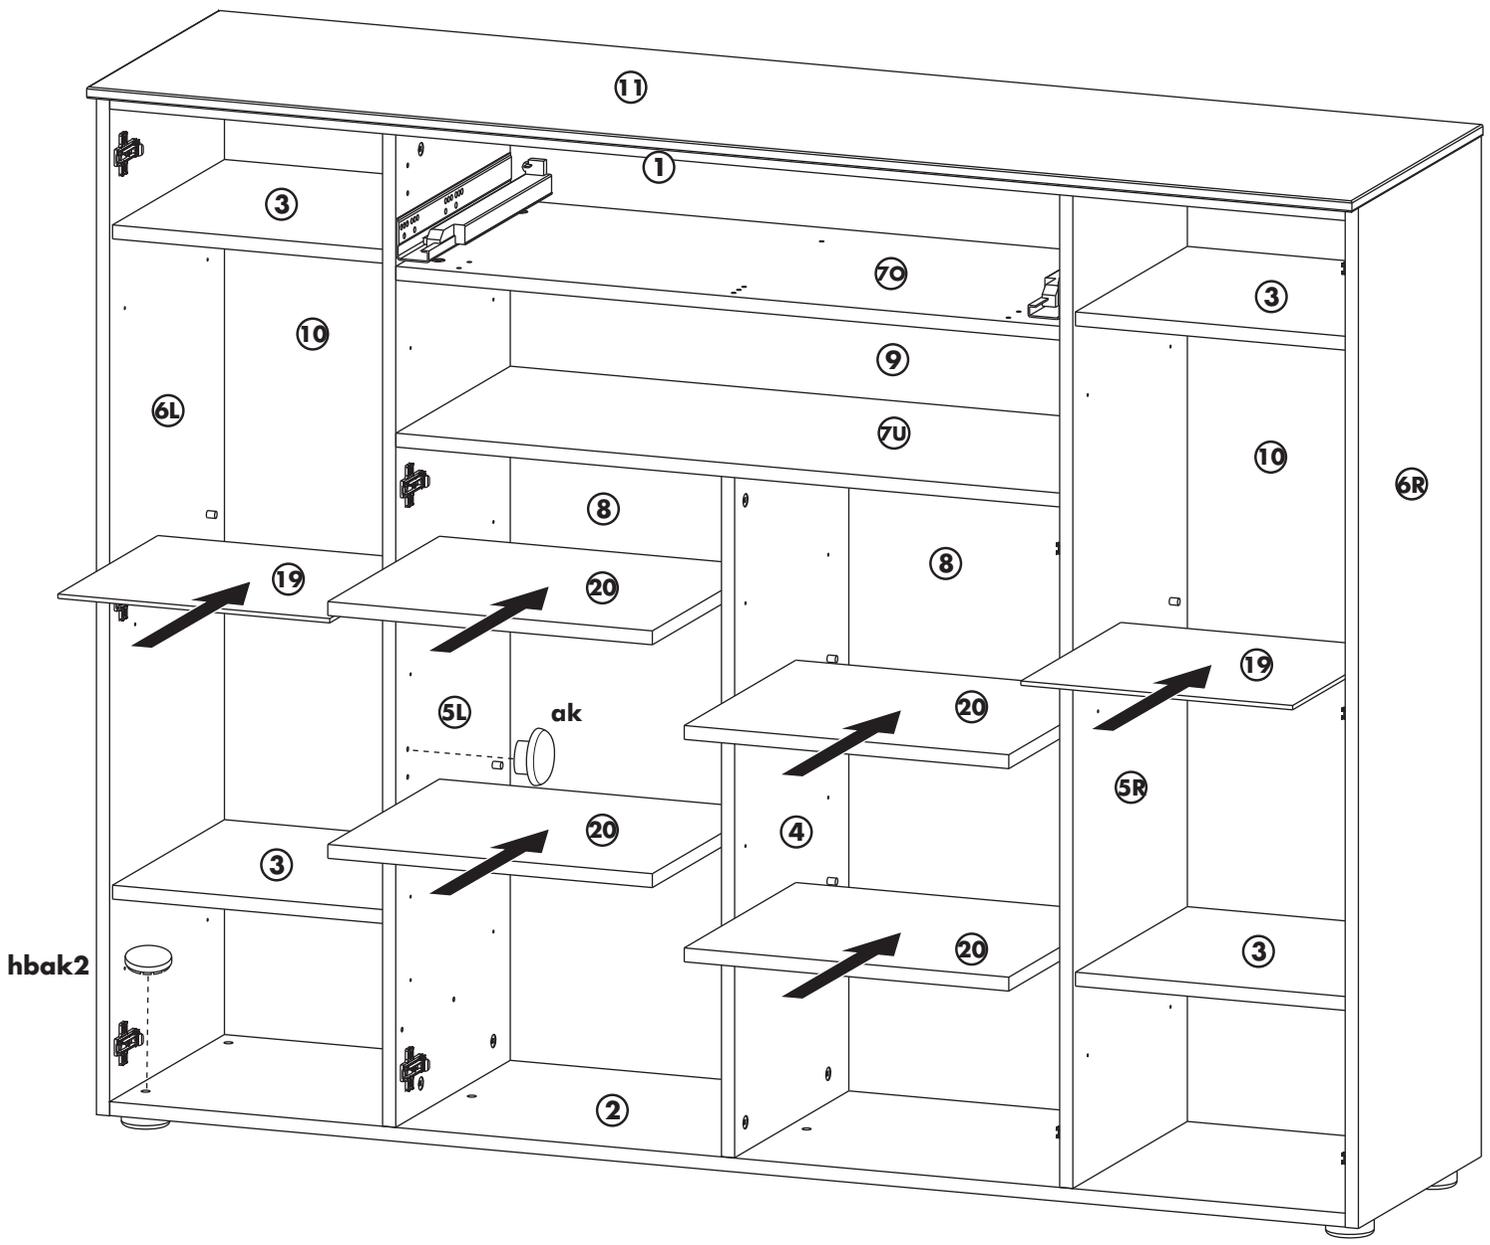


N

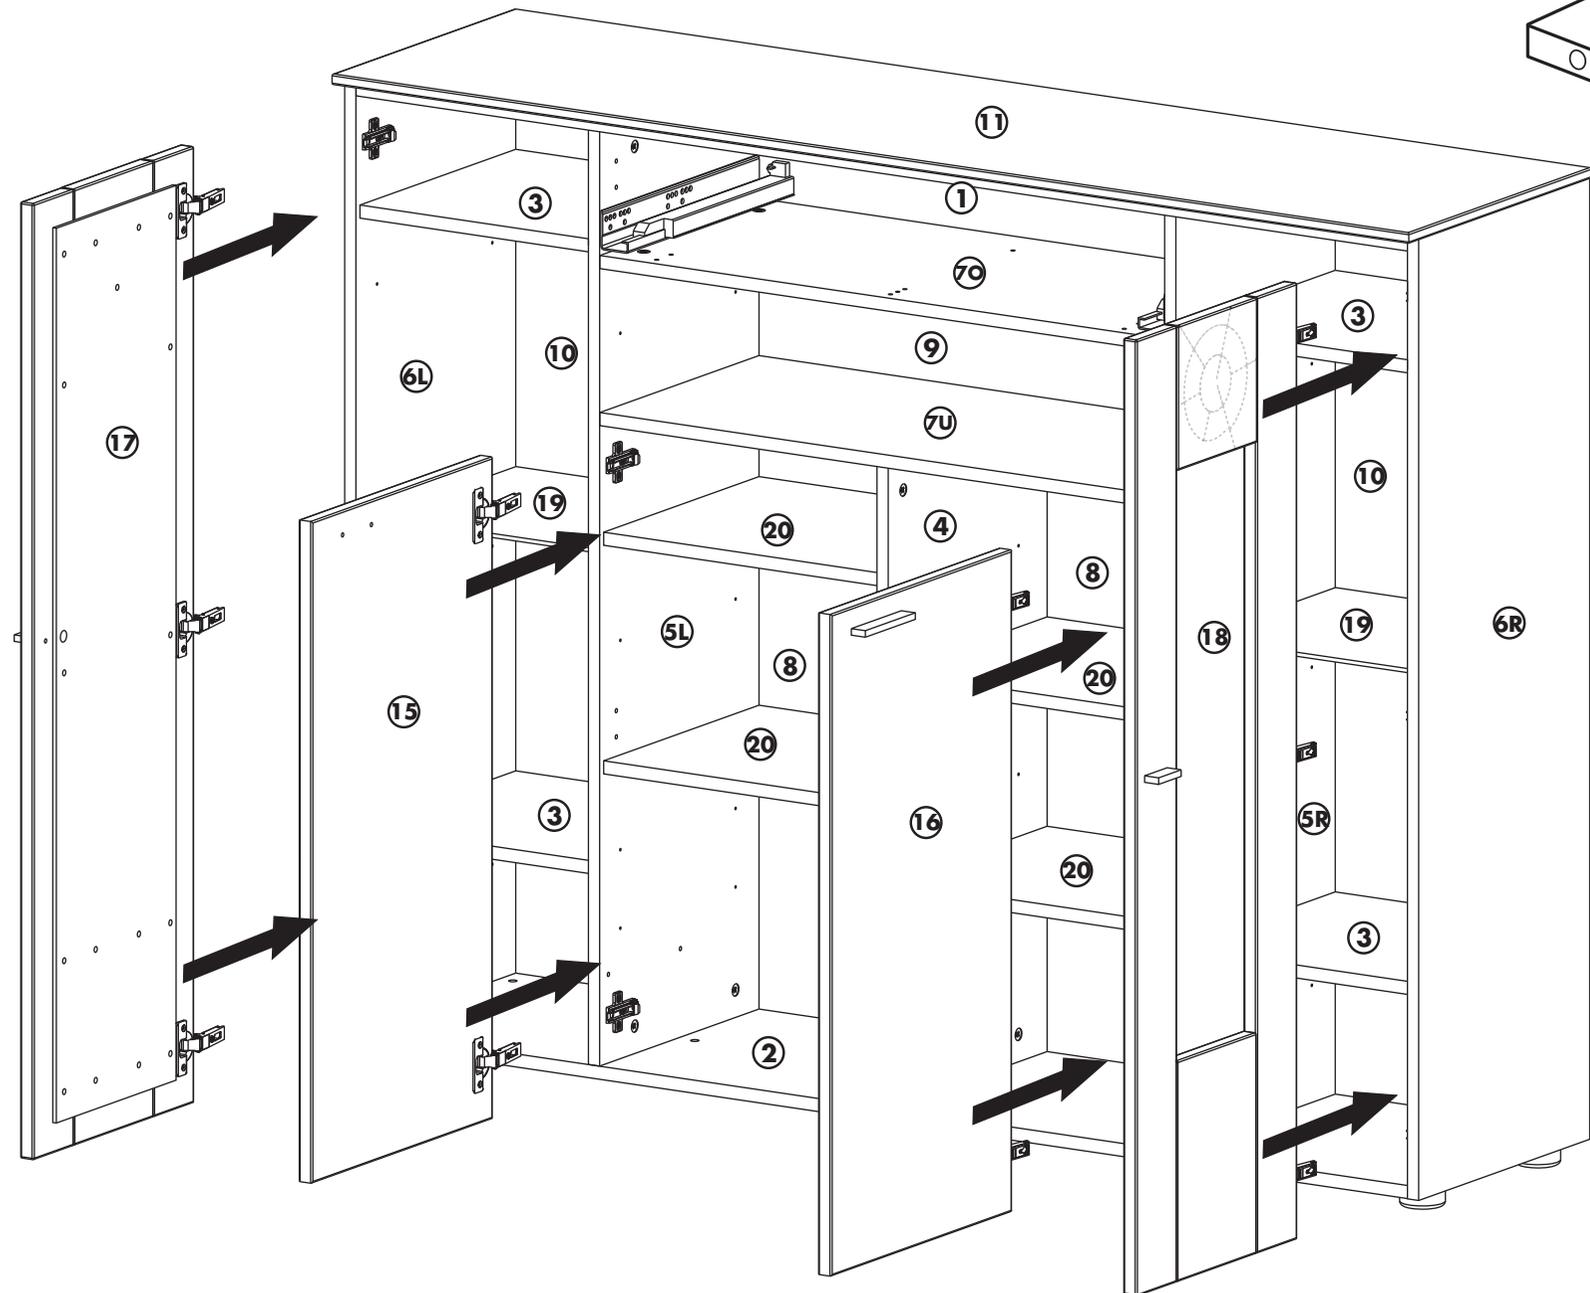

∅15 mm		16x	ak4b
∅17 mm		20x	ak4a

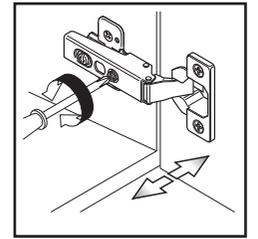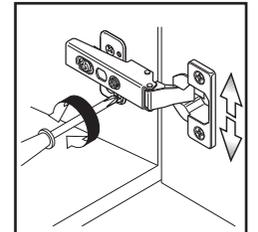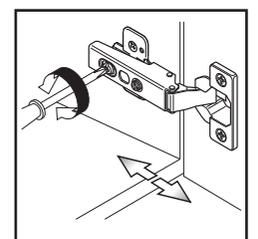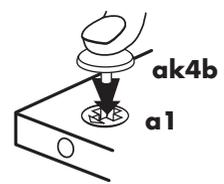

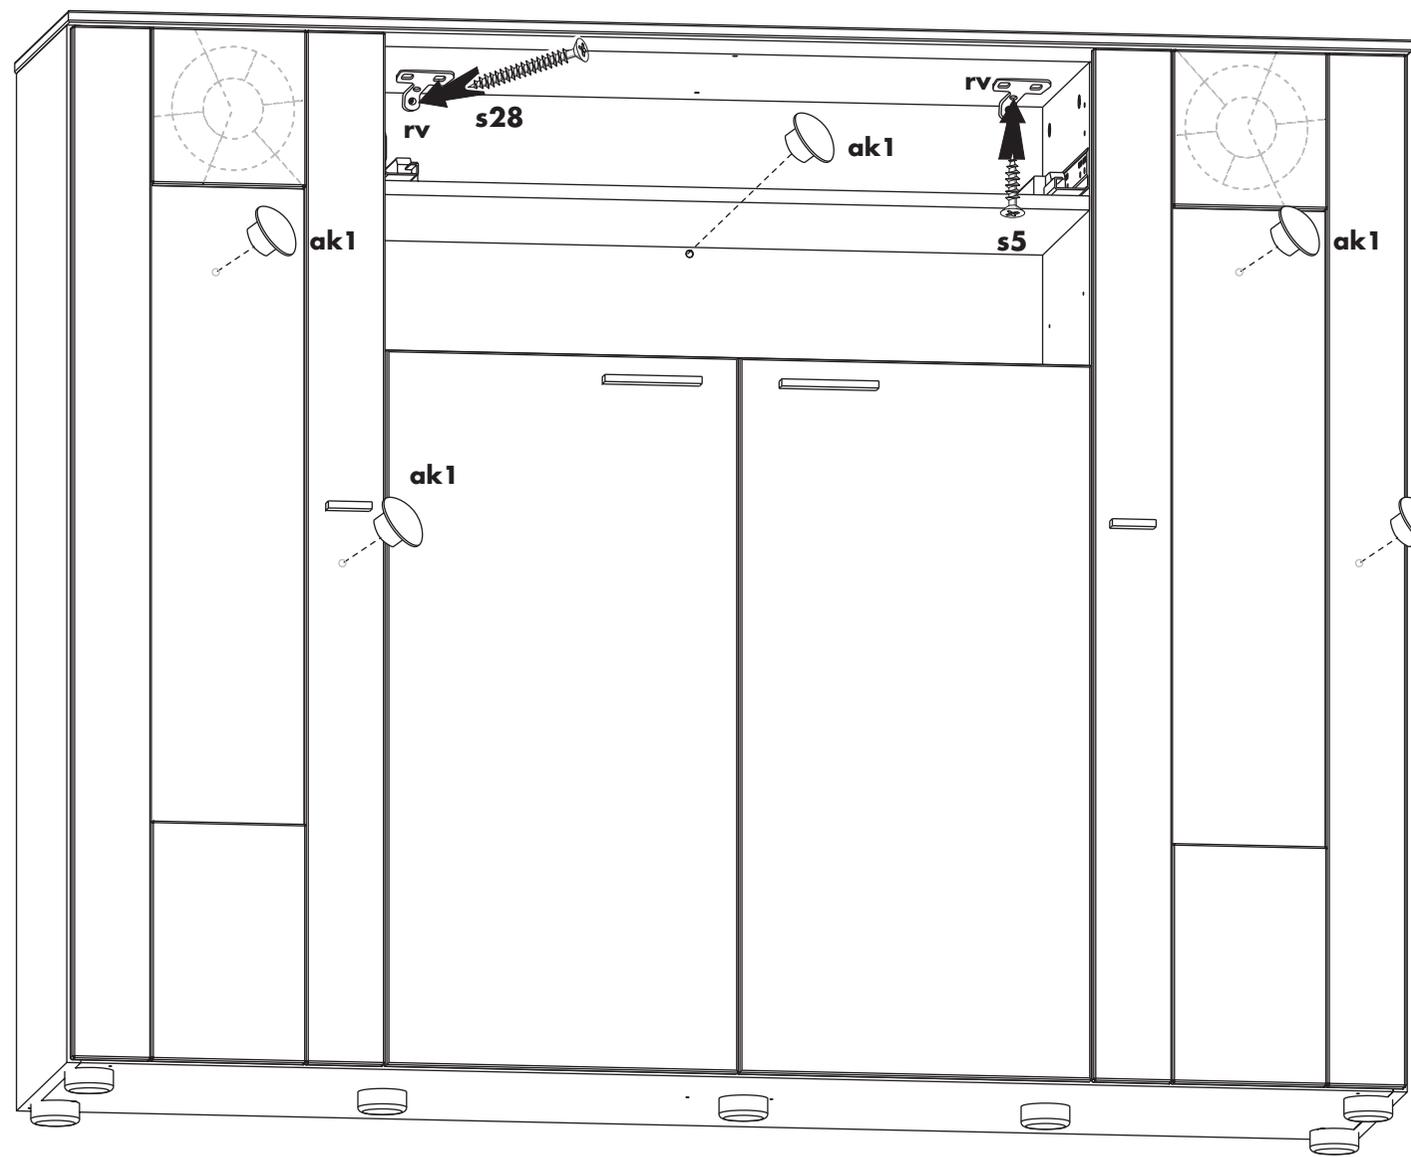

	2x wd		2x 3,5 x 15 s5
	2x rv		2x 5 x 100 s28
	5x ak1		∅8 mm
			∅13 mm

1. Kippsicherung links und rechts anbringen
Install anti-tip device left and right


2. Wand markieren mark wall

3.
 8mm

4.
 wd


5. Schraube eindrehen
Mount screw

P

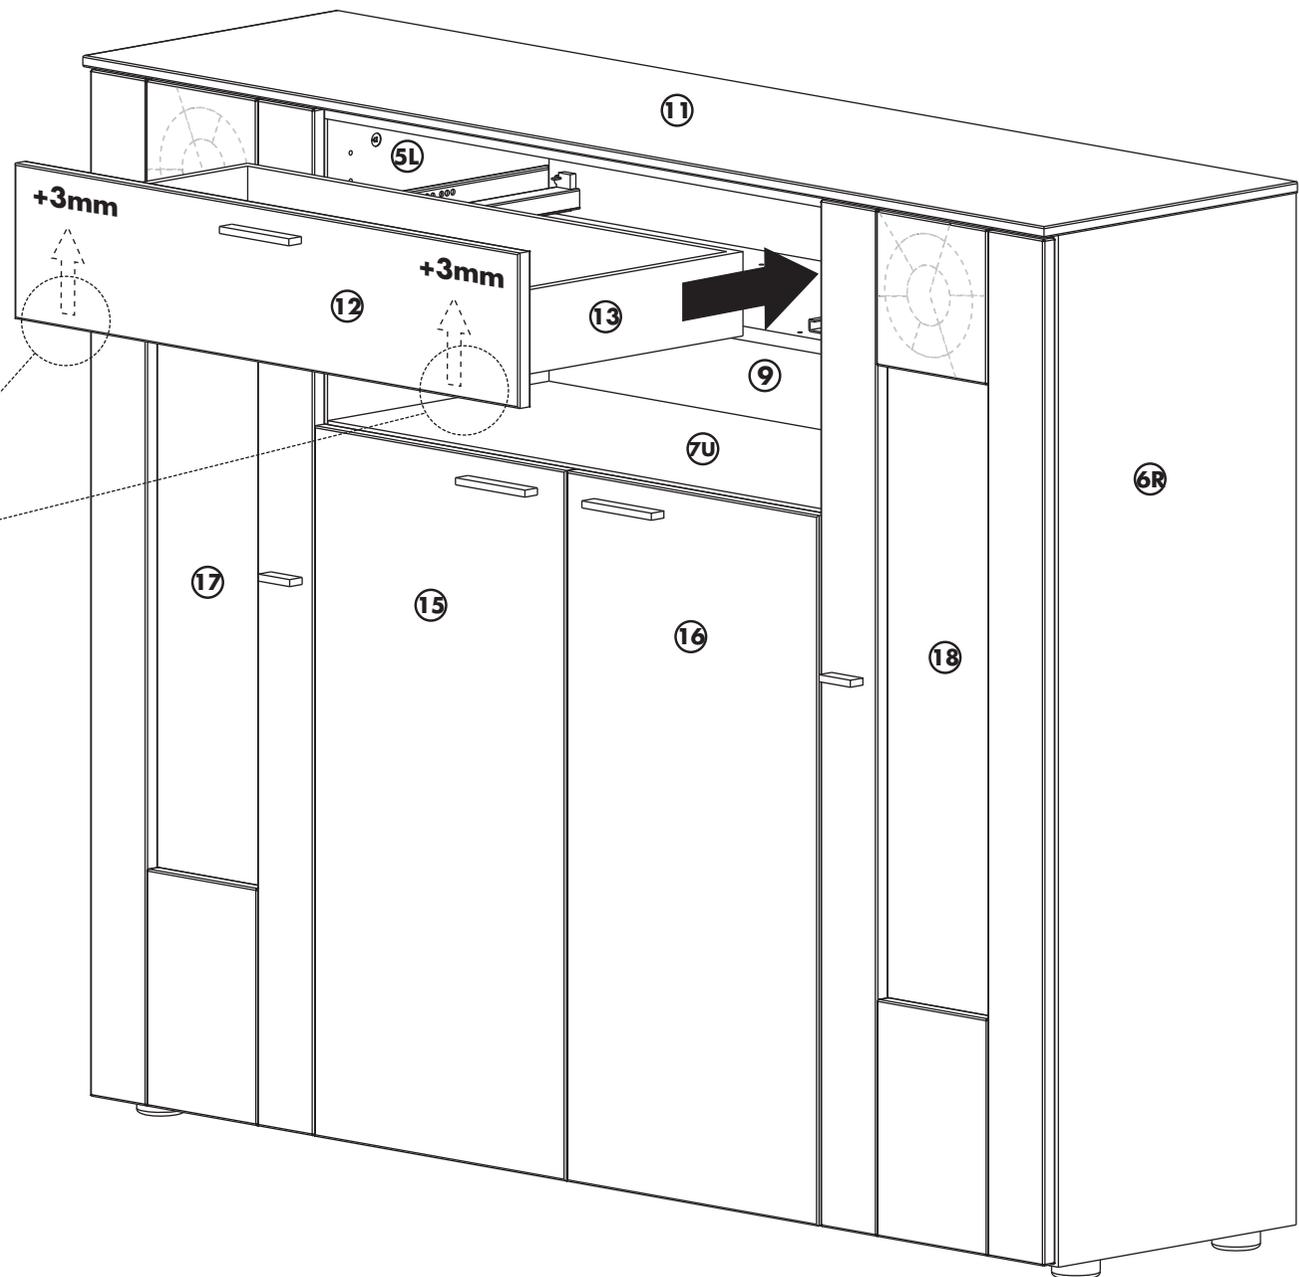

**Verriegelung
Lock**

1.

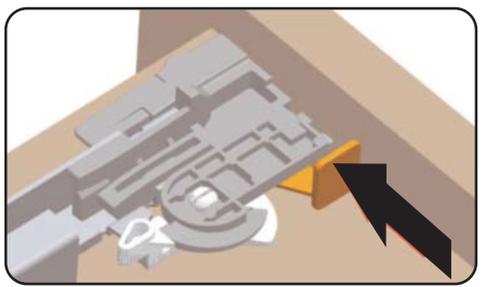

**Höhenverstellung
Height adjustment**

2.

