


(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) NAPUTCI ZA MONTAŽU  
(E) INSTRUCCIONES DE MONTAJE


(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) KÖZGYŰLÉS UTASÍTÁSOK  
(SLO) ASSEMBLY INSTRUCTIONS  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS

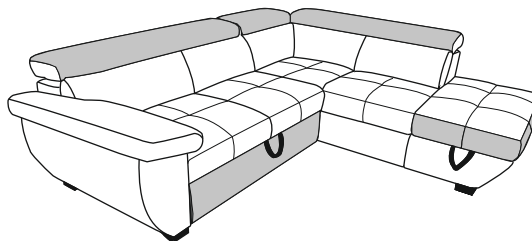



## “SPEEDWAY” 2F-OTM/BK KLEIN “SPEEDWAY” OTM/BK-2F KLEIN



2/2




4

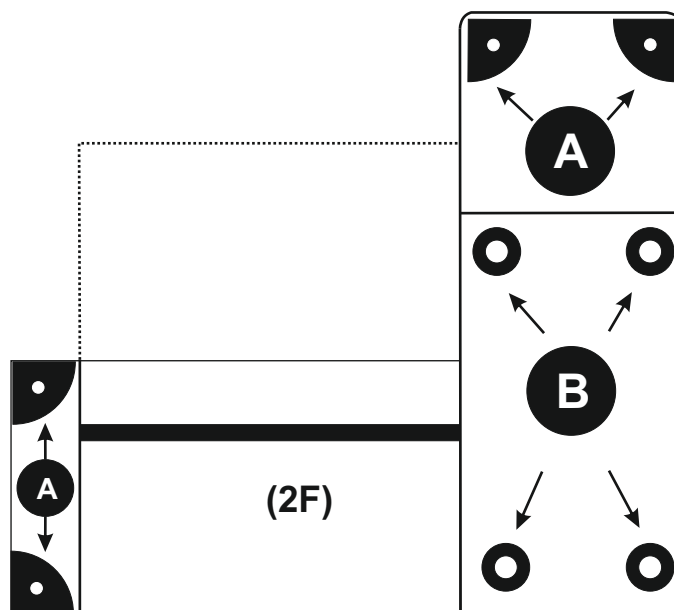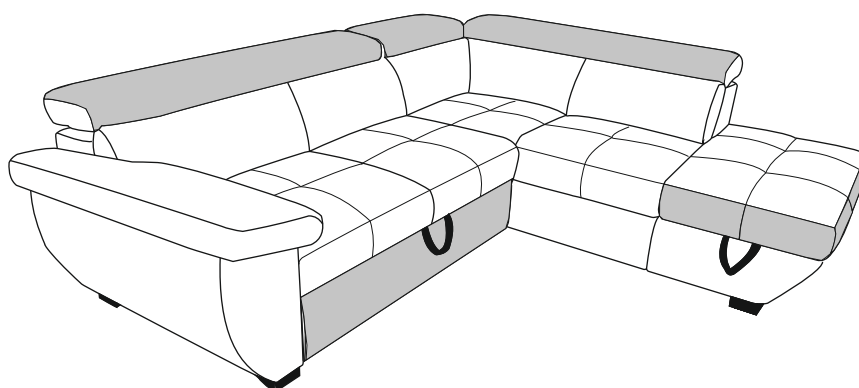


A


1

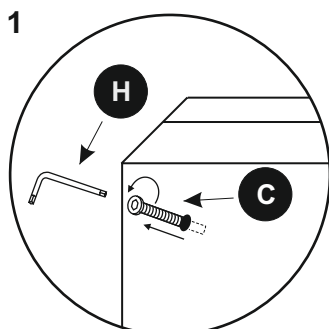


2

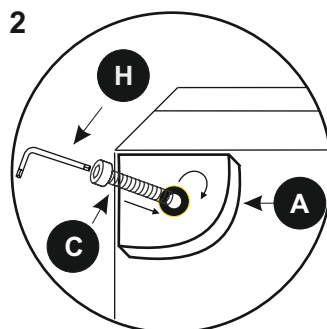

B

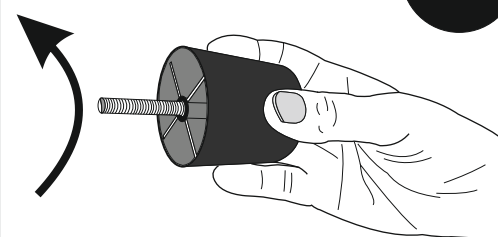

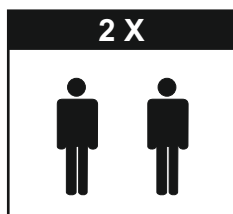


(D) AUFBAUANLEITUNG  
(NL) HANDLEIDING VOOR DE MONTAGE  
(TR) MONTAJ TALIMATI  
(RO) INSTRUCTIUNI DE ASAMBLARE  
(F) INSTRUCTION D'ASSEMBLAGE  
(CZ) POKYNY K MONTÁŽI  
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
(HR) NAPUTCI ZA MONTAŽU  
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS  
(PL) INSTRUKCJA MONTAŻU  
(RU) Инструкция по монтажу  
(I) PROCEDURA DI ASSEMBLAGGIO  
(SK) POKYNY K MONTÁŽI  
(HU) KÖZGYŰLÉS UTASÍTÁSOK  
(SLO) ASSEMBLY INSTRUCTIONS  
(S) MONTERINGSANVISNING  
(LT) DIEGIMO INSTRUKCIJOS



## “SPEEDWAY” 2F-OTM/BK KLEIN “SPEEDWAY” OTM/BK-2F KLEIN

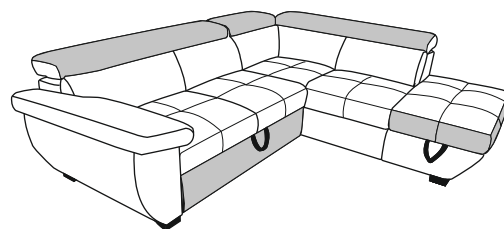

1/2

