






TOSCANA 1A/1F oldalak 1/6 old.



fúró Ø5



45min

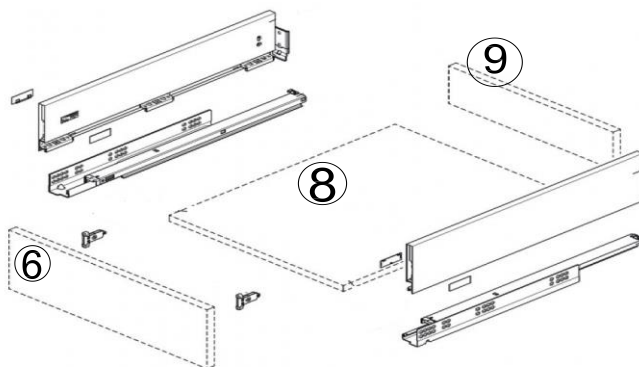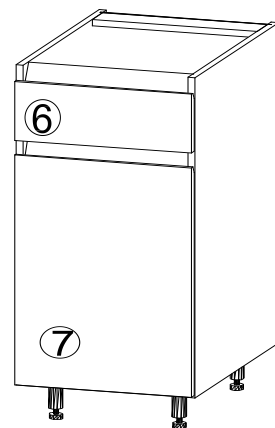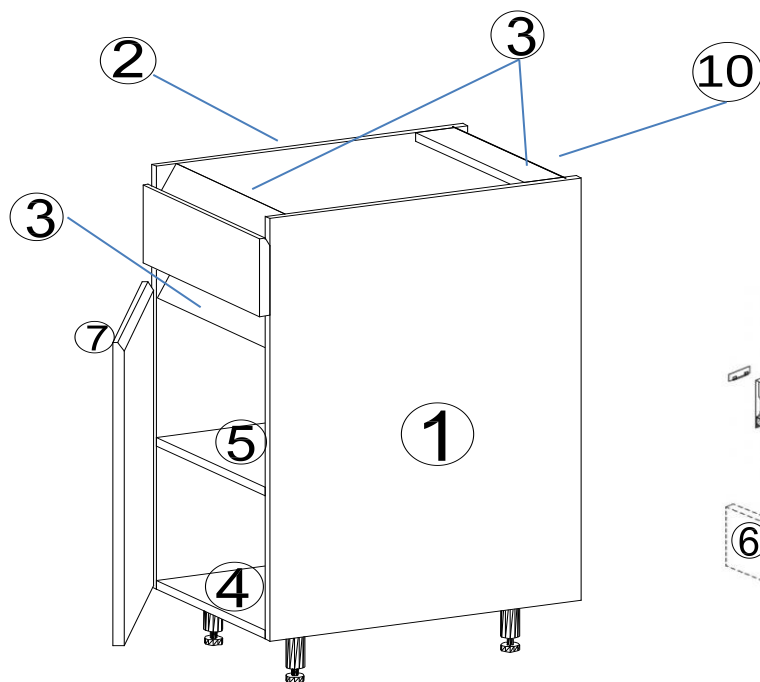

	40	60	DB
1-2	770X560	770X560	2X
3	367X70	567X70	3X
4	367X536	567X536	1x
5	367X505	567X505	1X
6	142X394	142X594	1X
7	553X394	553X594	1X
8	292x445	492x445	1X
9	278x70	478x70	1X
10	764X380	764X580	1X

DD 55
4x



KO 01 8*30
12x



KN 03 7*50
10x



PL 12
10x



PP 01
4x



PN 01
2x



PD 01
2x



KL 01 4 mm
1 X



DR 27 3,5*16
36x



DR 25 4*25
6X



DR 20 3,5*20
4X



KV 01 1,5*20
30x



EU 01 6*11
4x



STR-SIN
2 X



STR-KAVA
2 X




STR-HAT
2 X



STR-TAK
2 X





PL00
2X









DD20
2X



1.






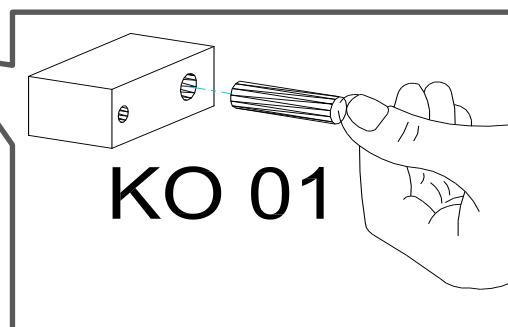
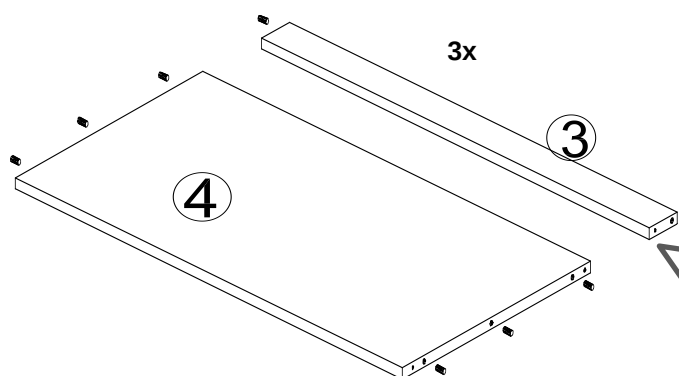


2.

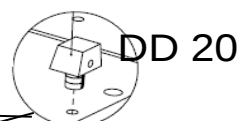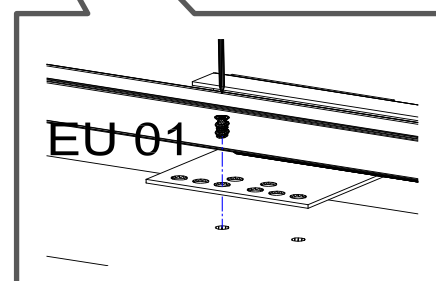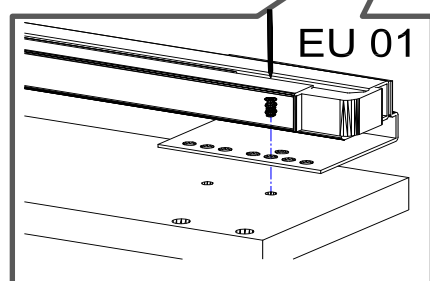
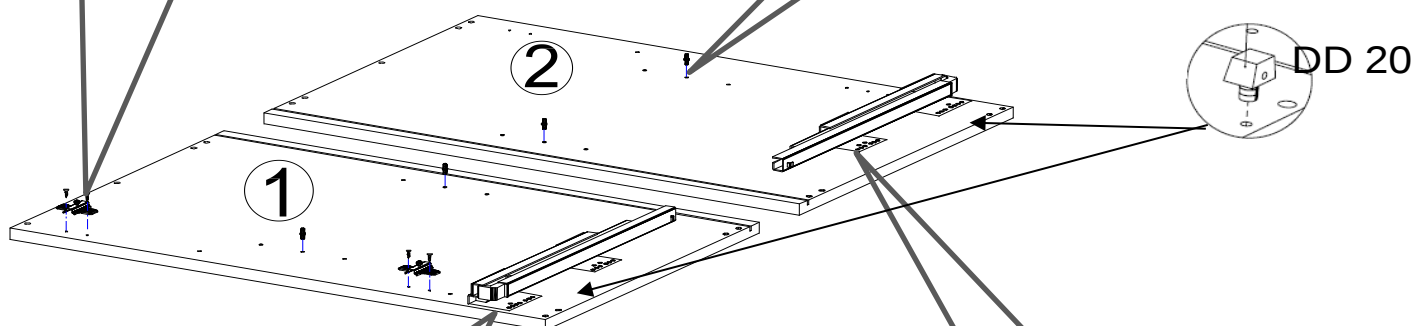
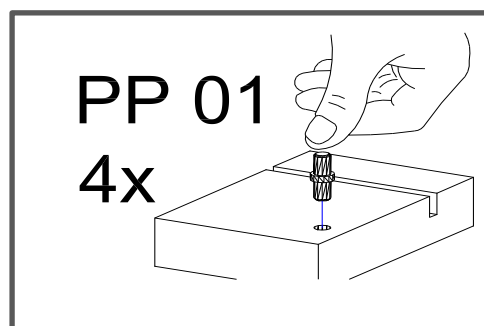
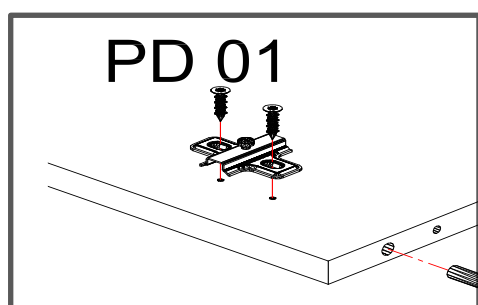


4.


STR-KAVA

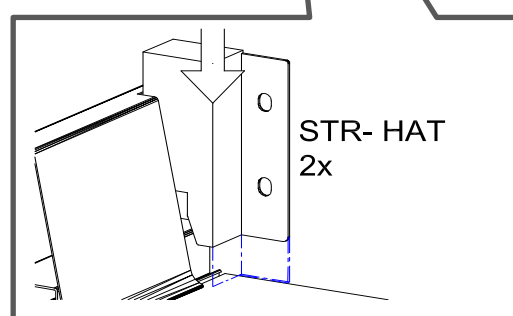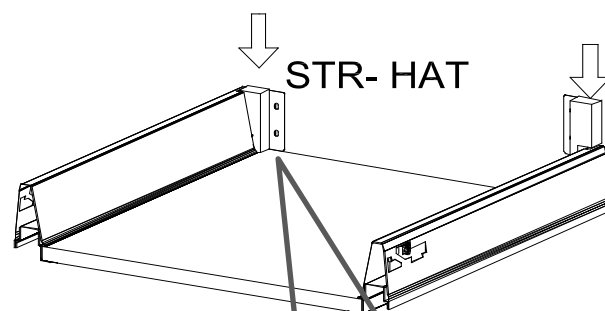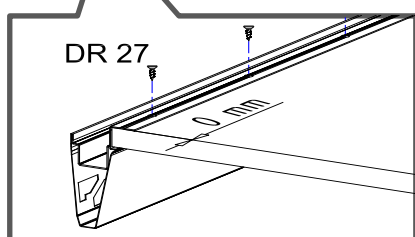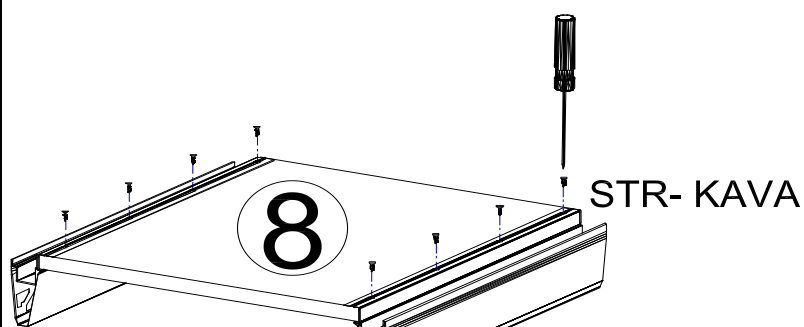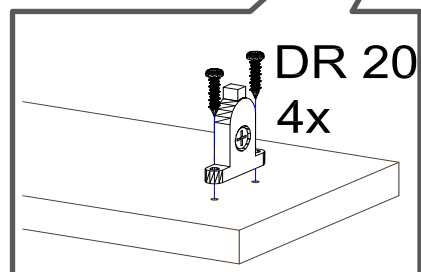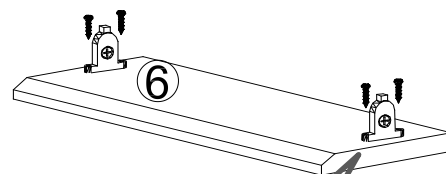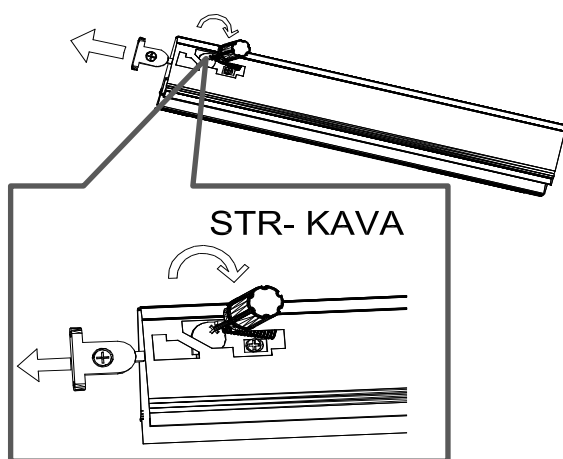


5.

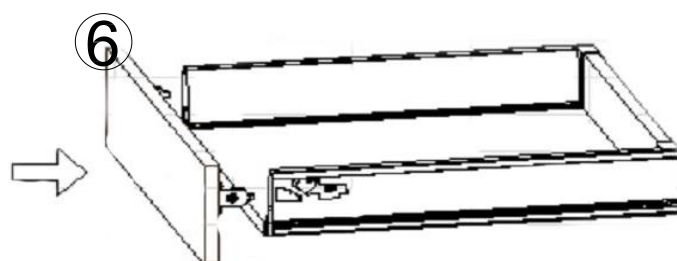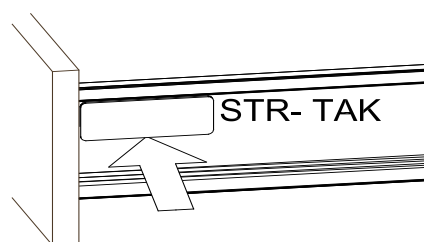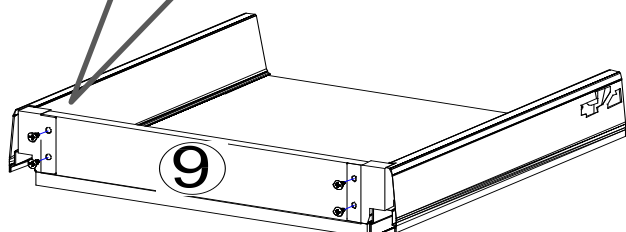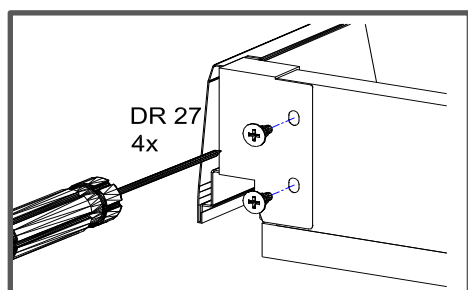


6

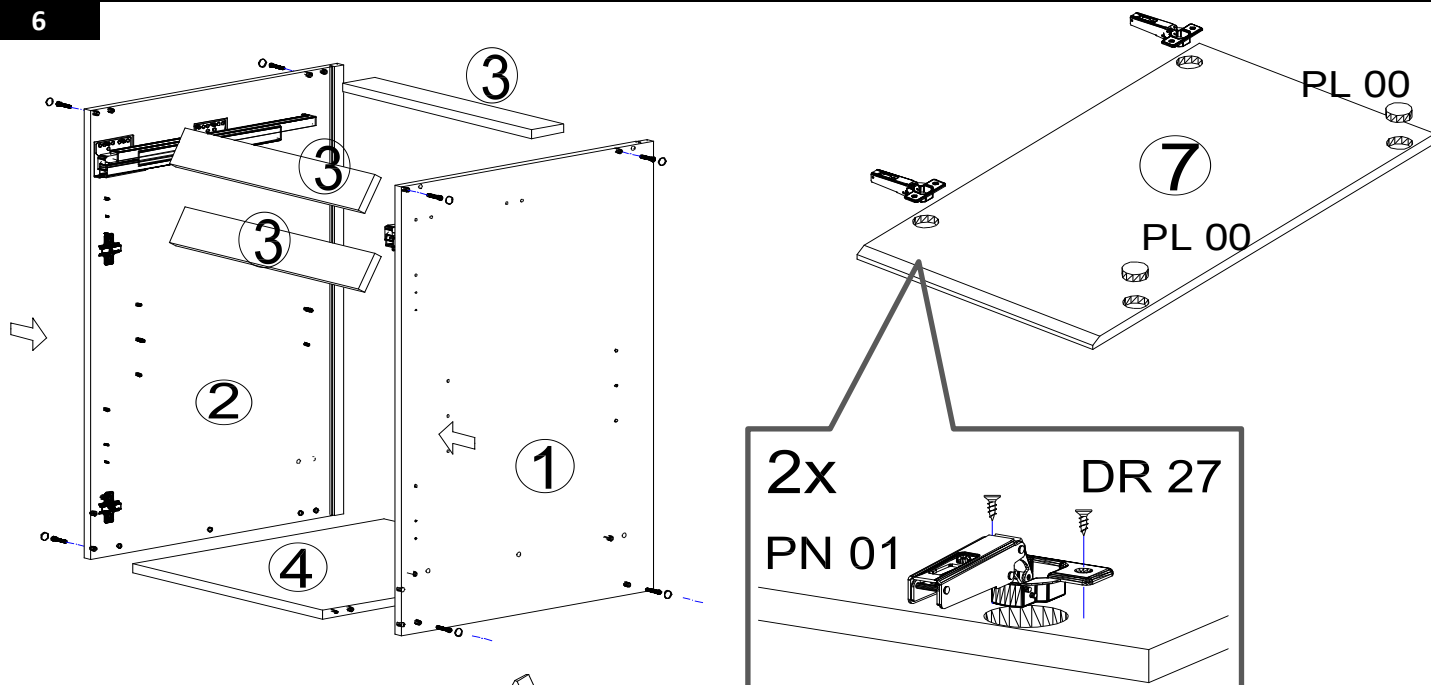



7

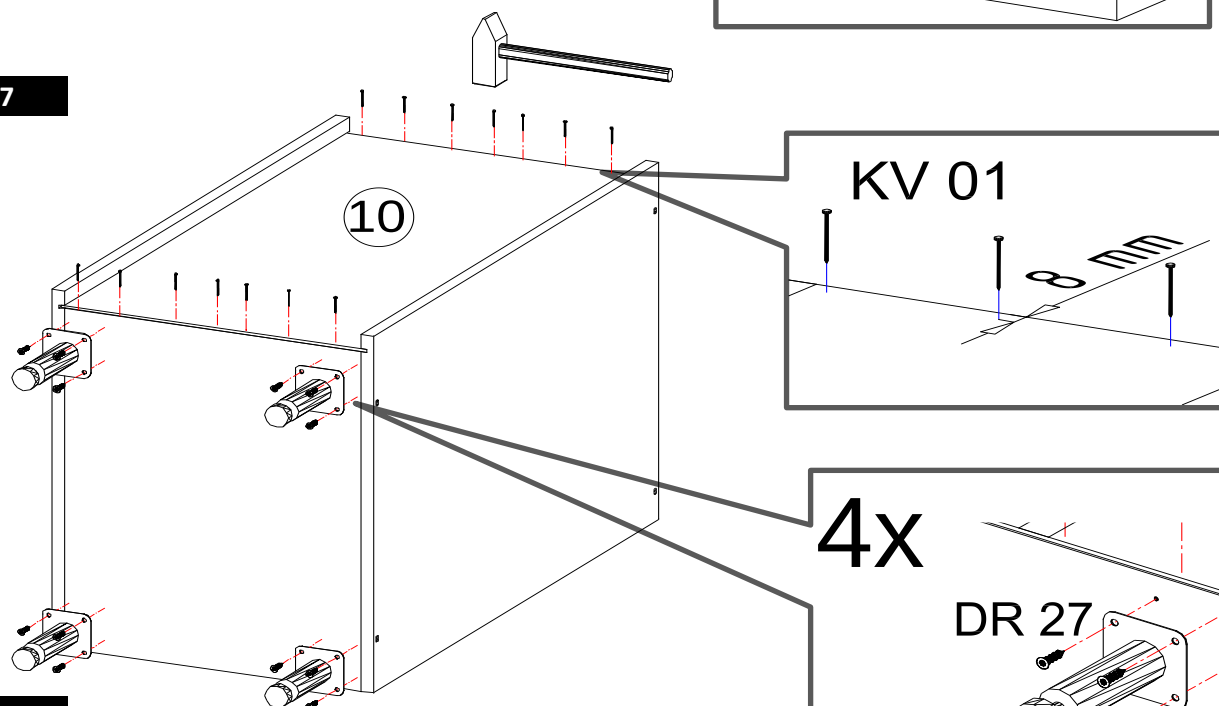



8.

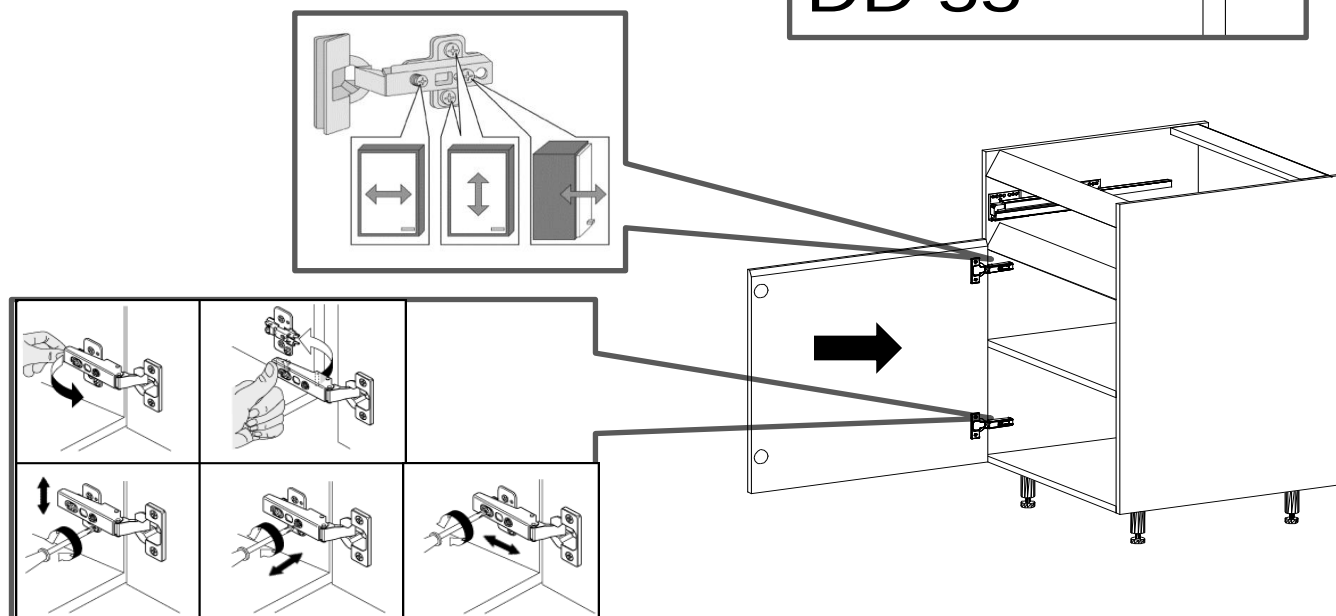

9.


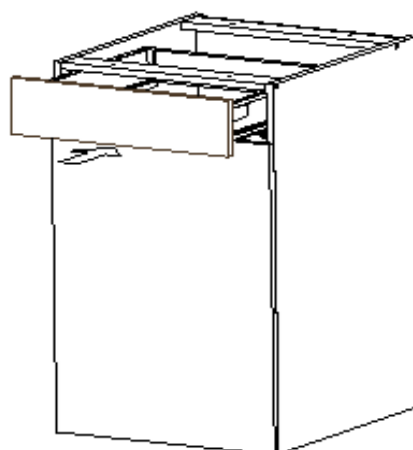
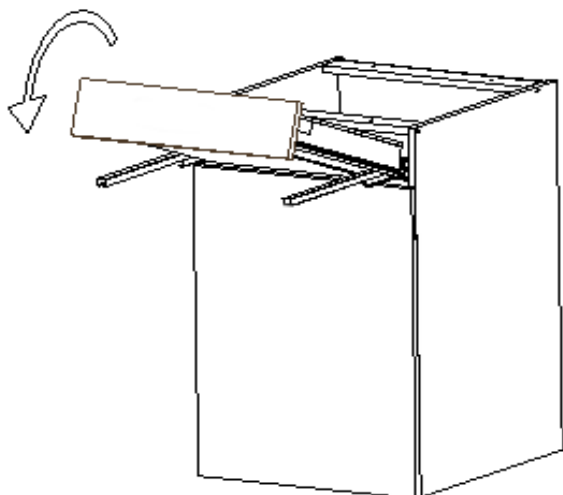


10.

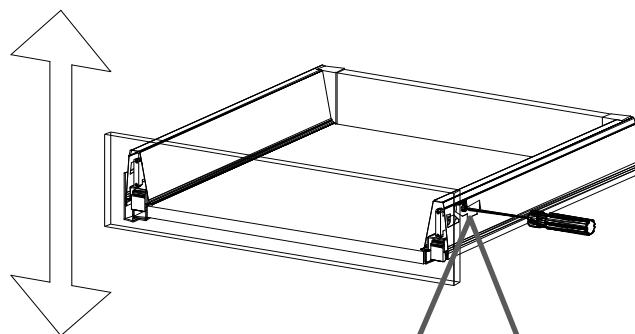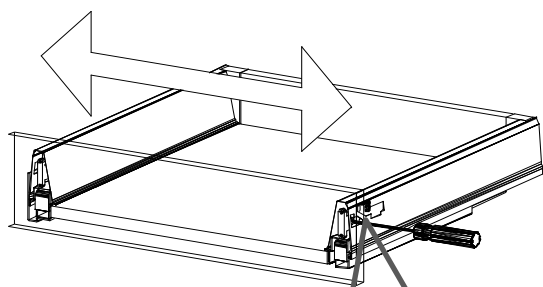

11.

DD 20
DR 25

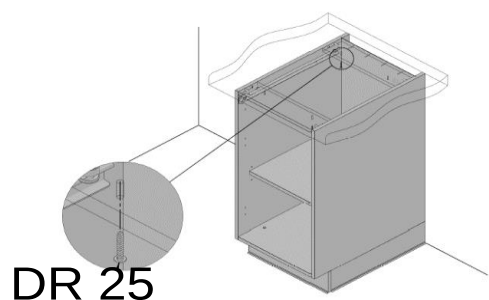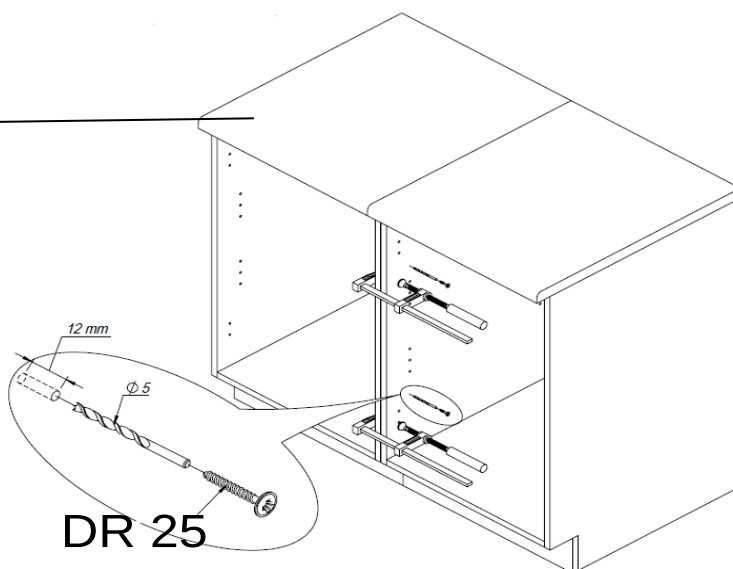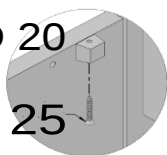

DR 25

Az elemek megfelelő stabilitása és baleset megelőzés céljából, az elemeket célszerű egymáshoz rögzíteni egy rejtett pozícióban a (DR 25 4*25) facsavarral!