



Garderobe

WL6.902

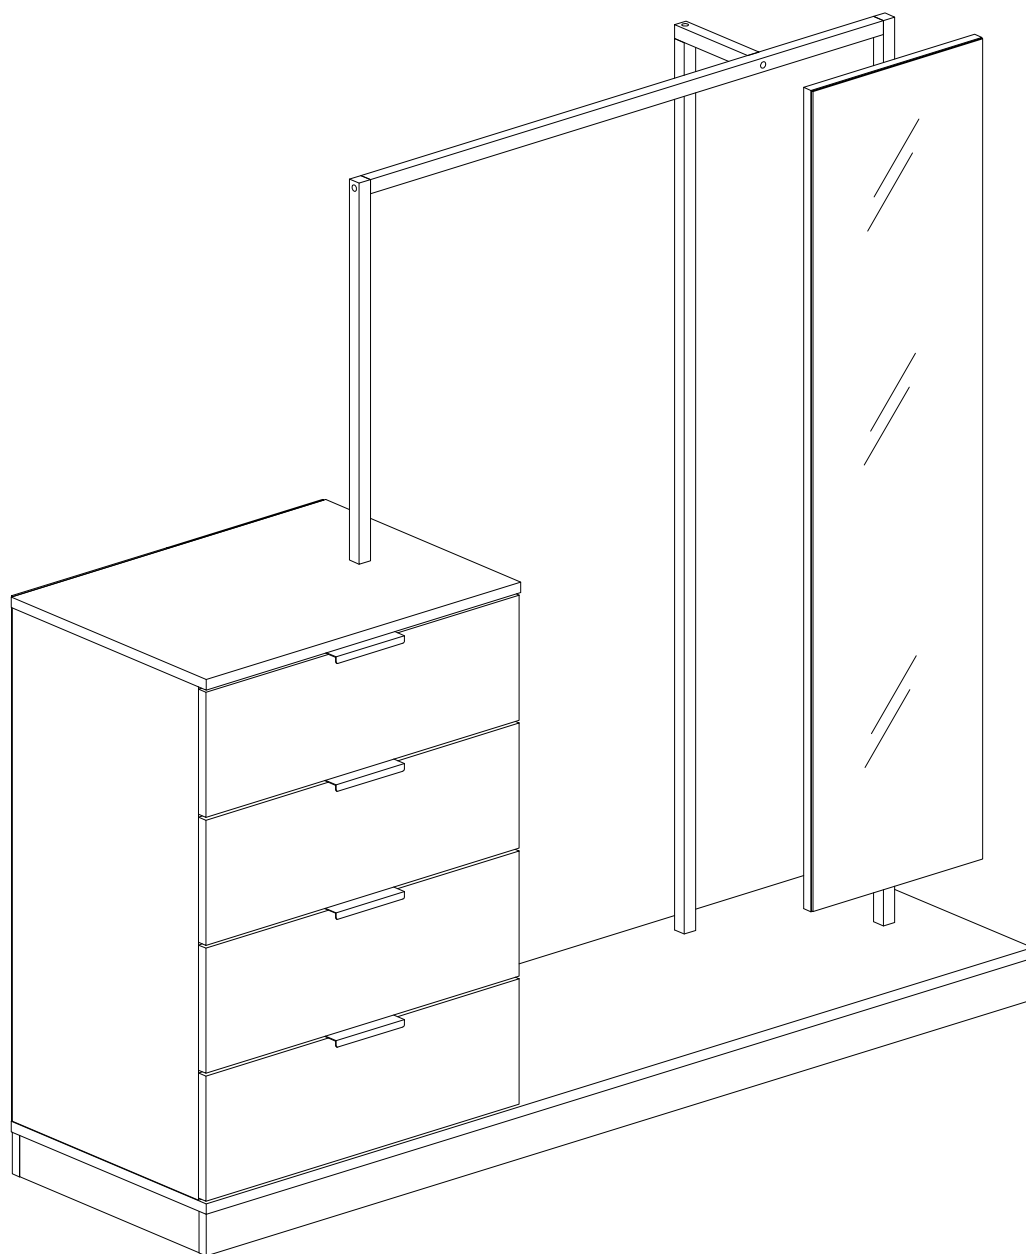


WOHNLING®
Möbel zum Wohlfühlen

Parts List

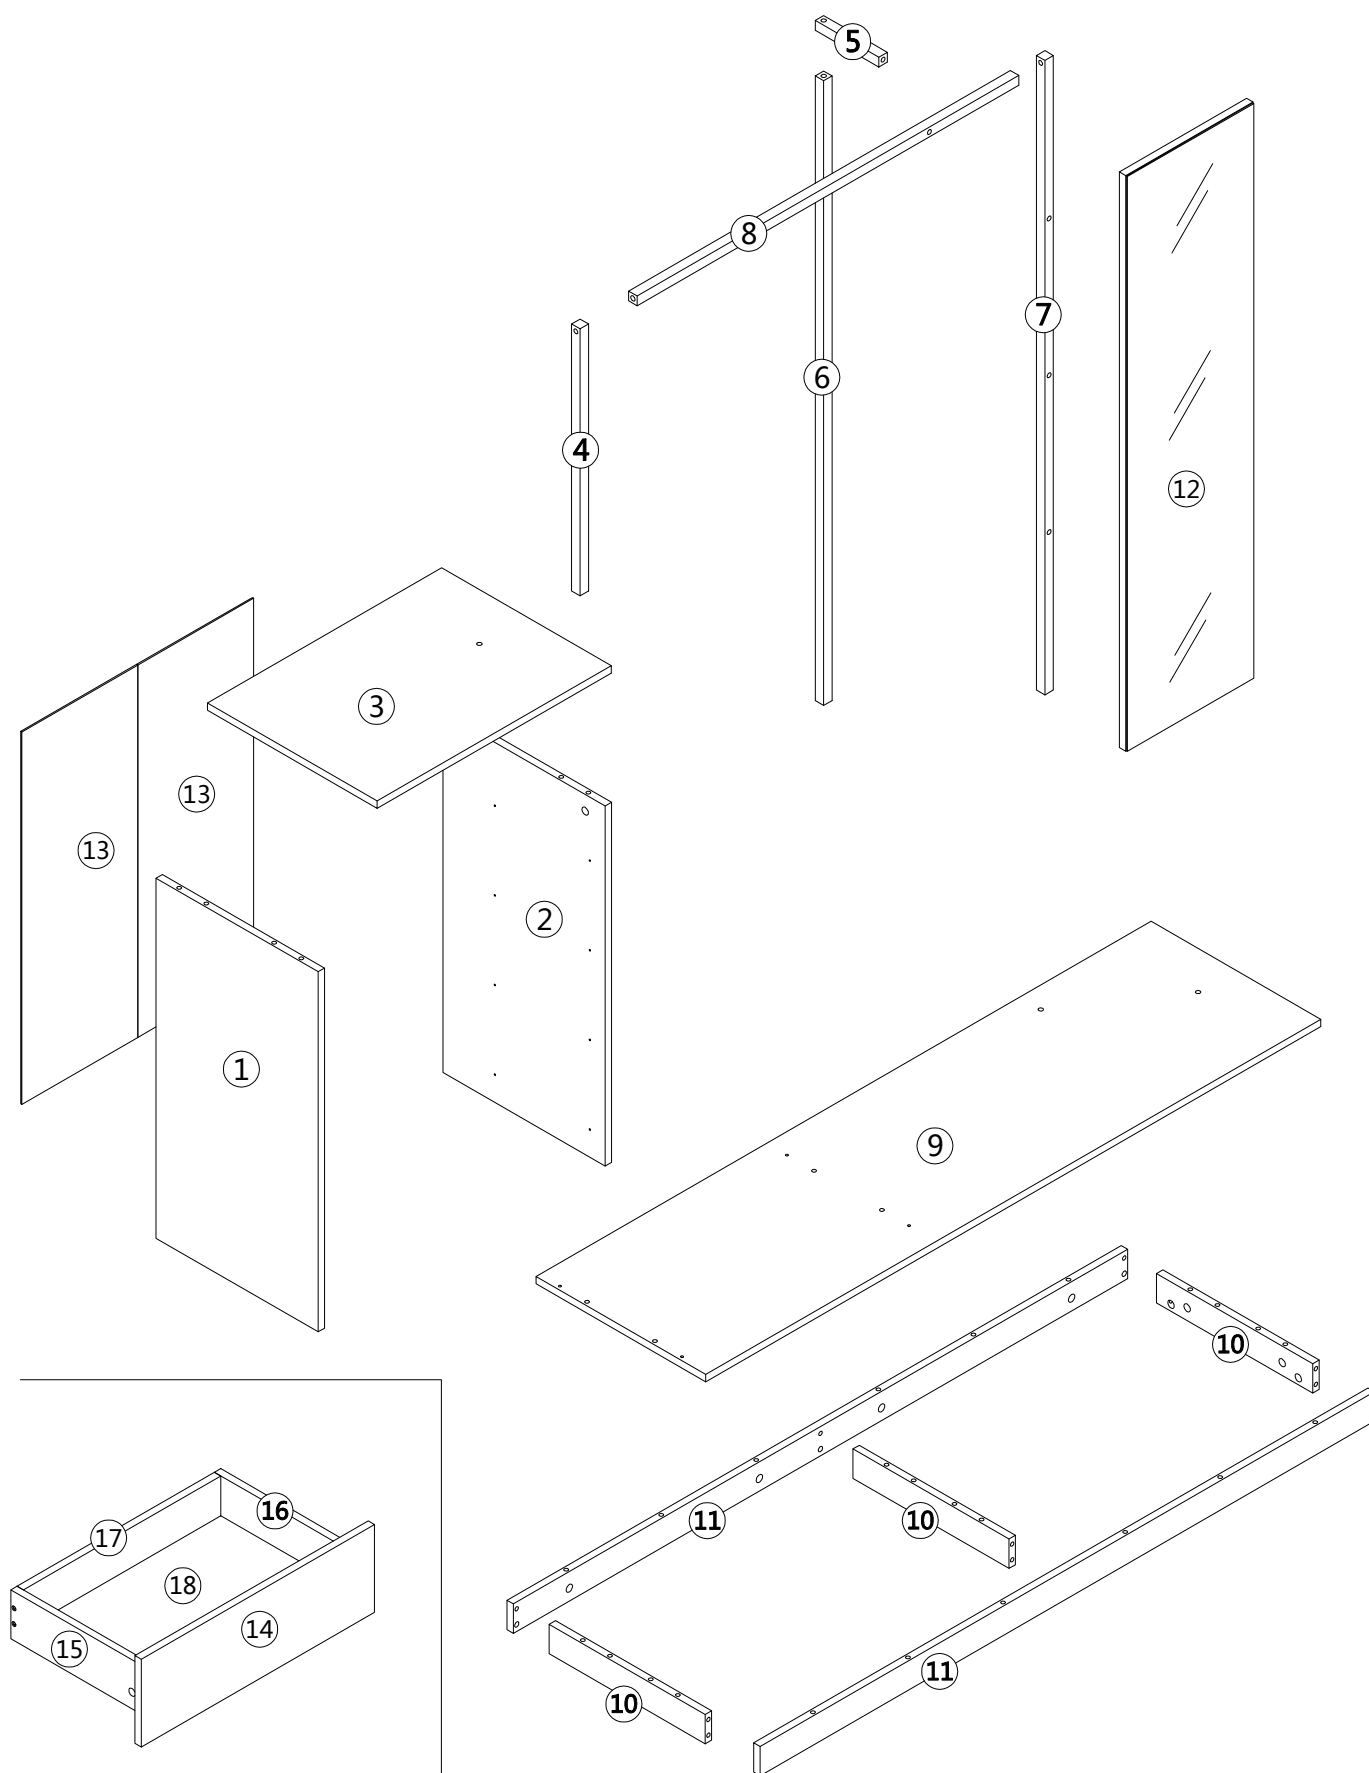

x 4


Hardware

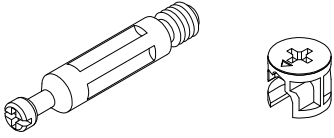

A1


A2

A x 40sets

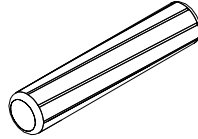


8 x 40MM

B x 24pcs




3.5 x 14MM

C x 40pcs

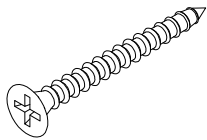


3.5 x 35MM

D x 20pcs

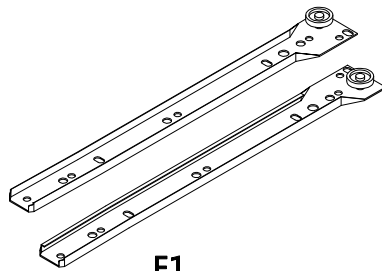


E1

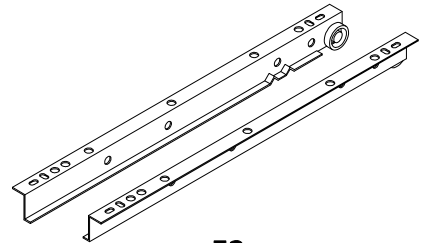


E2

E x 4sets

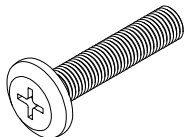


M6 x 30MM

F x 3pcs

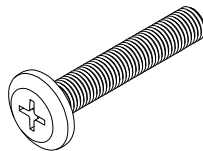


M6 x 35MM


G x 7pcs

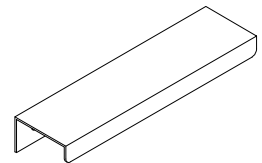


H x 4pcs

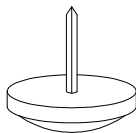

J x 9pcs

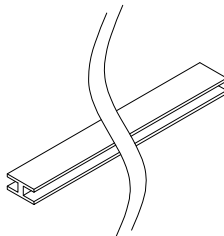


K x 1pc

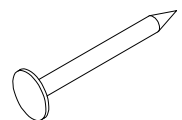

L x 22pcs




Step 1

A1 x 4 B x 8 C x 16 E1 x 8

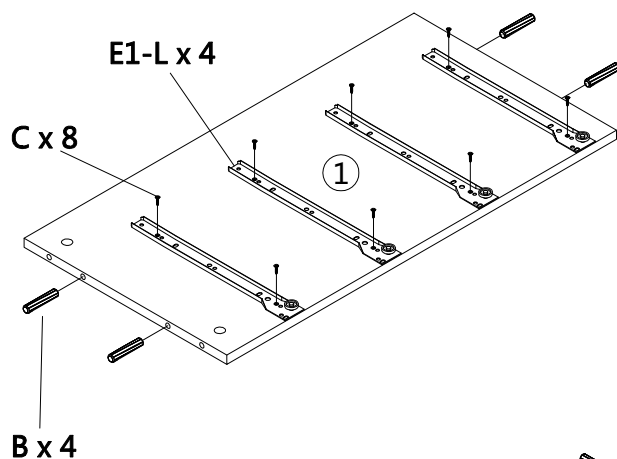





REMARK:

When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

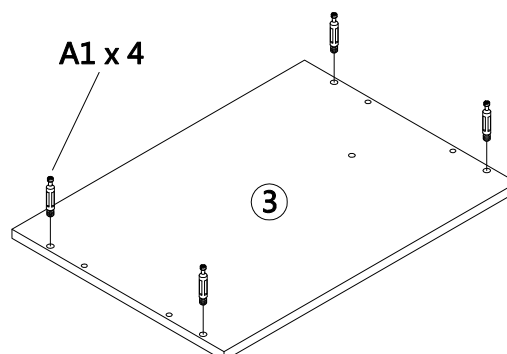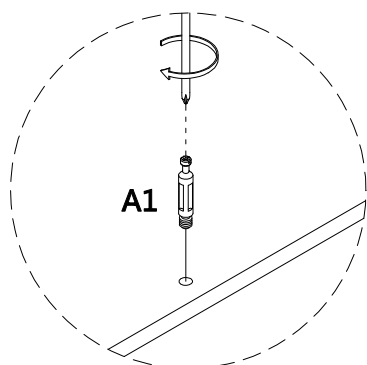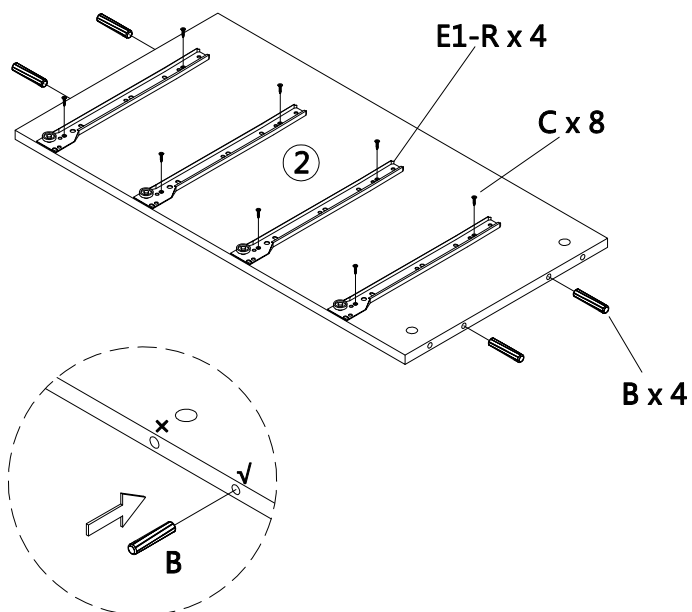


Step 2

A2 x 4 D x 4

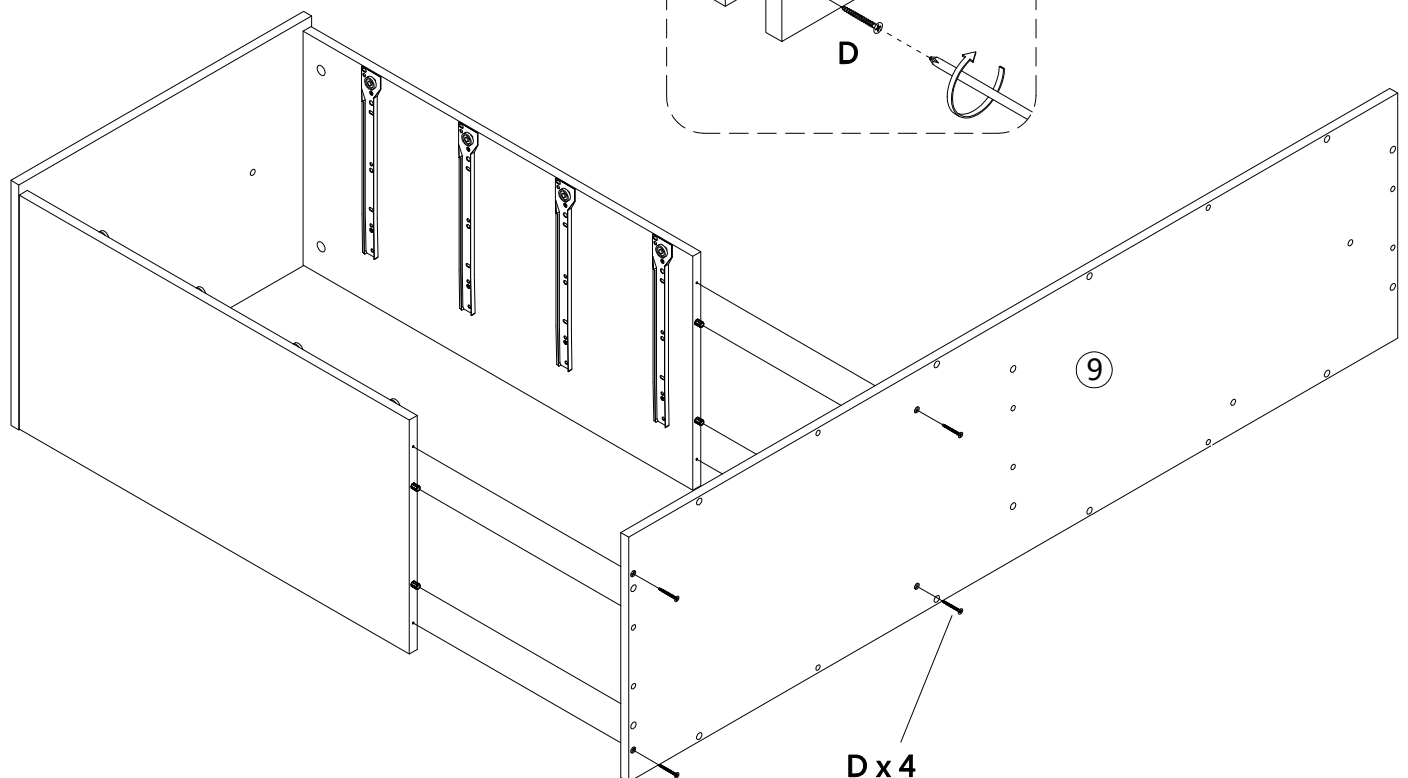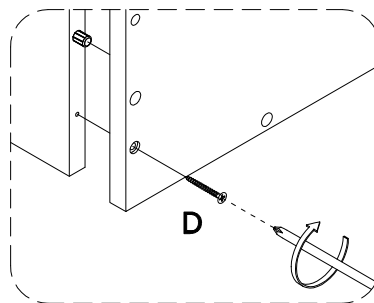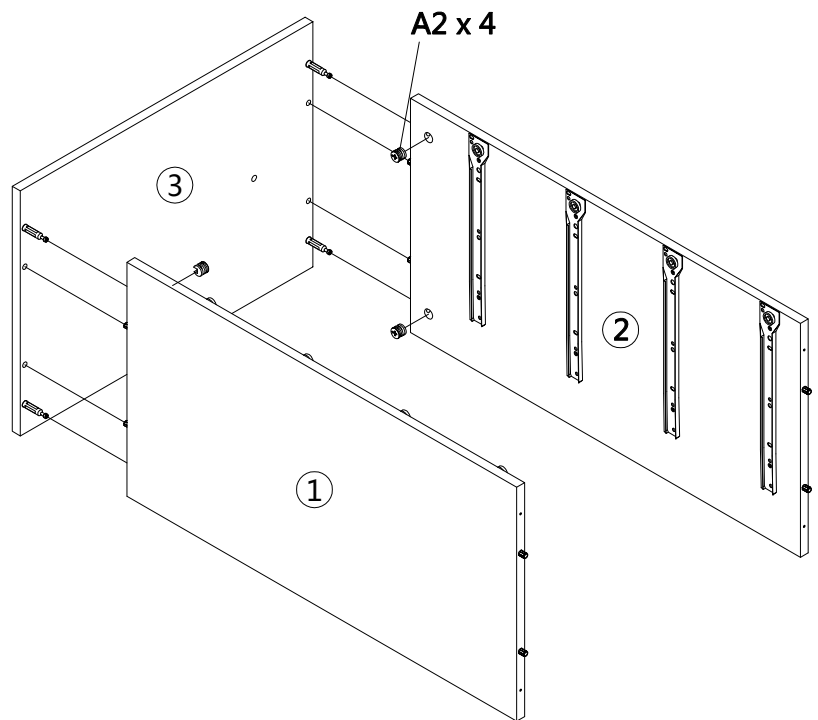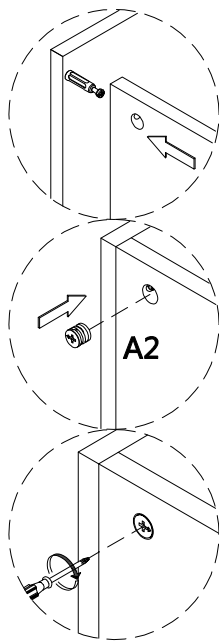


Step 3

A1 x 14

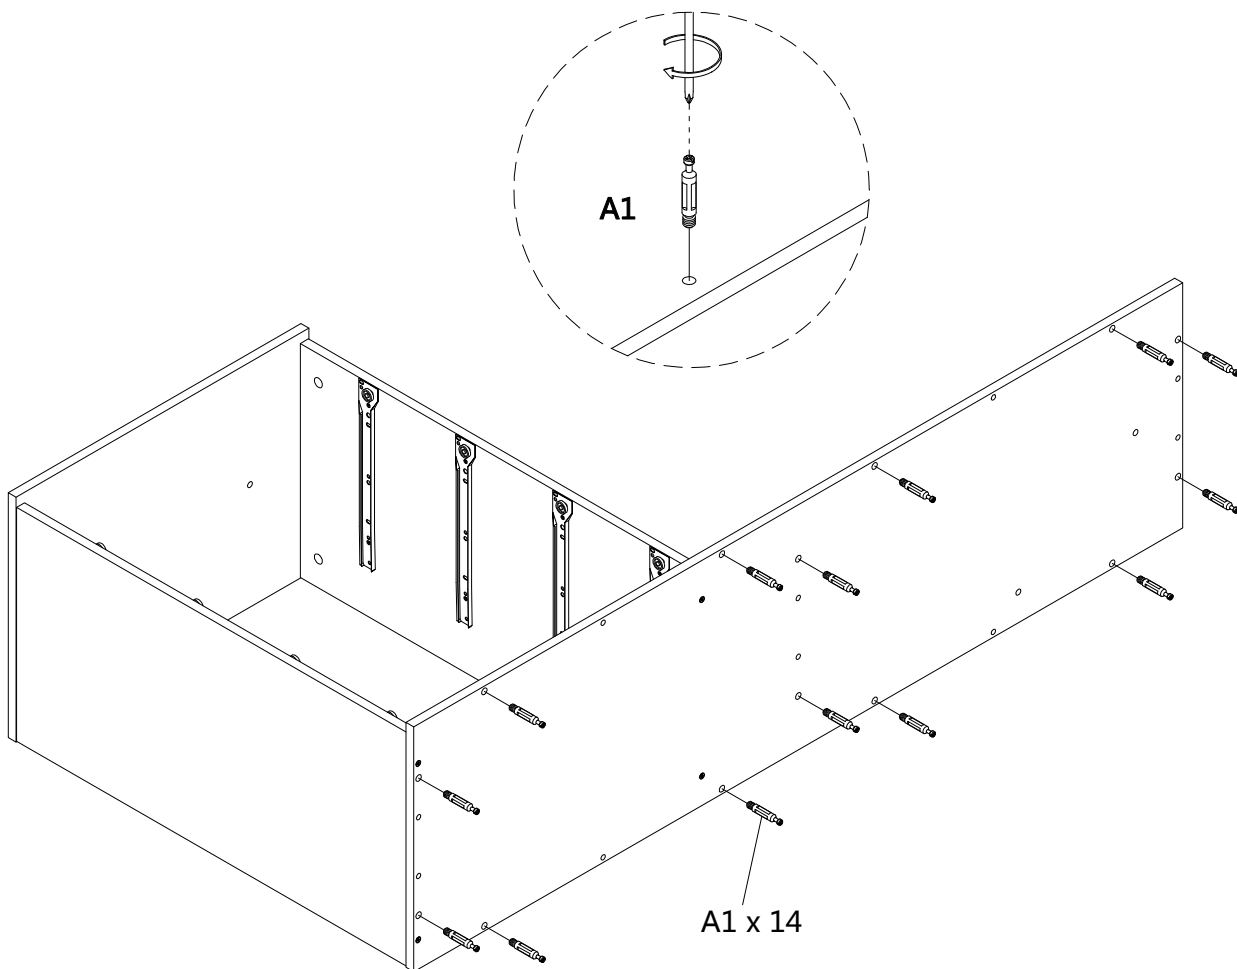





Step 4

A1 x 6 B x 16

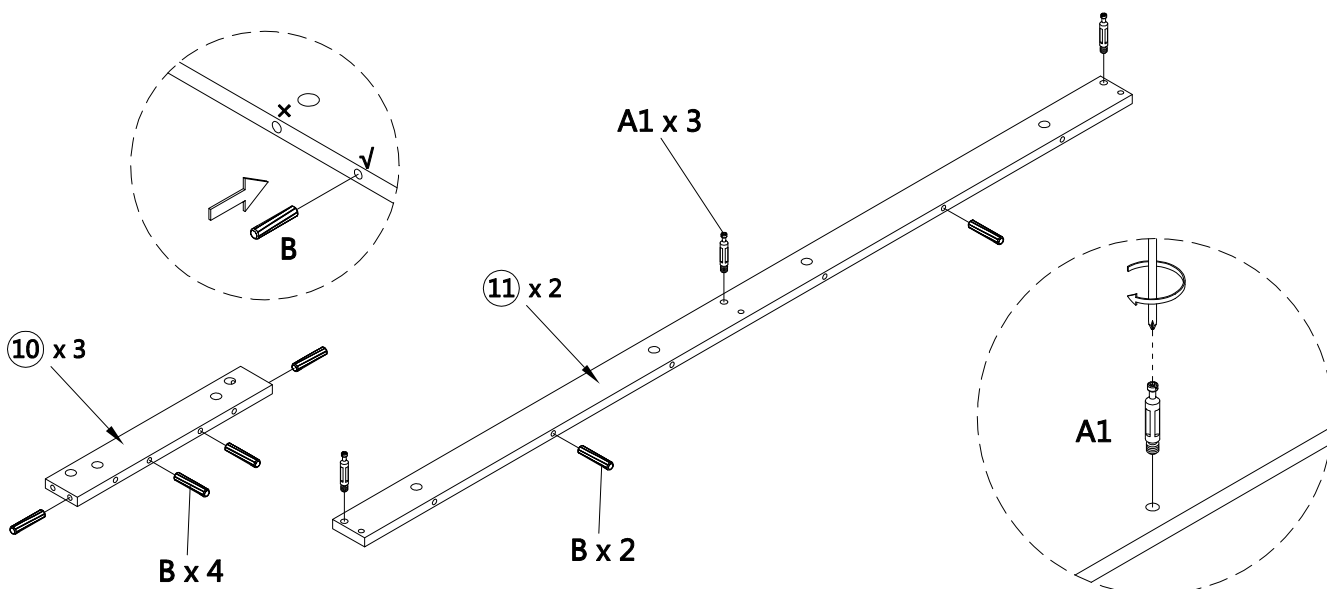



Step 5

A2 x 6 J x 9

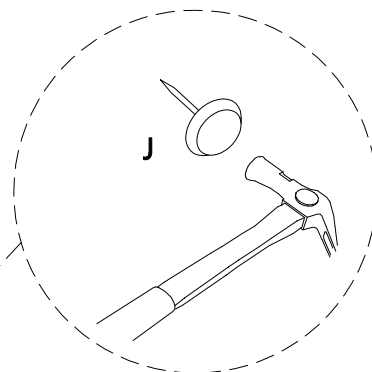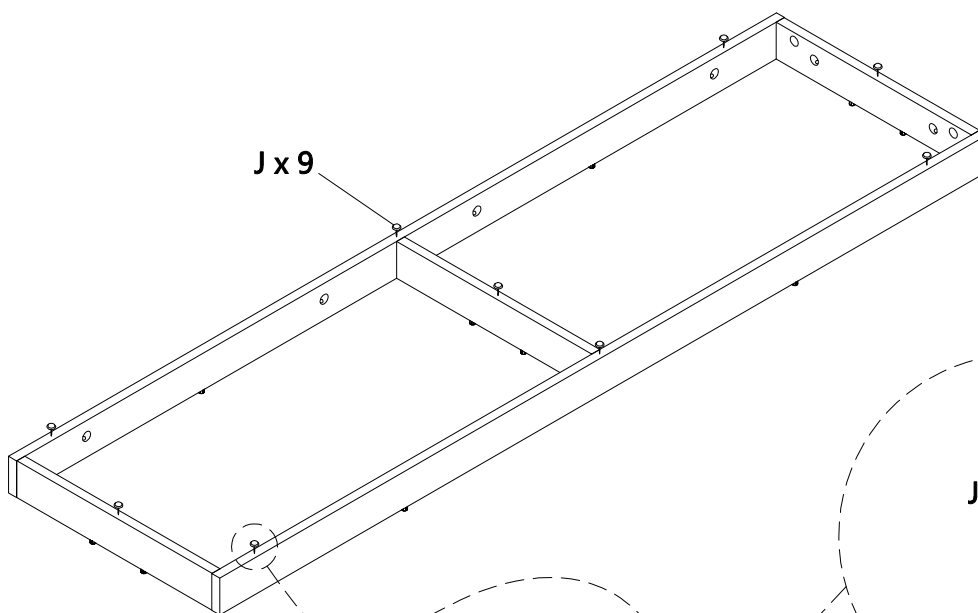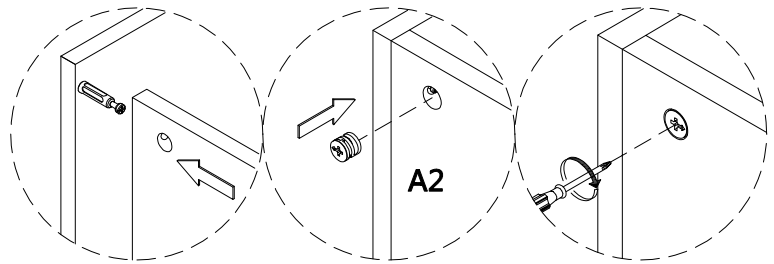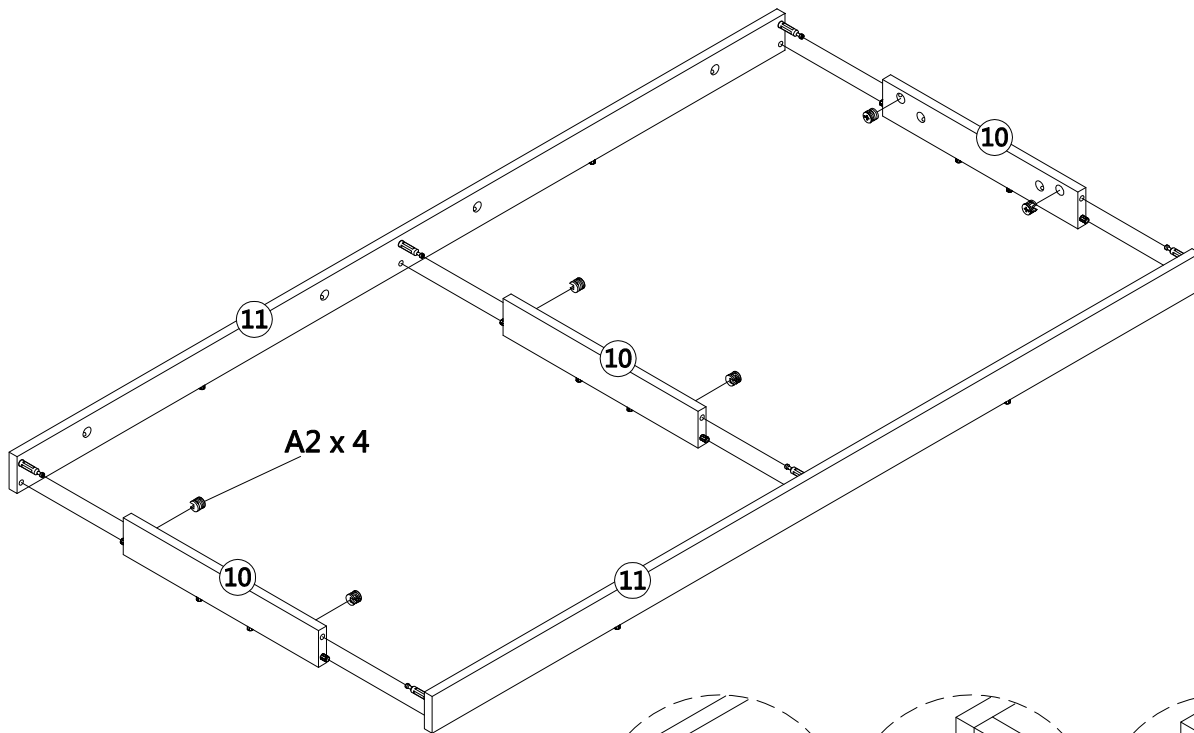


Step 6

A2 x 14

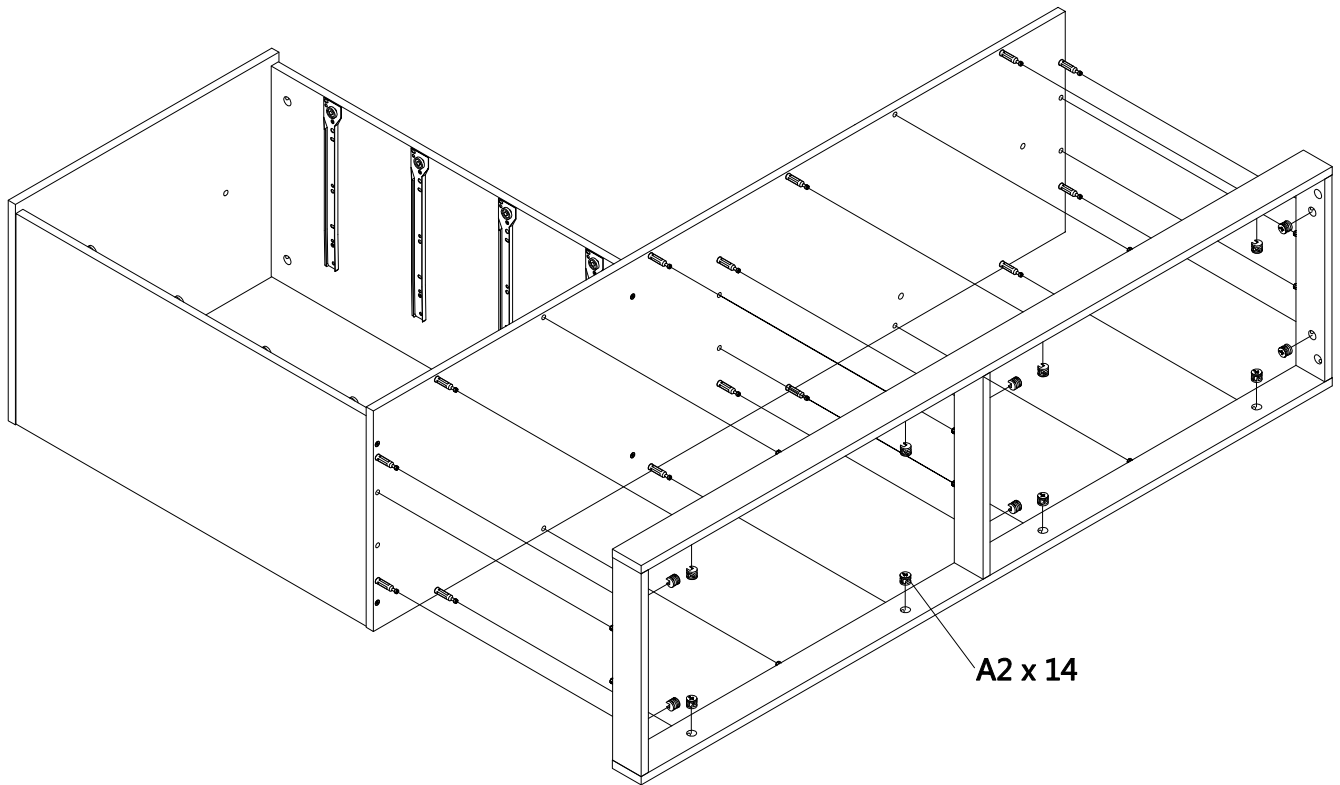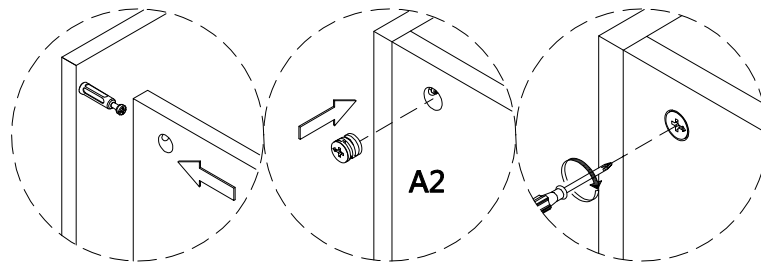



Step 7

G x 1

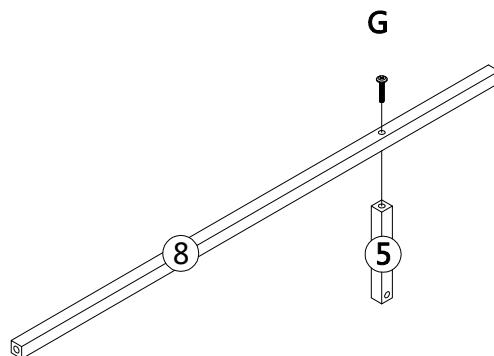





Step 8

G x 6

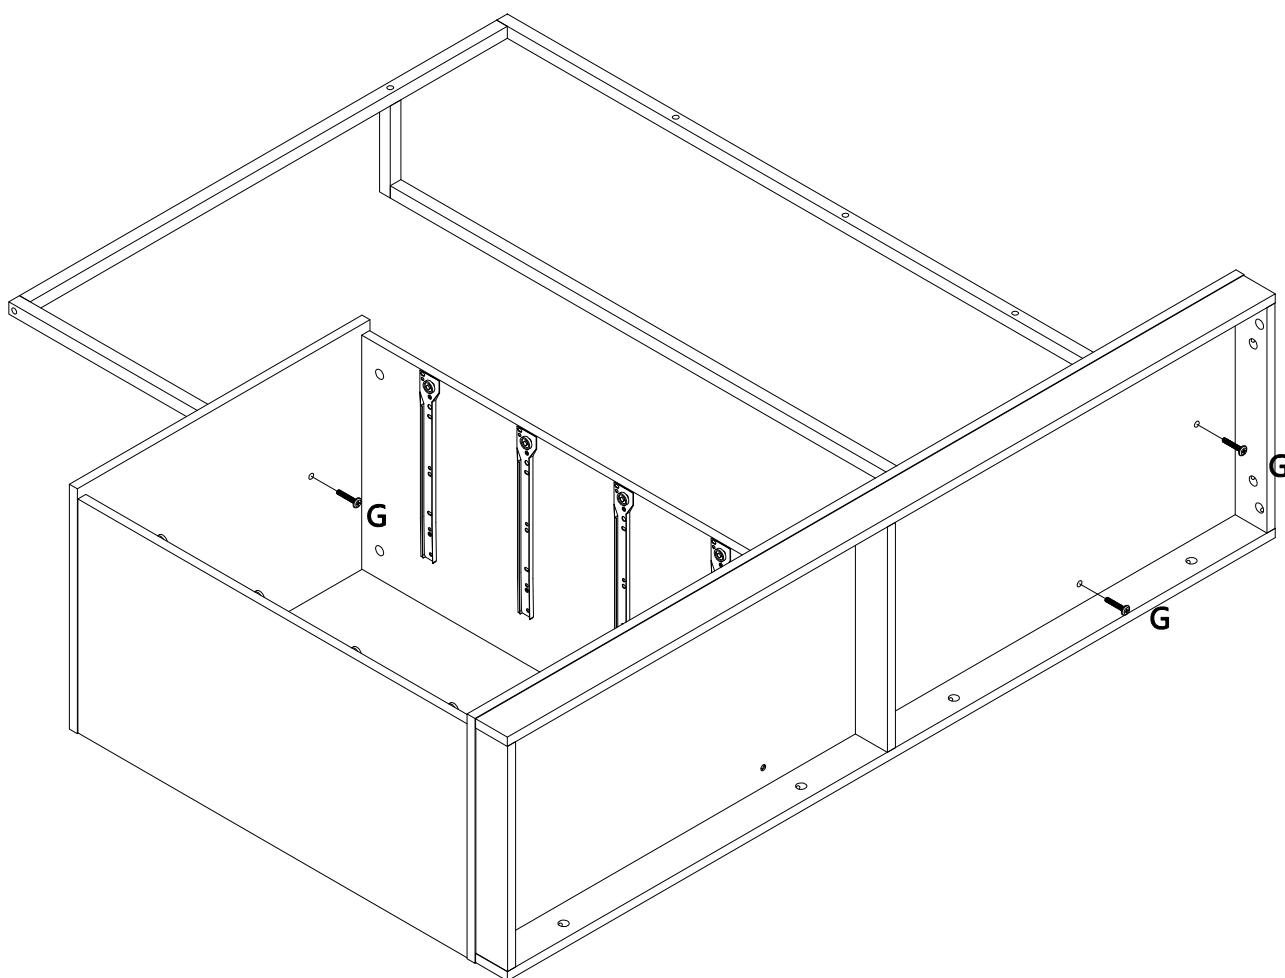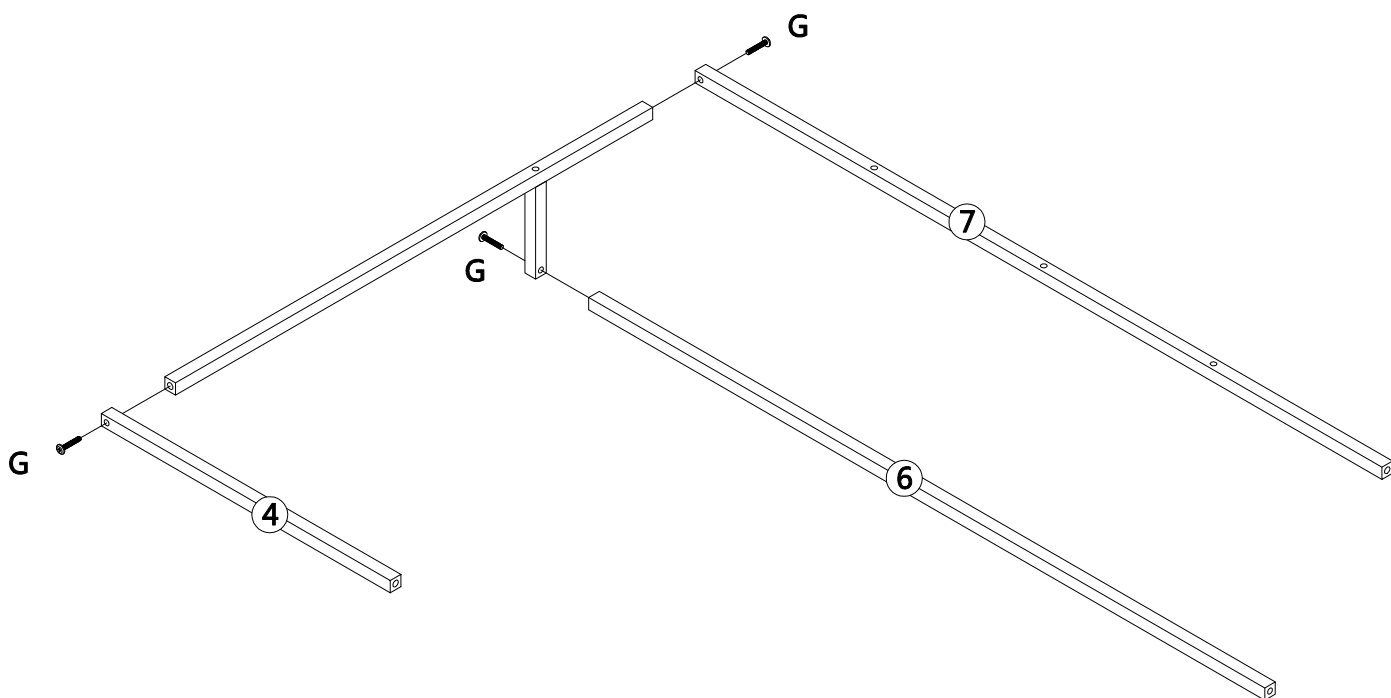

Step 9










F x 3 K x 1 L x 22

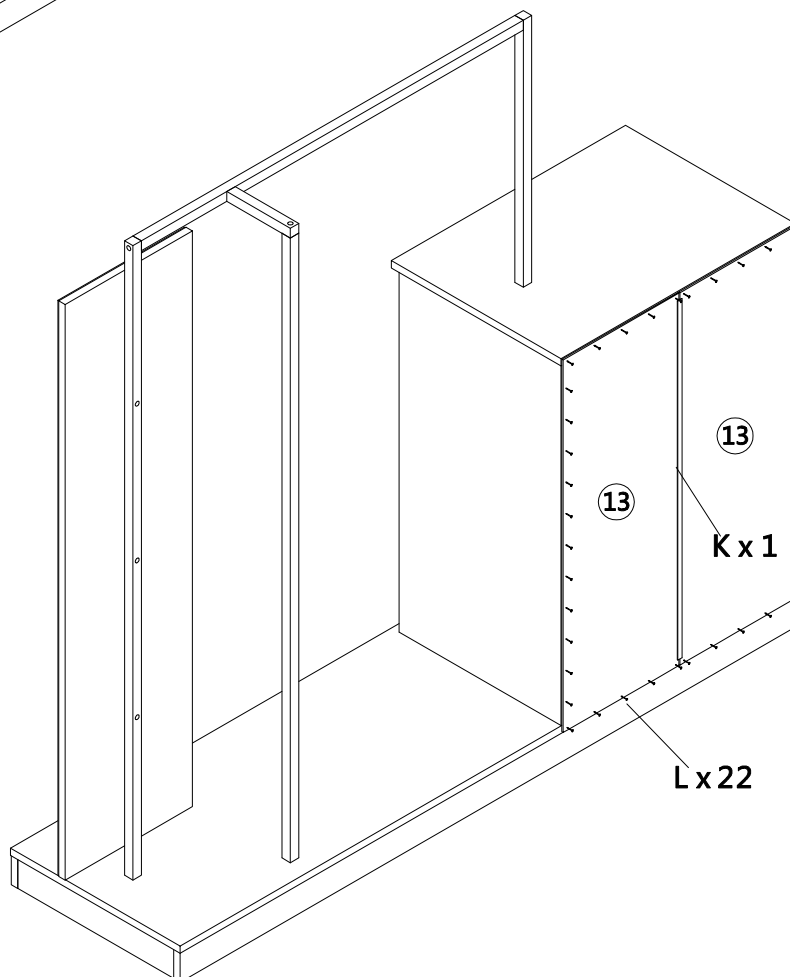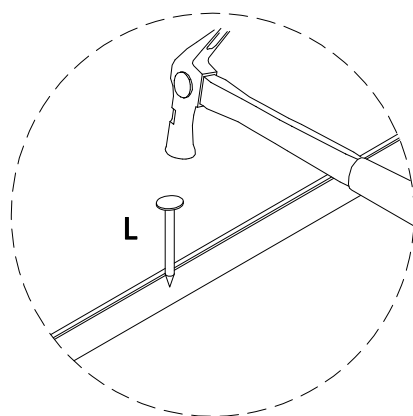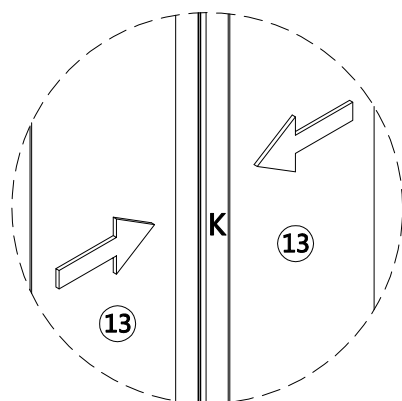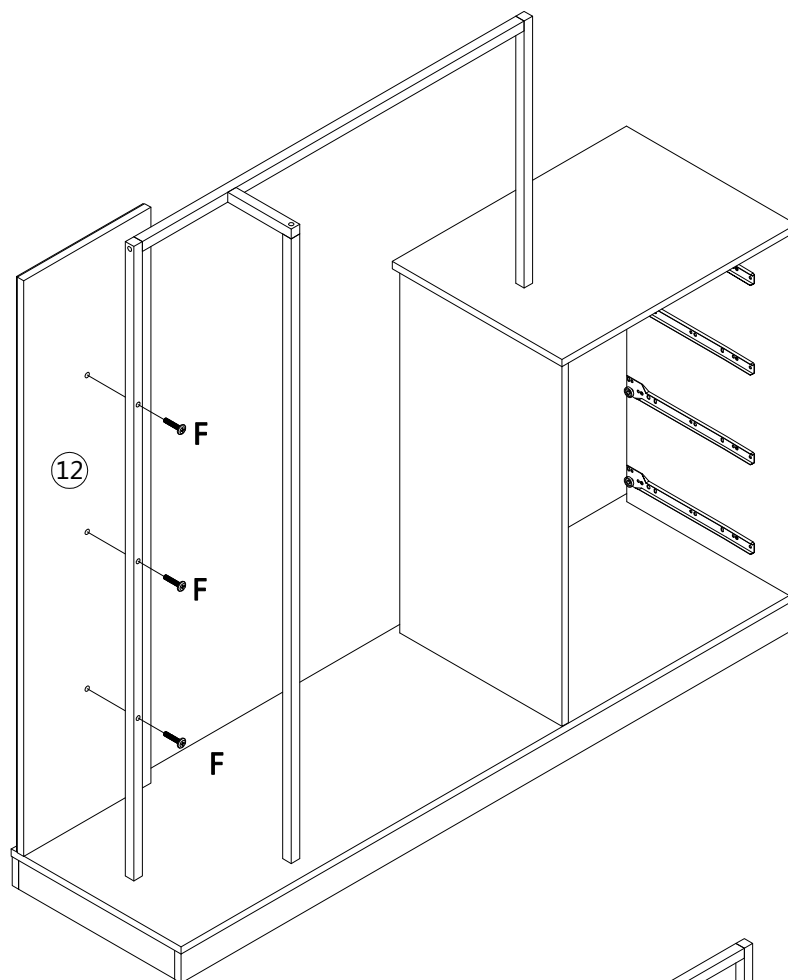

Step 10

A x 16 C x 24 D x 16 E2 x 8 H x 4

x 4

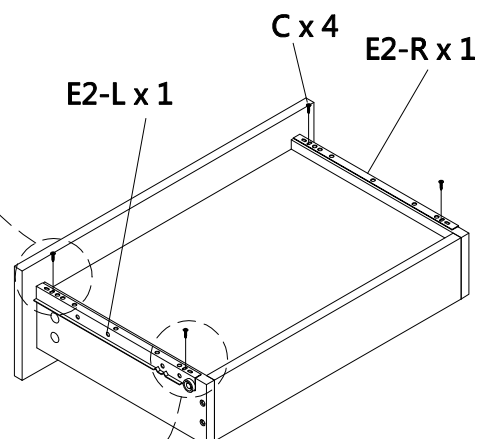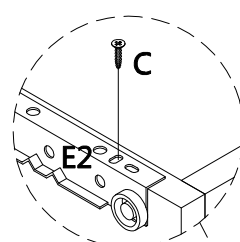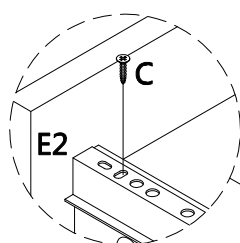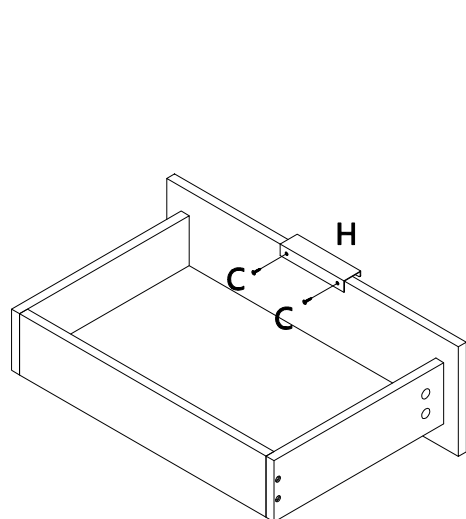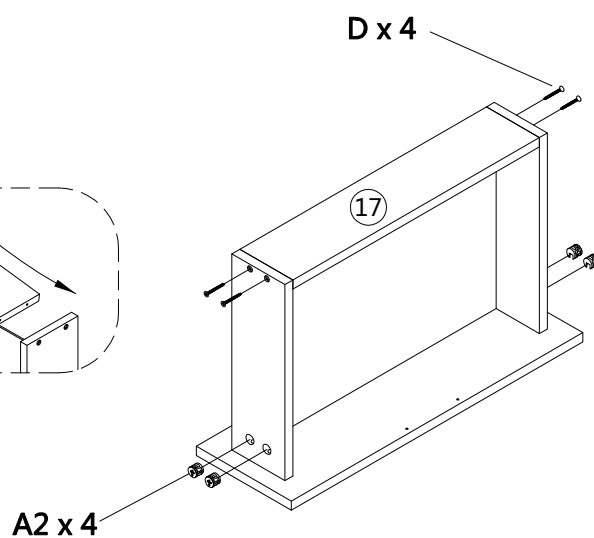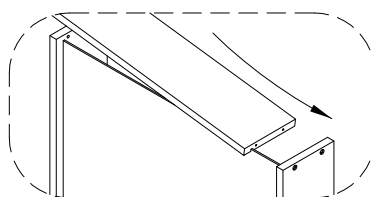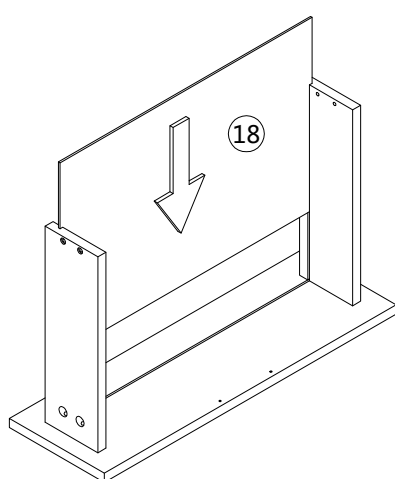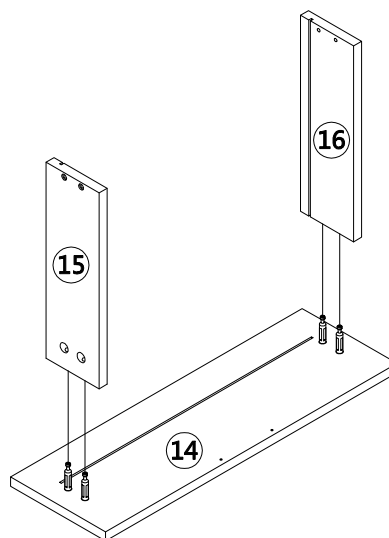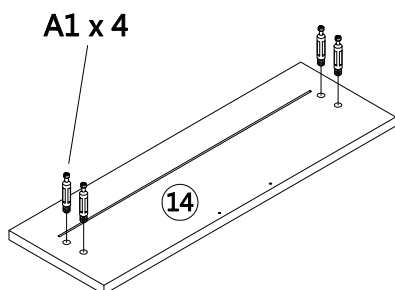

Step 11

