

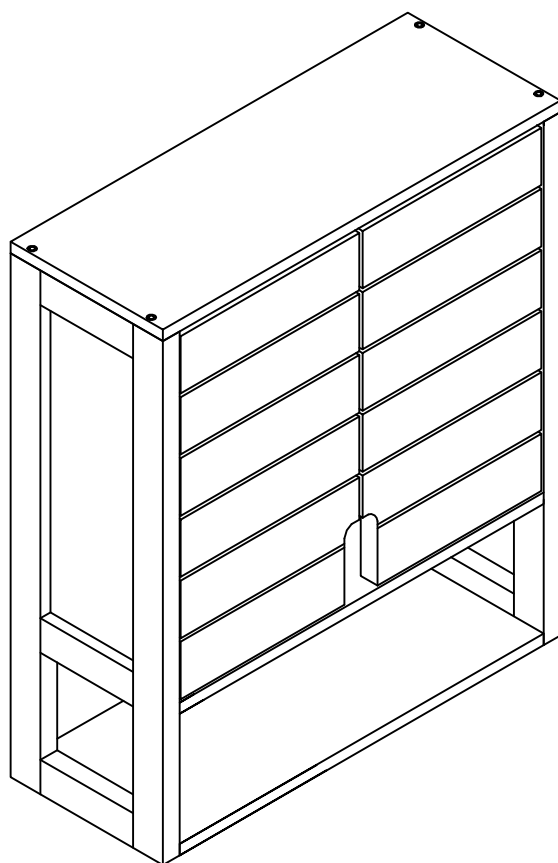


INSTRUCTION SHEET

25820005/01



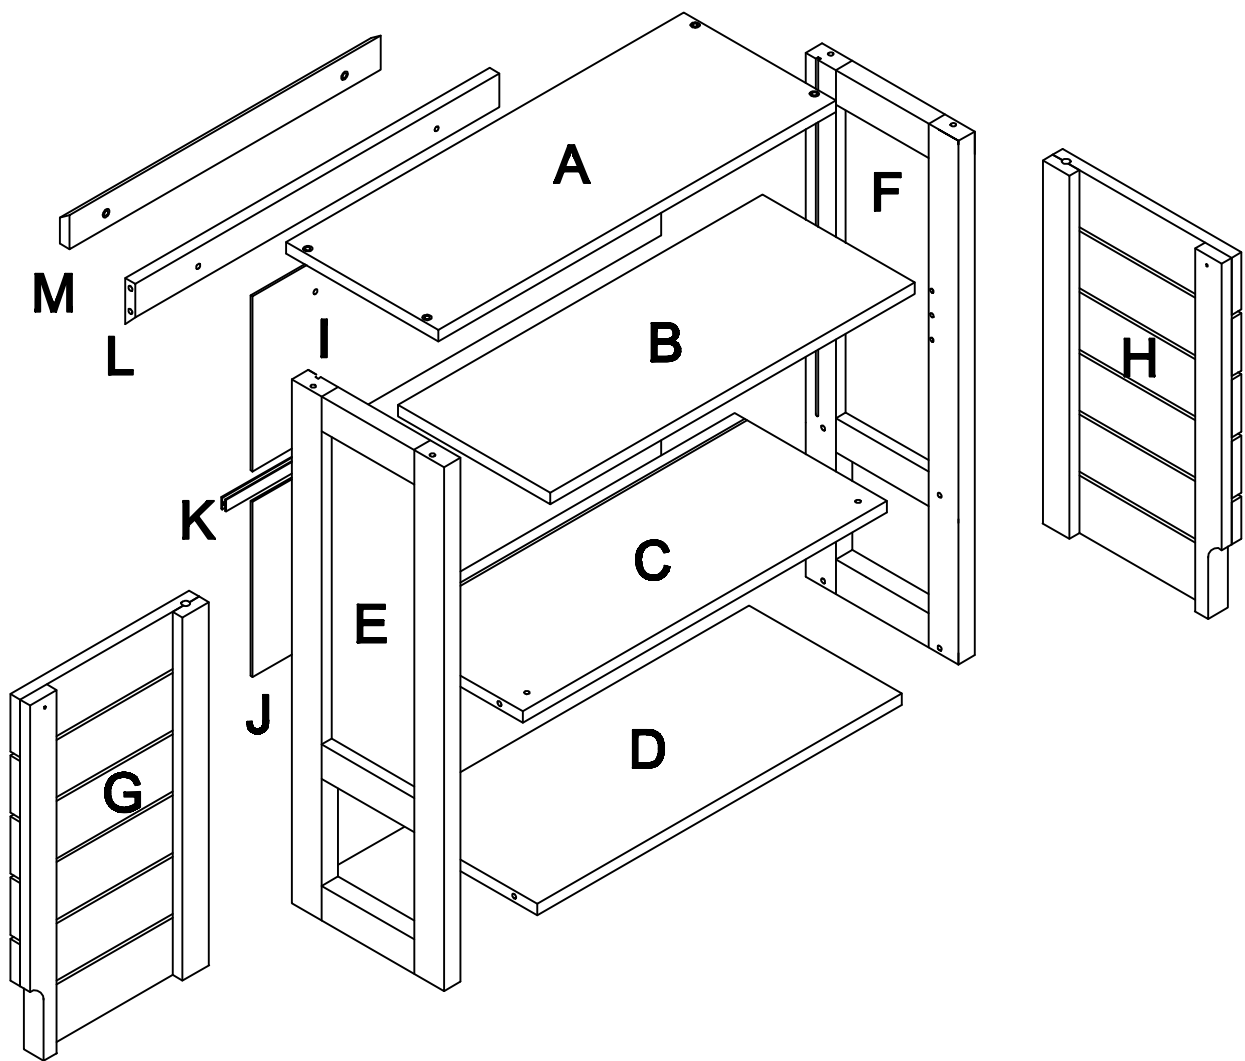


ax8



bx8



cx4



dx2



ex8




fx2



gx2



hx4



ix8



jx4




kx4



lx4






mx4






nx1


1

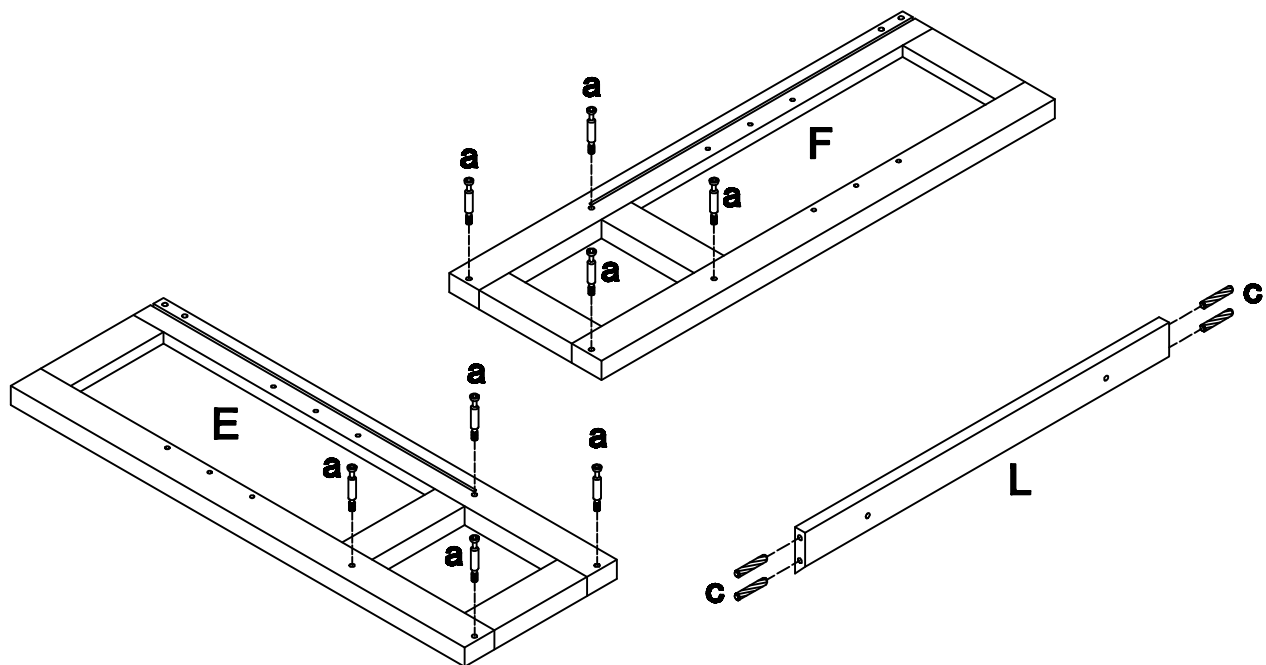

2

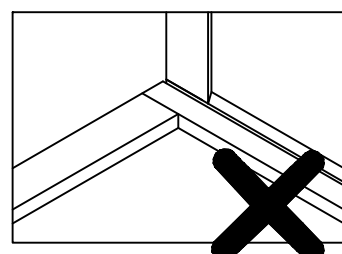
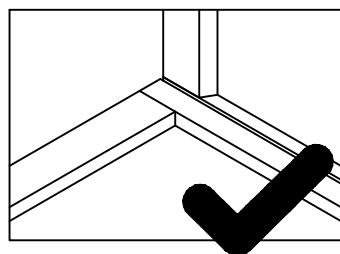
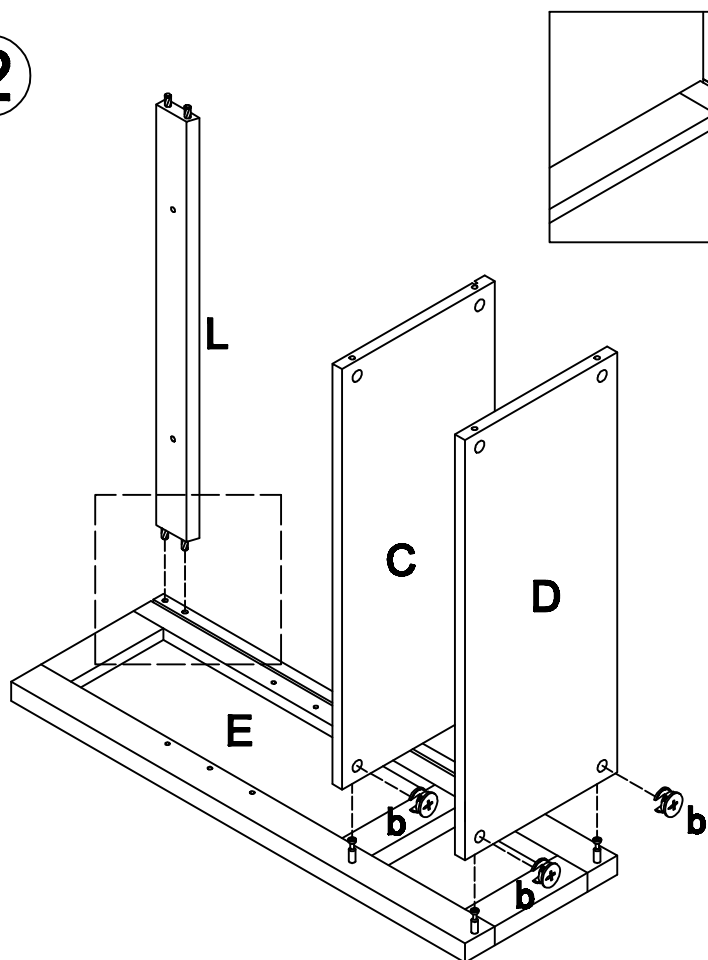


3





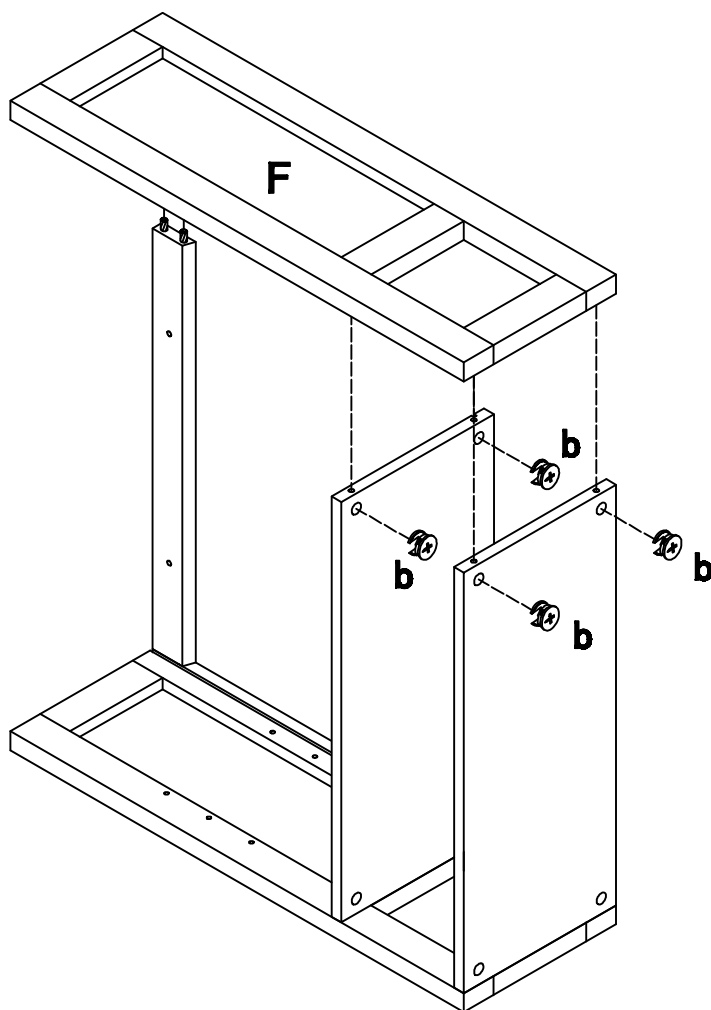


bx4



4

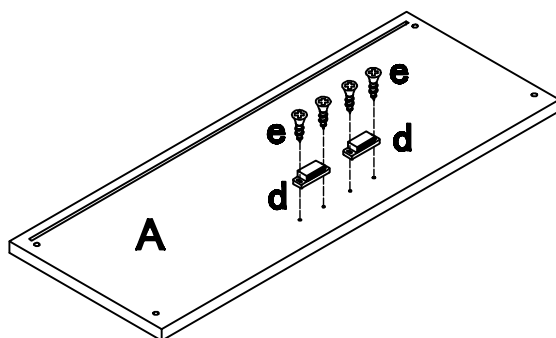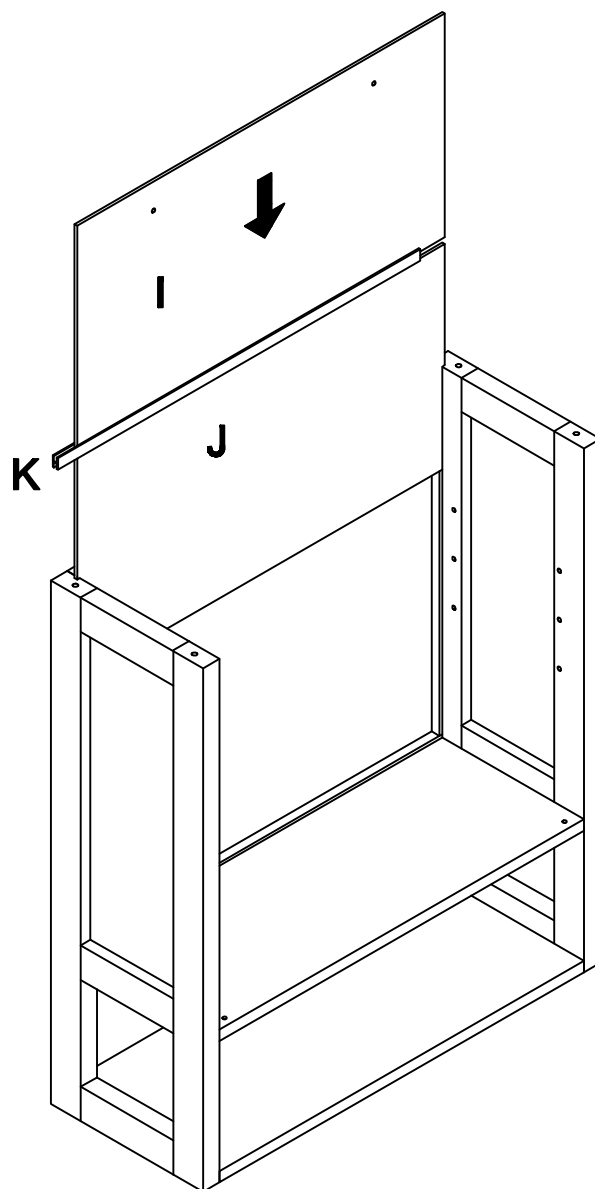

5

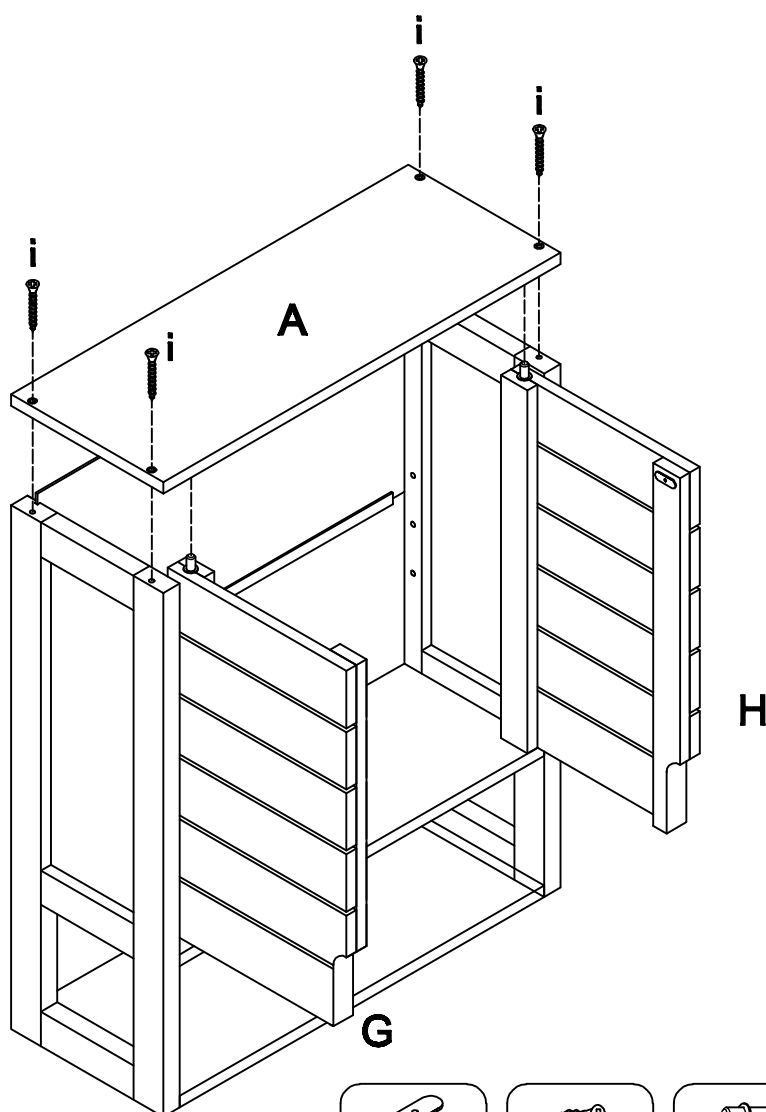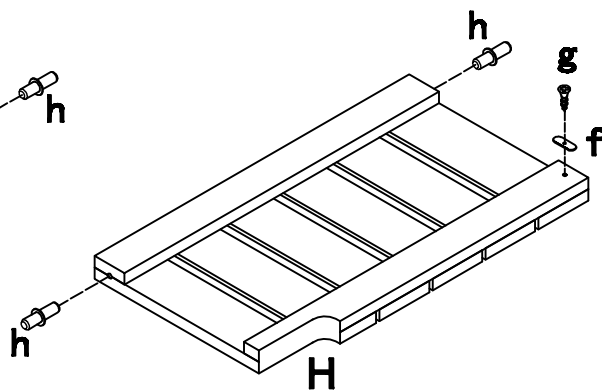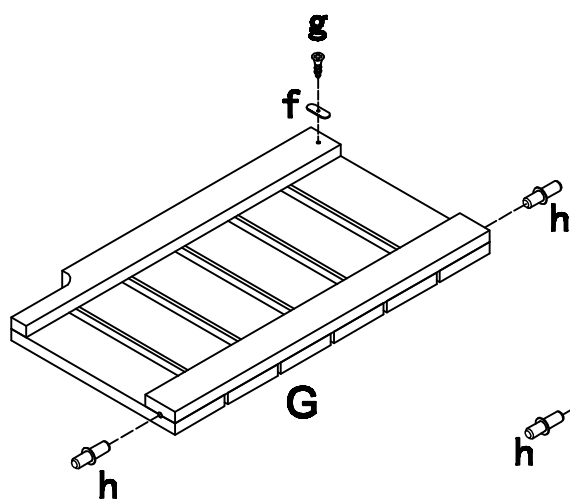


6

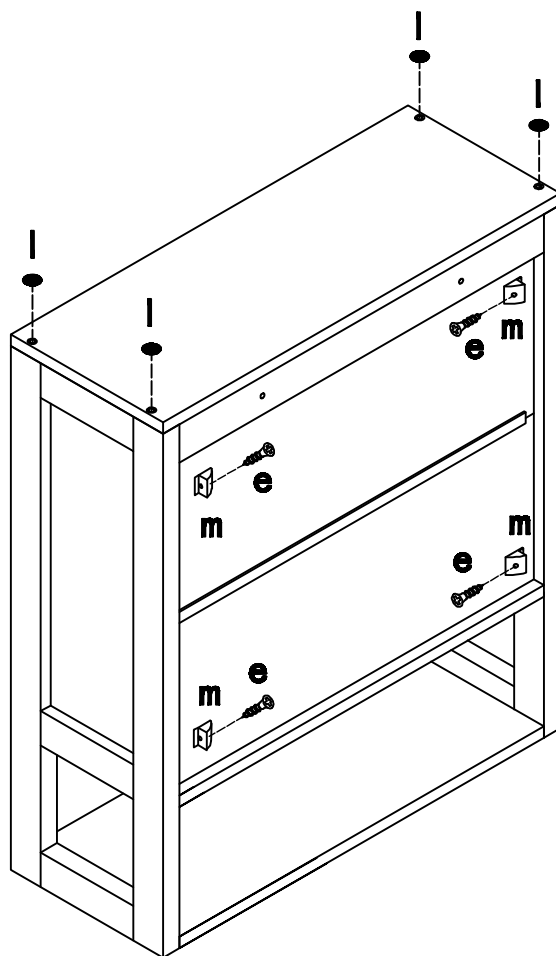


7

ATTENTION


**PLEASE STICK THIS PAPER TO THE WALL BEFORE
DRILLING. USE " + " SIGN AS YOUR GUIDE**

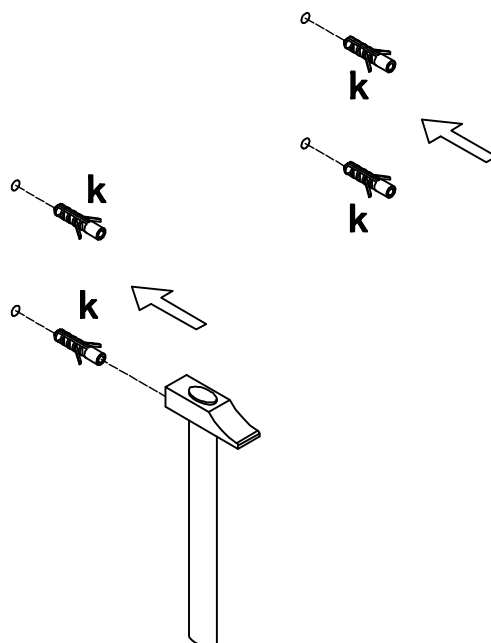




kx4

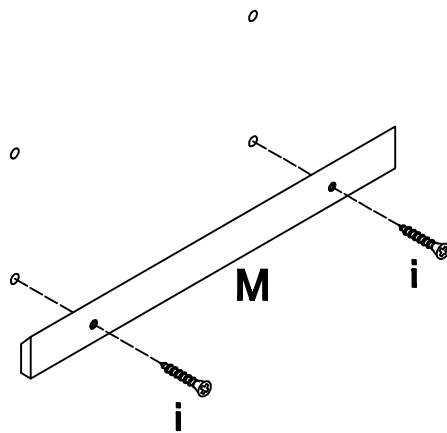

9

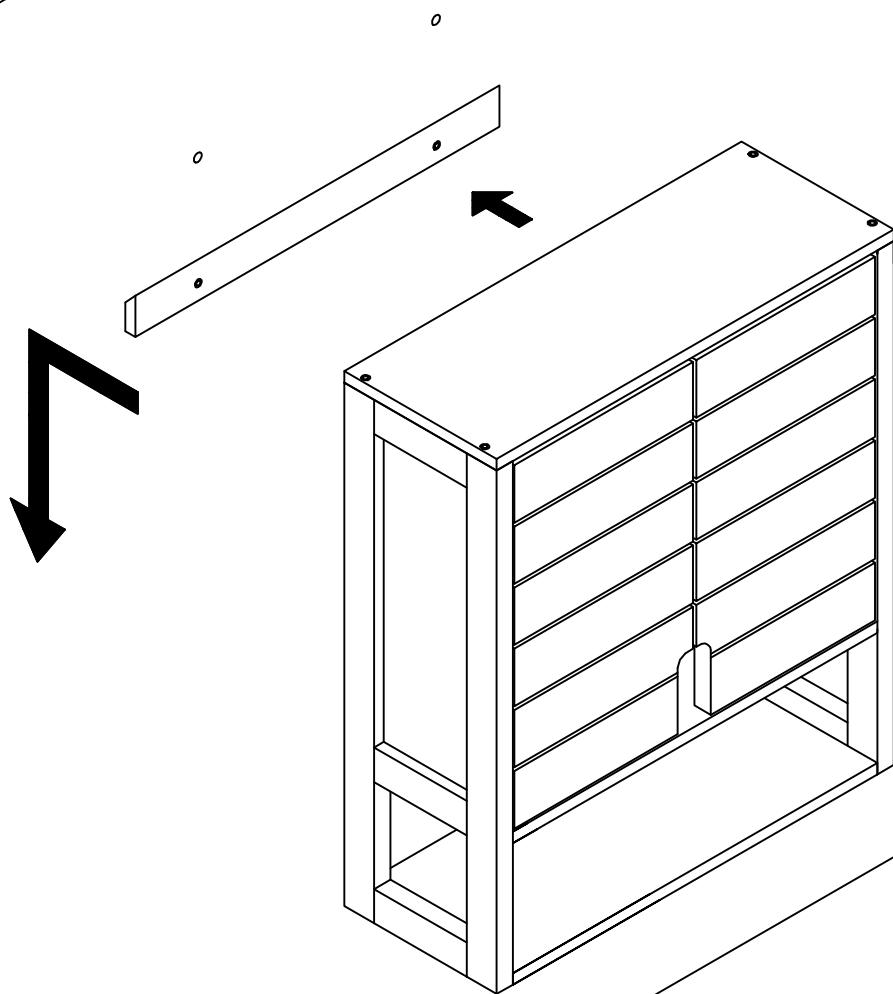

10

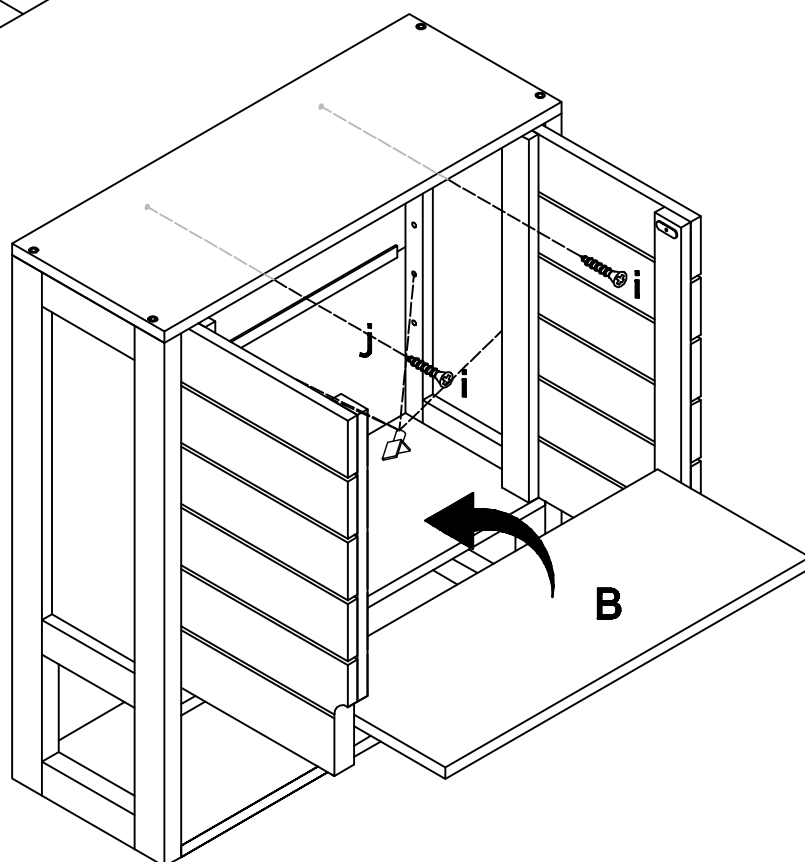

11

