



Type 770-113

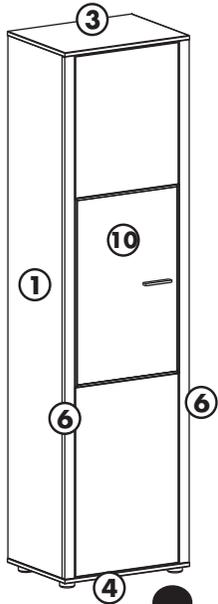

Type 770-114



Sie brauchen:
You need:

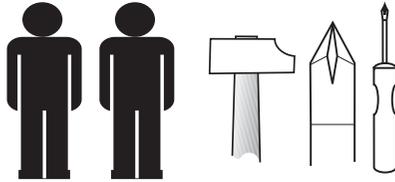

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbeldändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.


After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.




Beschlagliste Fittings

CAD und Design
Studio 11 770_113 / 10.23


4x gedämpft c4	10x ak	2x tg1	8x t4	4x tg
6x 3,0x16 RWS	4x hbak4	6x a3	26x e2	2x M4 x 12 ks
16x rh	16x 3 x 20 s7	2x 3,5 x 15 s5	2x wd	2x rv
12x 8 x 40 p1	10x 3,5x17 RW5	26+6x ak4	2x tad	4x ak1
26x a1	1x 111mm gr16	2x 5 x 100 s28	6x e8	8x 4 x 16 s4

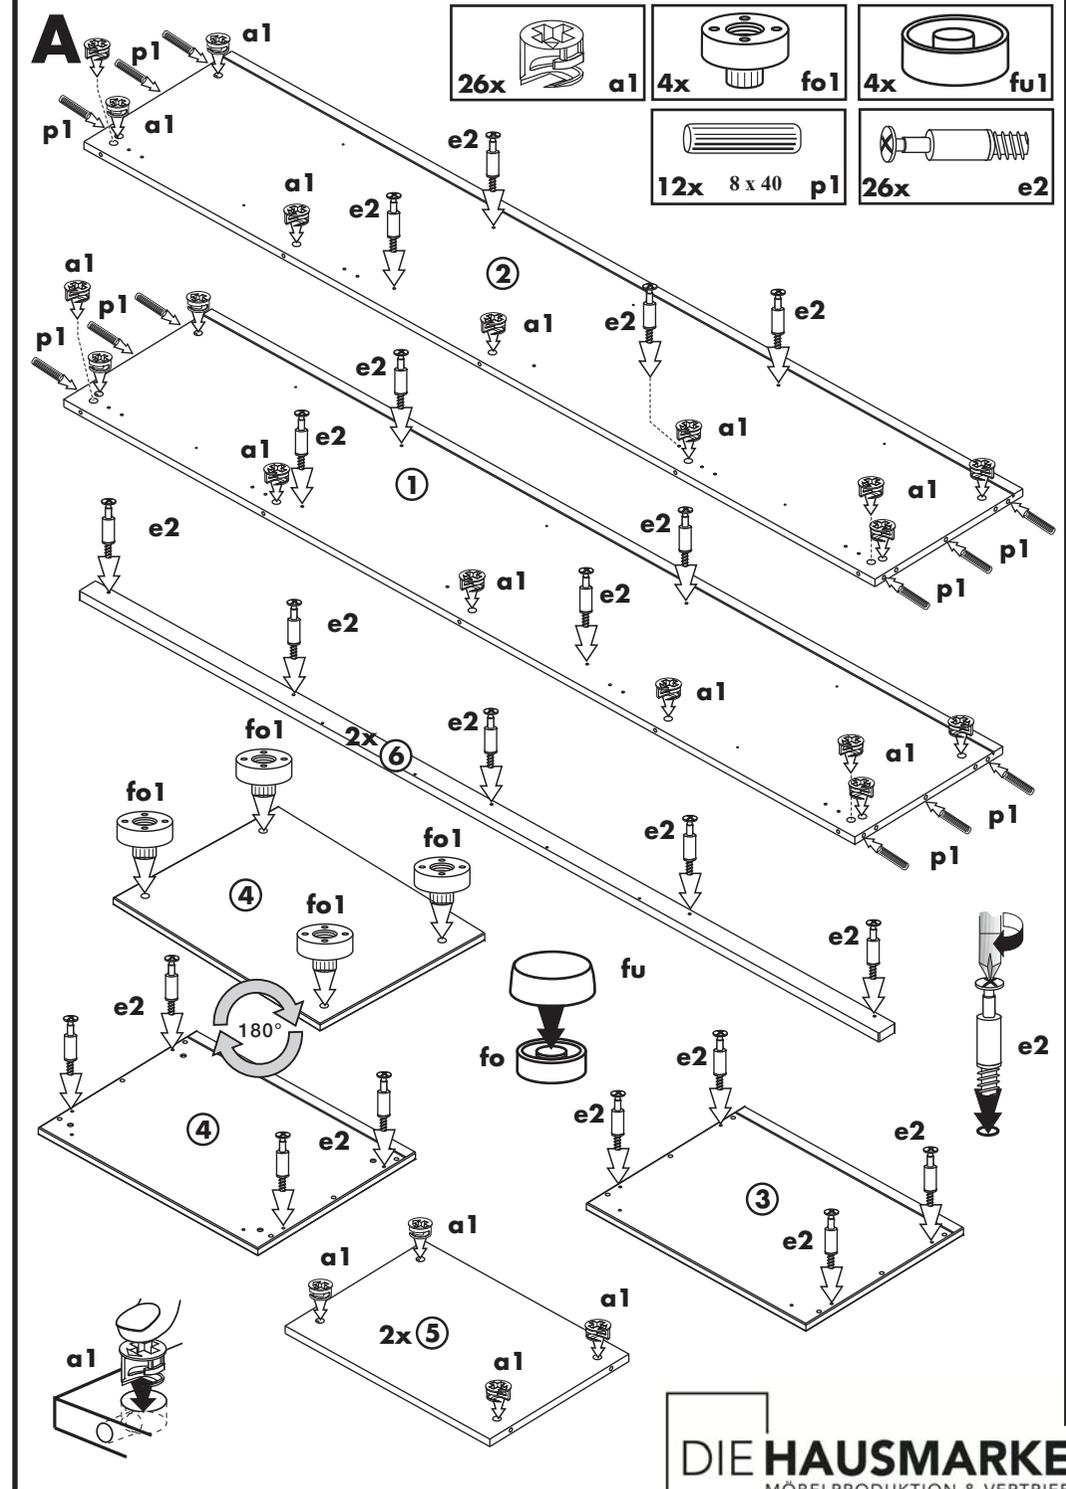



B

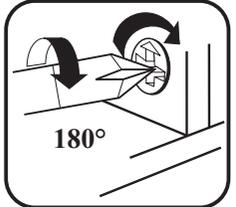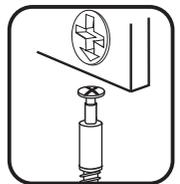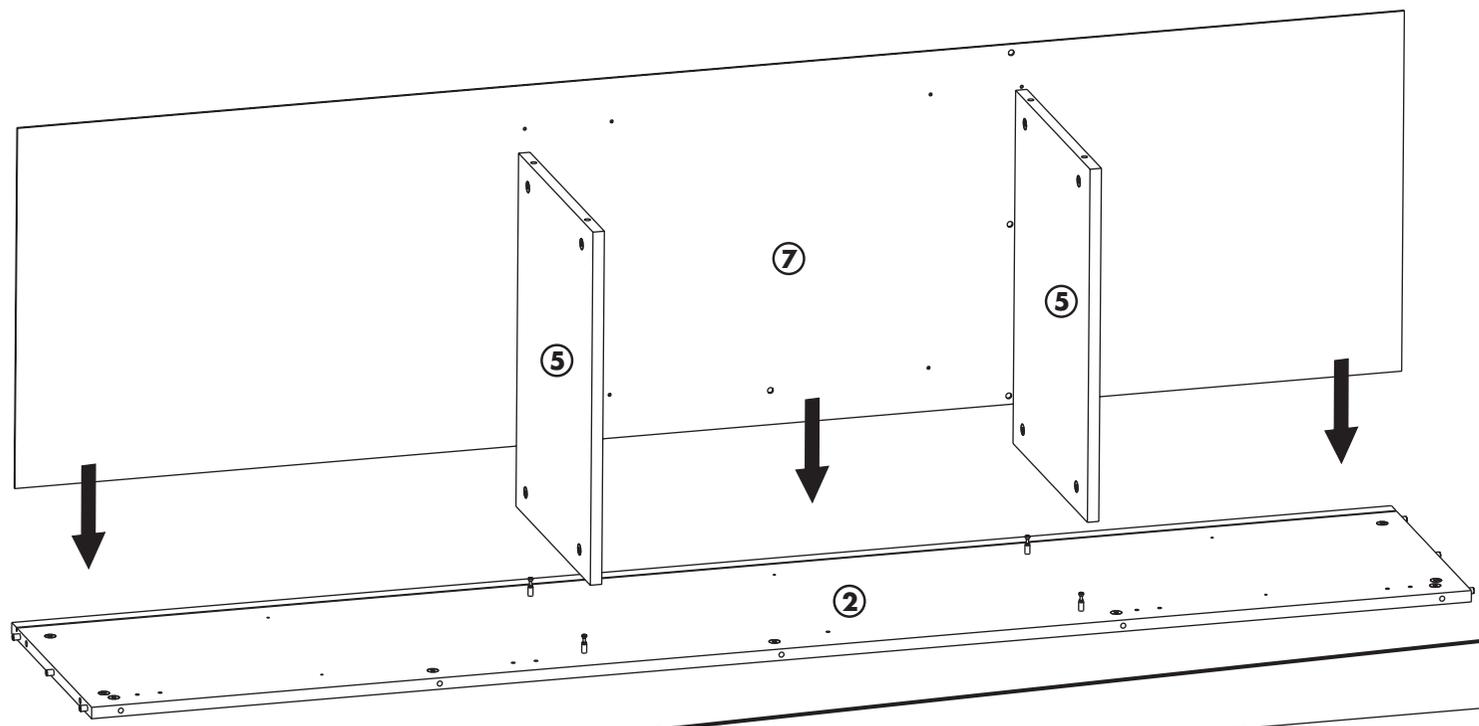





C

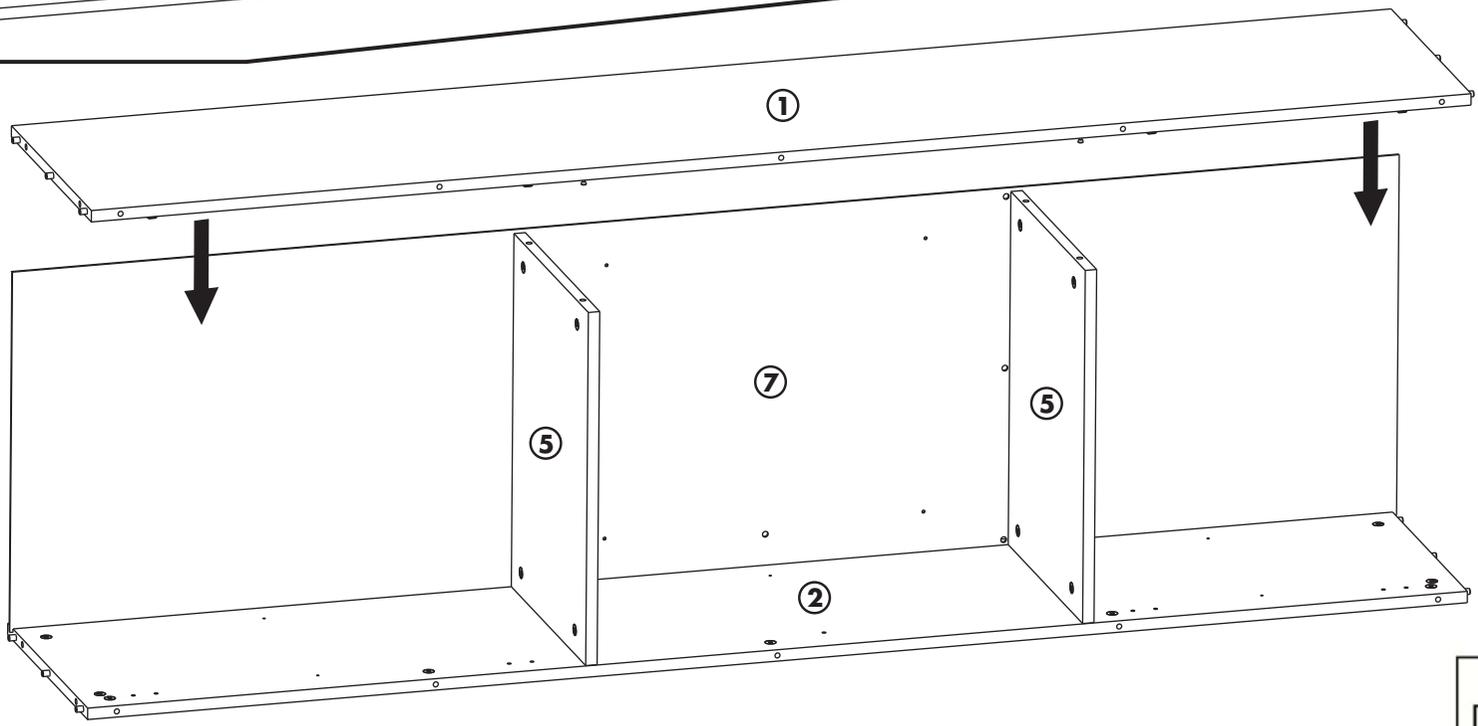



D

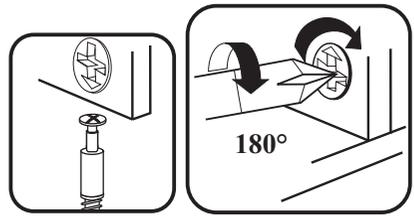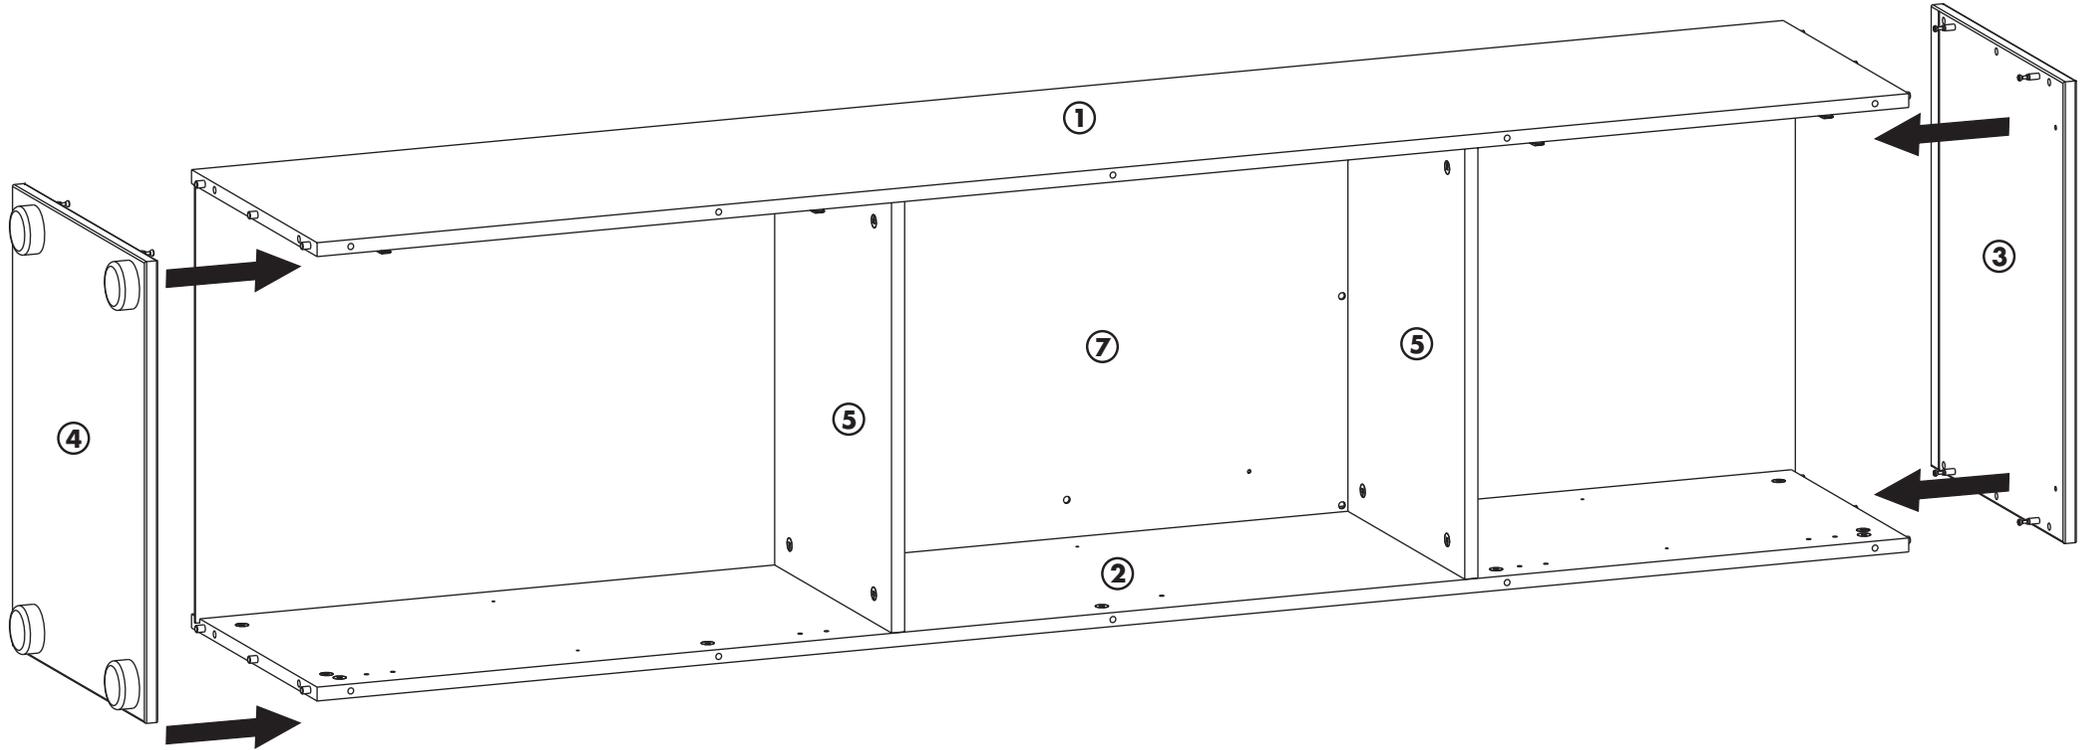




E

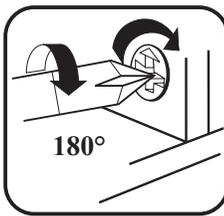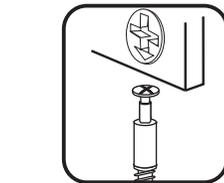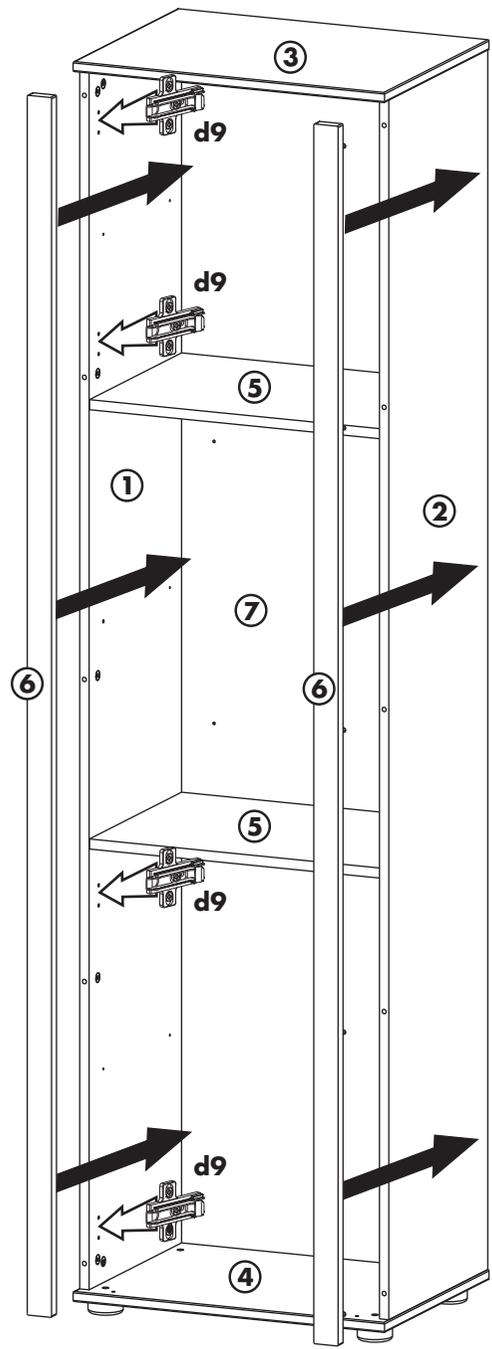

F

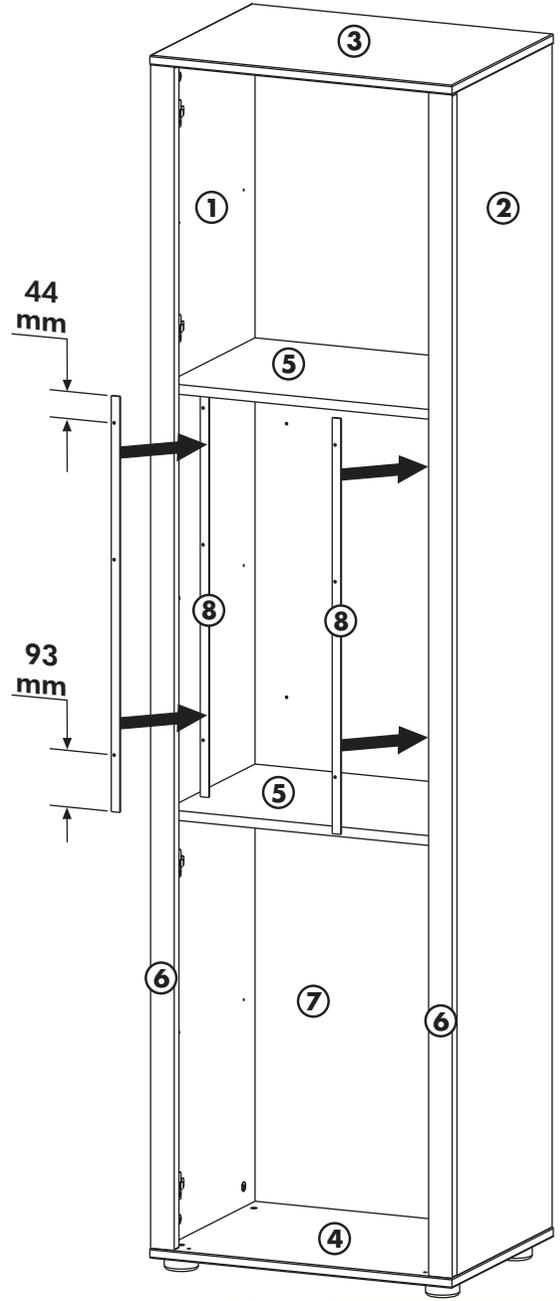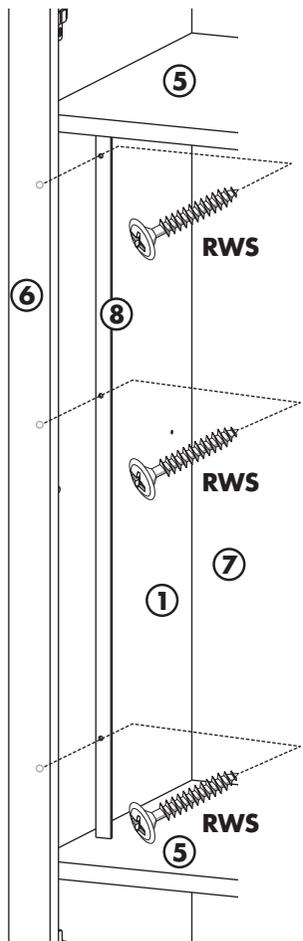


G

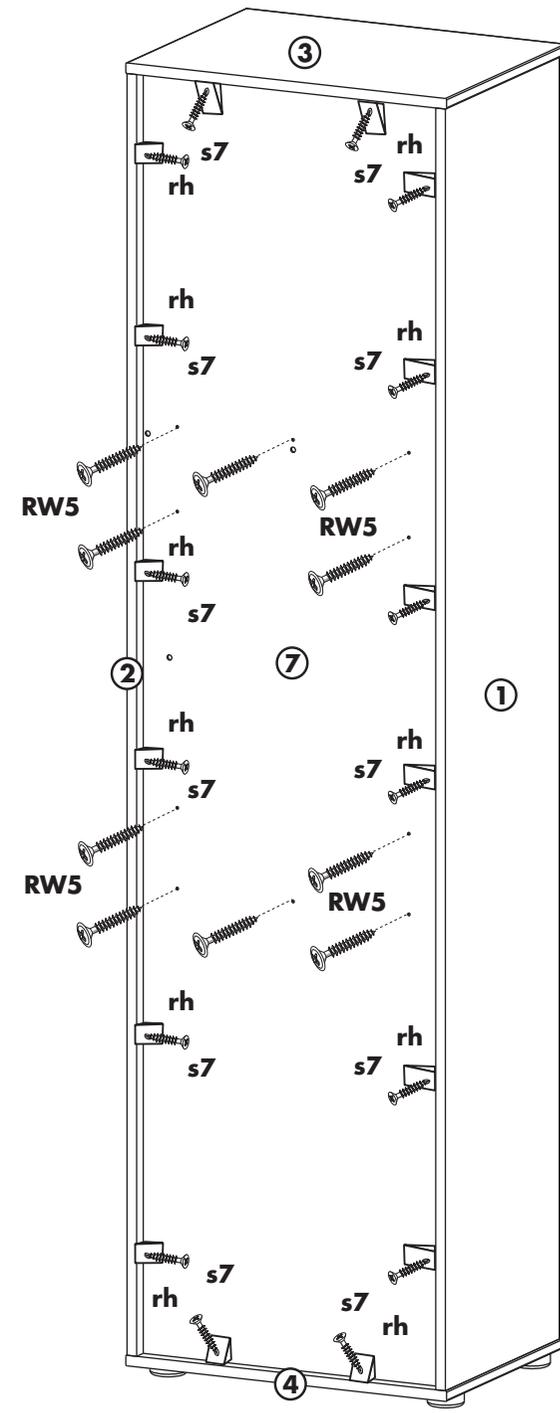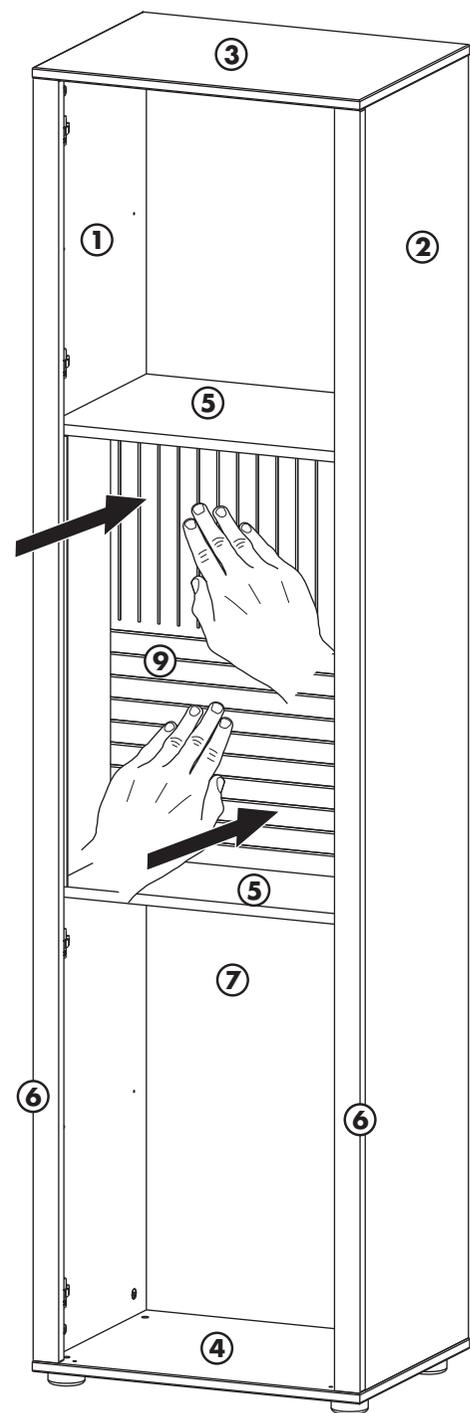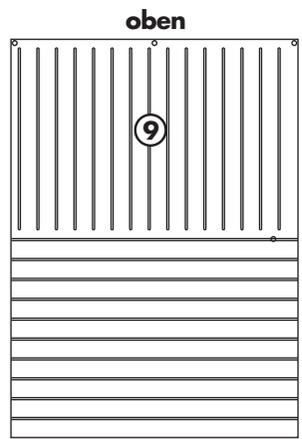


-  **16x** 3 x 20 **s7**
-  **10x** 3,5 x 17 **RW5**
-  **16x** rh



H

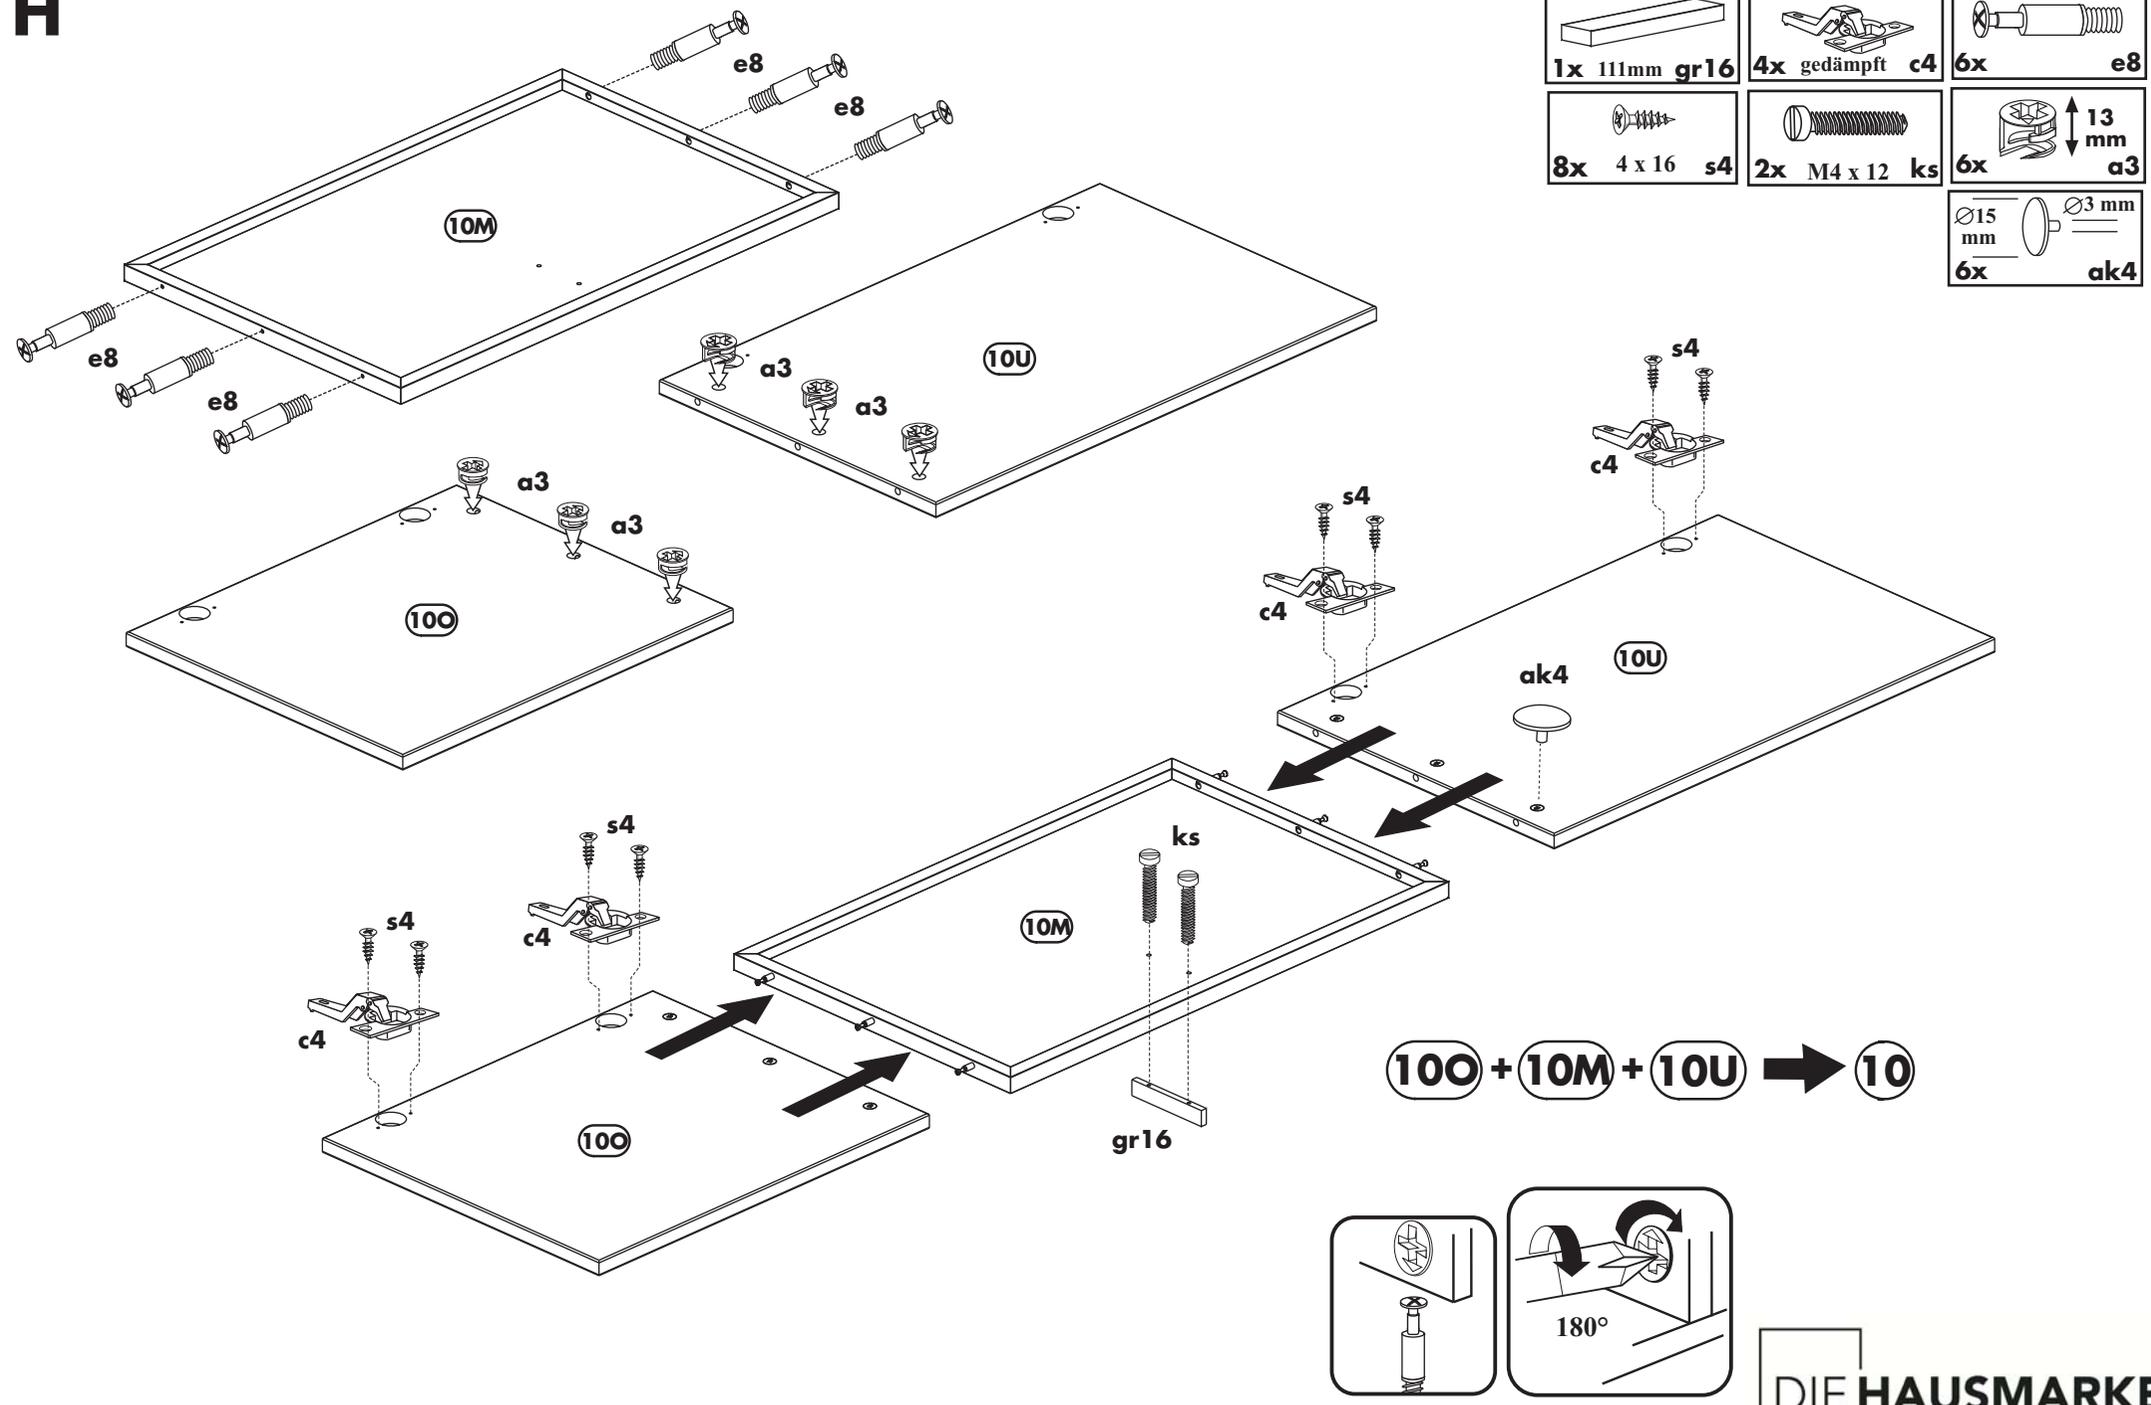


- | | | |
|---------------|----------------|-------------------|
| 1x 111mm gr16 | 4x gedämpft c4 | 6x e8 |
| 8x 4x16 s4 | 2x M4x12 ks | 6x 13mm a3 |
| | | 6x Ø15mm/Ø3mm ak4 |

100 + 10M + 10U → 10

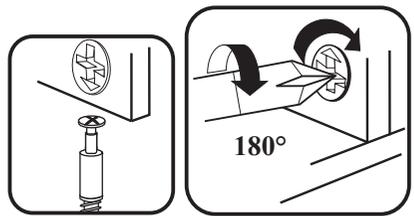


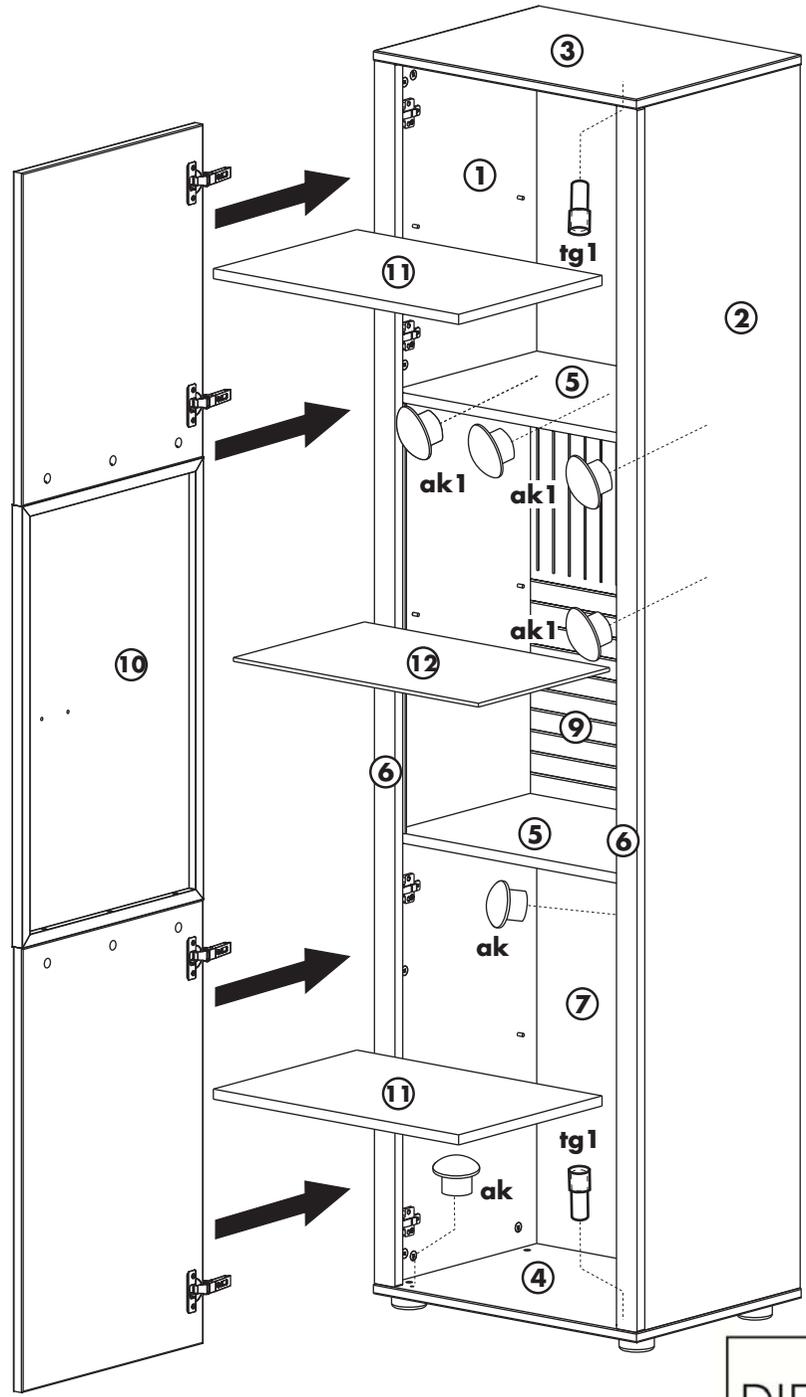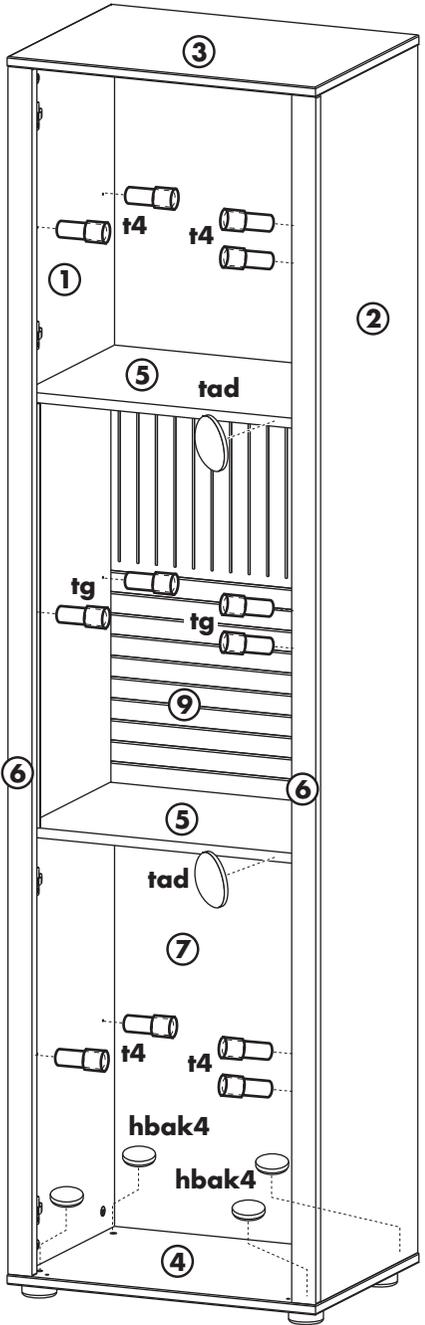


- 

2x tg1
- 

4x hbak4
- 


4x tg
- 

2x tad
- 

10x ak
- 


8x t4

J



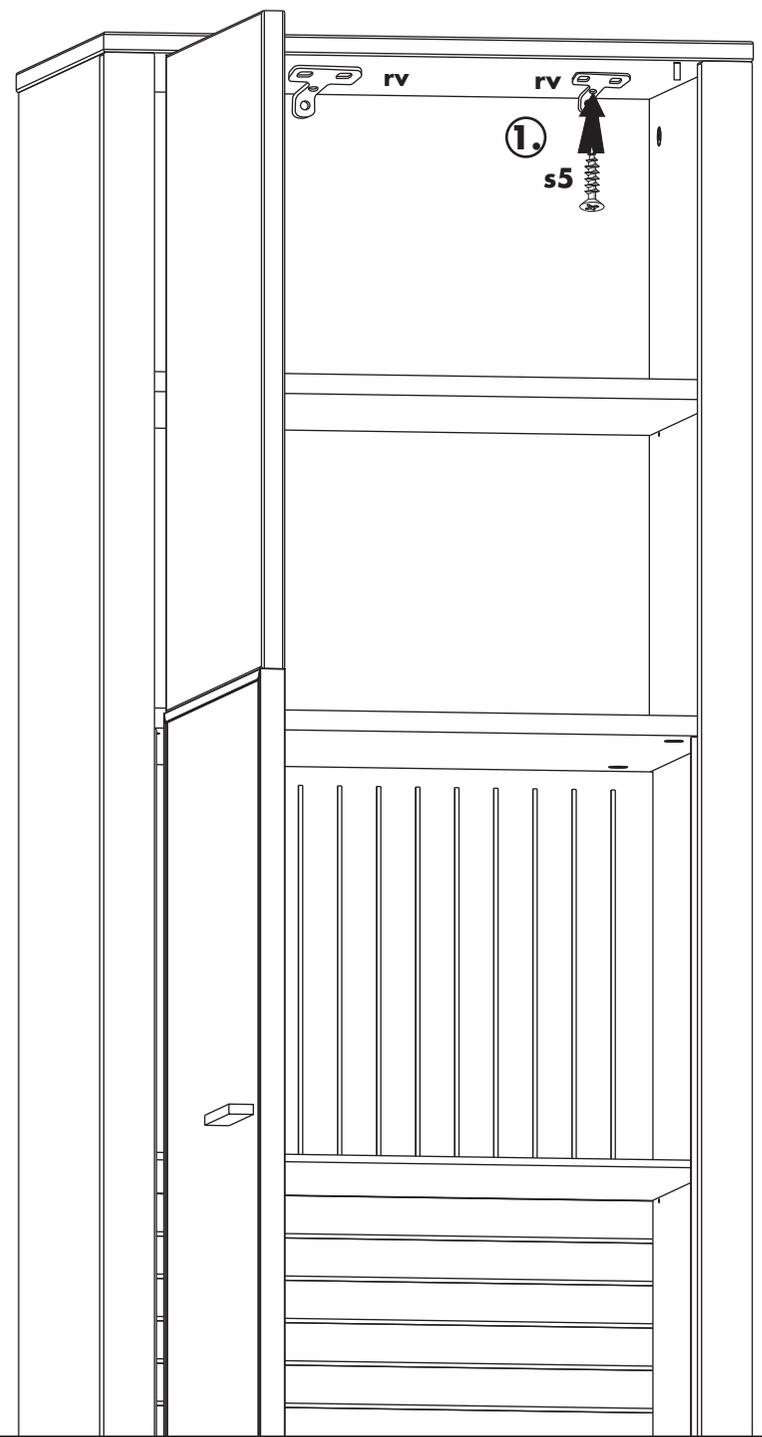


Kippsicherung links und rechts anbringen

Install anti-tip device left and right

 2x wd	 2x rv
 2x 3,5 x 15 s5	 2x 5 x 100 s28
 26x ak4	

2. Wand markieren mark wall

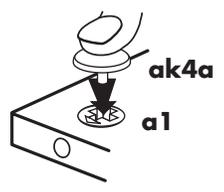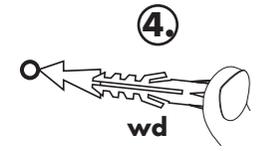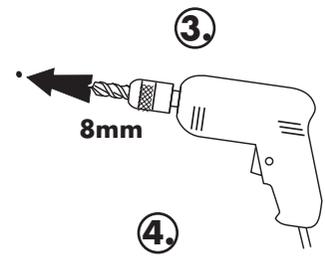

5. Schraube eindrehen Mount screw

