



INSTRUCTION SHEET


22240015-01

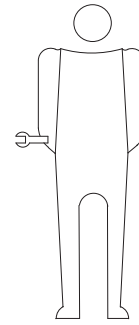

x1

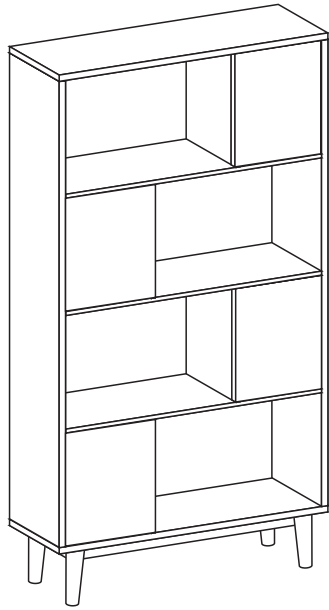


Ax1



Bx2




Cx1



Ex1



Fx1




Gx1




Hx2



Ix2



Kx4



Lx2




Nx4























Ox2






Mx4






Px4

 Ø4×35mm ax14	 bx24	 cx36	 dx24	 Ø5×50mm ex10	 Ø4×14mm fx2	 gx2	 hx2
 ix8	 jx8	 Ø3×16mm kx32	 lx4	 mx4	 Ø4×25mm nx16	 ox4	 Ø3×10mm px4
 qx16	 rx12	 sx4	 tx1				



Step 1

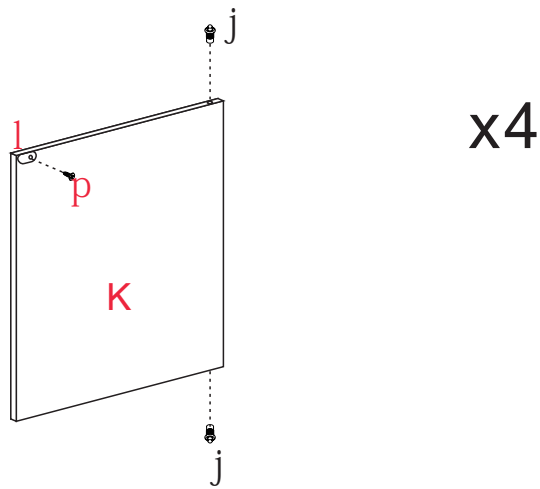


Step 2

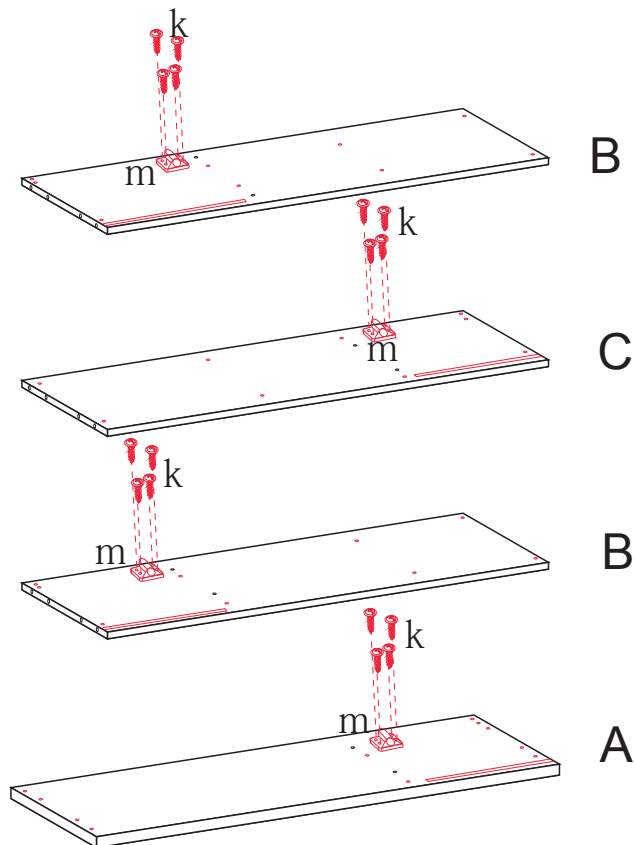


Step 3

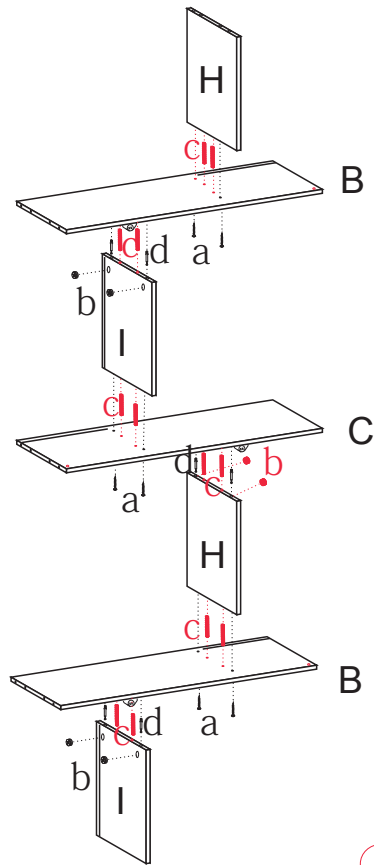


Step 4

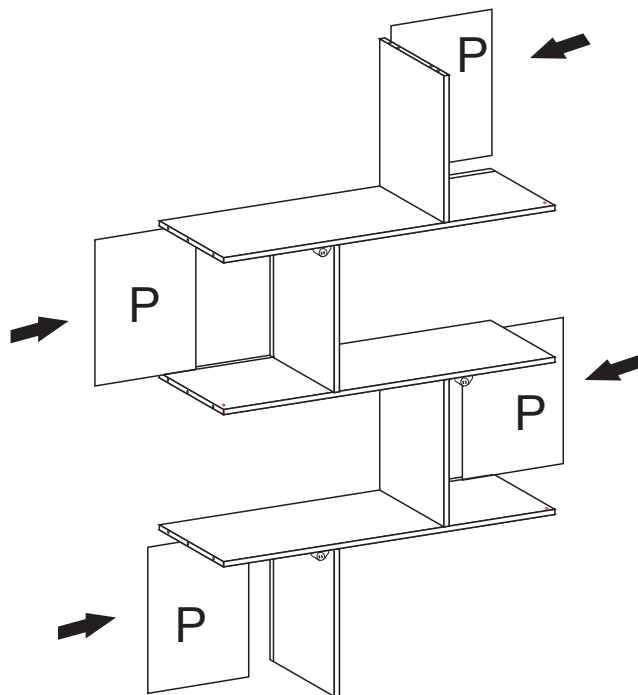


Step 5

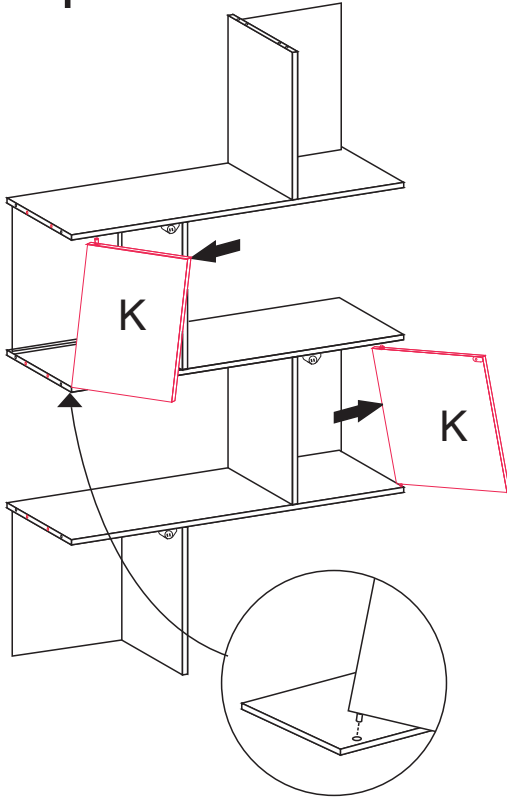



Step 6

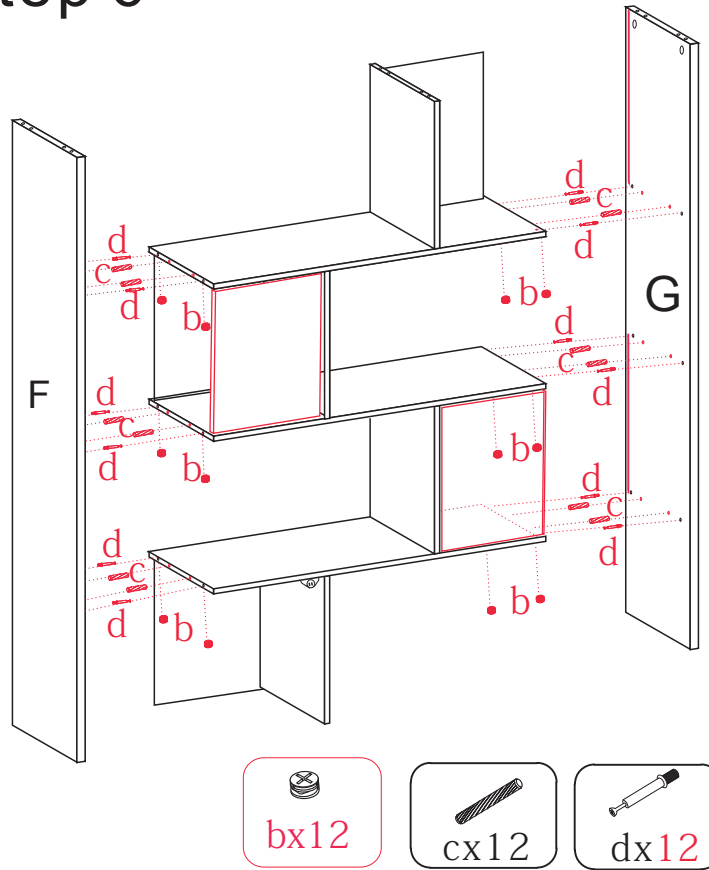



Step 7

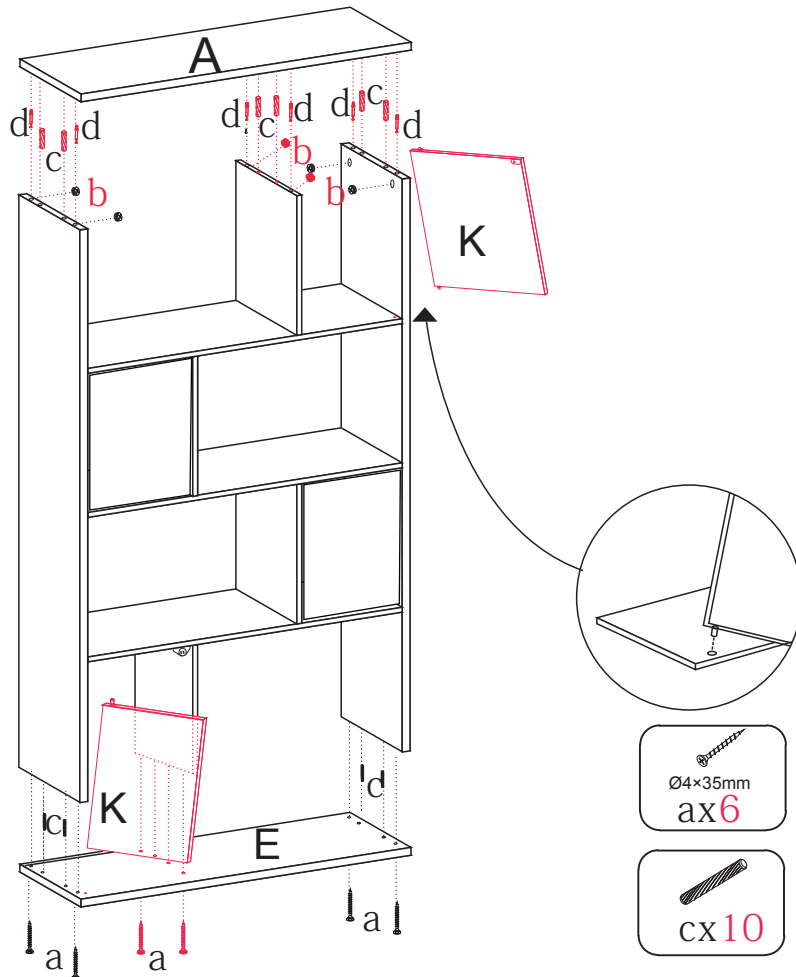




Step 8

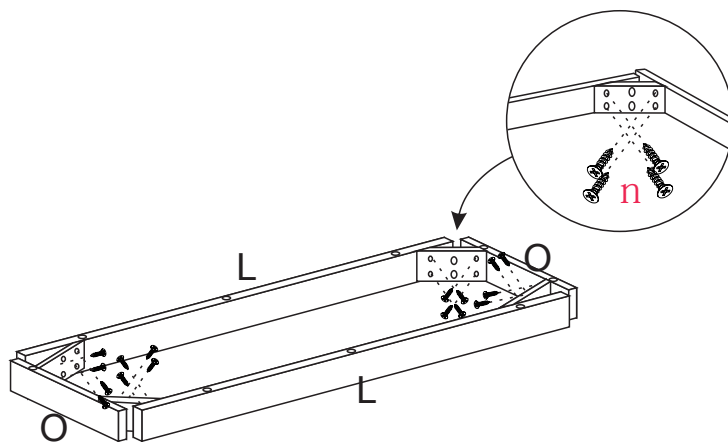


Step 9

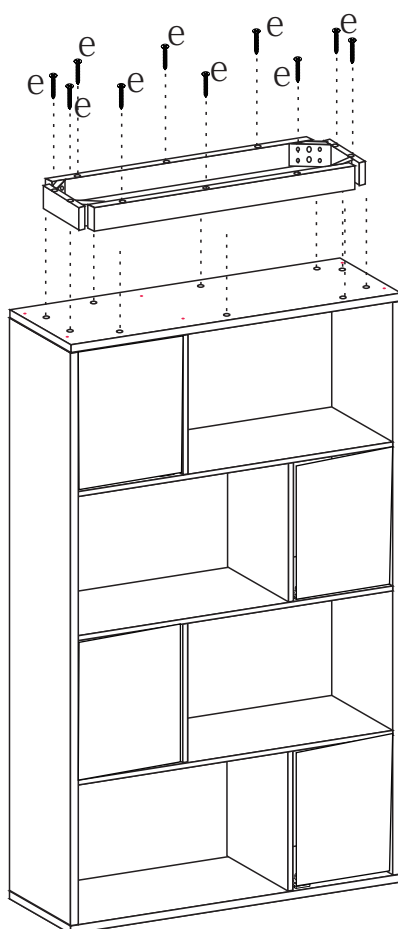


Step 10

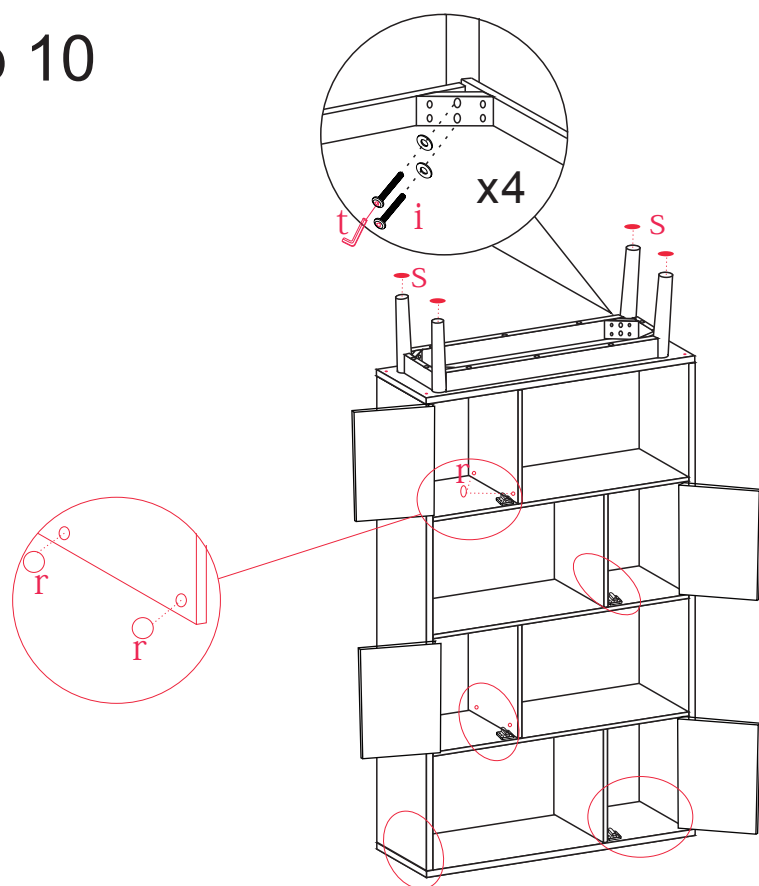

Step 11

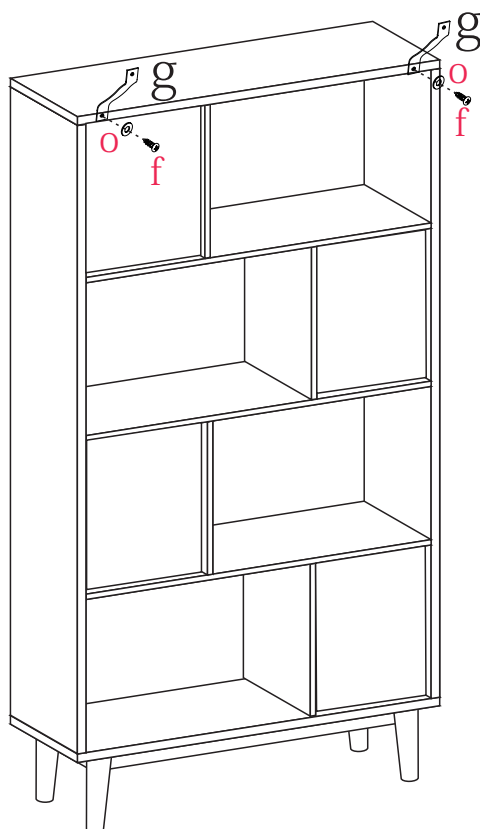

Step 12

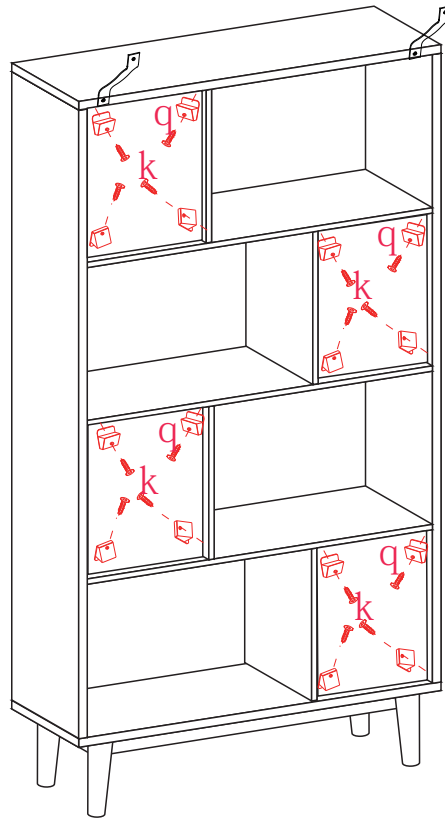

Step 13

