


ASSEMBLY INSTRUCTIONS


20140178/01

I.

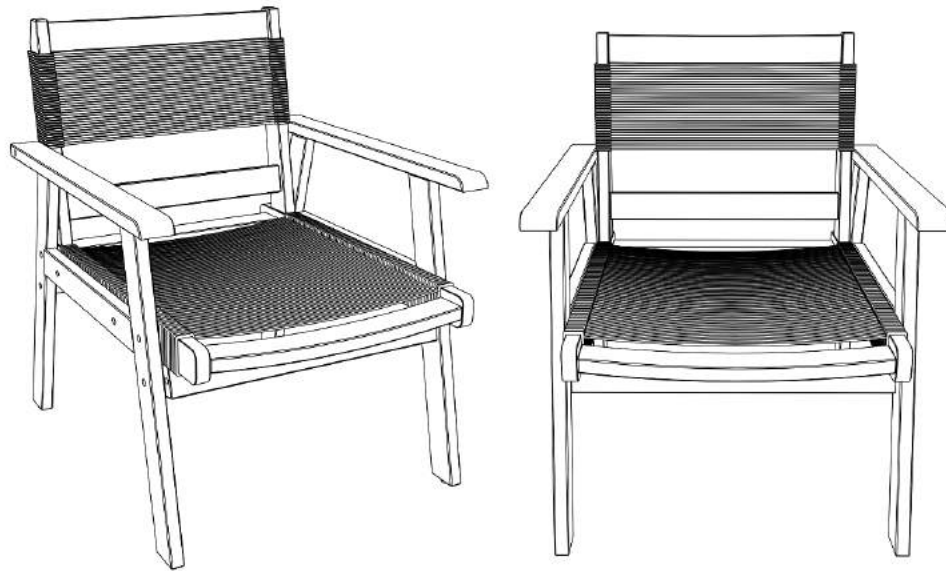


Components:


- 1  SREW M6 X 70 = 4PCS
- 2  SREW M6 X 45 = 8PCS
- 3  BOLT M6 X 40 = 8PCS
- 4  BOLT M6 X 65 = 4PCS
- 5  Allen Key 4 = 1 PC
- 6  Washers M6 X 16 = 4PCS
- 7  SREW M6 X 60 = 8PCS

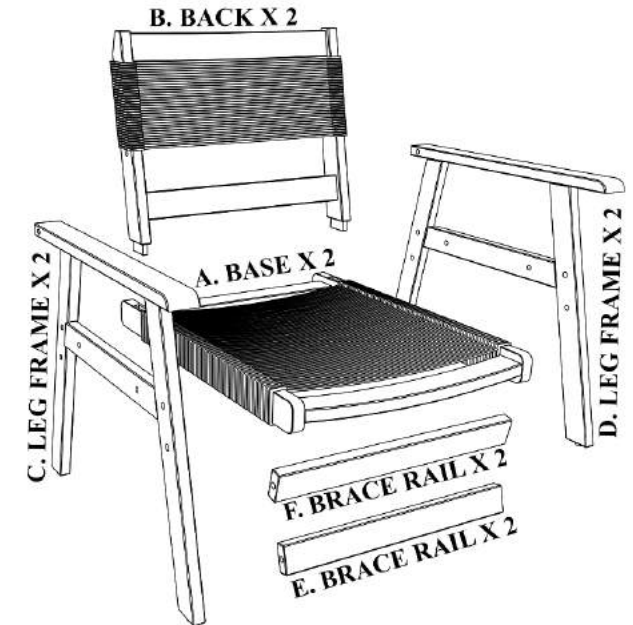

1. Step 1:

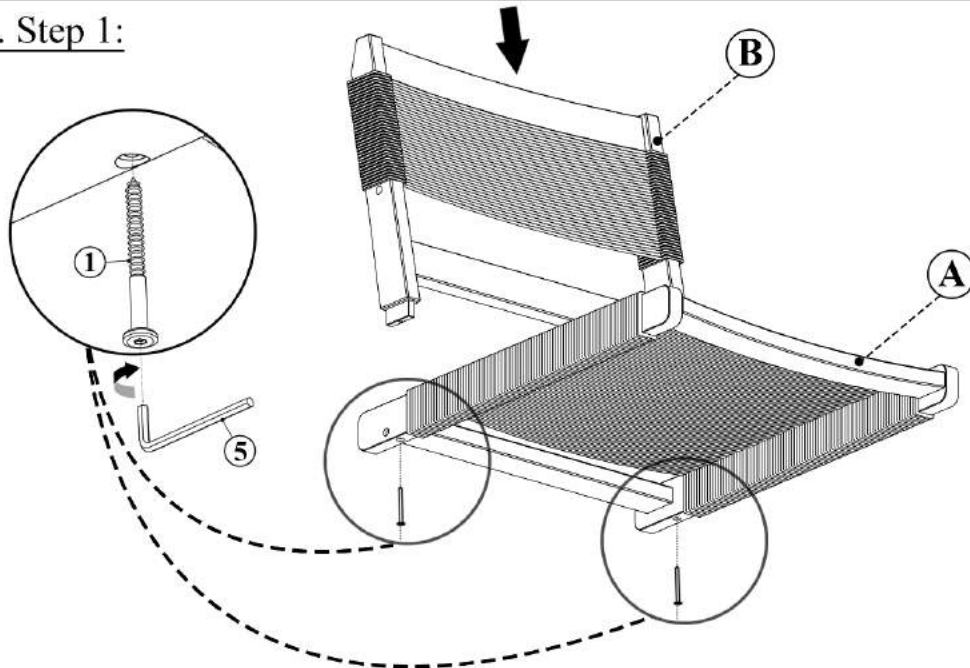


2. Step 2:

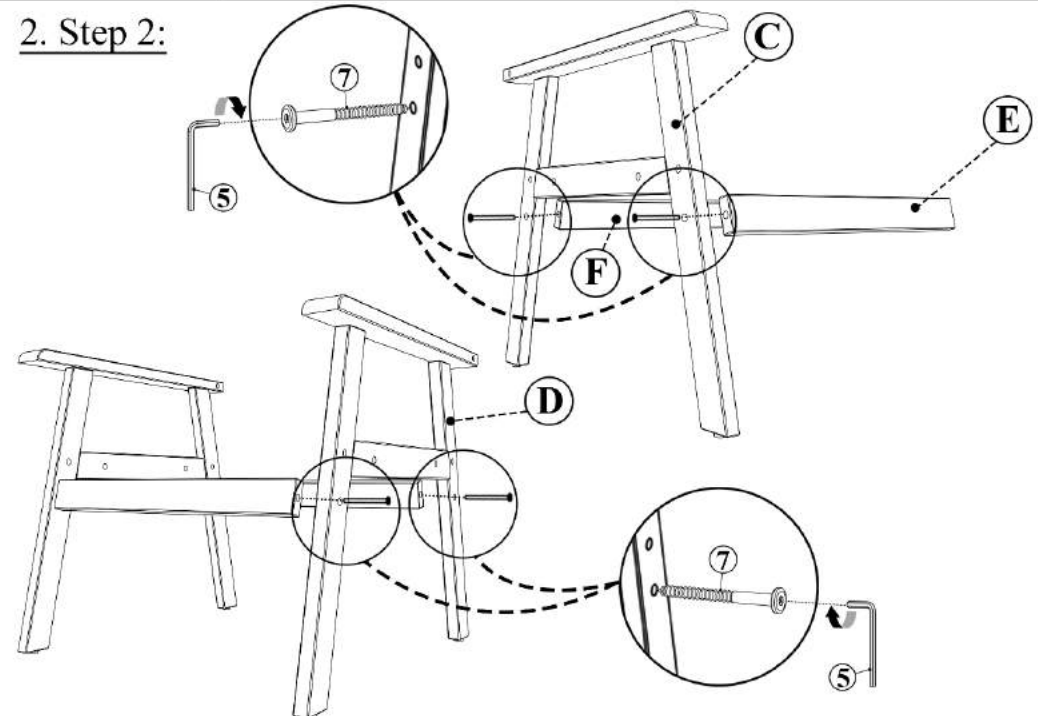


ASSEMBLY INSTRUCTIONS

20140178/01


3. Step 3:

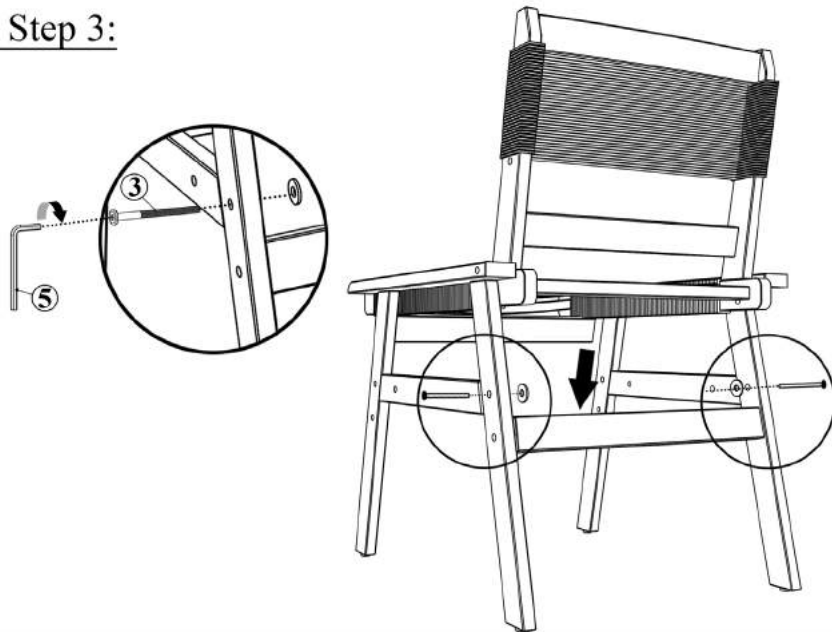


4. Step 4:

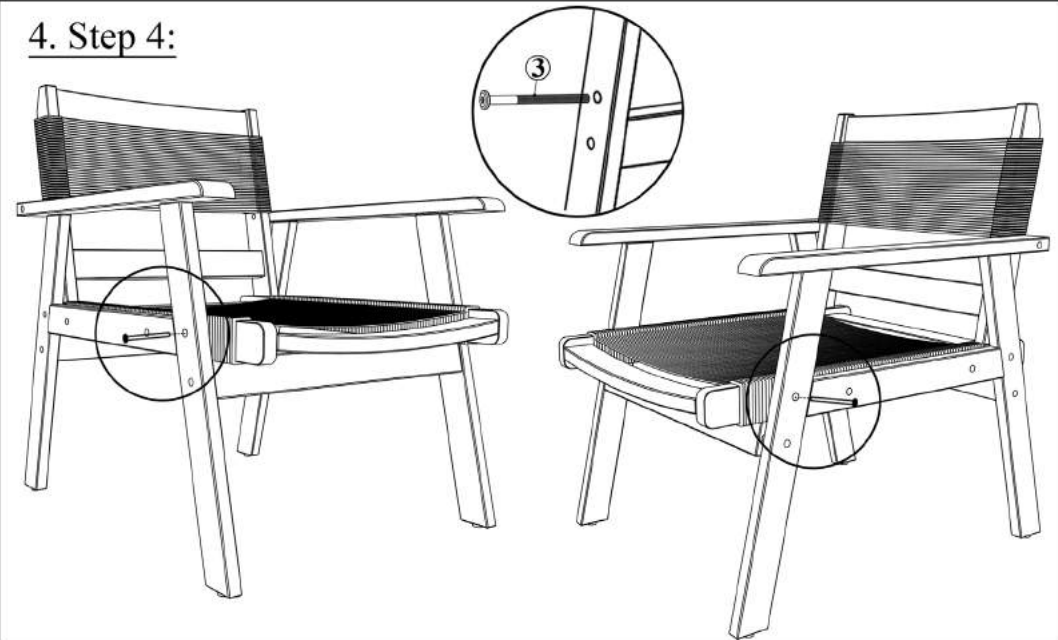

5. Step 5:

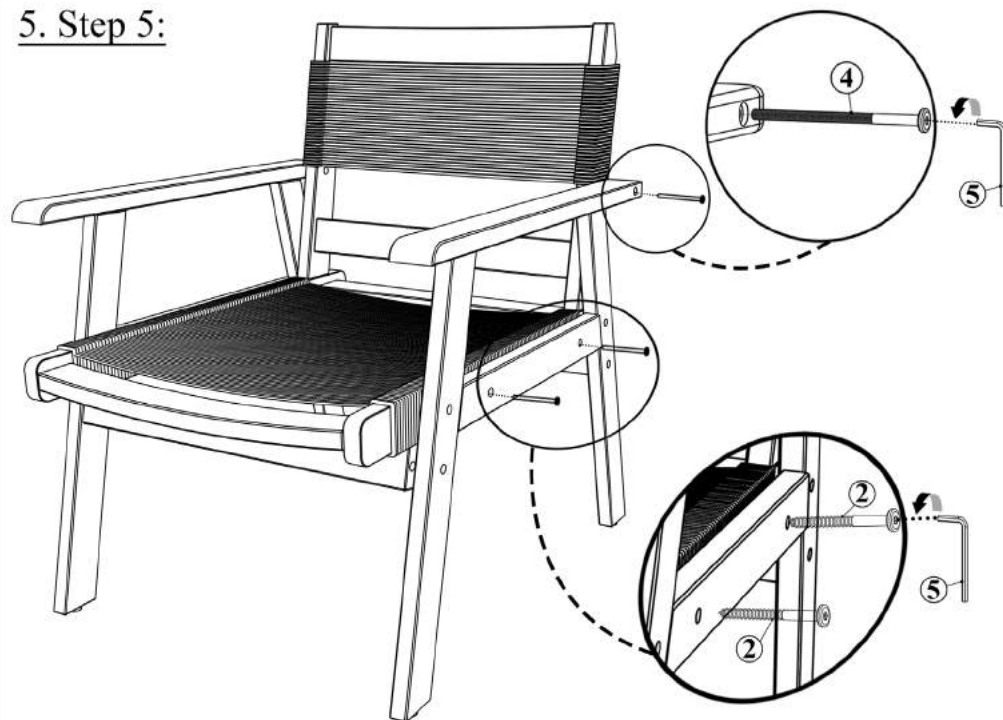

6. Step 6:

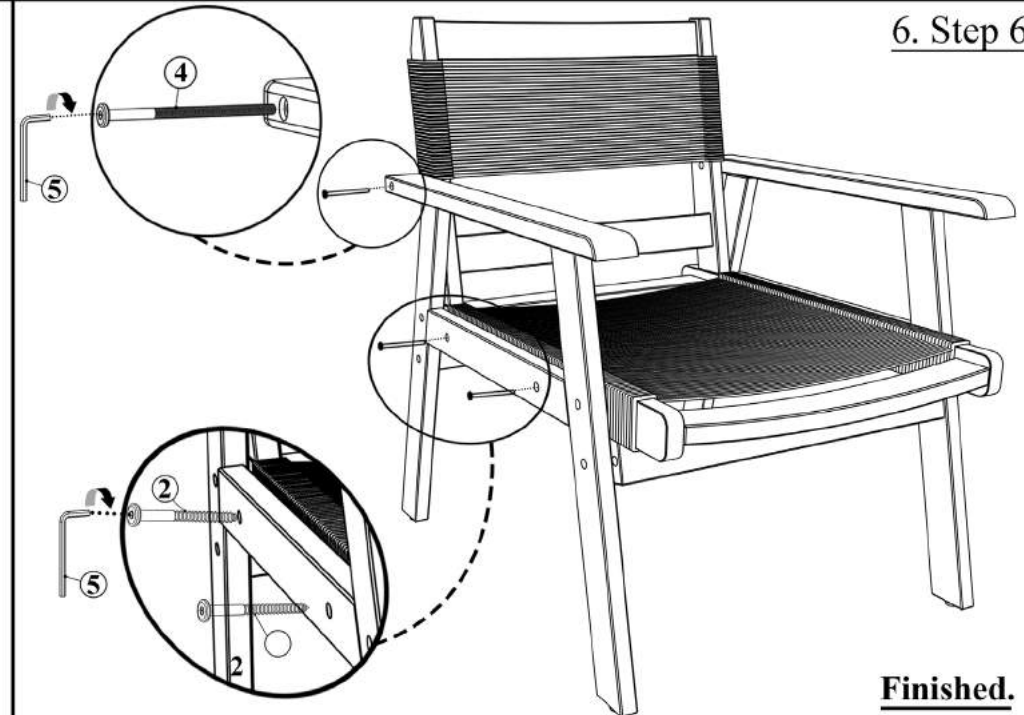


Finished.

ASSEMBLY INSTRUCTIONS


20140178/01

II.

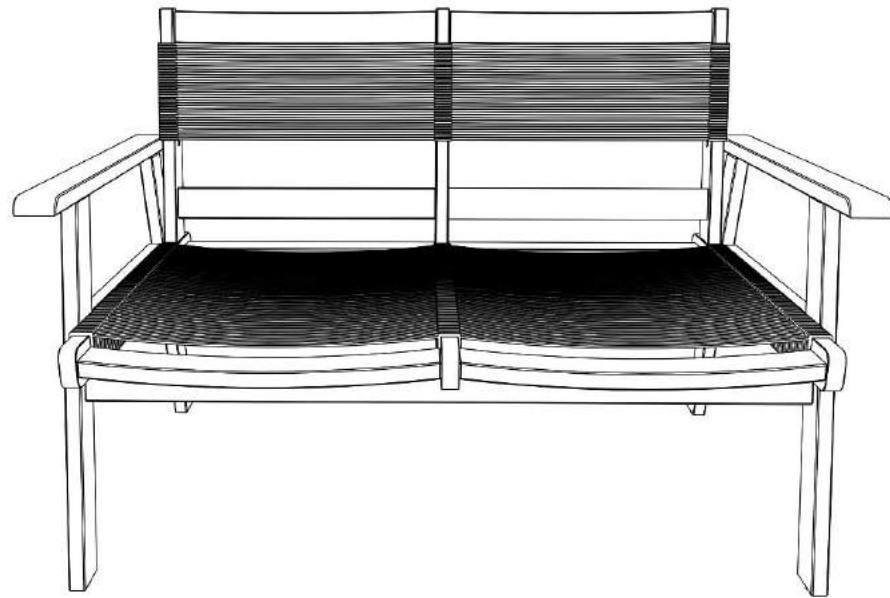


Components:


- 1 SREW M6 X 70 = 3PCS
- 2 SREW M6 X 45 = 4PCS
- 3 BOLT M6 X 40 = 4PCS
- 4 BOLT M6 X 65 = 2PCS
- 5 Allen Key 4 = 1 PC
- 6 Washers M6 X 16 = 2 PCS
- 7 SREW M6 X 60 = 4PCS

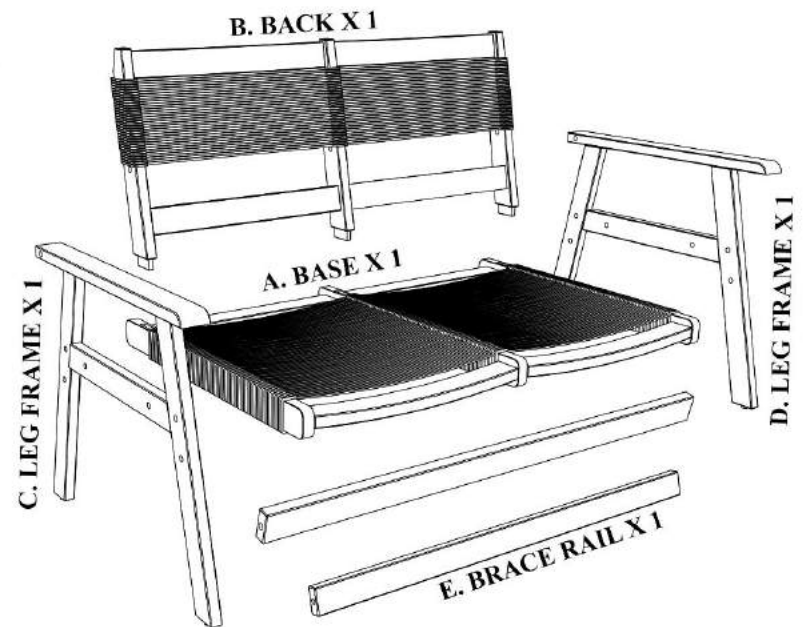

1. Step 1:

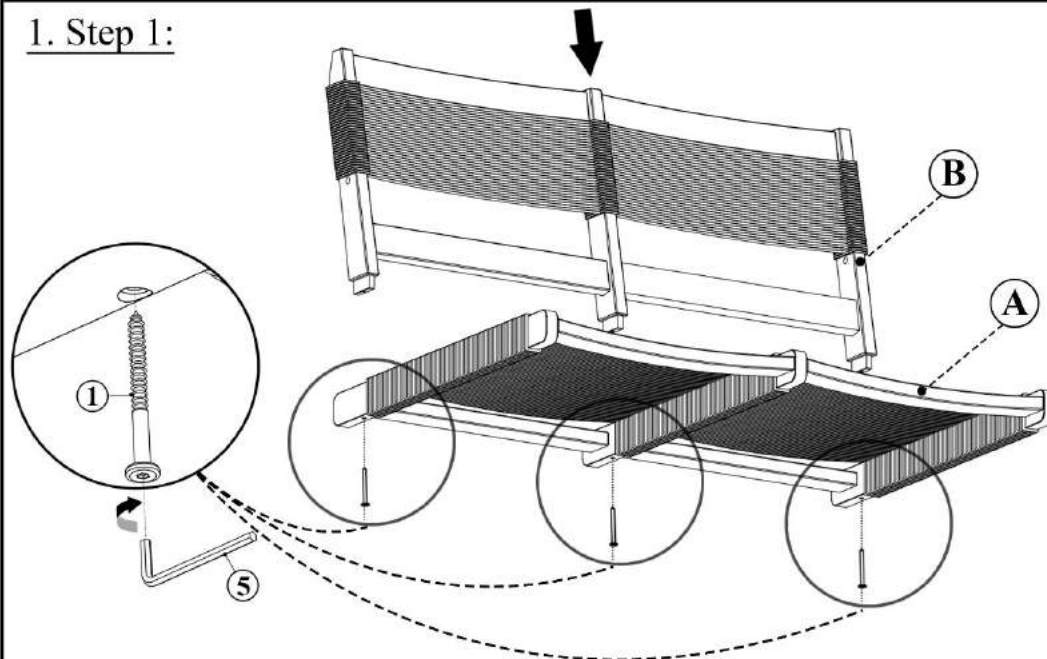


2. Step 2:

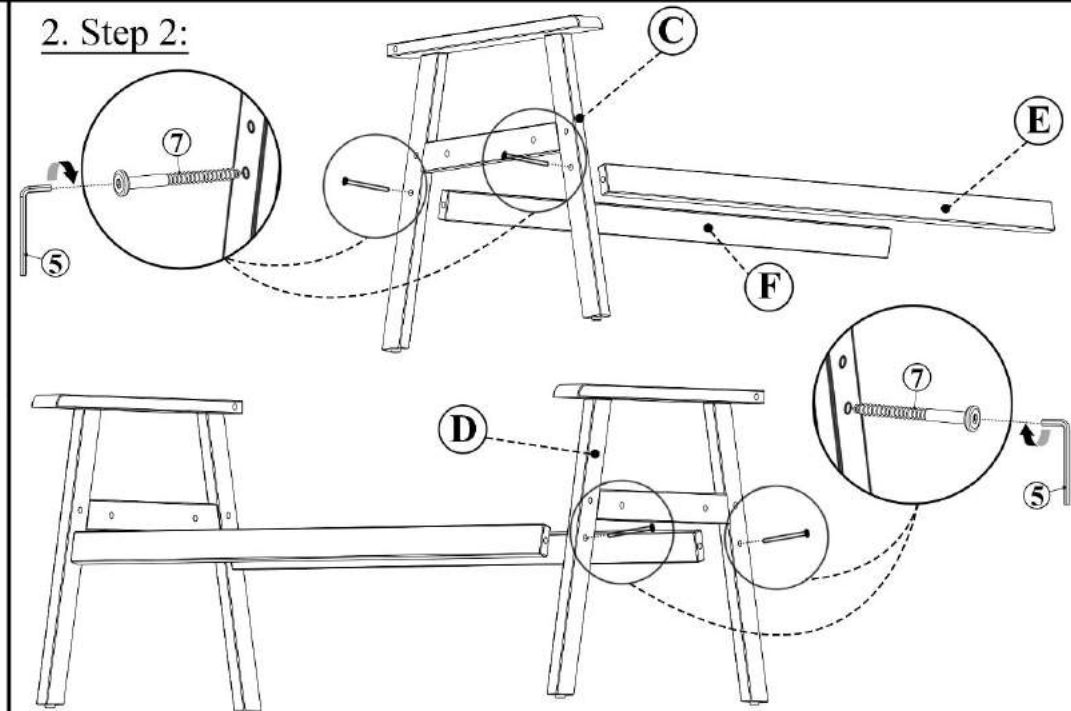


ASSEMBLY INSTRUCTIONS

20140178/01


3. Step 3:

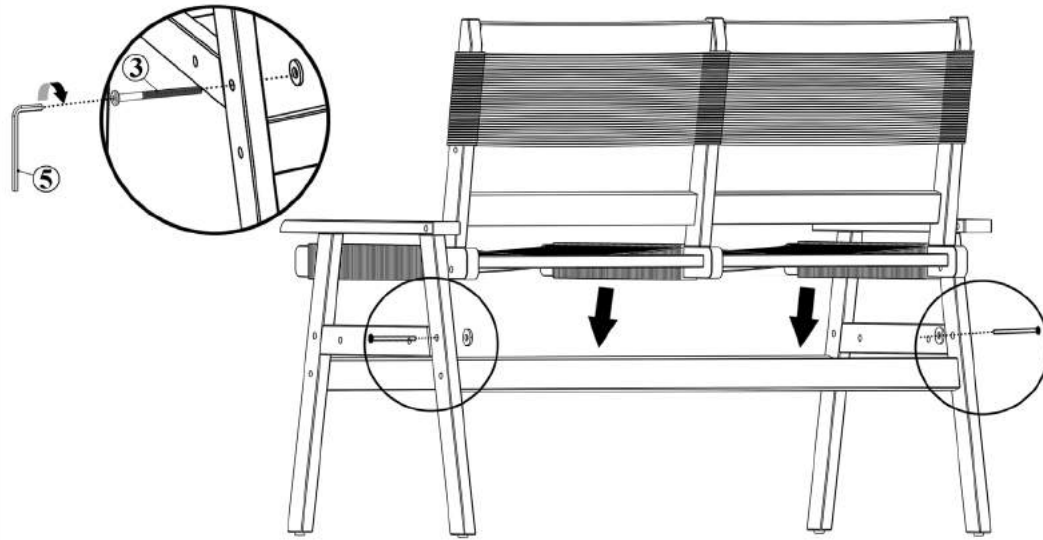


4. Step 4:

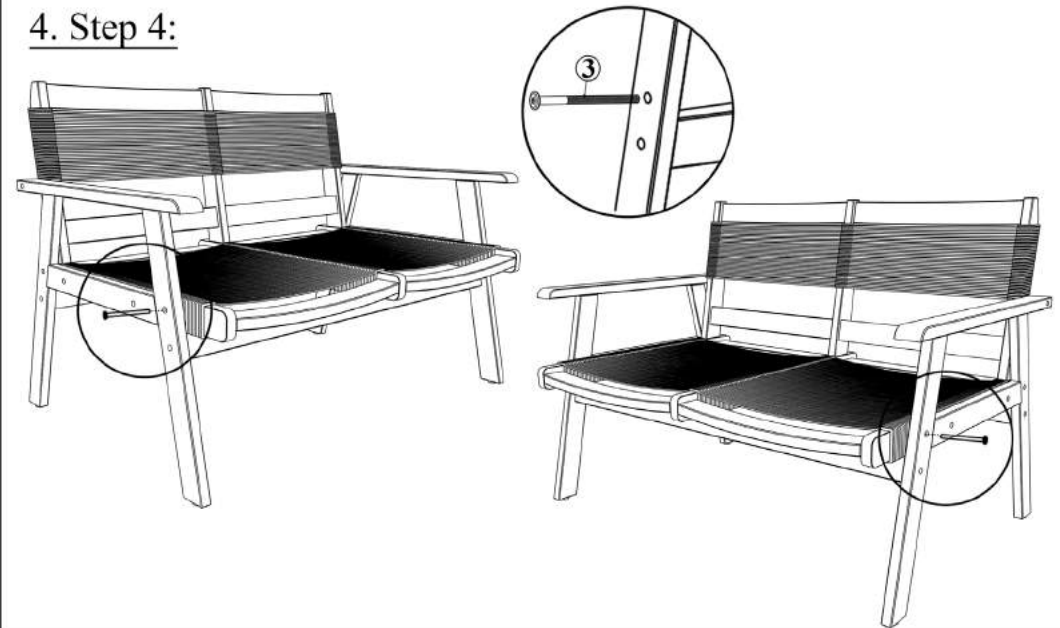

5. Step 5:

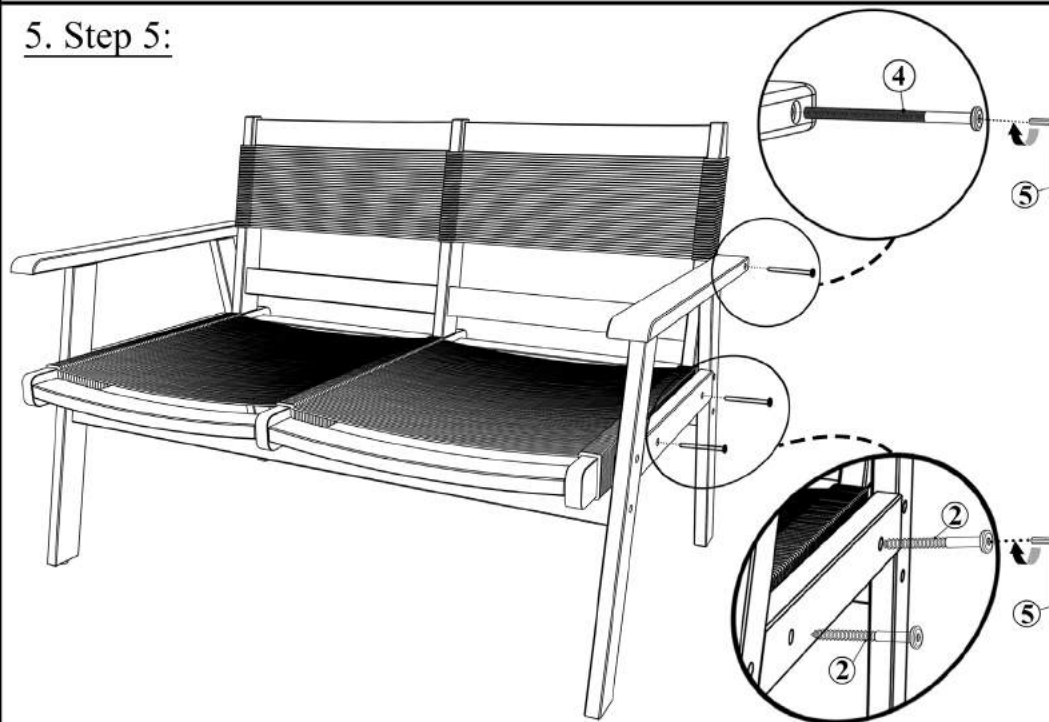

6. Step 6:

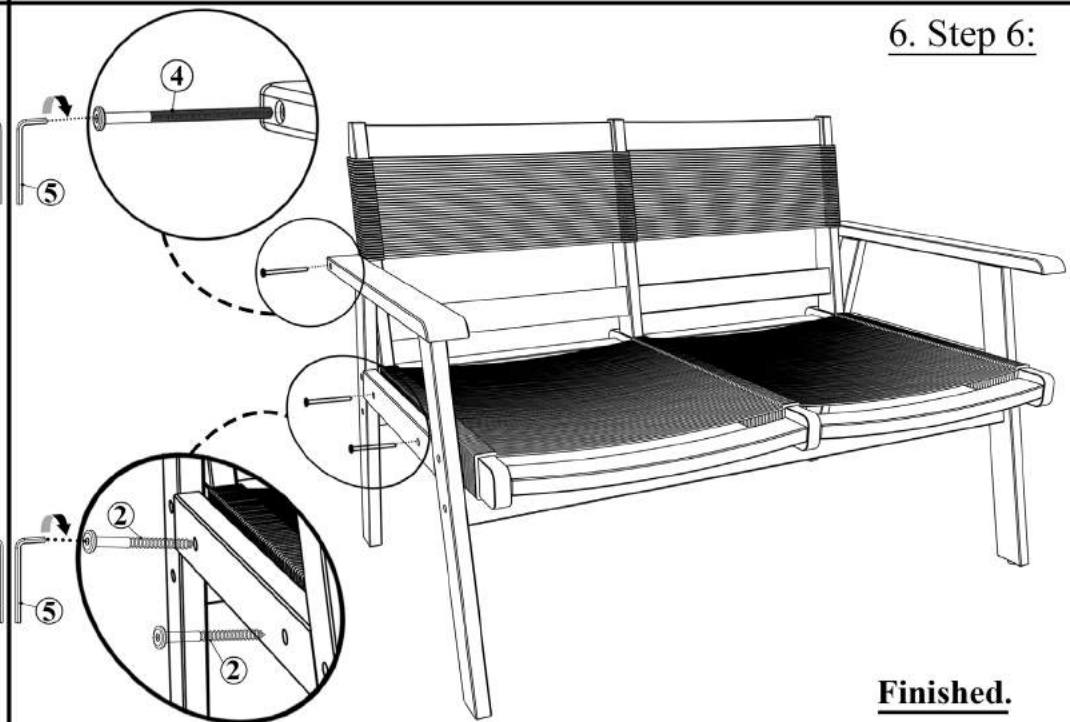


Finished.

ASSEMBLY INSTRUCTIONS

20140178/01


III.

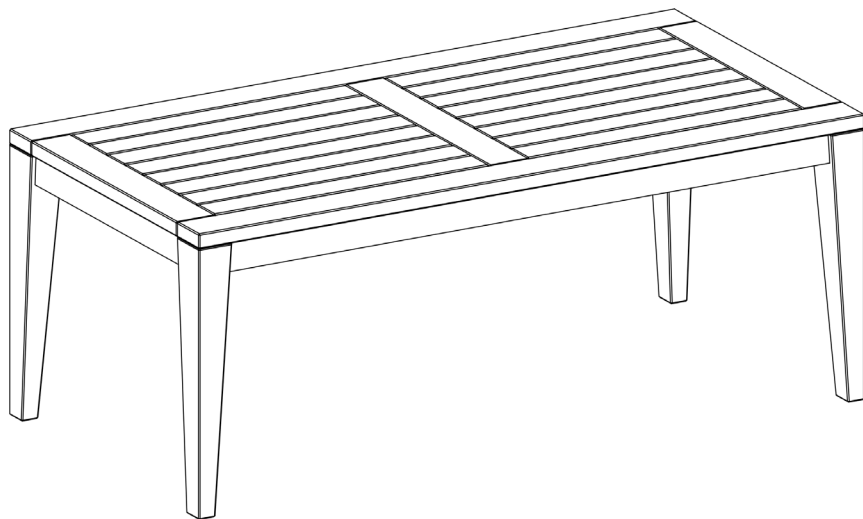

Components:

A. WOODEN TABLE TOP

B. LEG FRAME X4

- ①  Washers = 8 pcs
- ②  BOLT M6 x 40 = 8 pcs
- ③  Allen Key 4 = 1 pc

