



ASSEMBLY INSTRUCTION

MODEL : CF 9389 (6)		
A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	14 Pcs Slat 1797mm	1 pc
E	Center Rail 1890mm	2 pcs
F	Support Leg 2135mm	6 pcs
G	Headboard Metal (Left) 1950mm	1 pc
H	Headboard Metal (Right) 1950mm	1 pc
I	Footboard Metal (Left) 1950mm	1 pc
J	Footboard Metal (Right) 1950mm	1 pc
K	Headboard and footboard Upper Metal 1890mm	2 pcs
L	Side Rail Upper Metal 2040mm	2 pcs
Packing Hardware		
1	Black JCRC M6 X 20	16 pcs
2	Black JCRC M6 X 50	14 pcs
3	JCRB M8 X 20	8 pcs
4	M5 x 70mm	1 pc
5	M4 x 65mm	1 pc
6	CSK M4 x 25mm	2 pcs
7	CSK M4 x 32mm	28 pcs
8	Small Adjuster	6 pcs
9	Black Spring Washer	24 pcs
10	Black Flat Washer	8 pcs


Step 1 : Tighten the footboard(B) and headboard and footboard upper metal (K) to and footboard metal (I)/(J) as shown.

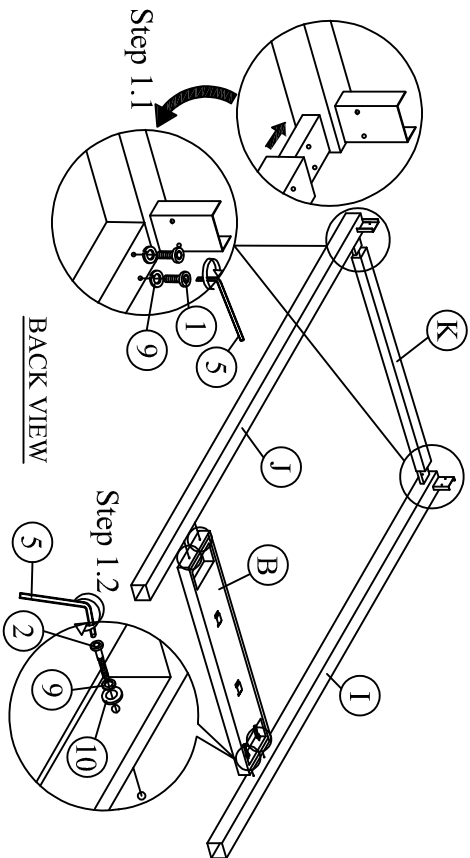


Step 3 : Attach side rail (C) to headboard metal (G)/(H) and footboard metal (I)/(J) by pushing the bracket down to fit it.

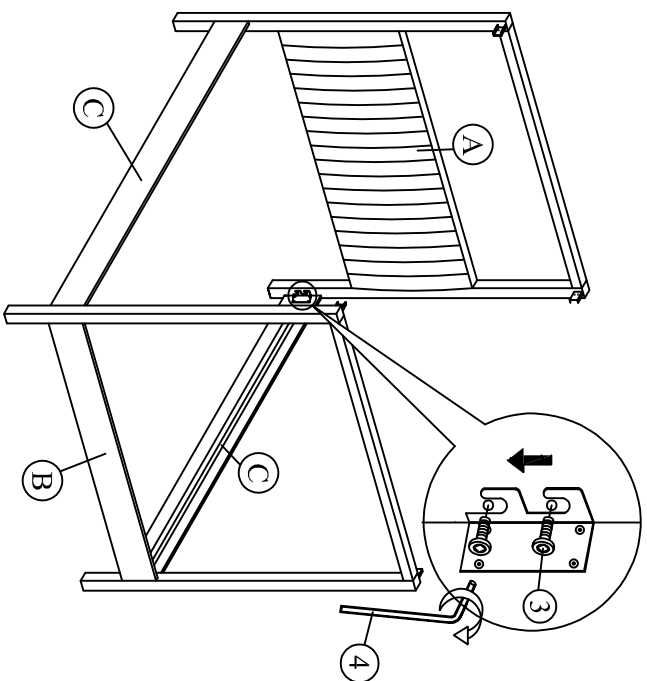


Step 2 : Tighten the headboard (A) and headboard and footboard upper metal (K) to headboard metal (G)/(H) as shown.

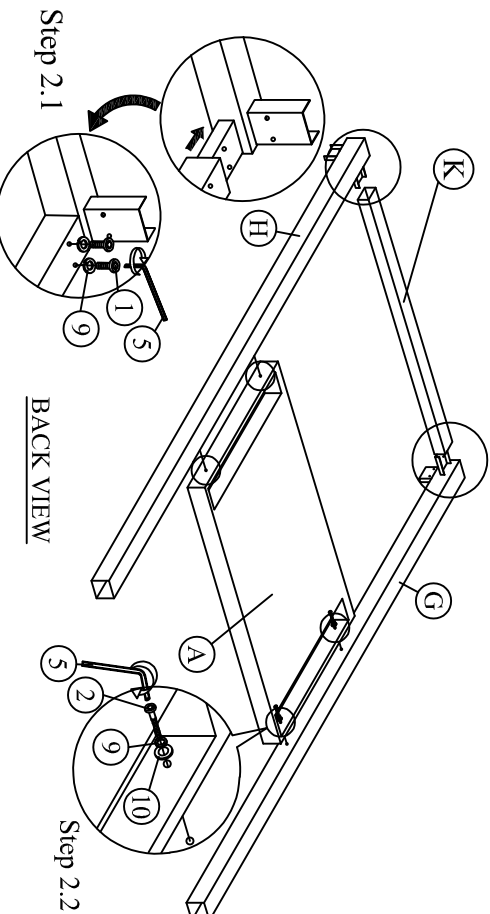

Step 4 : Attach side rail upper metal (L) to headboard metal (G)/(H) and footboard metal (I)/(J).

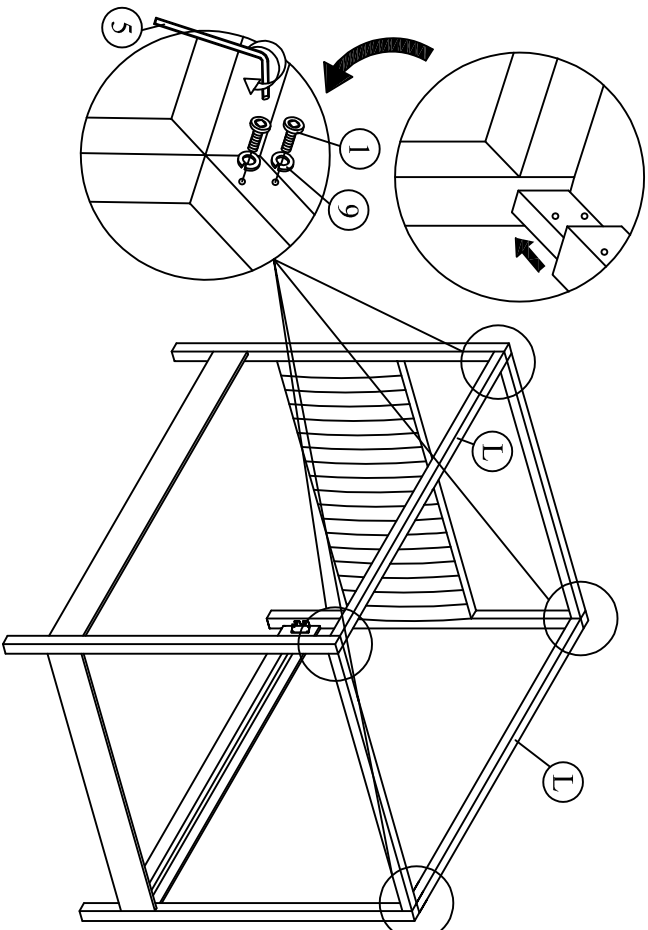


Step 5 : Attach the slat (D) and support legs (F) to the center rail (E) of the bed as shown.

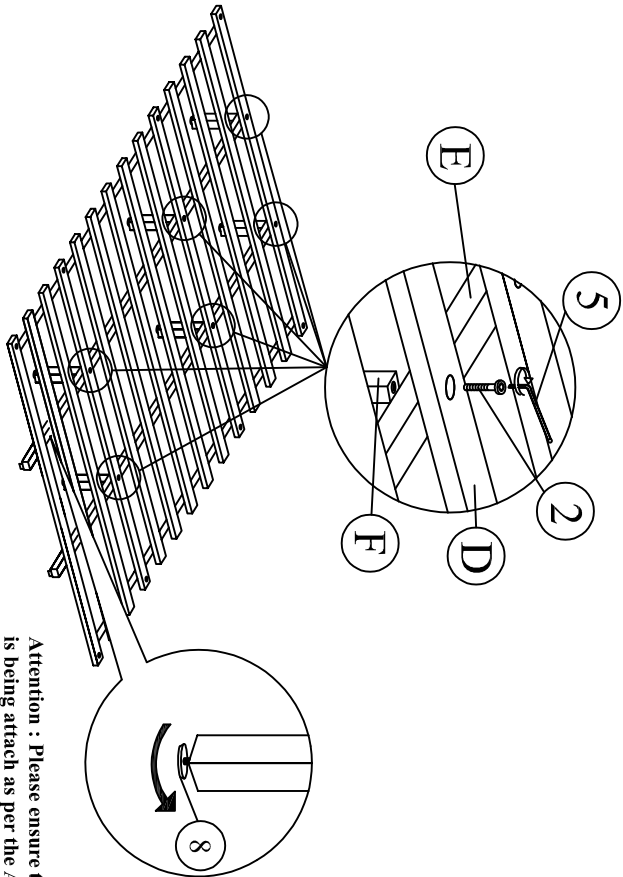


Attention : Please ensure that (8) screw is being attach as per the A.I shown to avoid base being collapse .

Step 6 : Slide the center rail (E) to the footboard (B). Tighten screws (6) using screw driver (not included) to the footboard (B).

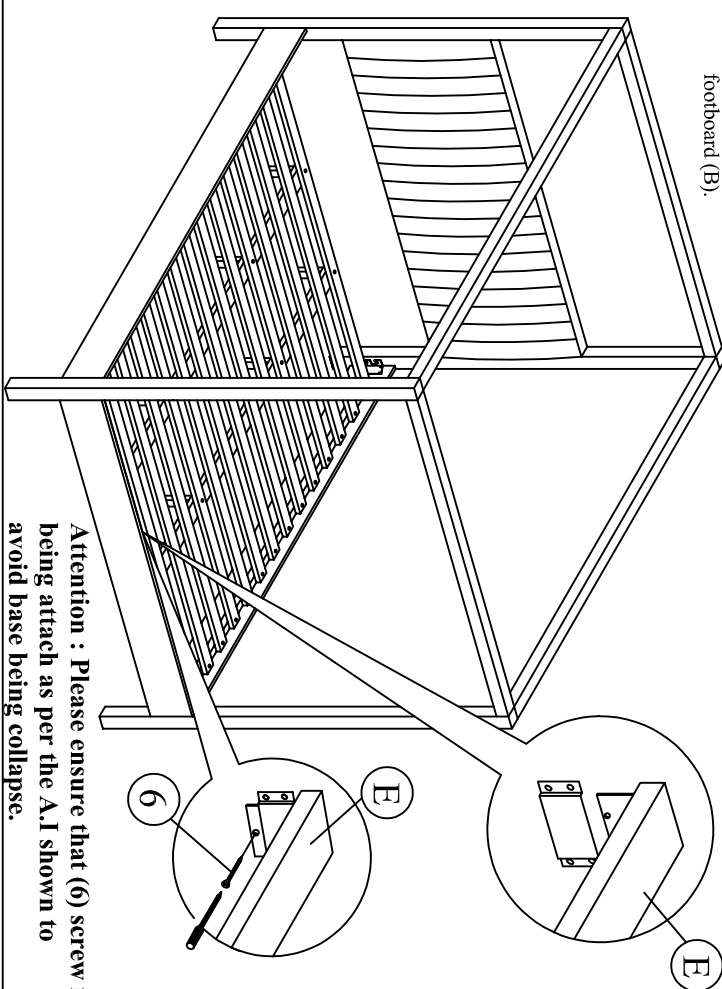

Attention : Please ensure that (6) screw is being attach as per the A.I shown to avoid base being collapse.

Step 7 : Affix the Slat (D) to the side rail support wood and the center rail (E). Tighten all the 4 corner .

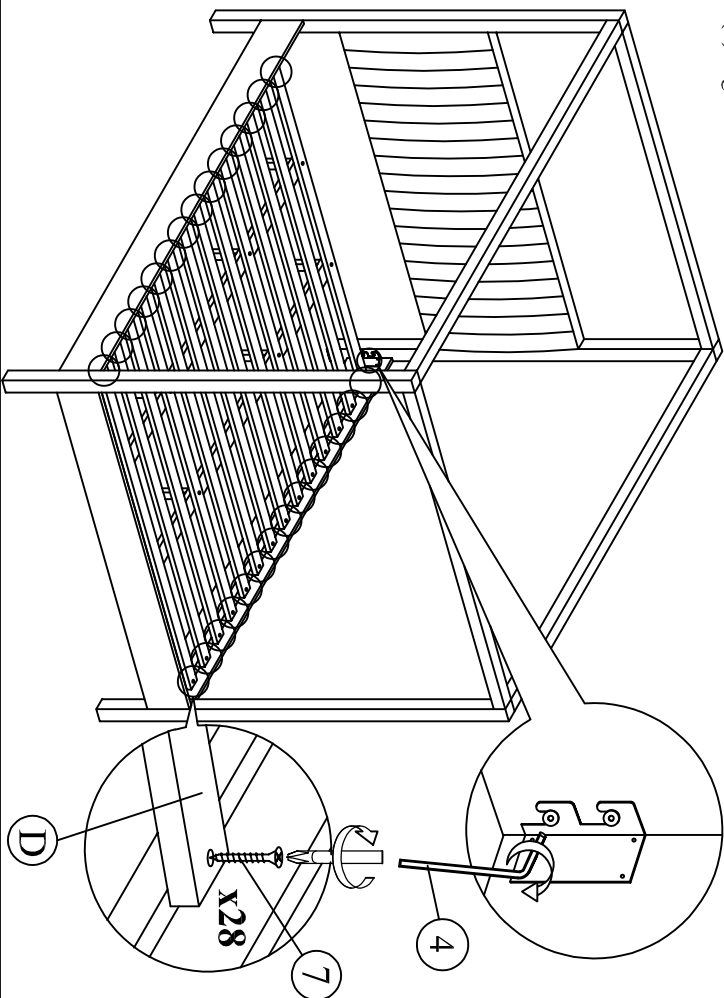

x28