

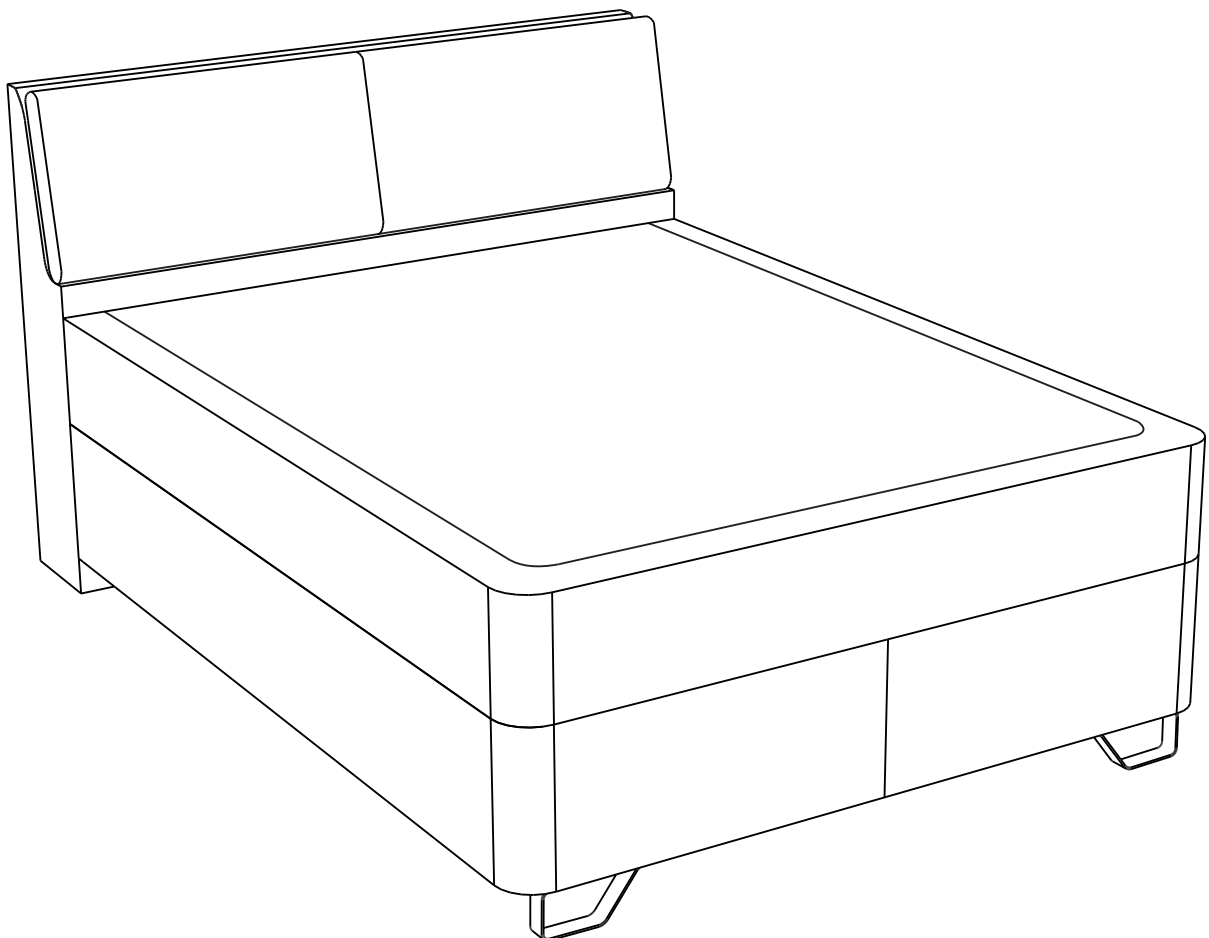



(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

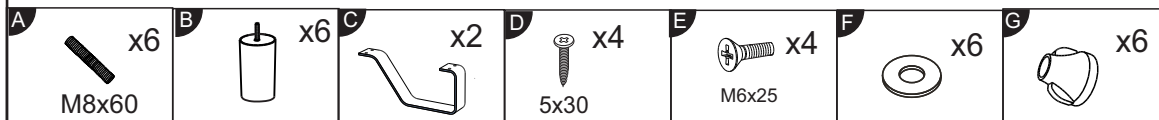

BOXSPRING TABEA

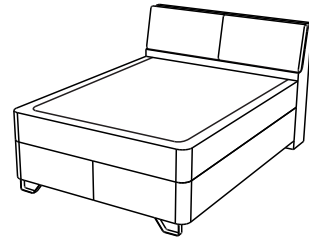

2 X
15min



- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
NAVODILA ZA MONTAŽO
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS


BOXSPRING

TABEA

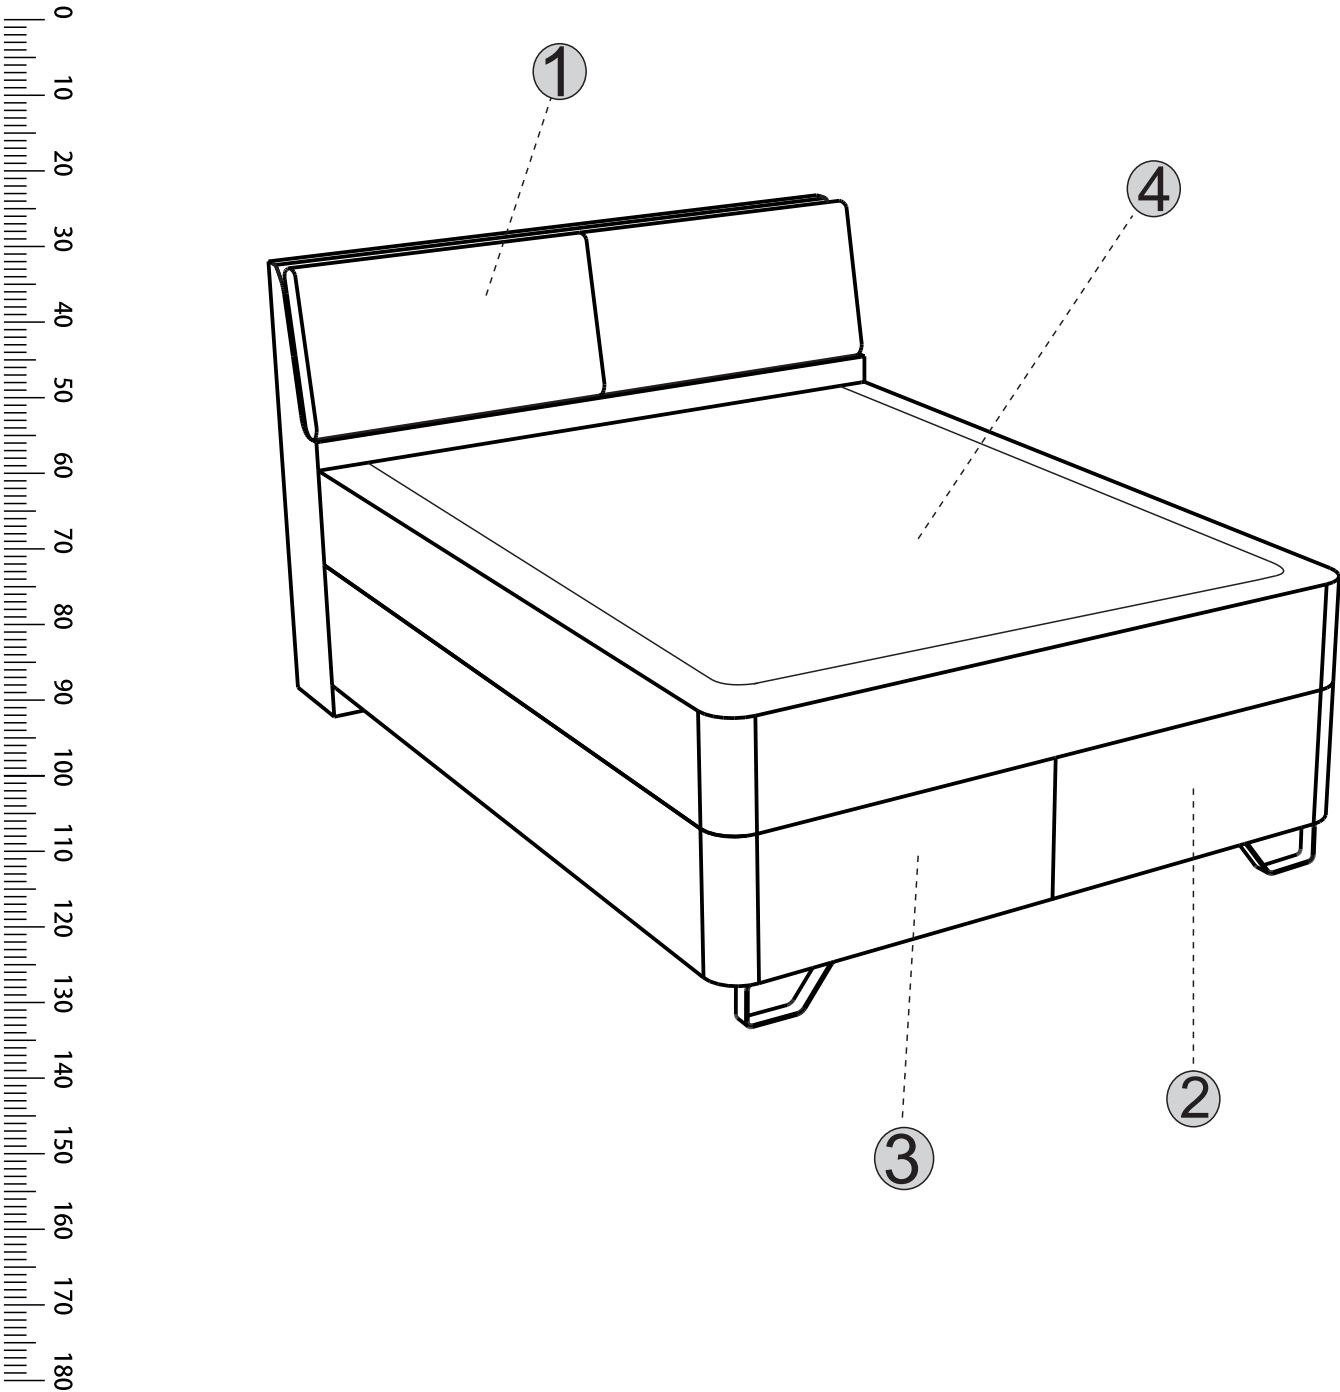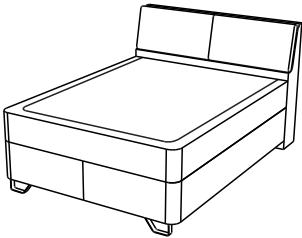


(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE



(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

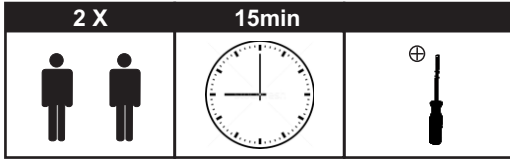


BOXSPRING TABELA

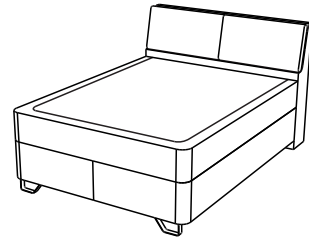

1

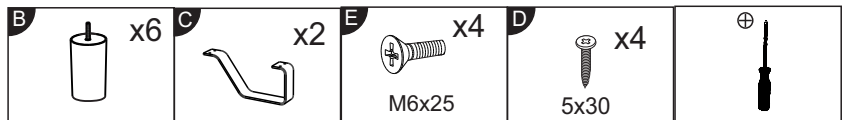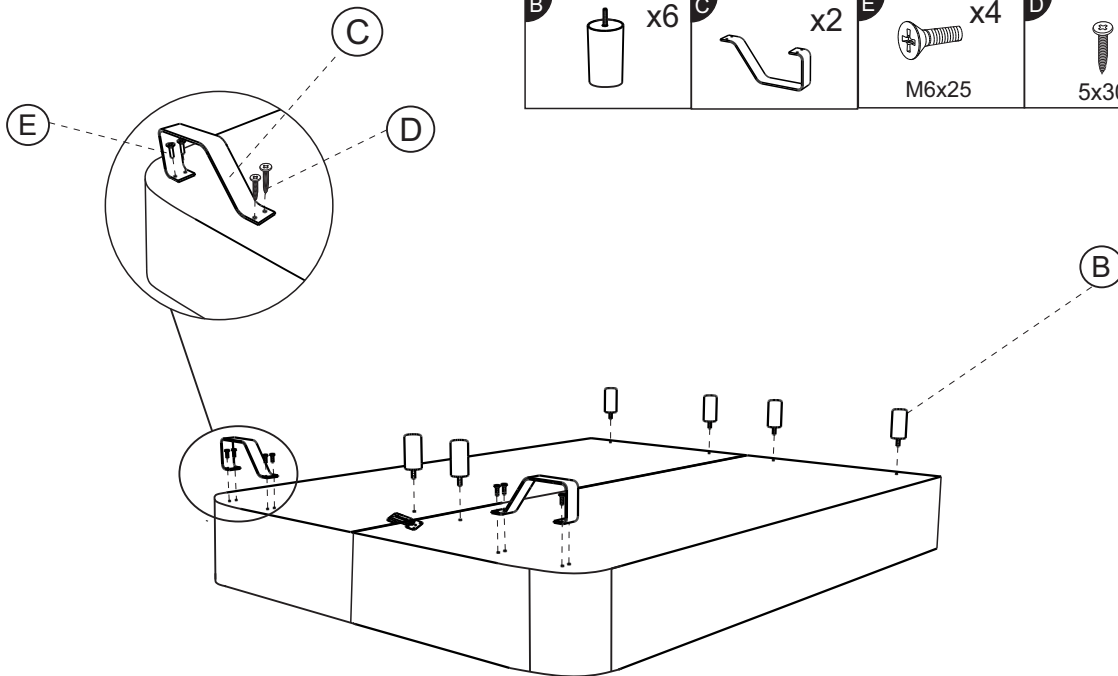

2

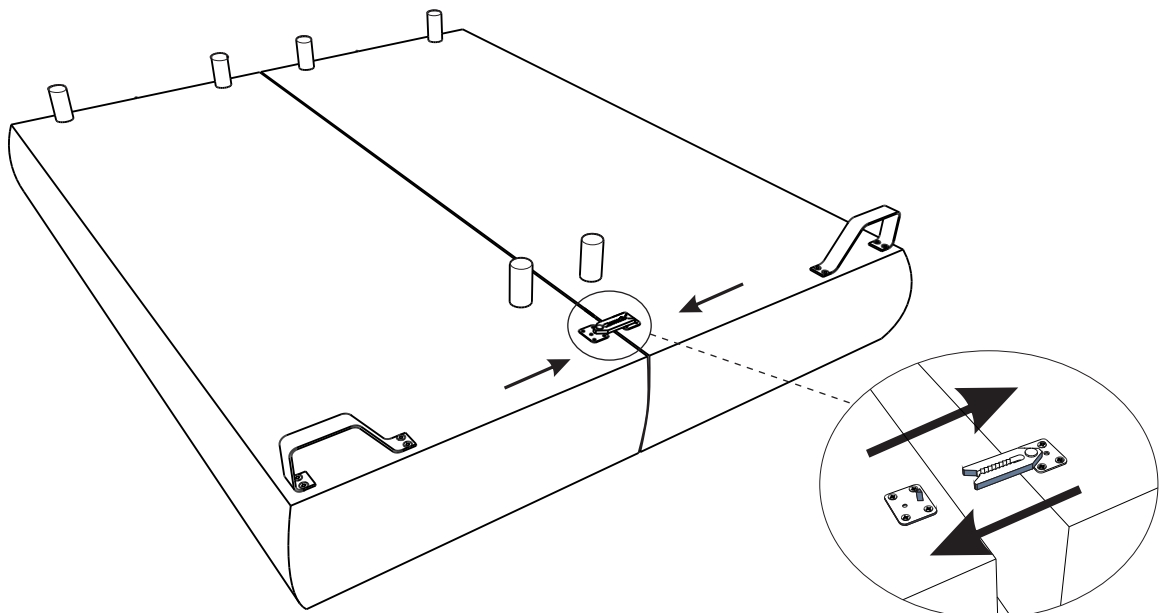

2 X


15min

- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
NAVODILA ZA MONTAŽO
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS

BOXSPRING TABEA

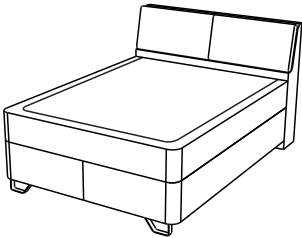

3

A

x6
M8x60

4

F
G

x6 x6

2 X
15min




- D
NL
TR
RO
F
CZ
BG
HR
E

AUFBAUANLEITUNG
HANDLEIDING VOOR DE MONTAGE
MONTAJ TALIMATI
INSTRUCTIUNI DE ASAMBLARE
INSTRUCTION D'ASSEMBLAGE
POKYNY K MONTÁŽI
ИНСТРУКЦИИ ЗА МОНТАЖ
NAPUTCI ZA MONTAŽU
INSTRUCCIONES DE MONTAJE
- GB
PL
RU
I
SK
HU
SLO
S
LT

ASSEMBLY INSTRUCTIONS
INSTRUKCJA MONTAŻU
Инструкция по монтажу
PROCEDURA DI ASSEMBLAGGIO
POKYNY K MONTÁŽI
KÖZGYŰLÉS UTASÍTÁSOK
NAVODILA ZA MONTAŽO
MONTERINGSANVISNING
DIEGIMO INSTRUKCIJOS

BOXSPRING

TABEA

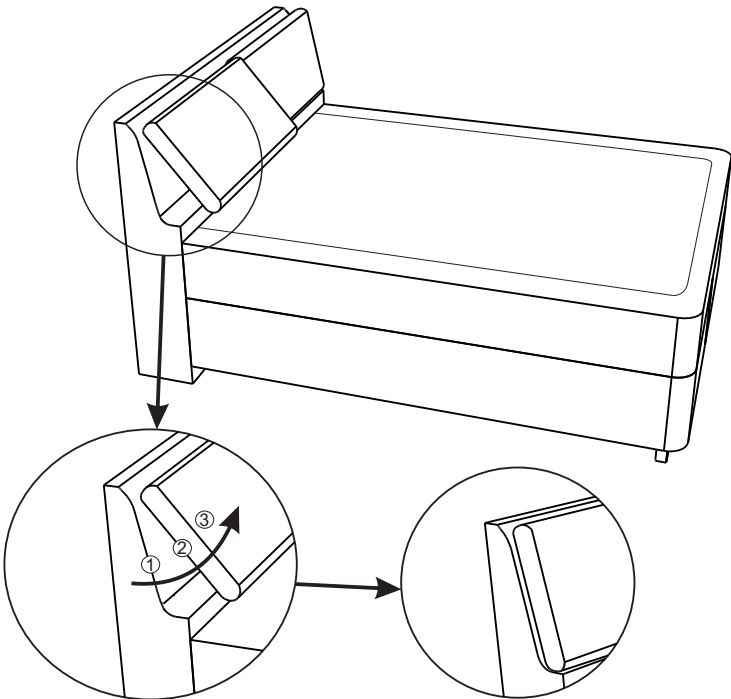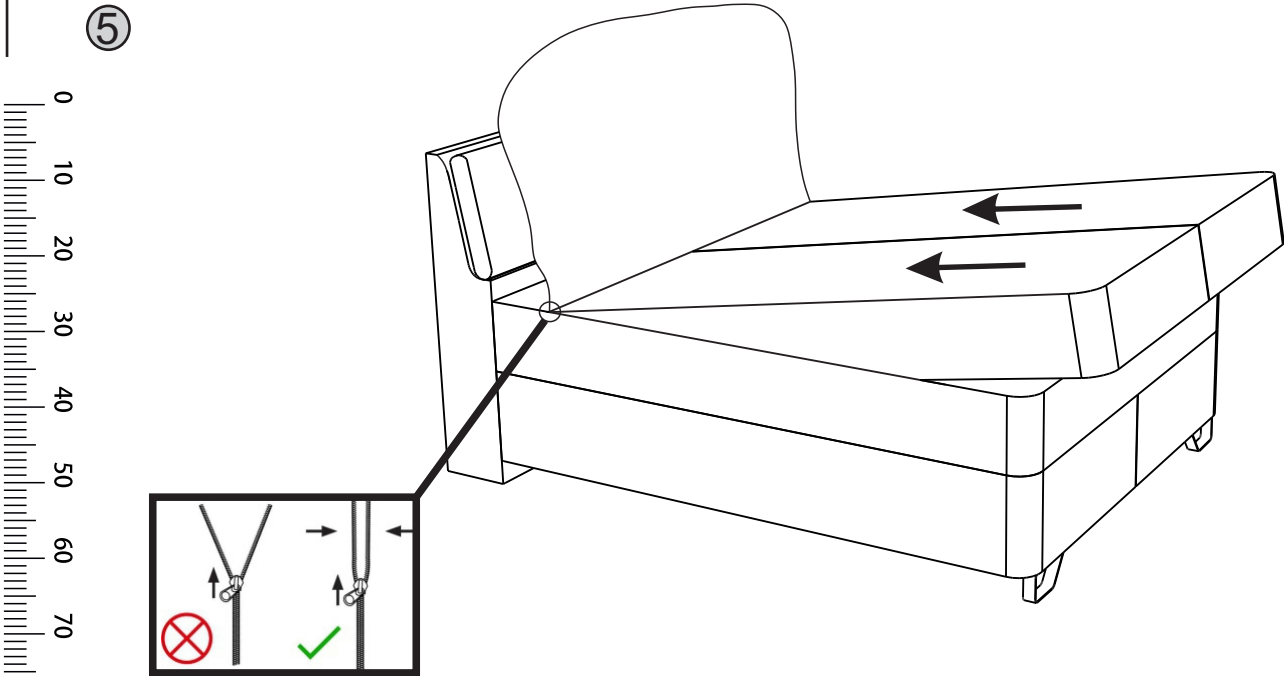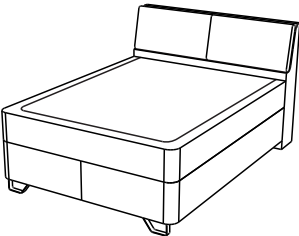



- (D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) NAVODILA ZA MONTAŽO
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

BOXSPRING TABEA

