



ASSEMBLY INSTRUCTION

20140269-01

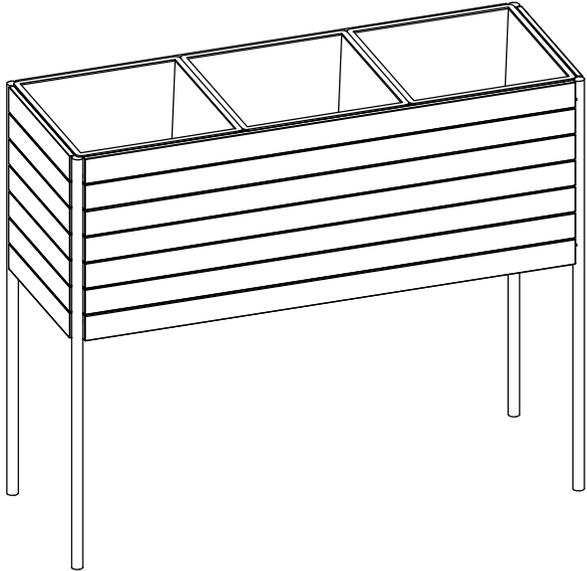

FLOWERPOT

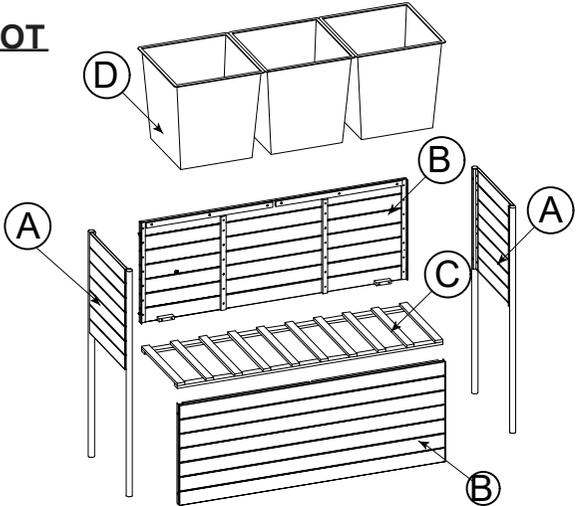

1



Allen Key (1 pc)

2




Bolt M6x15 (8 pcs)

3




Screw M4x20 (4 pcs)


Step 1:

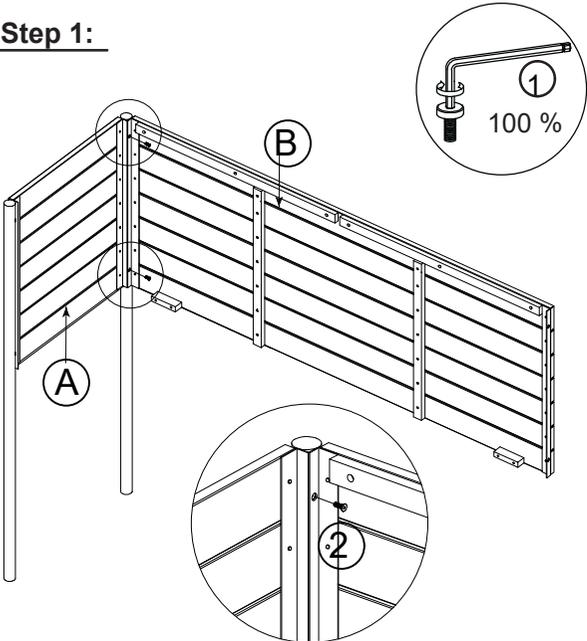

Step 2:

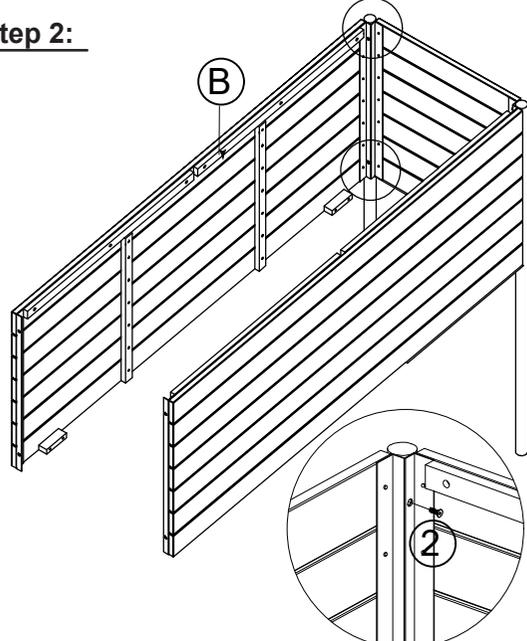


Step 3:

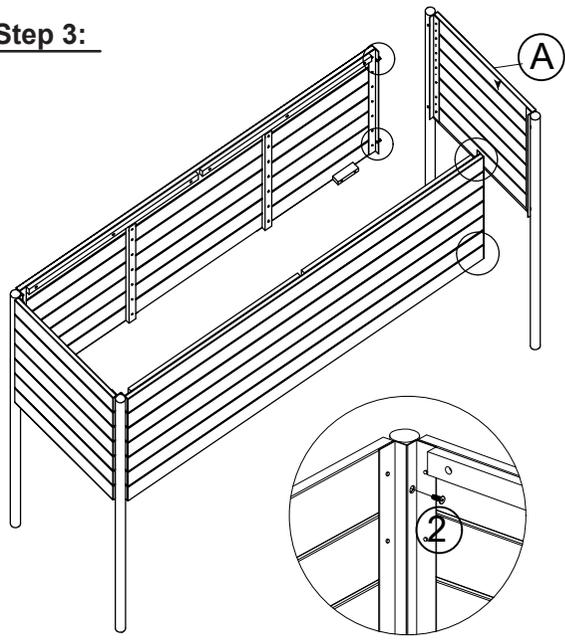


ASSEMBLY INSTRUCTION

20140269-01



Step 4:

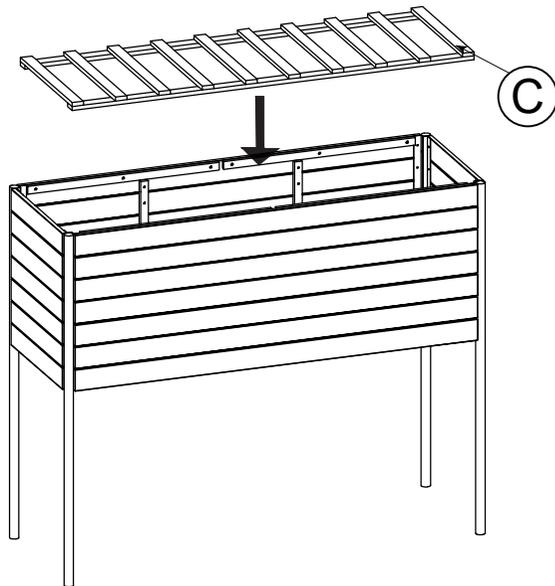

Step 5:

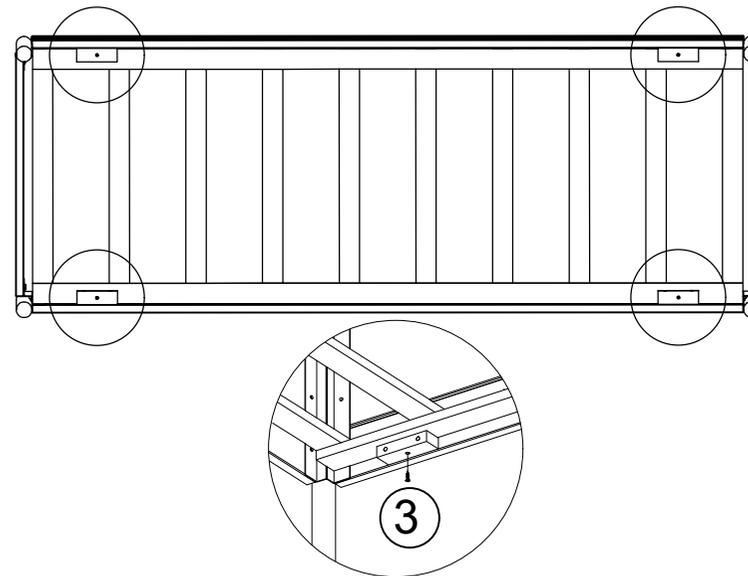

Step 6:

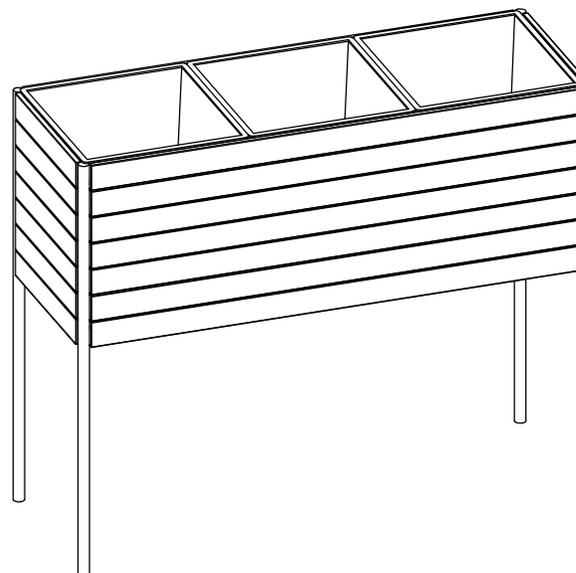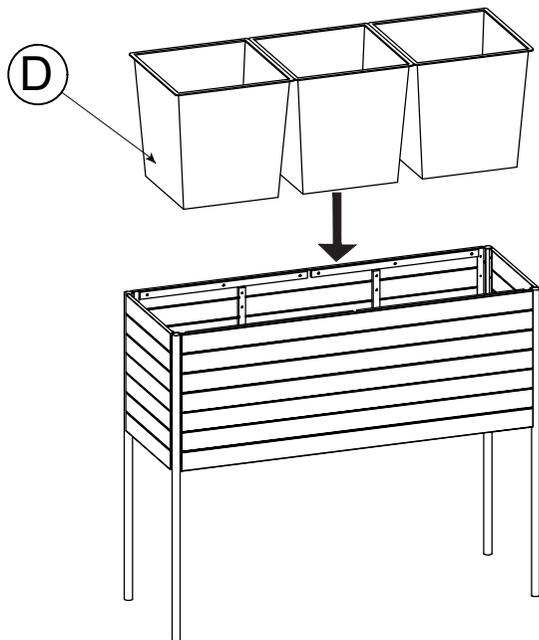

FINISHED.