
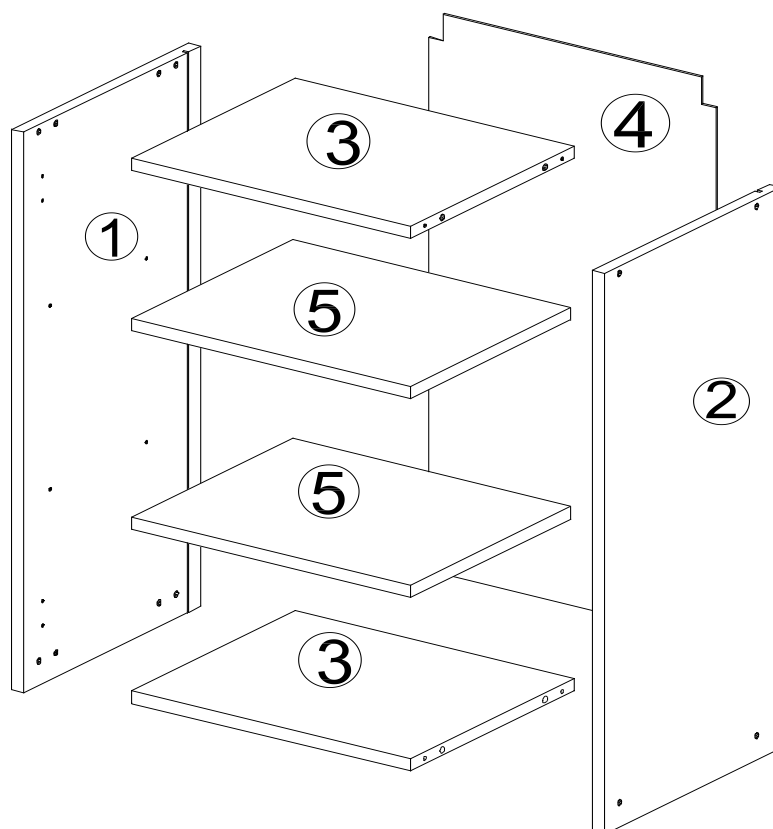


20min

Egy szakszerűtlen felfüggesztés a felsőszekrény leszakadásához vezethet. Amennyiben bizonytalan a dübel típusával kapcsolatban, kérdezzen utána a szakkereskedésbe. Használjon minden képpen dübelt, a felfüggesztés teherbírásának érdekében!

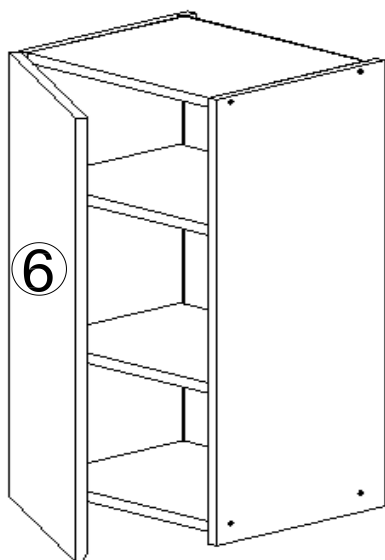


	30	40	45	50	60	DB
1-2	720X330	720X330	720X330	720X330	720X330	2X
3	267X306	367X306	417X306	467X306	567X306	2X
4	696X280	696X380	696X430	696X480	696X580	1X
5	267X300	367X300	417X300	467X300	567X300	2X
6	716X294	716X394	716X444	716X494	71X594	1X

PL 16 2X	HK 01 2X	PL00 2X	
-------------	-------------	------------	--


KO 01 8*30 8X	KN 03 7*50 8X	PL 12 8X	PP 01 8x	PN 01 2X	AK 103 2X
------------------	------------------	-------------	-------------	-------------	--------------

DR 42 4*30 4X	DR 27 3,5*16 4X	DR 25 4*25 2x	KV 01 1,5*20 30X	PD 01 1X	KL 01 4 mm 1X
------------------	--------------------	------------------	---------------------	-------------	------------------


1.

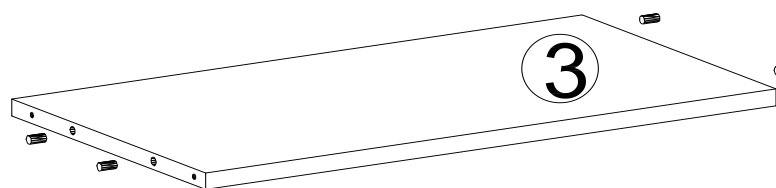

2x

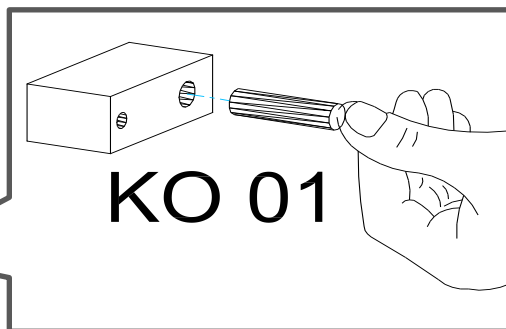


2.

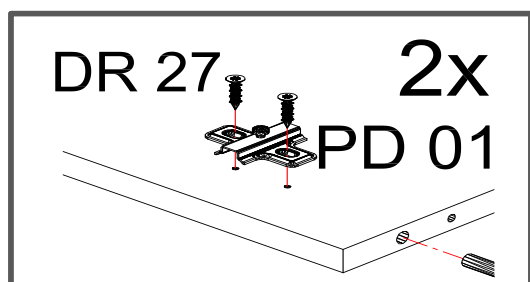



2x

PD 01

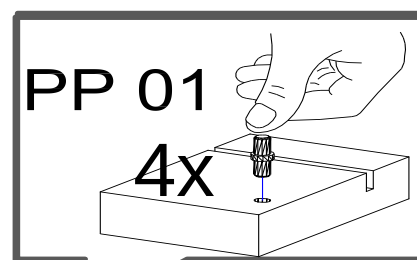


PP 01

4x

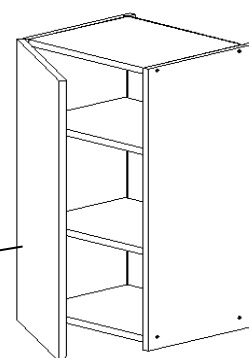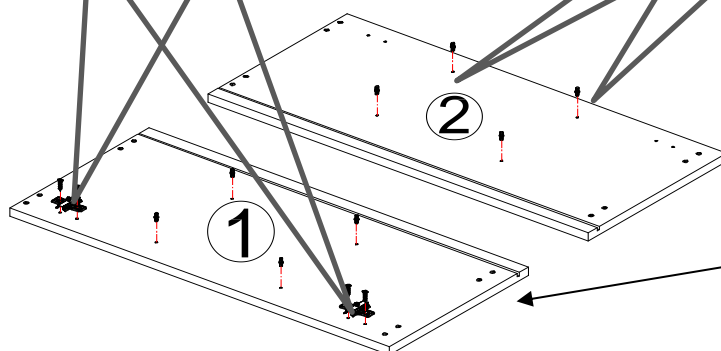



BALOS

3.

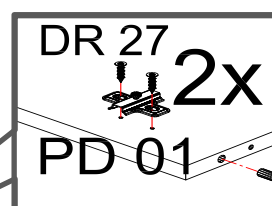


DR 27 2x

PD 01

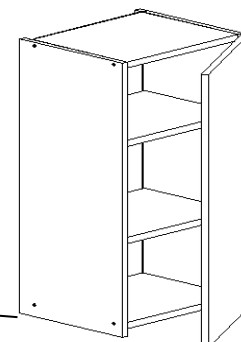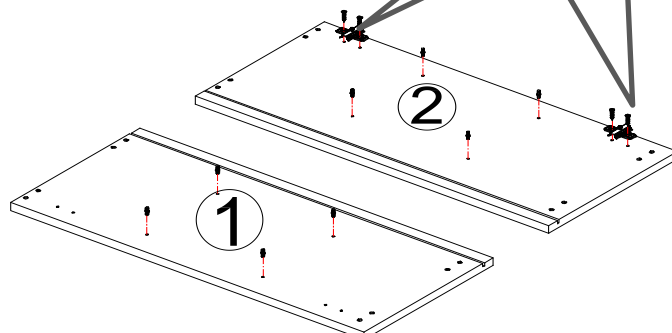


JOBOS


4.

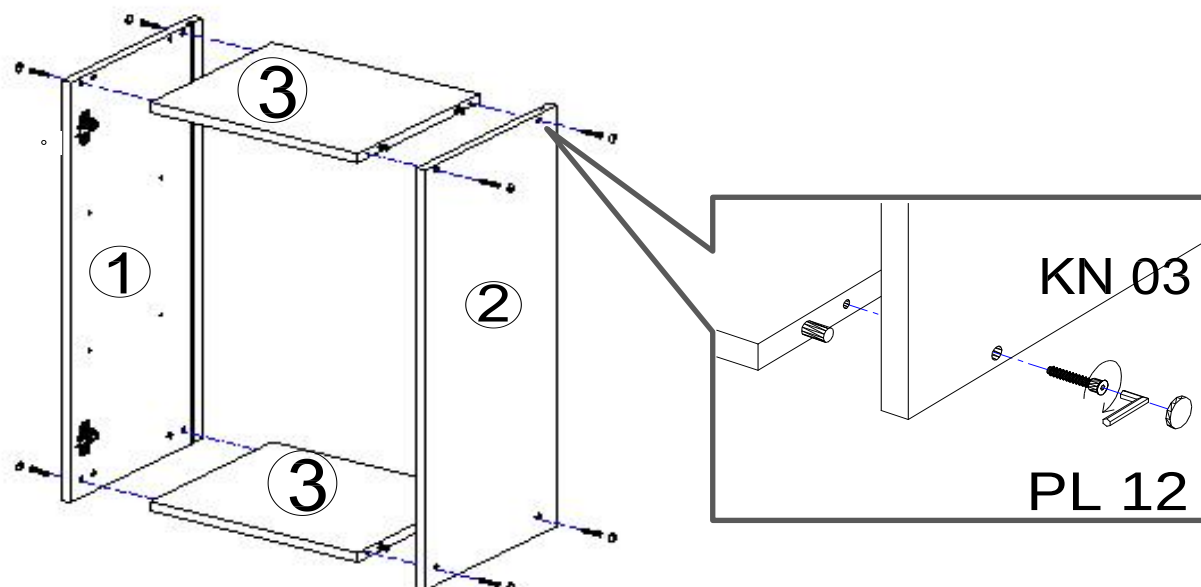



5.

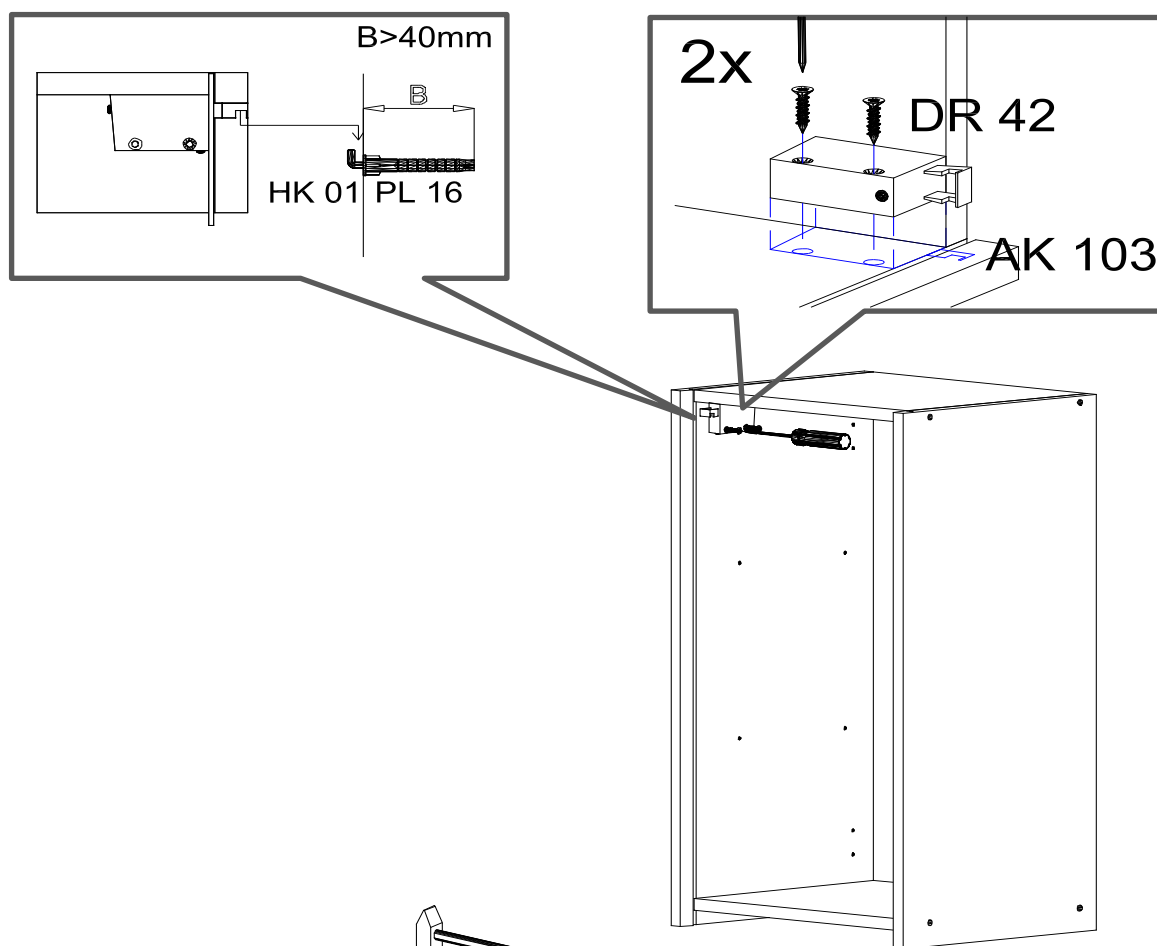


6.

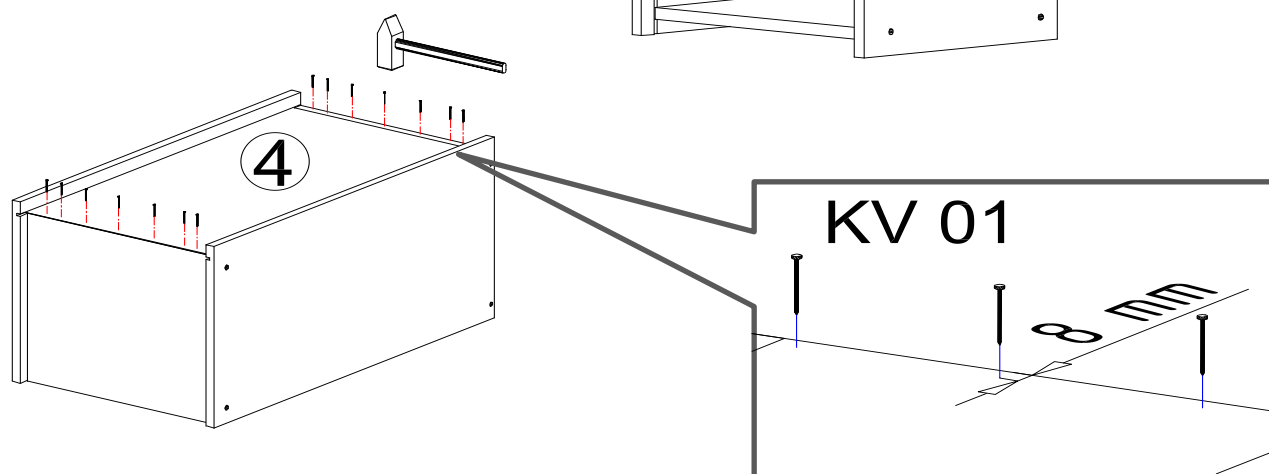

7.

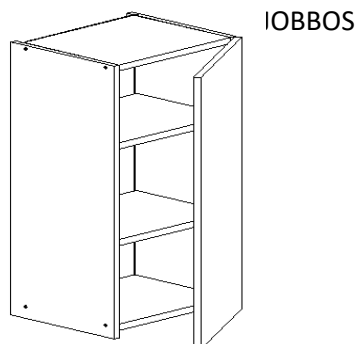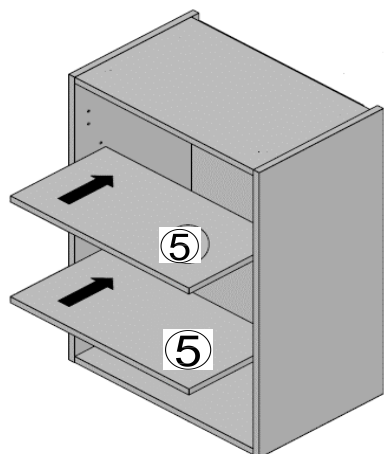


IOBBOS

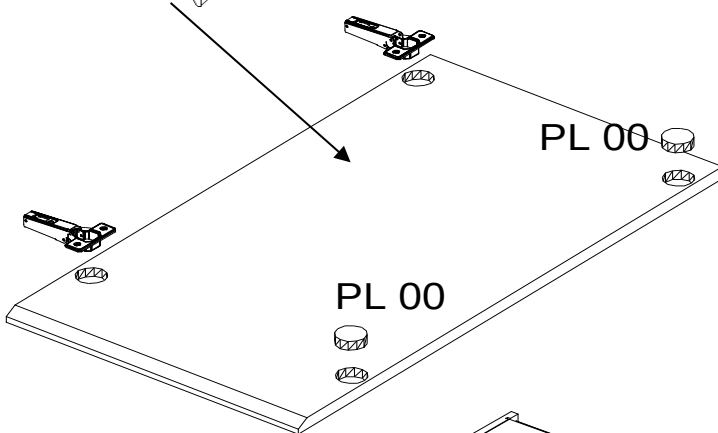


PL 00

PL 00


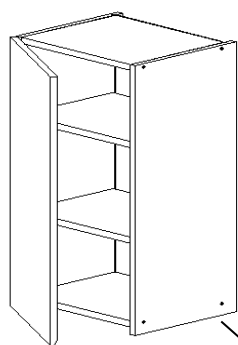


BALOS

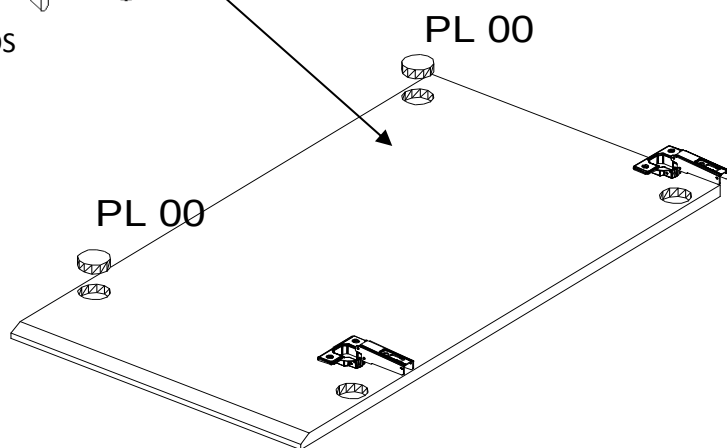


PL 00

PL 00

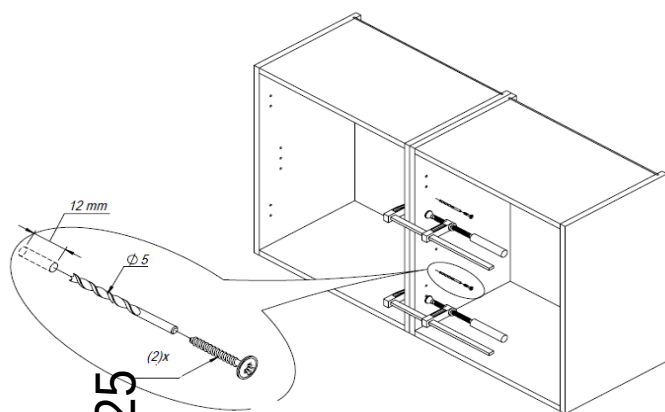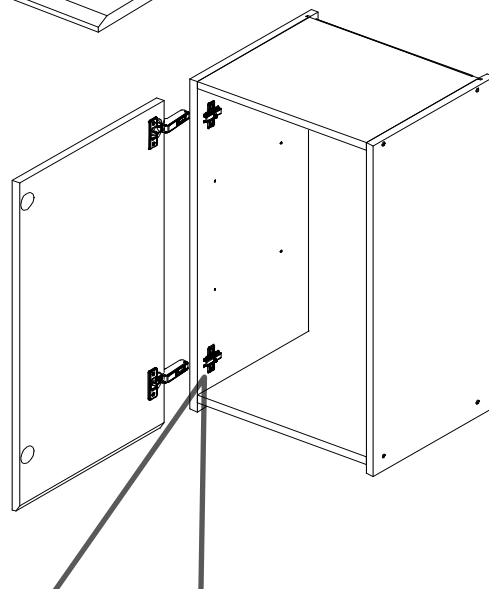

DR 25

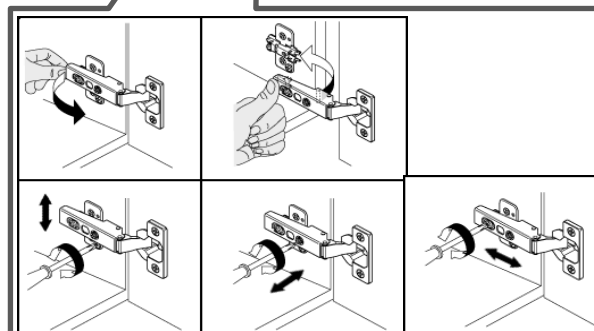

Az elemek megfelelő stabilitása és baleset megelőzés céljából, az elemeket célszerű egymáshoz rögzíteni egy rejtett pozícióban a (DR 25 4*25) facsavarral!