
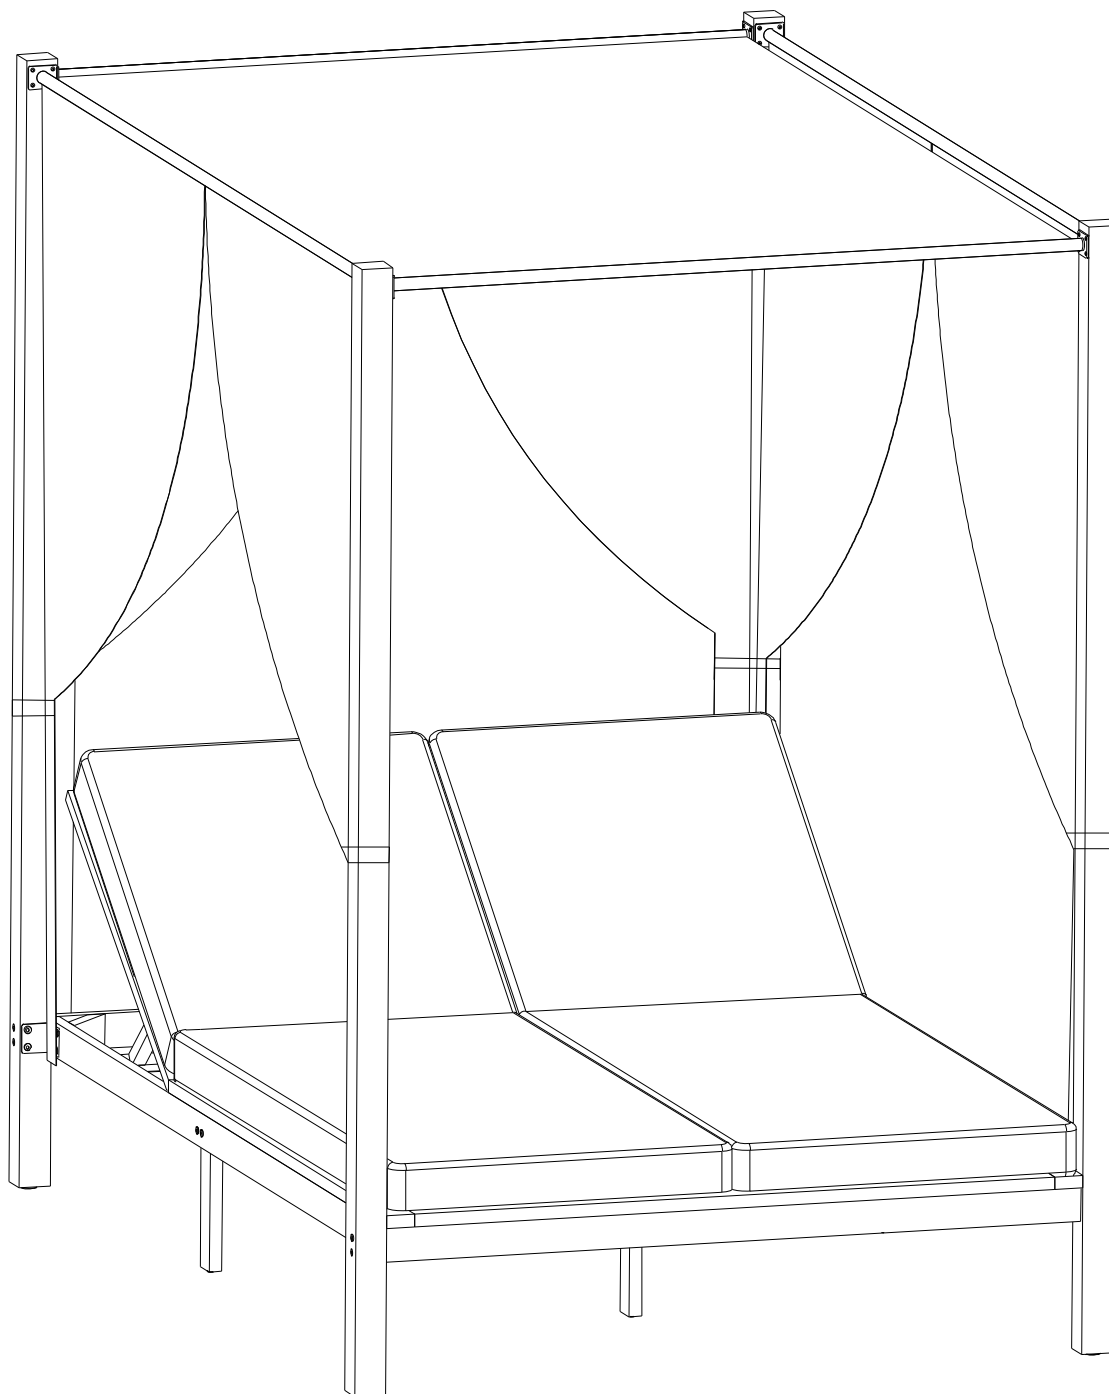
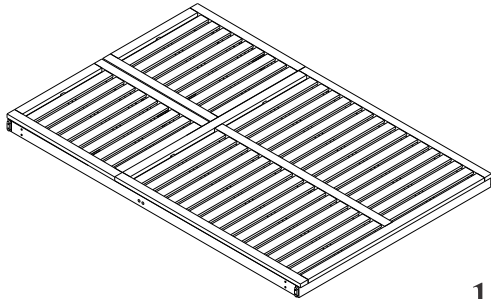

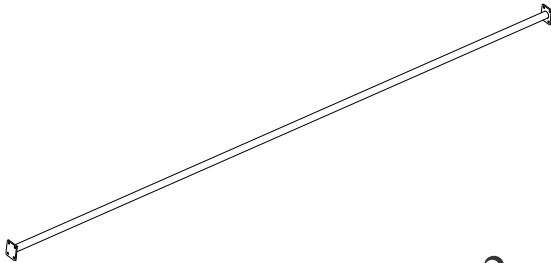
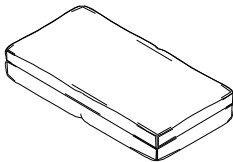


ASSEMBLY INSTRUCTION





Article Number: 20140218/01

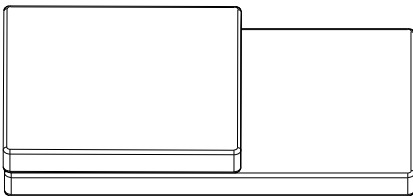

PART LIST


A  1 pc	B  4 pcs
C  3 pcs	D  2 pcs
E  2 pcs	F  1 pc
G  2 pcs	

HARDWARE LIST

1		Vis M6 x 90	8 pcs
2		Vis M6 x 30	16 pcs
3		Vis M6 x 25	32 pcs
4		Bolt M6 x 35	6 pcs
5		Pat	4 pcs
6		Allen Key	2 pcs



SkyBed

4




Bolt M6 x 35

6 pcs

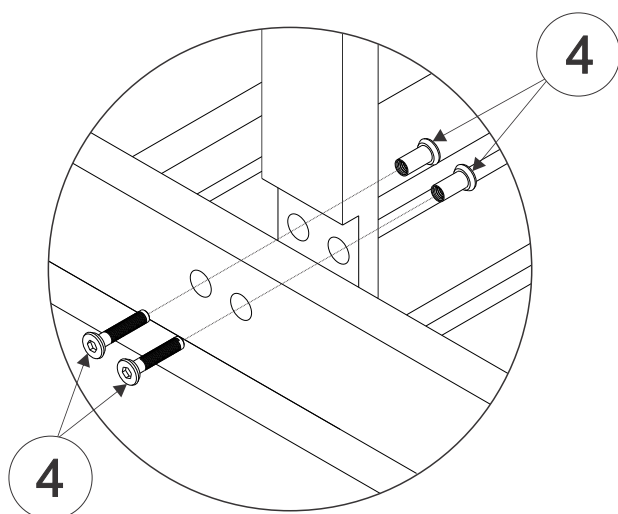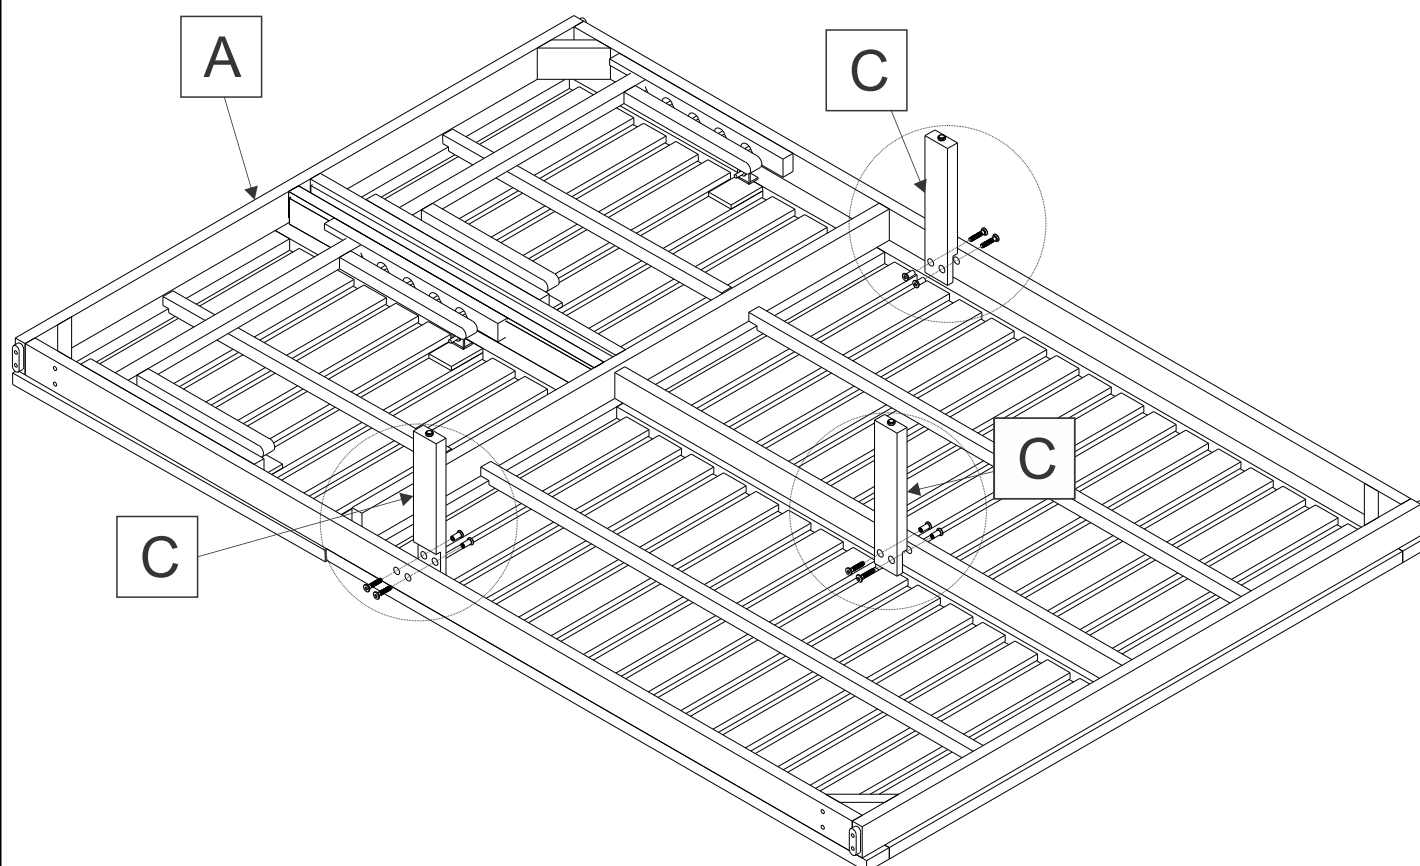


SkyBed

1




Vis M6 x 90

8 pcs


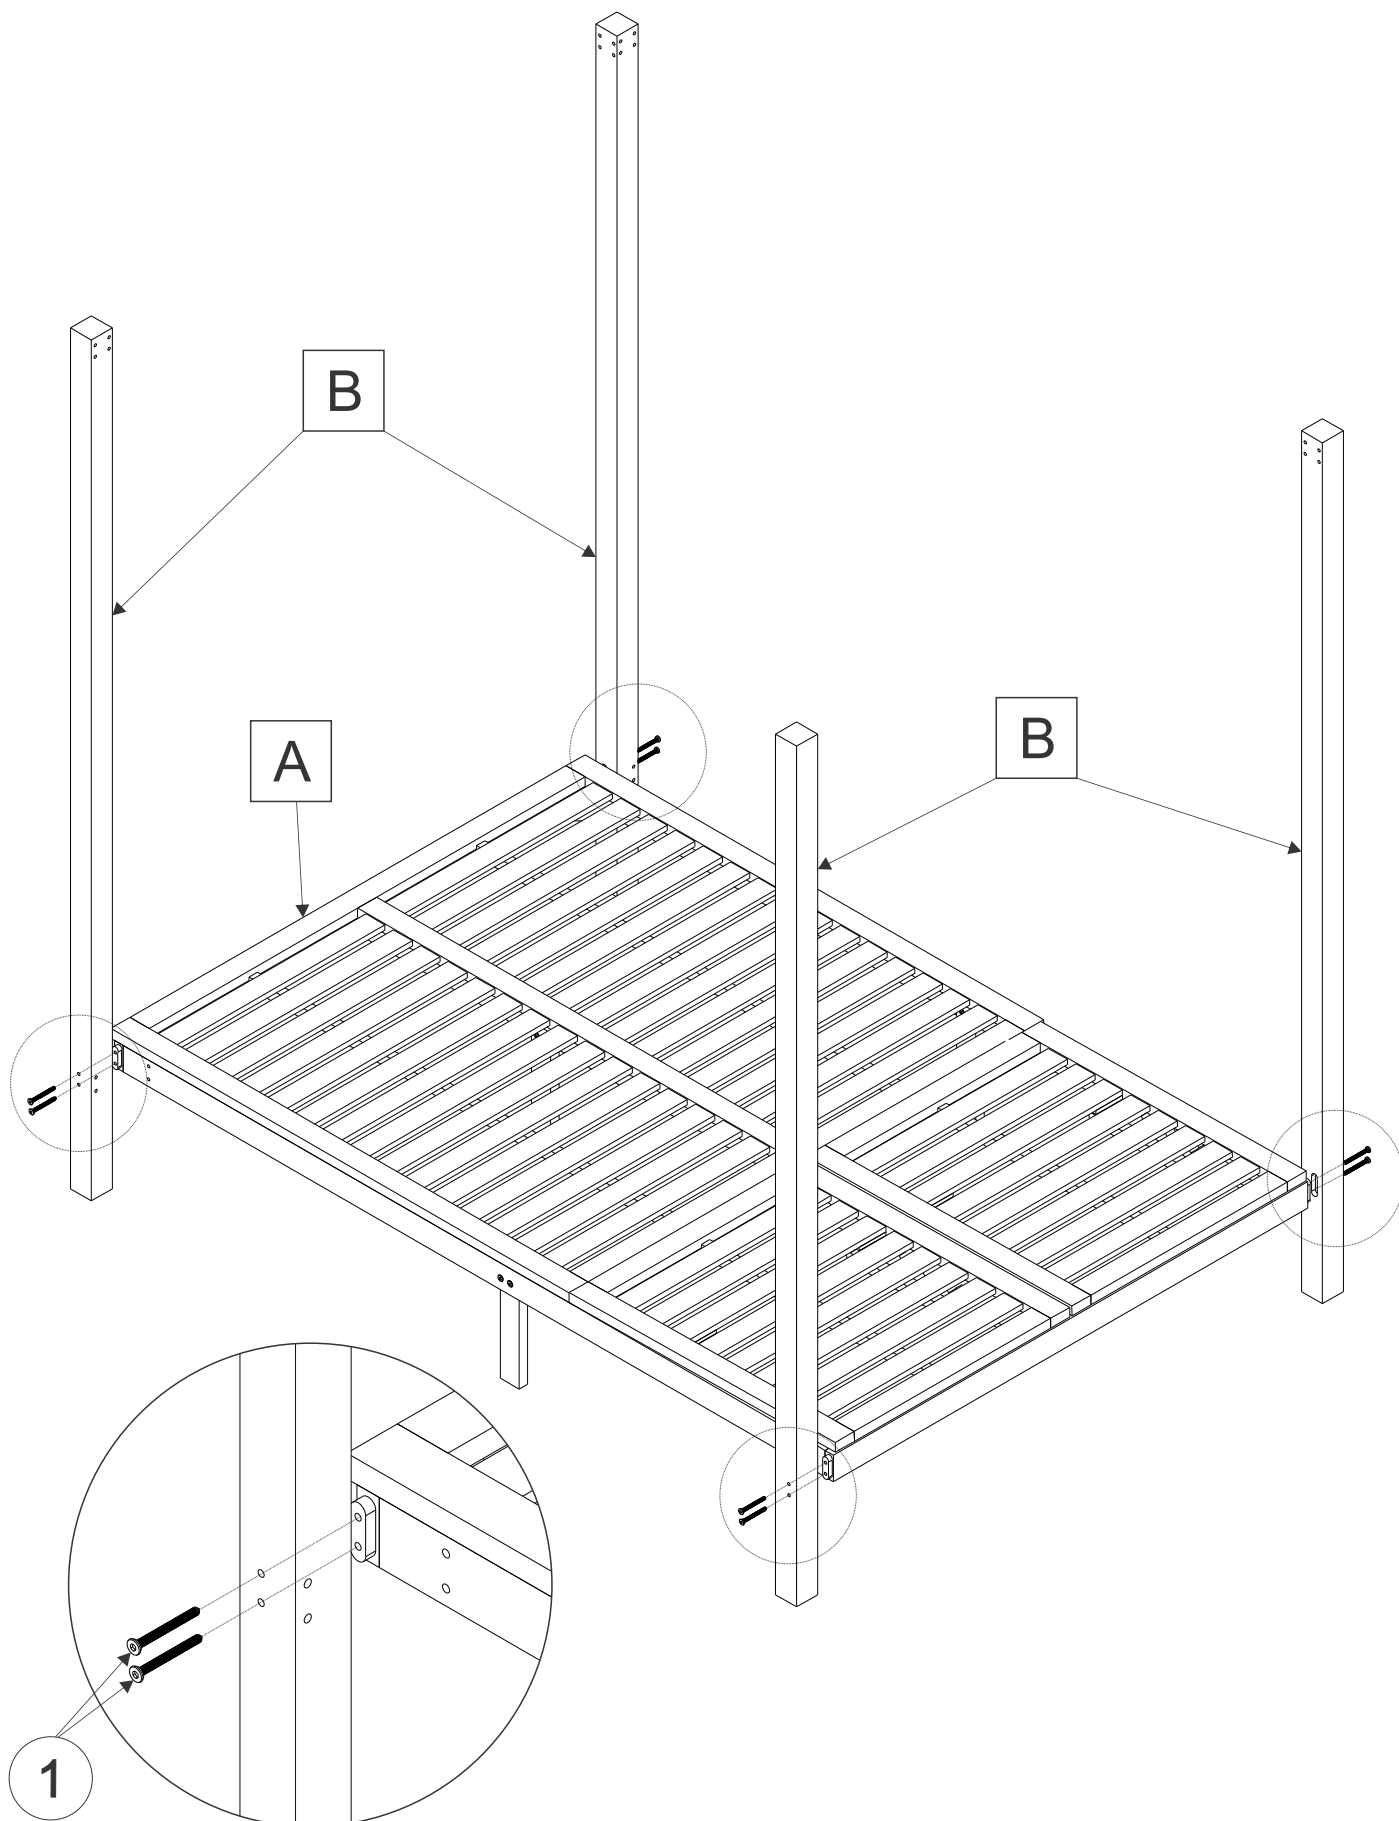


SkyBed

2		Vis M6 x 30	16 pcs
5		Pat	4 pcs

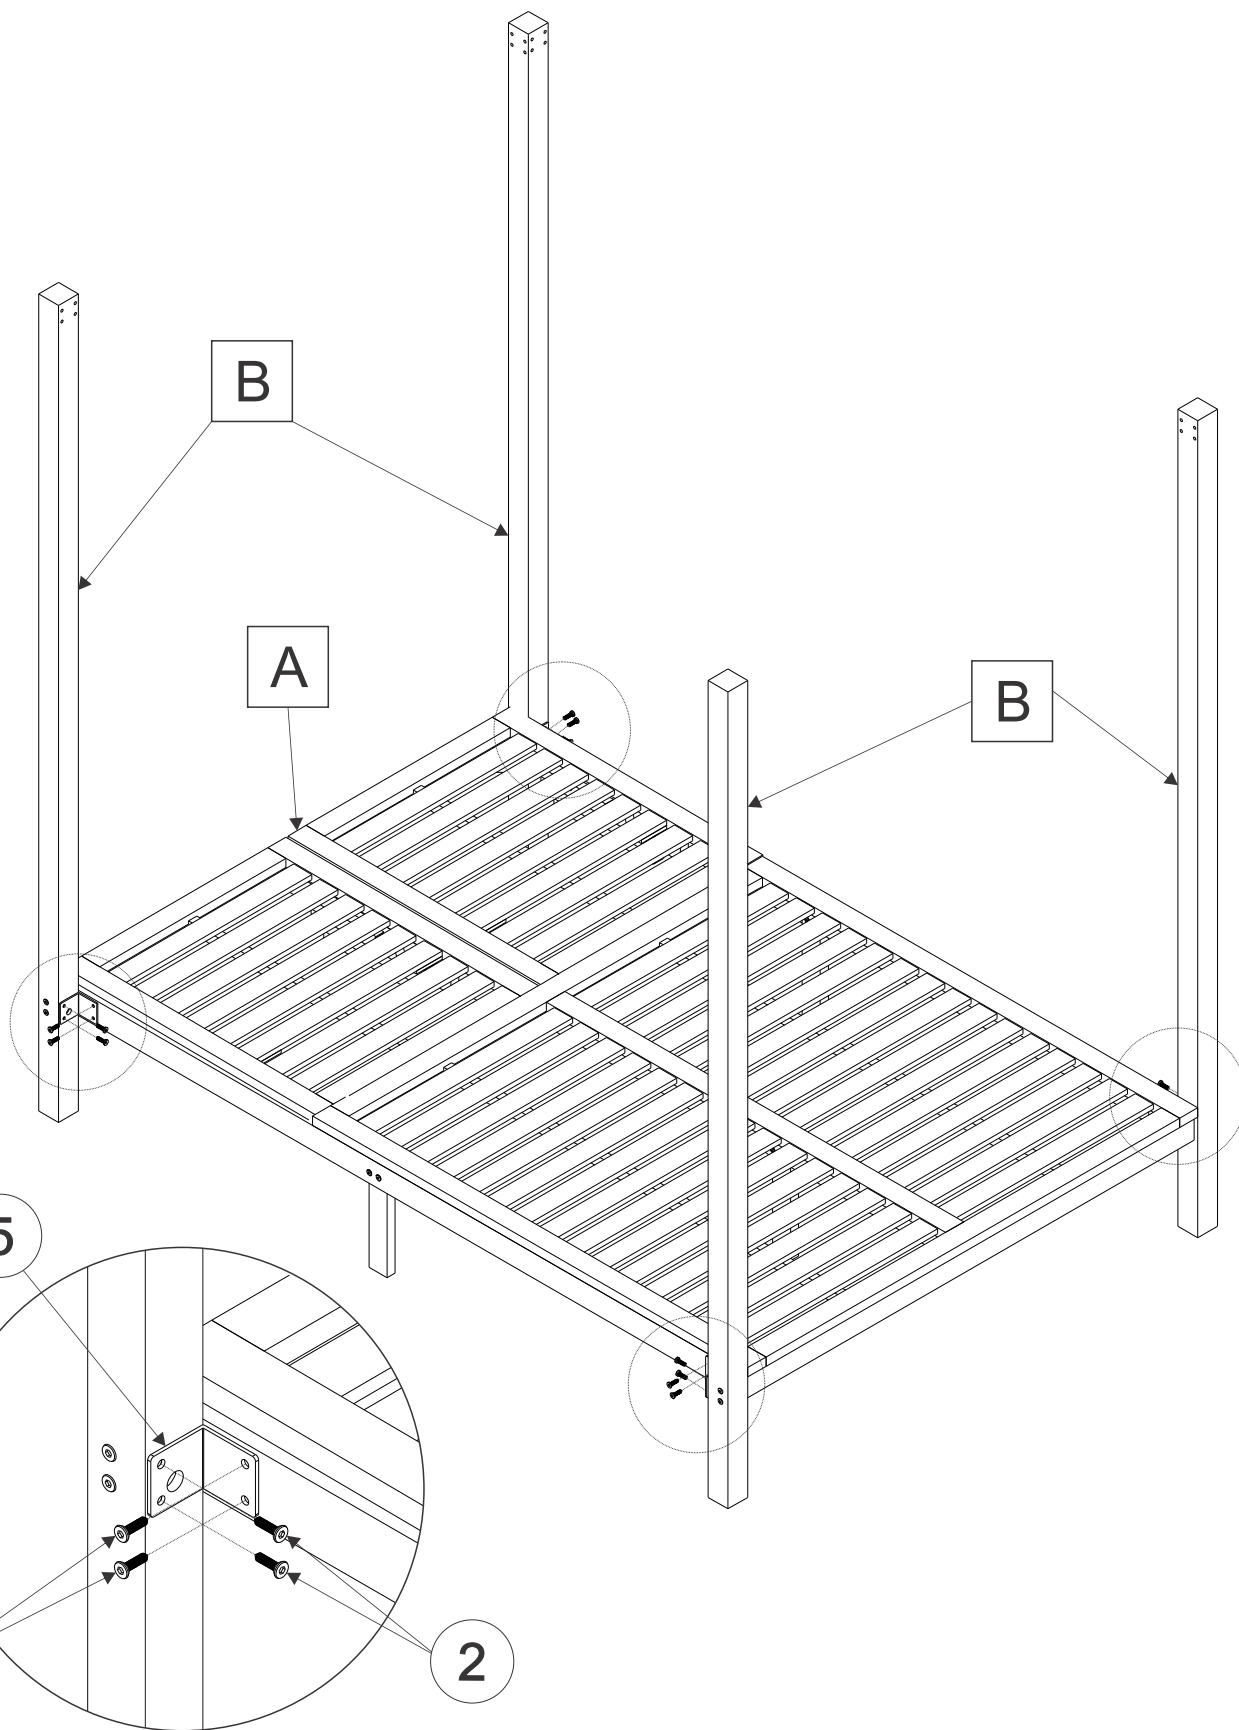


SkyBed

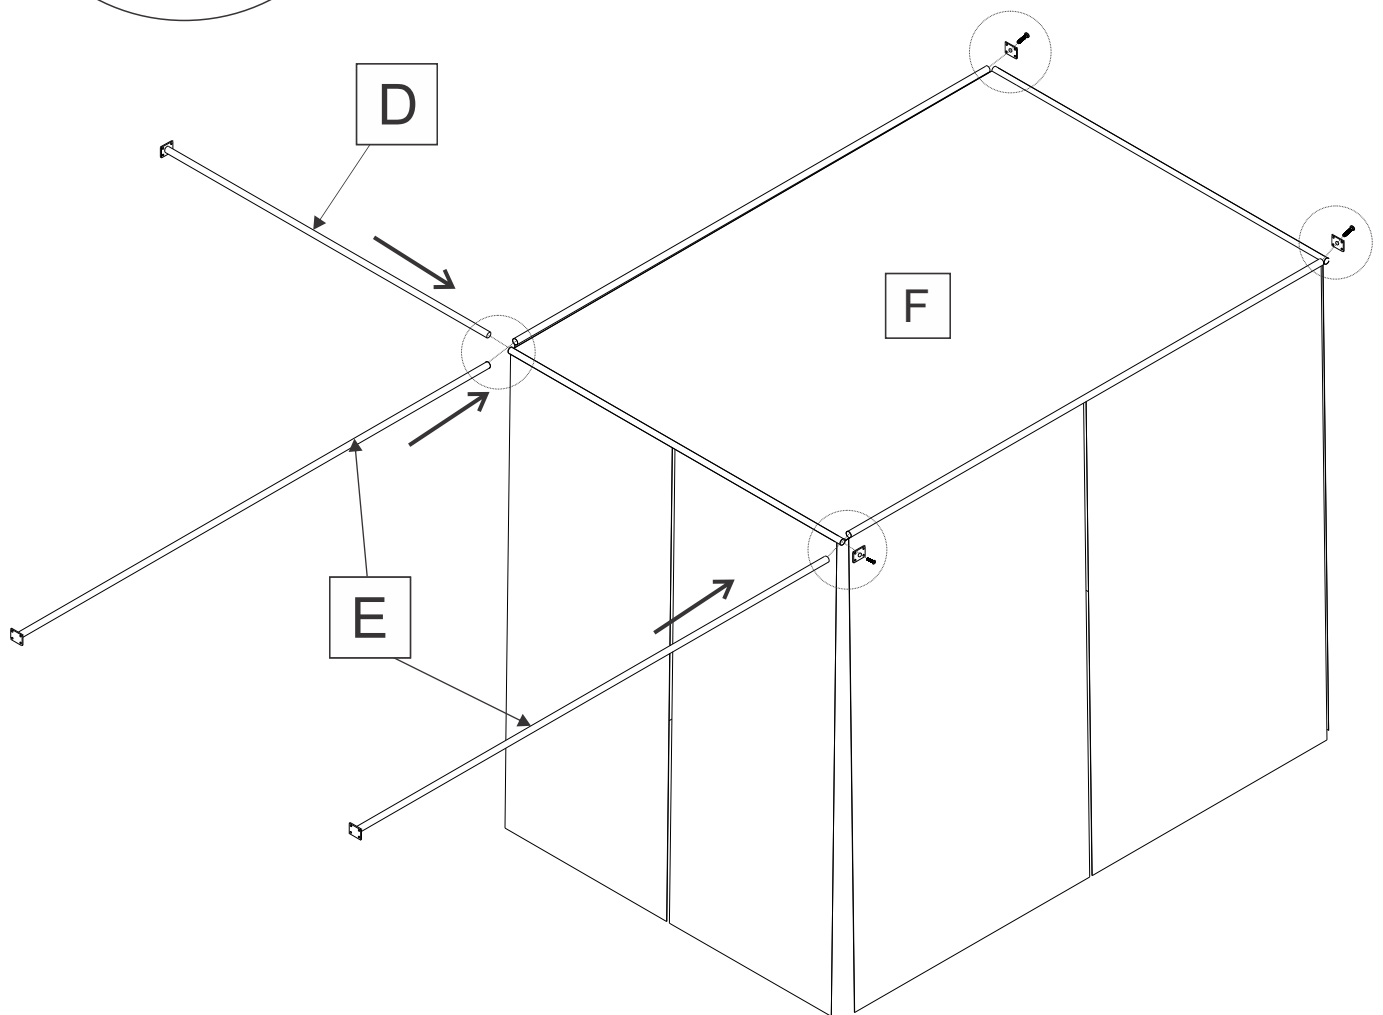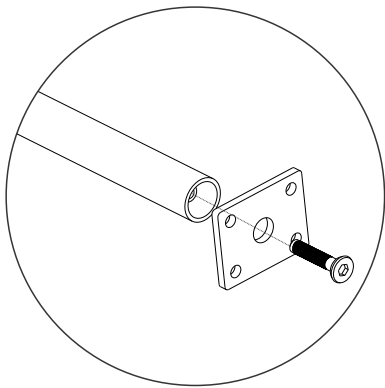

Remove the square parts from the path frames.
Place the path frames inside the canopy.
Then reassemble them.


SkyBed

3





Vis M6 x 25

32 pcs

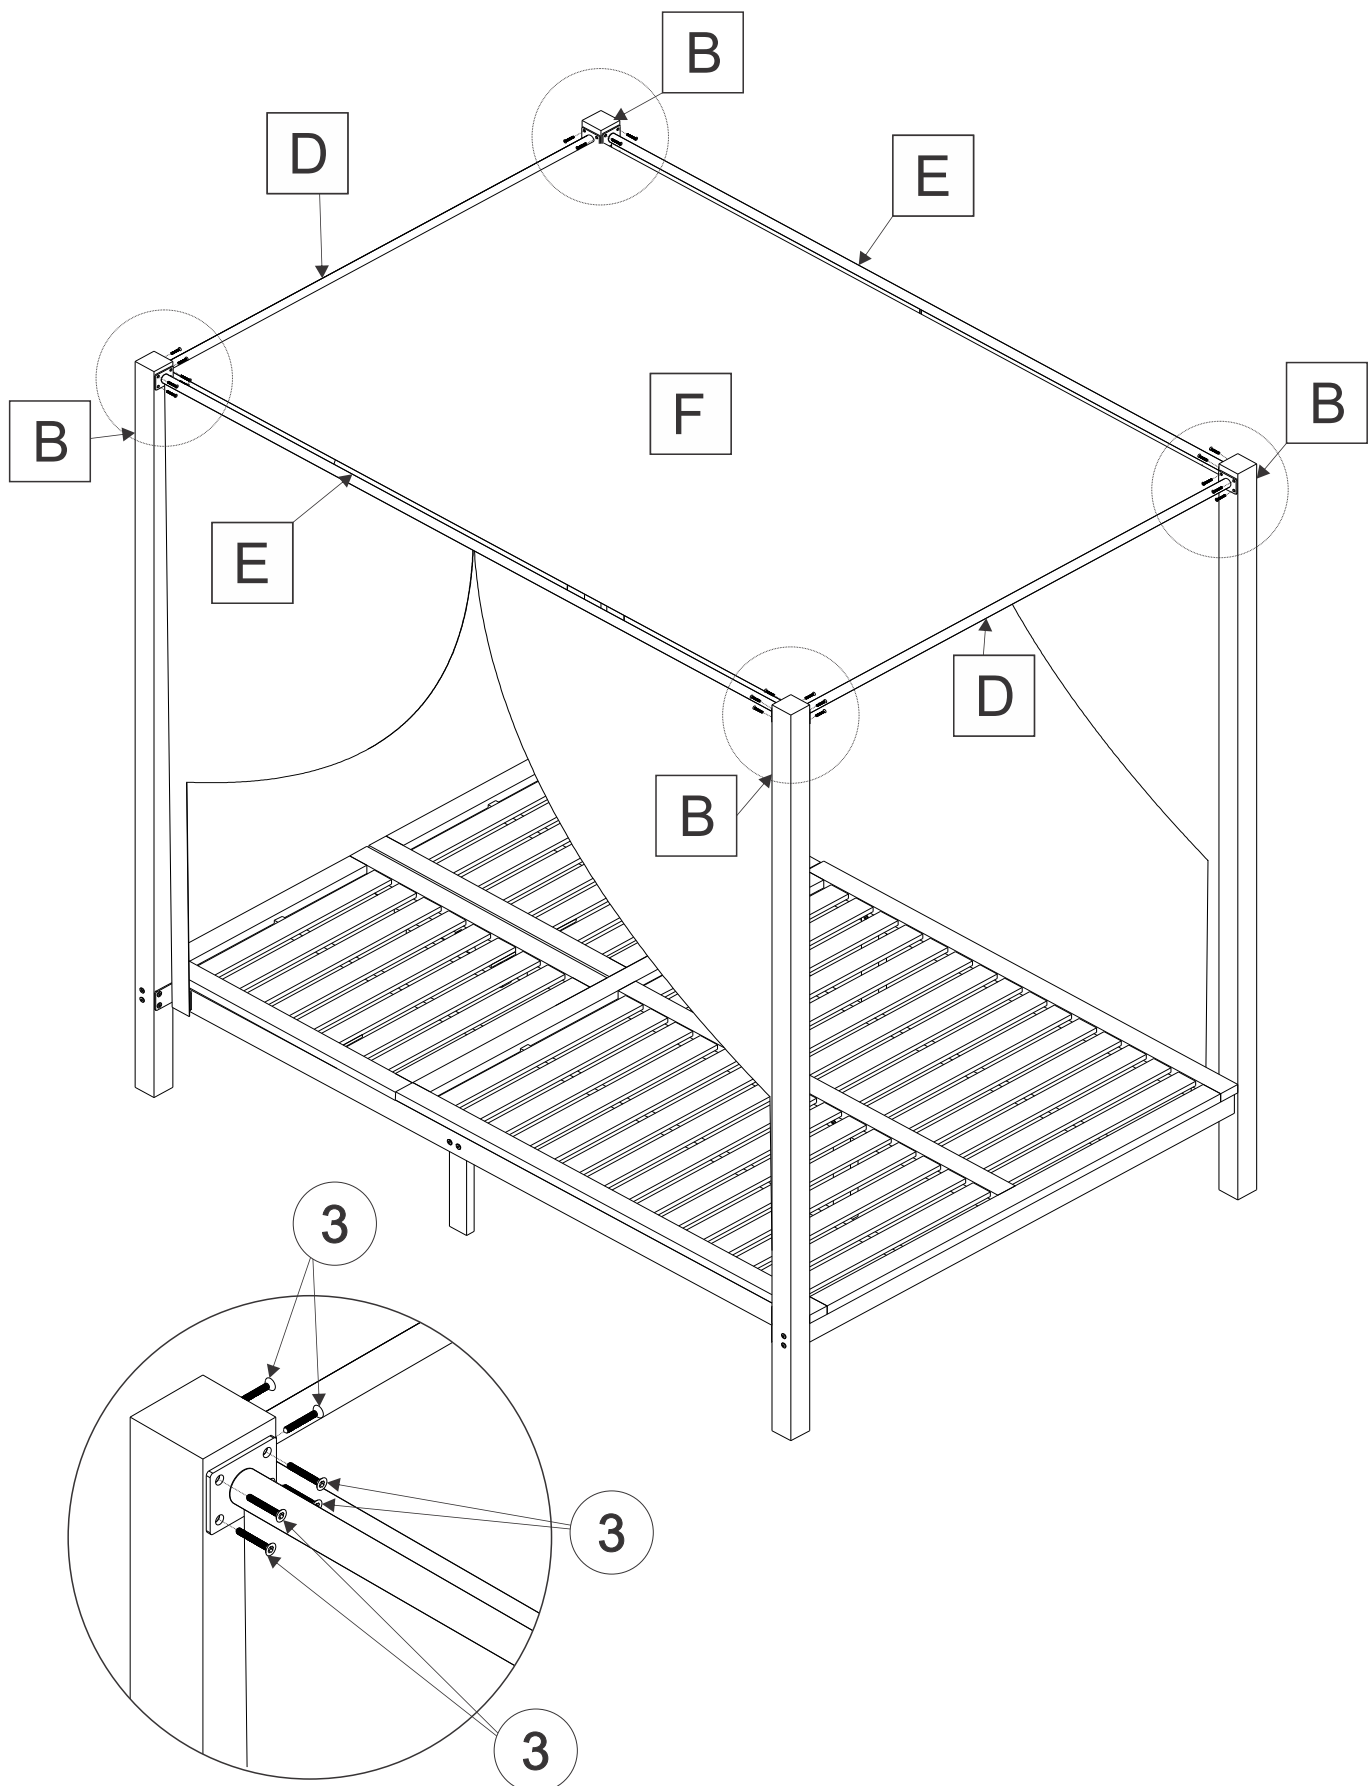

SkyBed

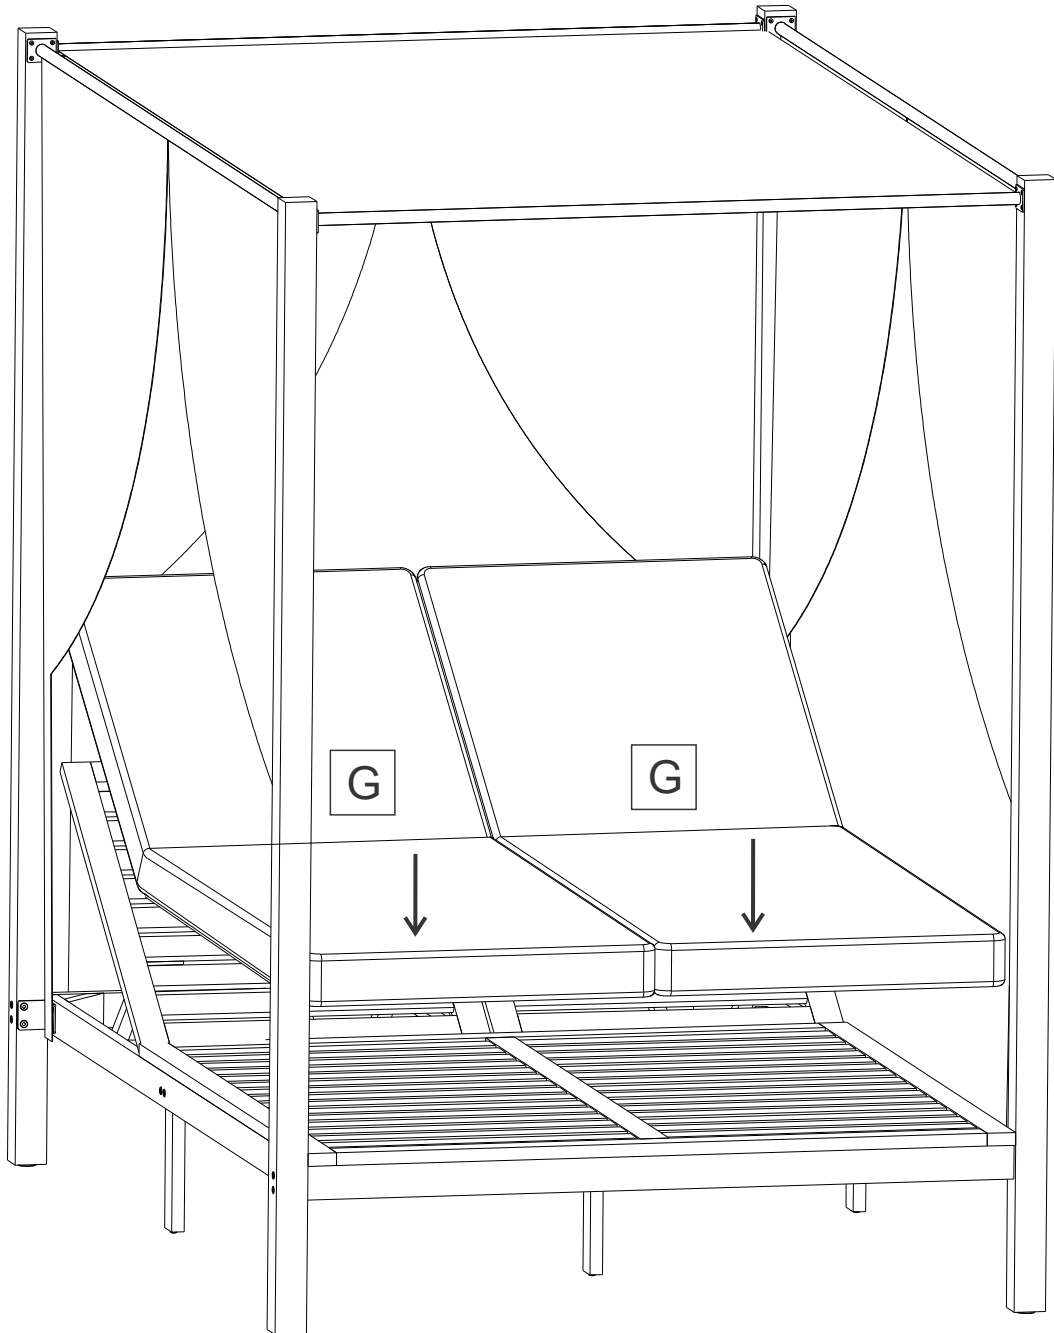

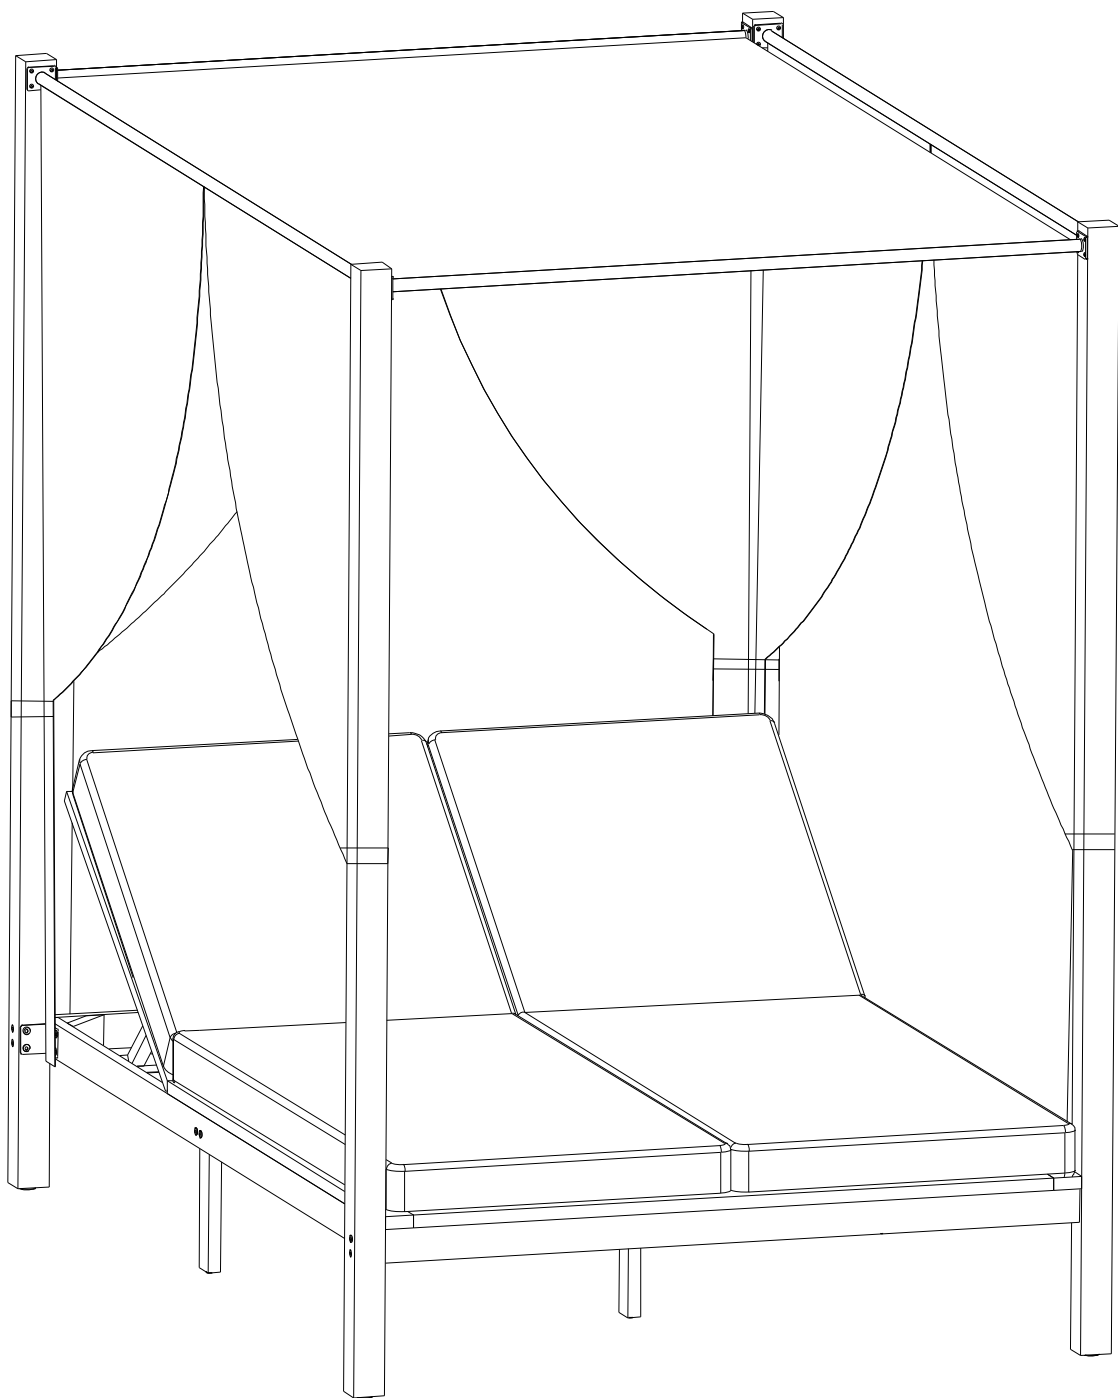

FINISH