

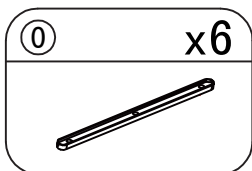
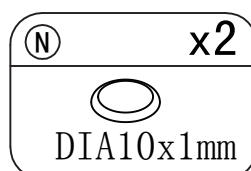
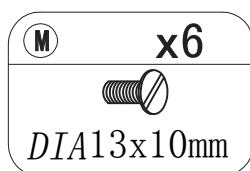
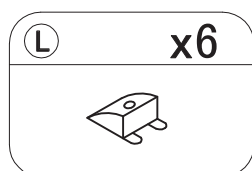
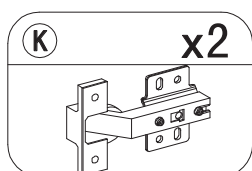
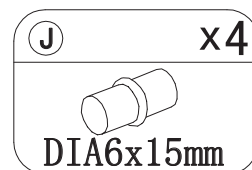
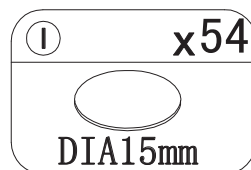
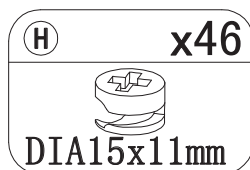
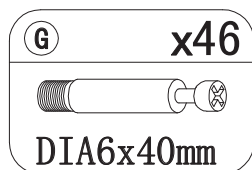
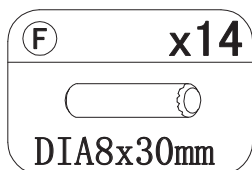
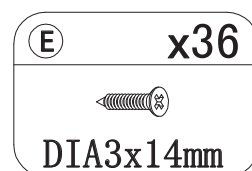
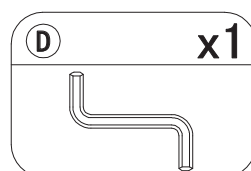
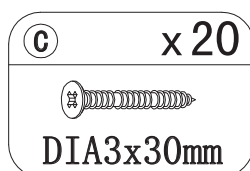
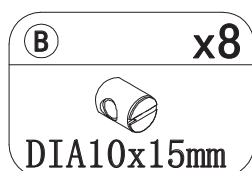



DURHAM 3+1 SIDEBOARD

21350002/08

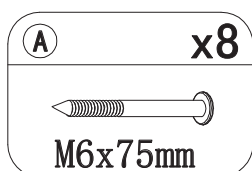


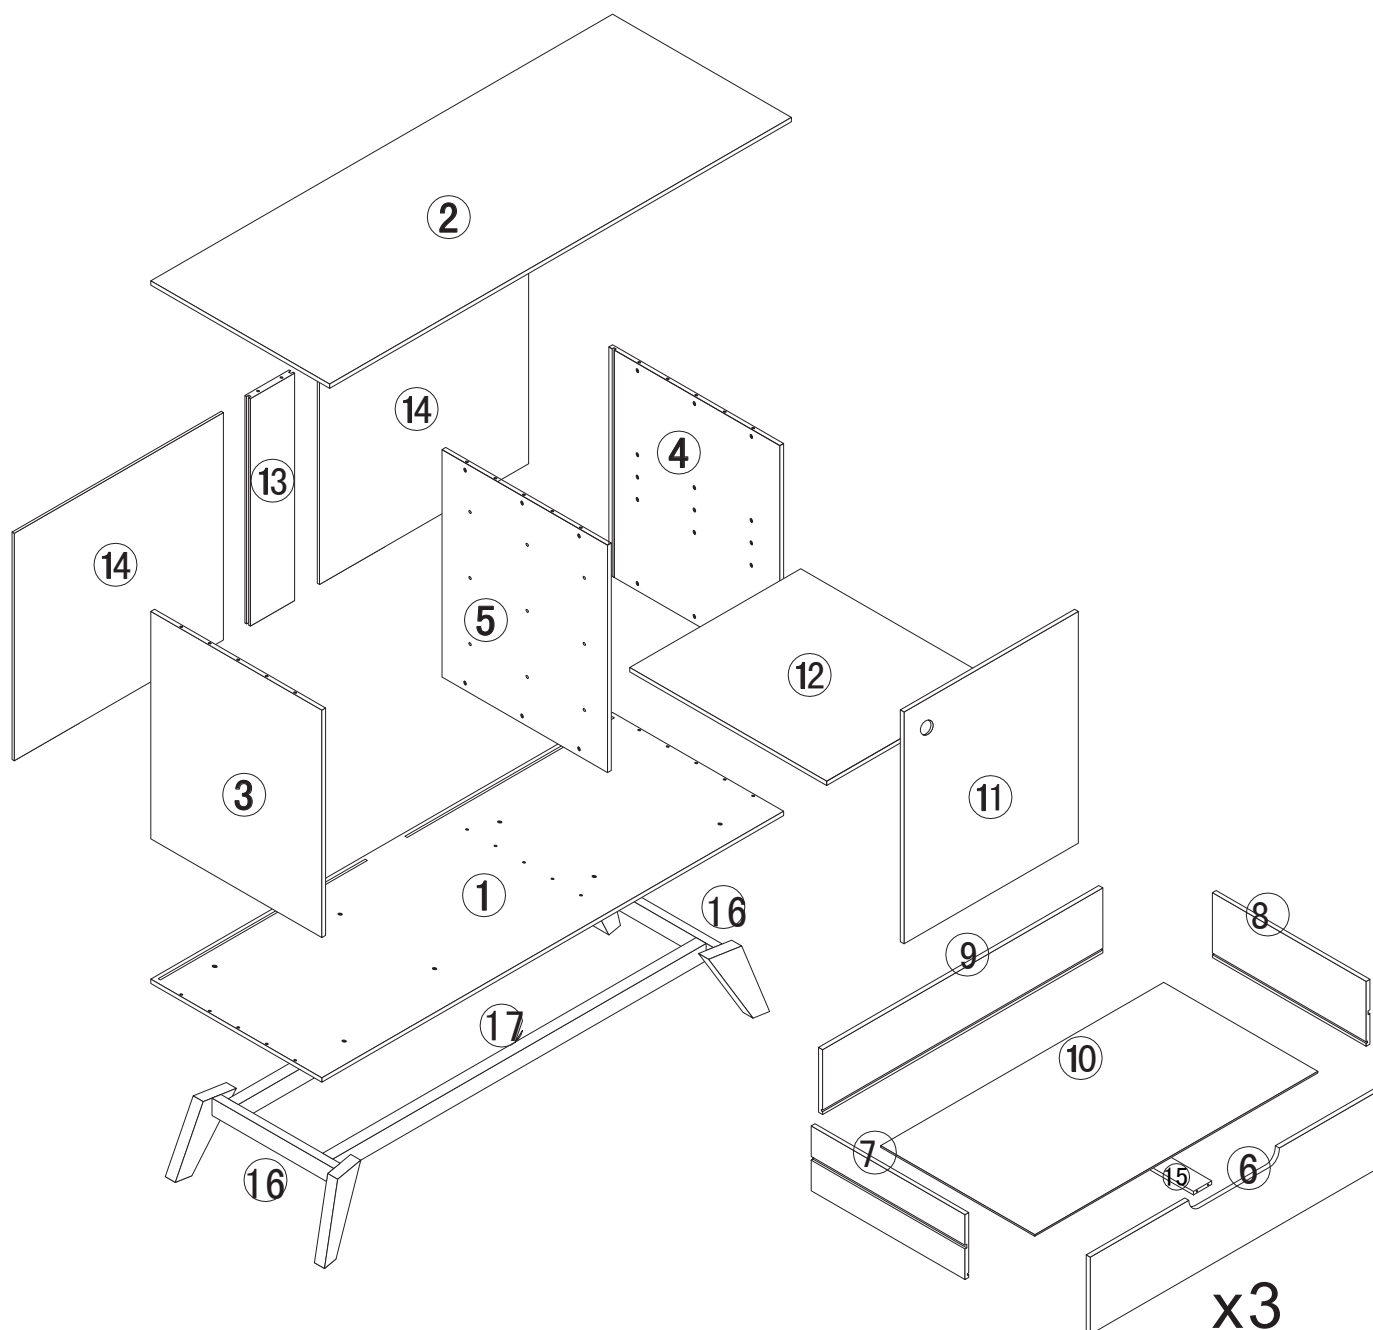



Step1

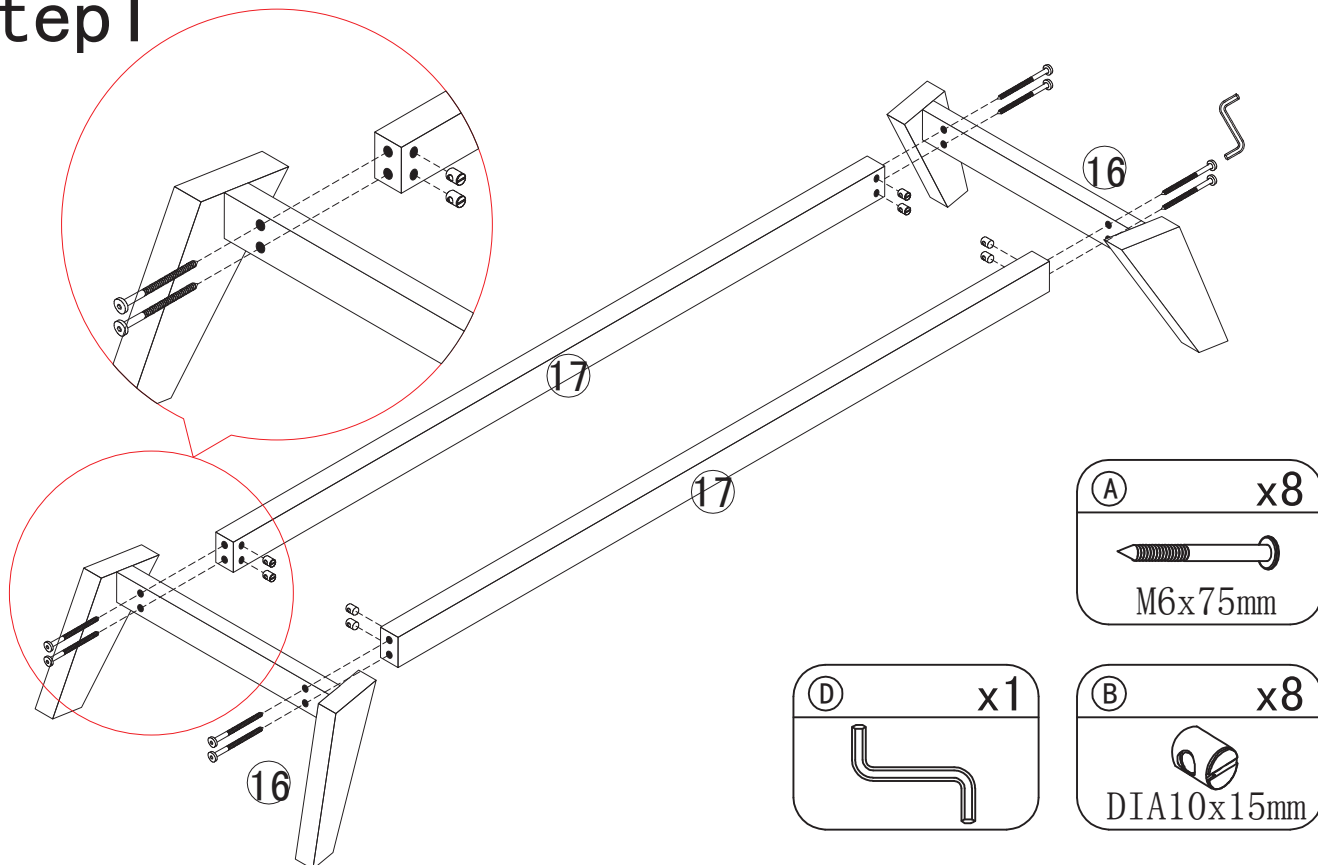



Step2

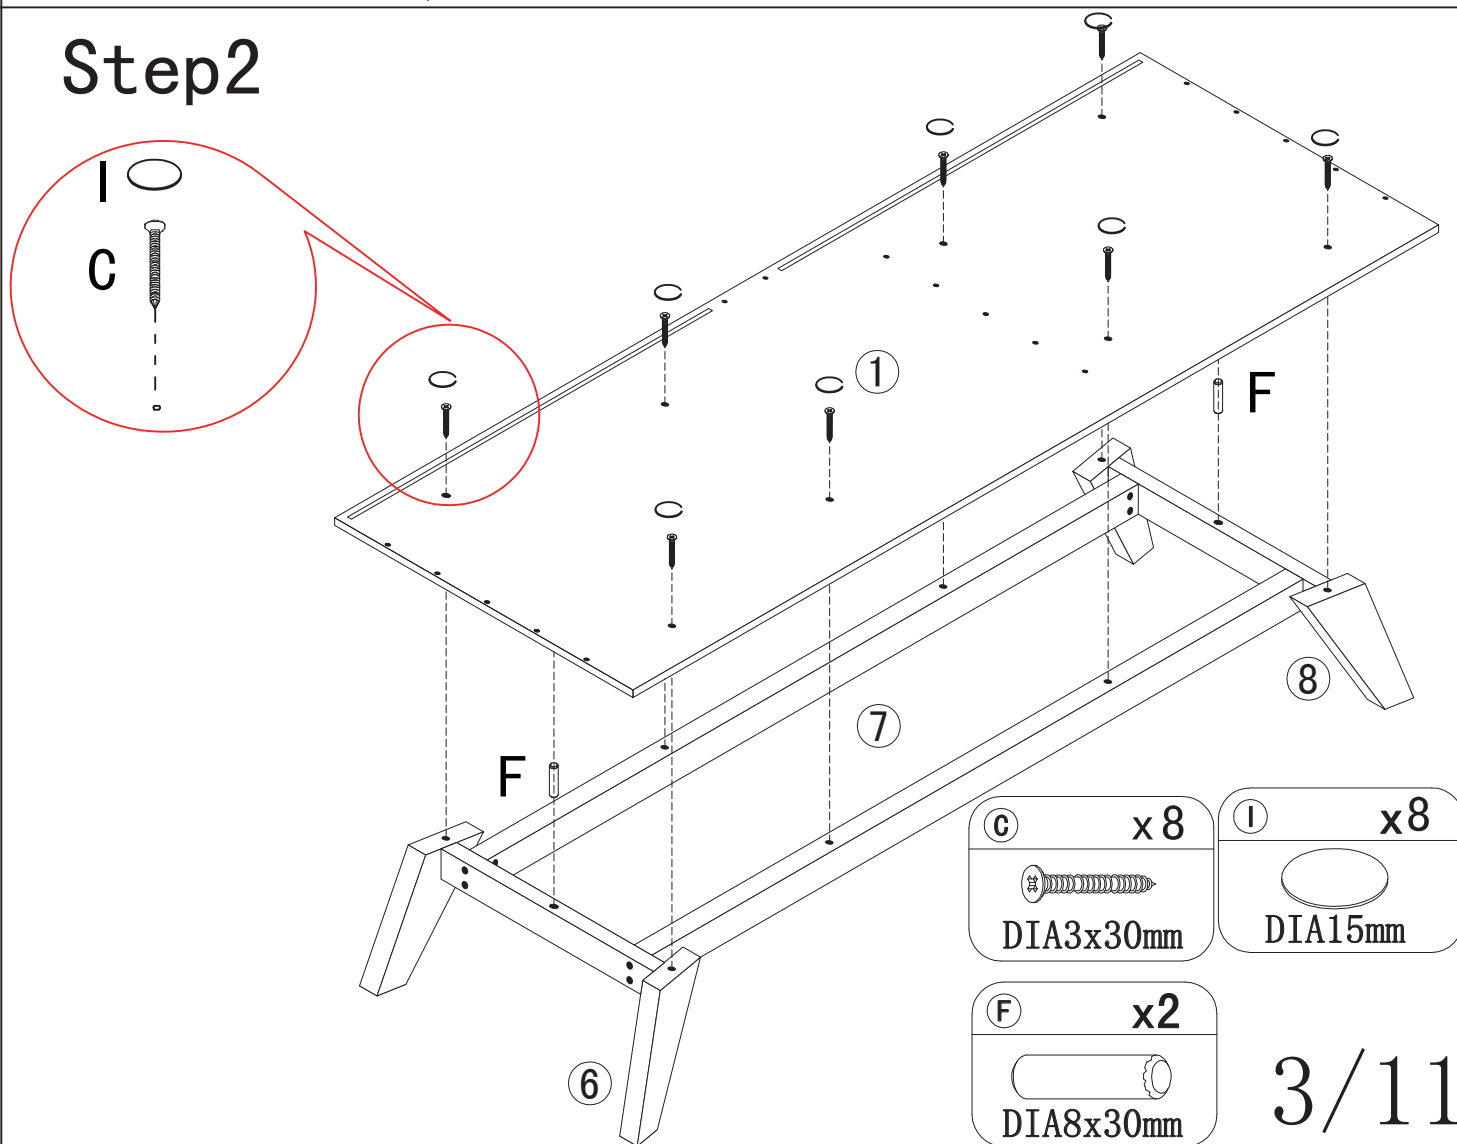


Step3

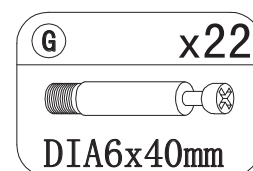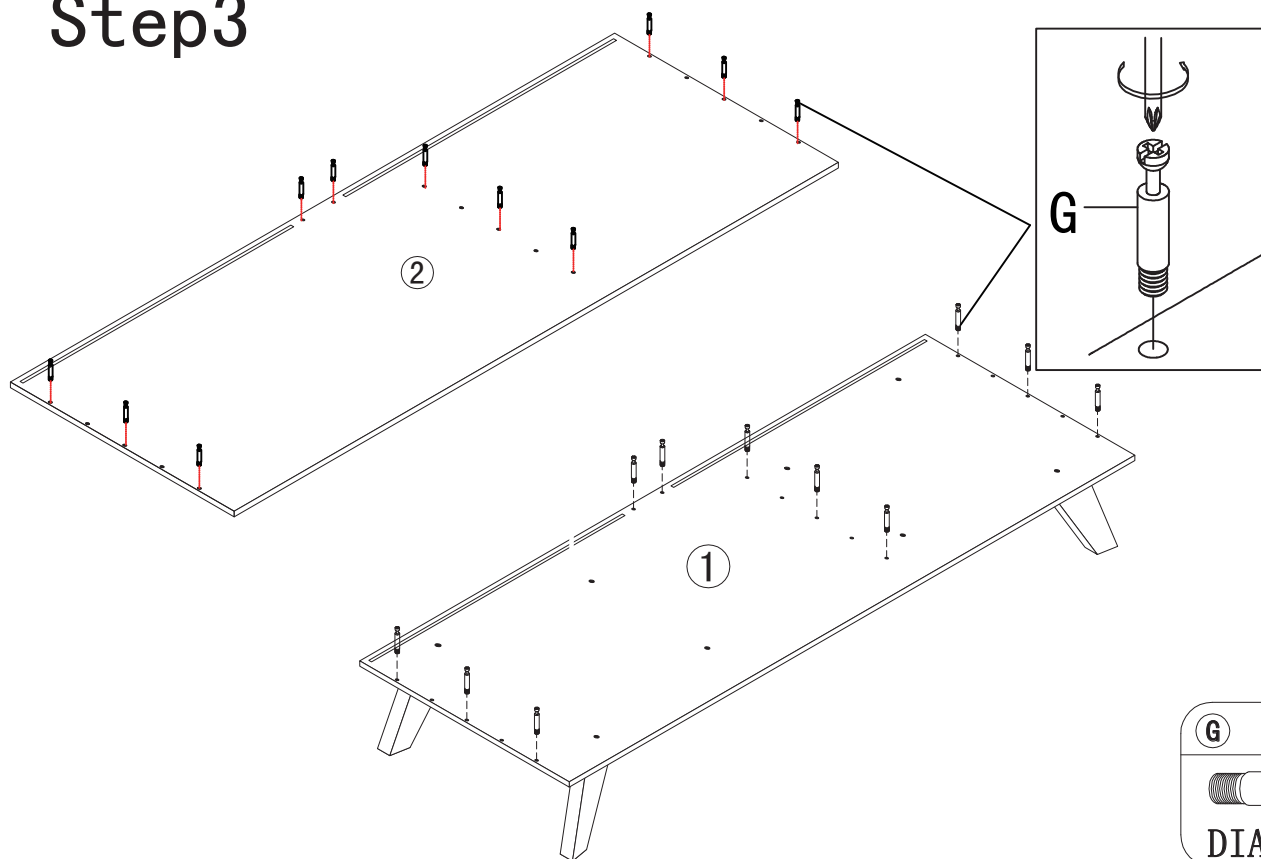


Step4

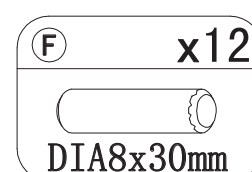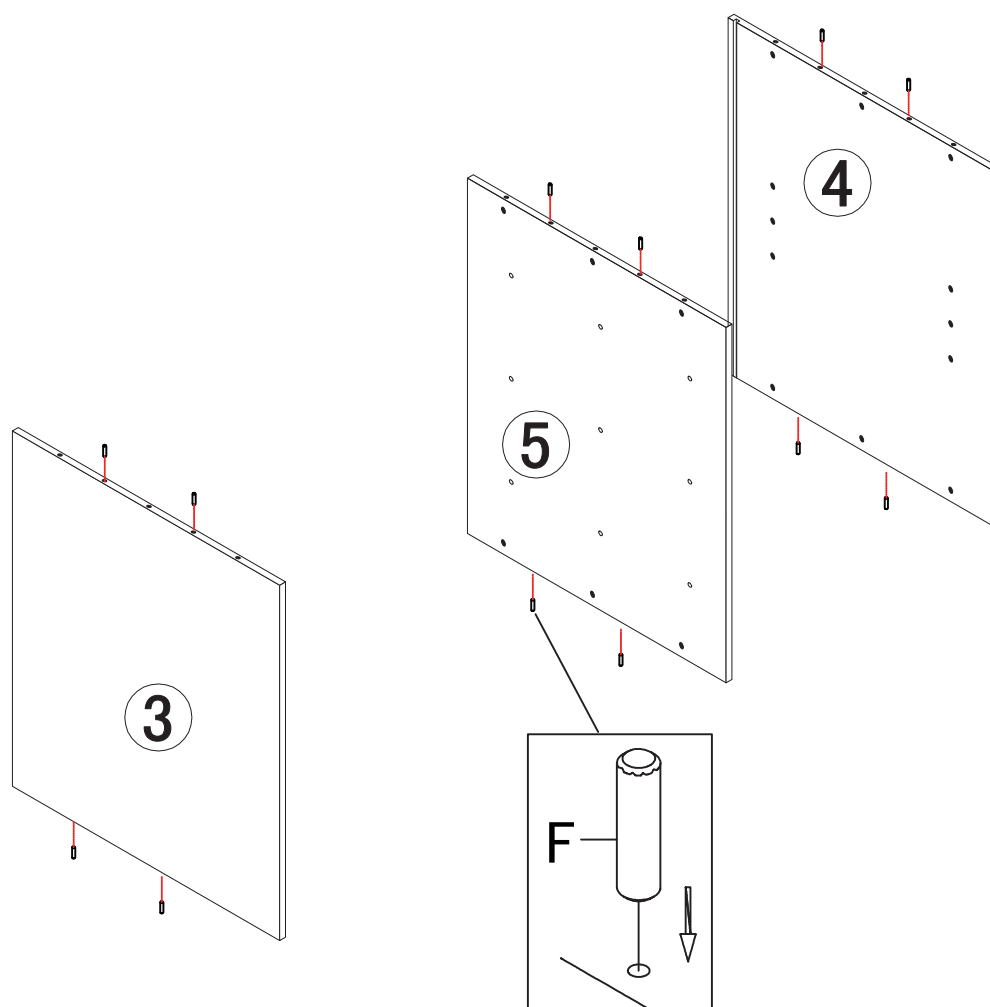





Step5

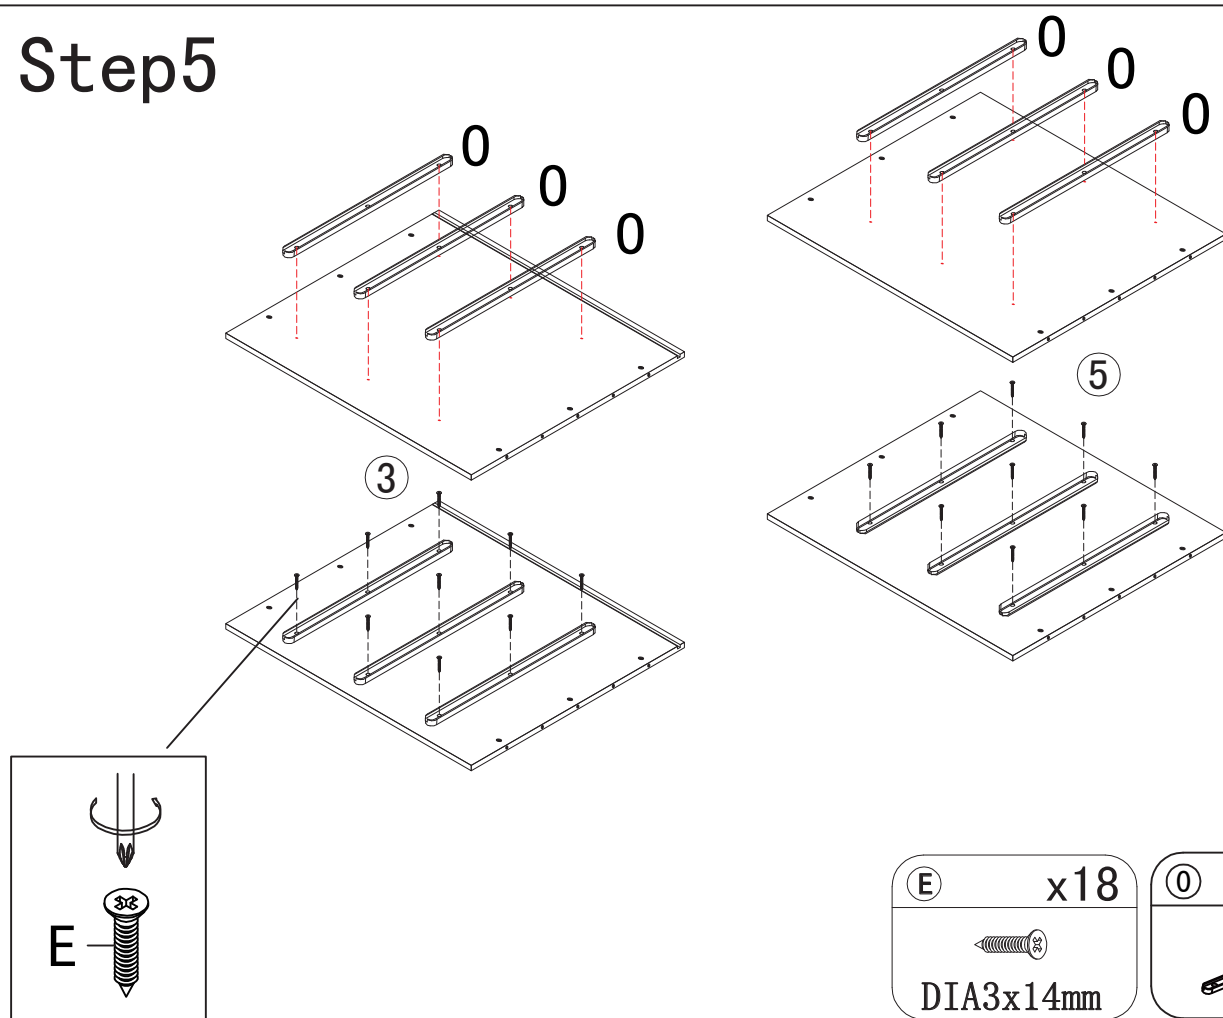





Step6

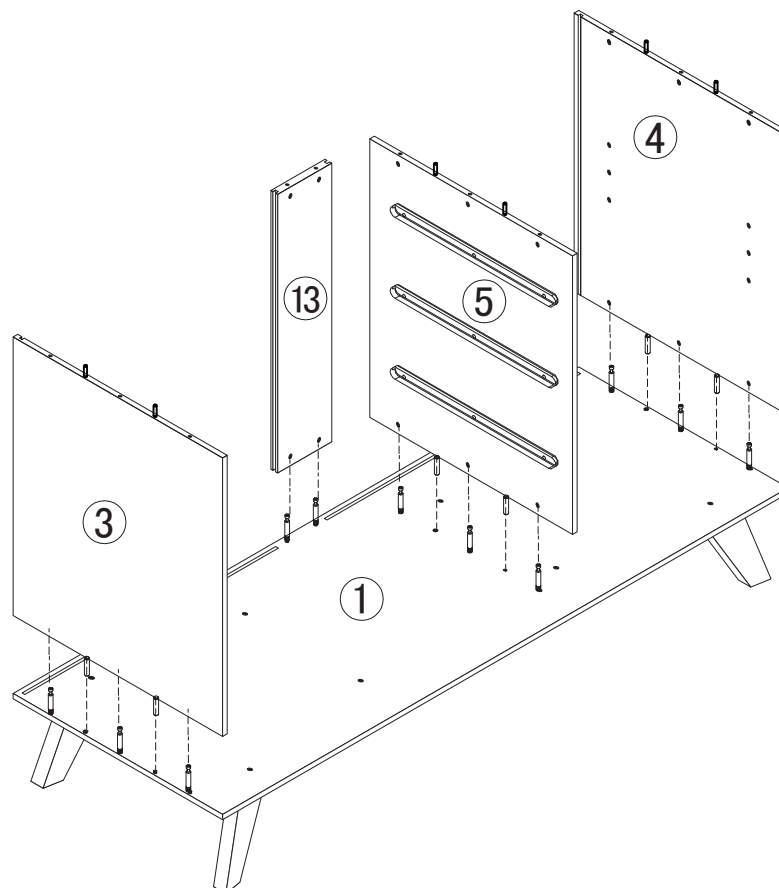



Step7

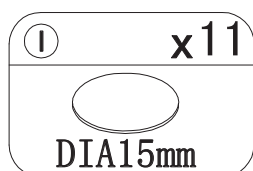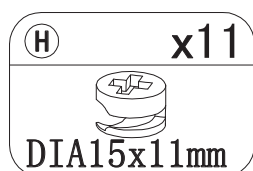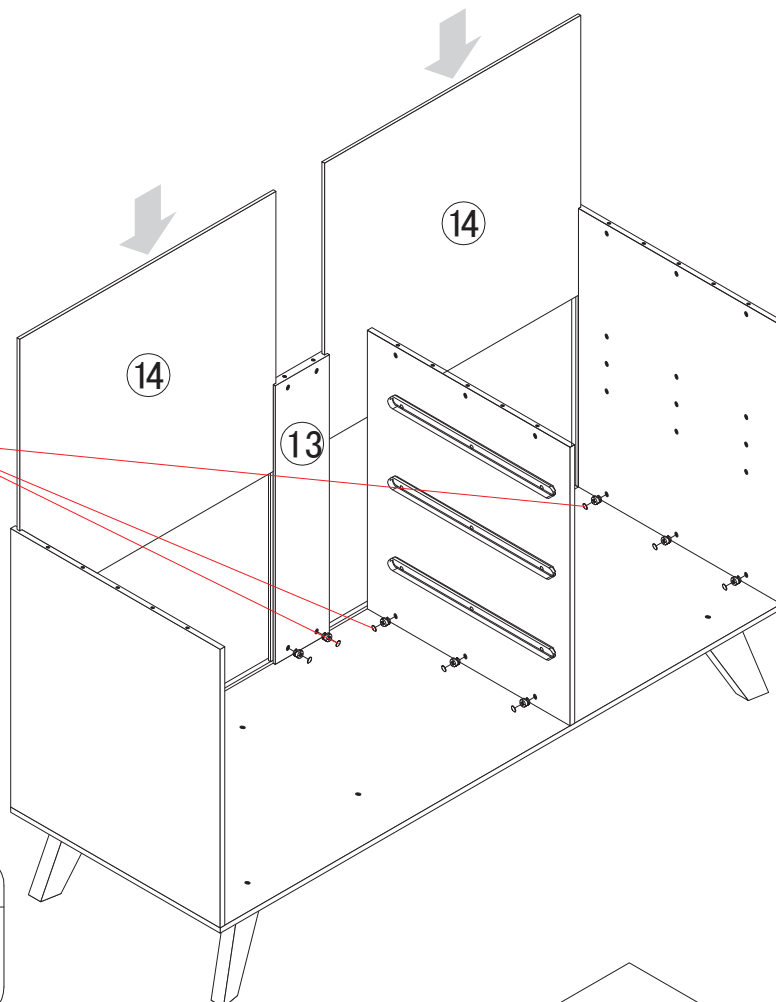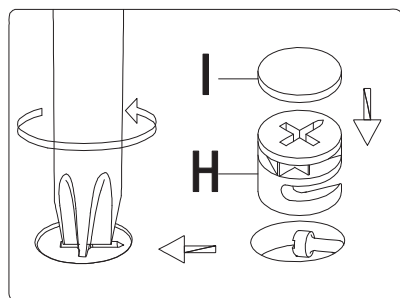




Step8

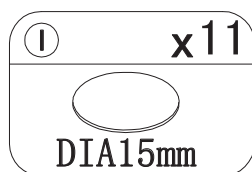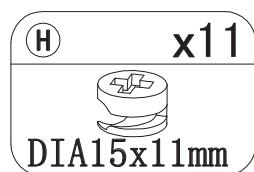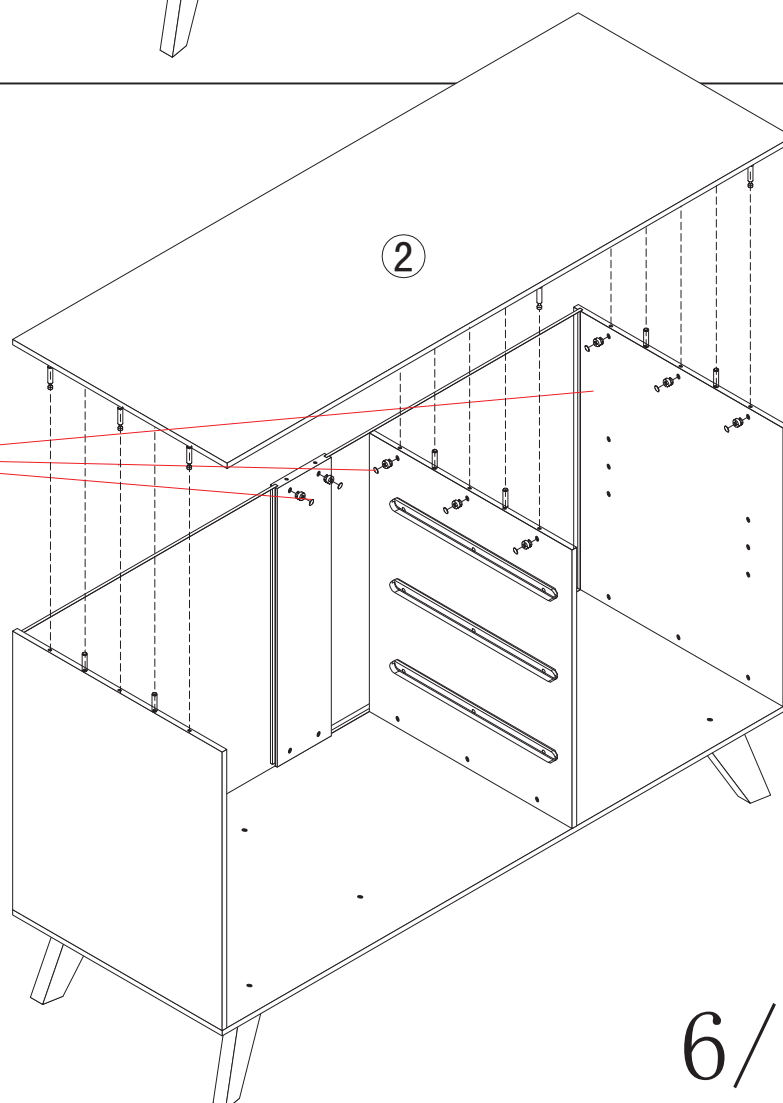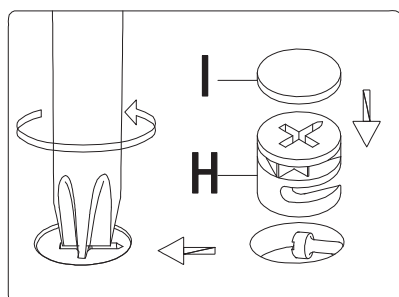




Step9

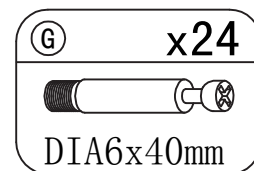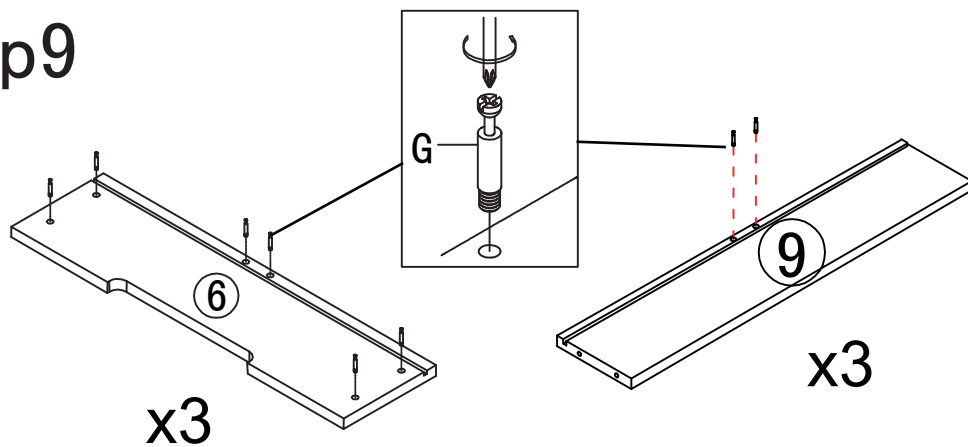



Step10

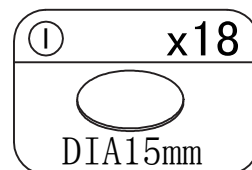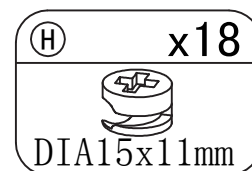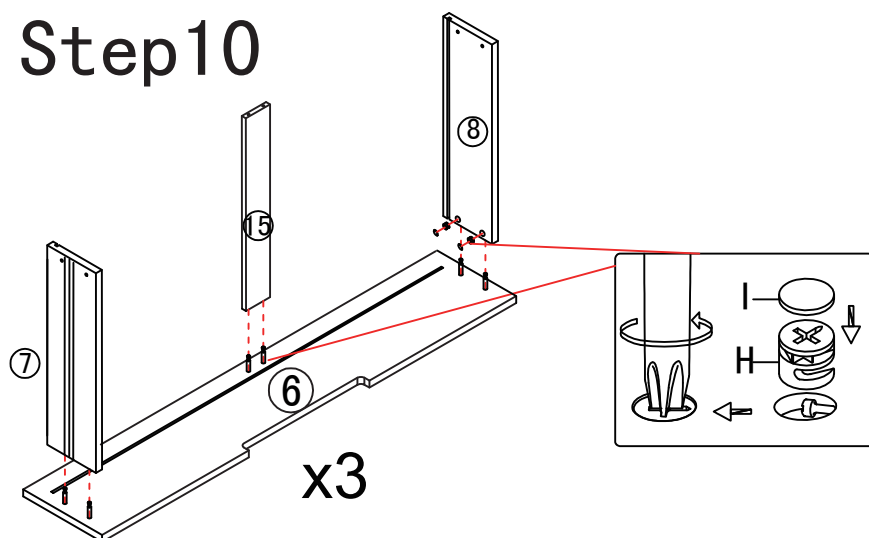



Step11

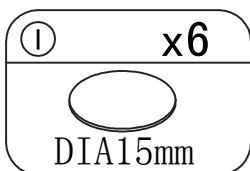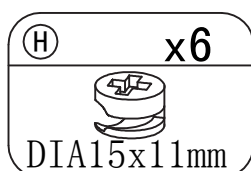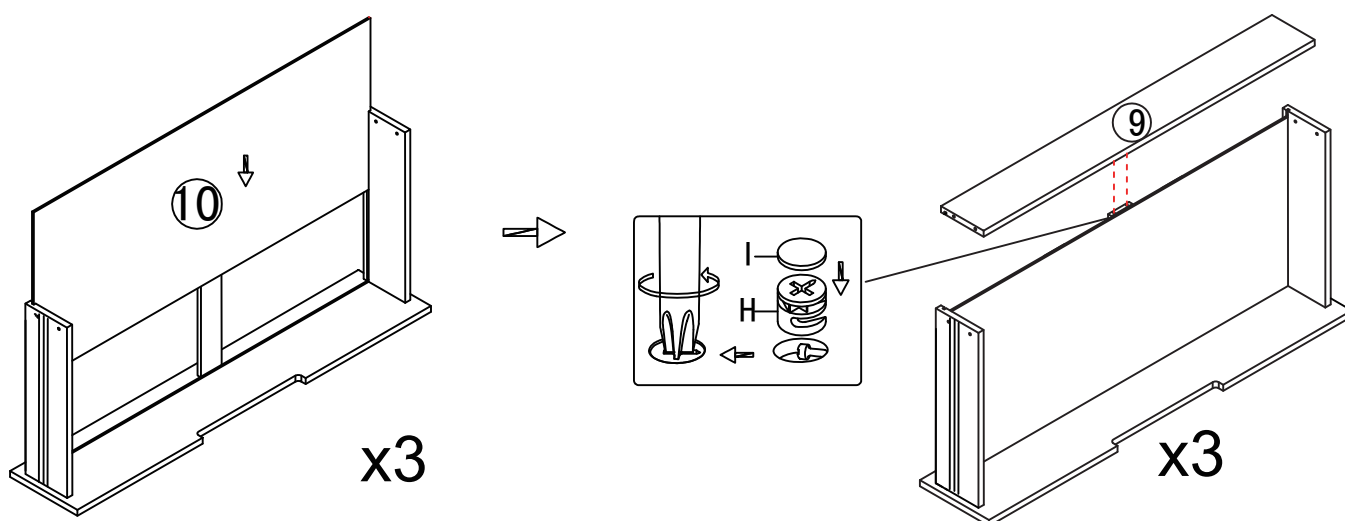



Step12

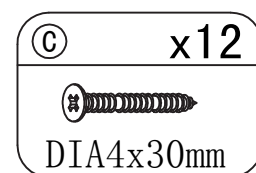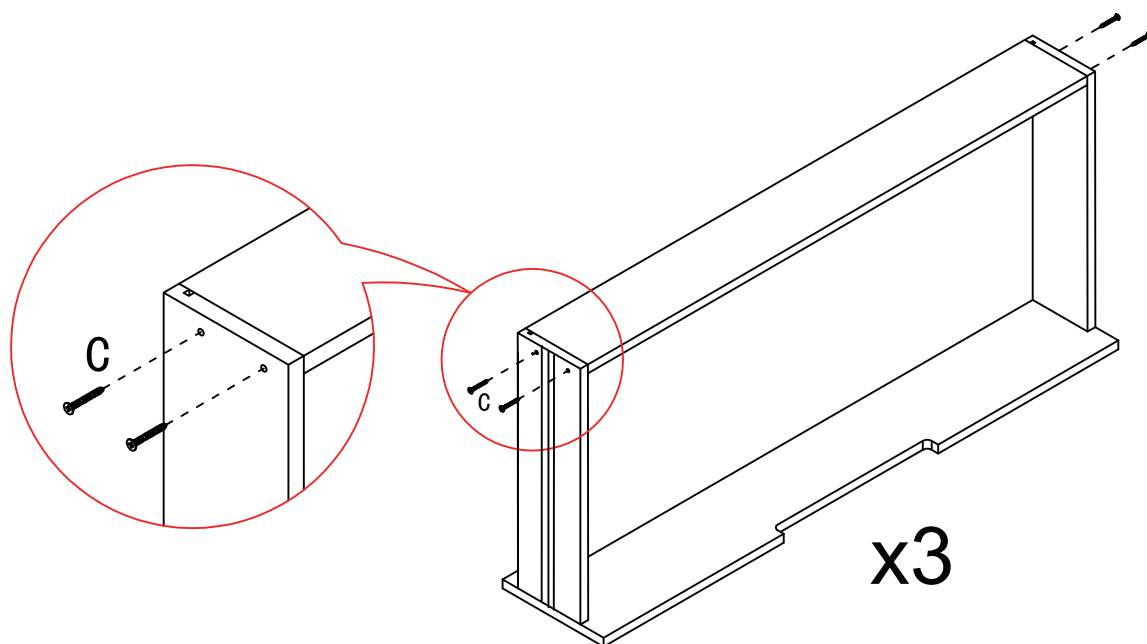




Step13

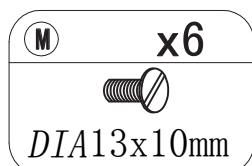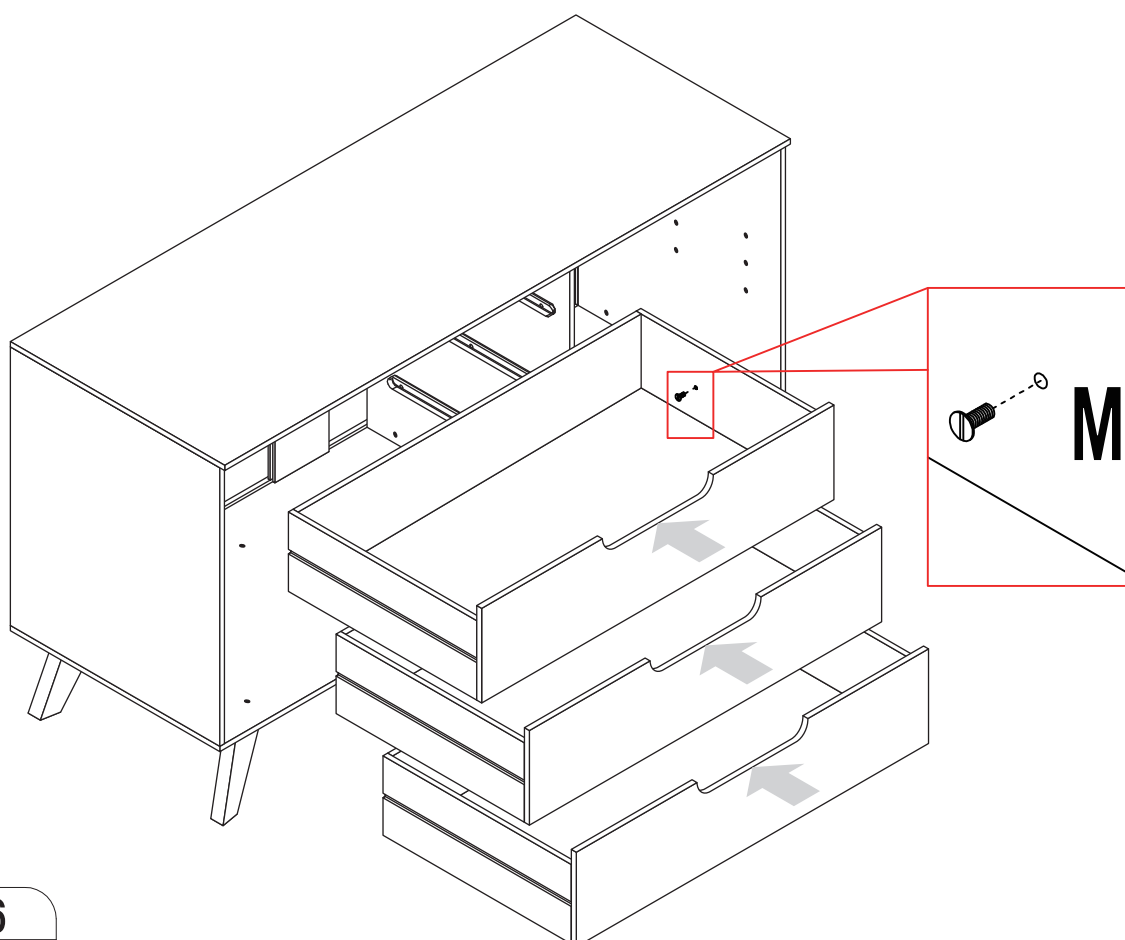








Step14

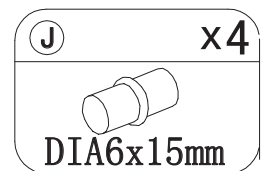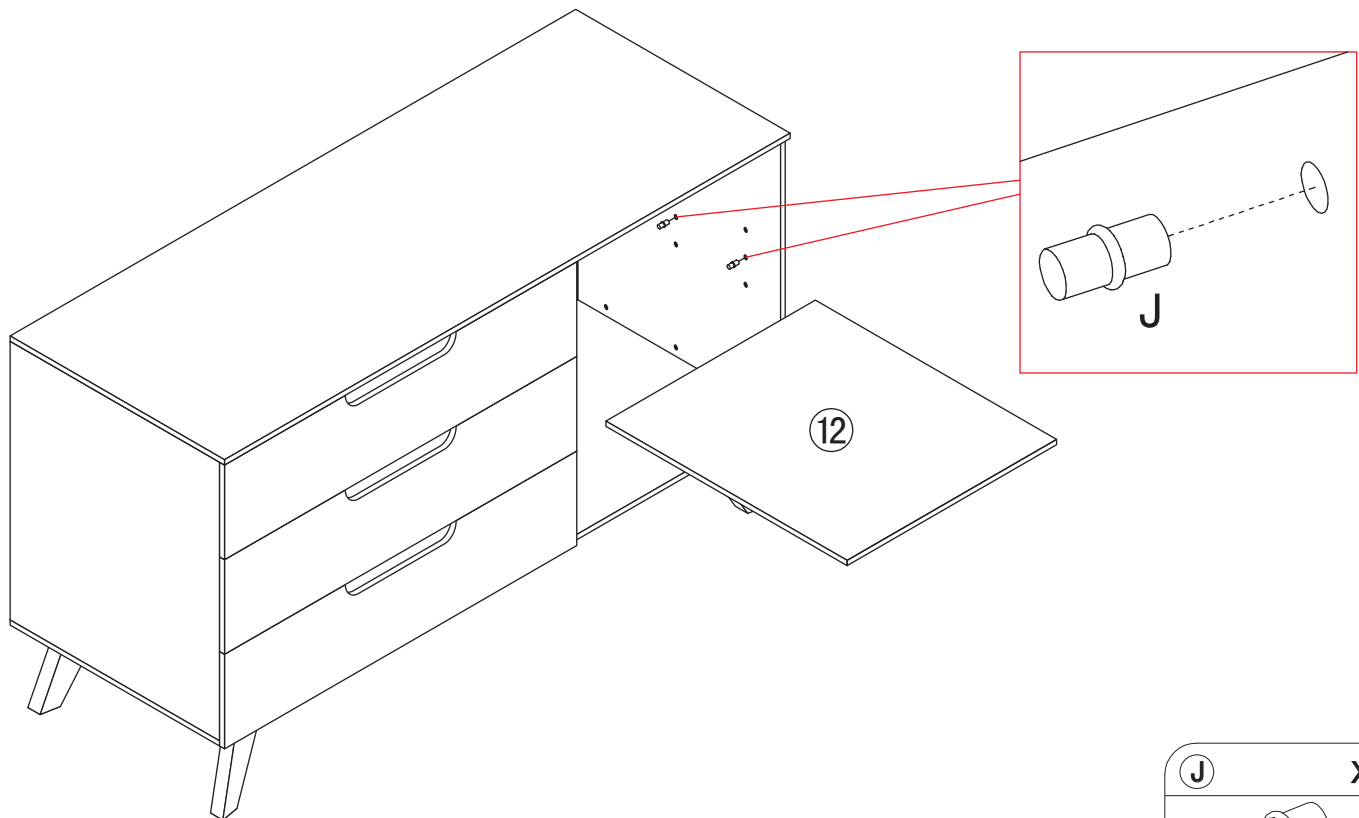

Step15

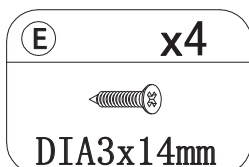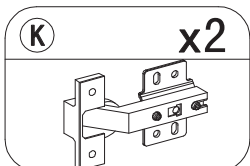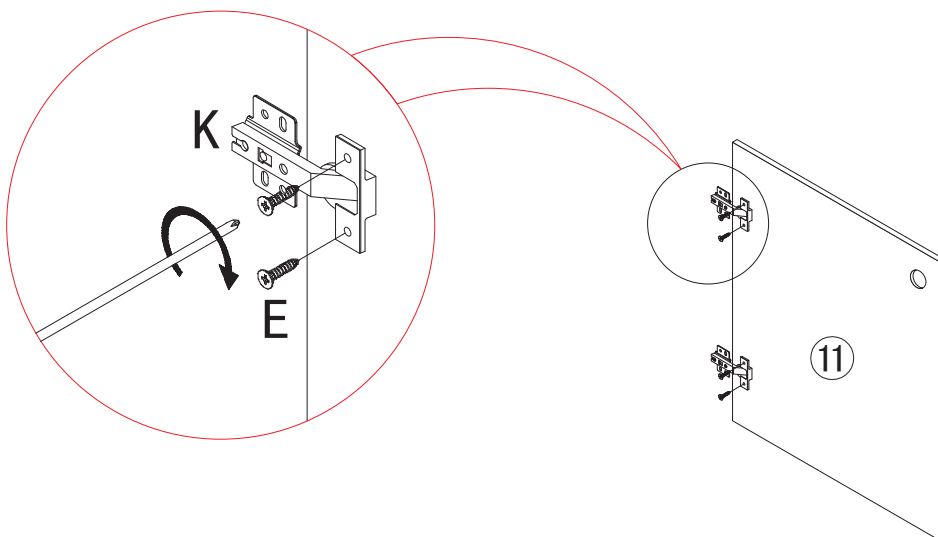

Step16

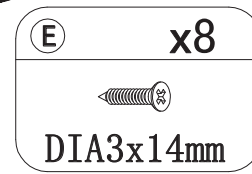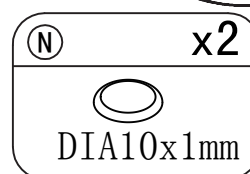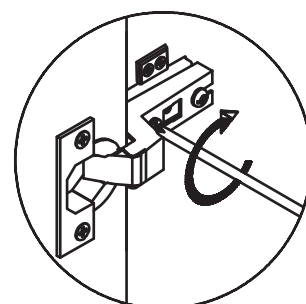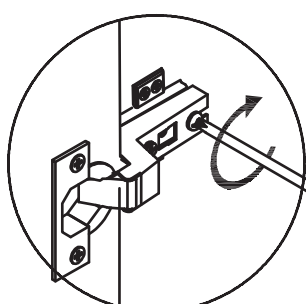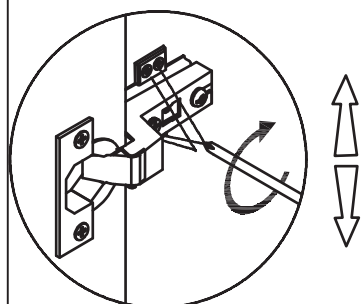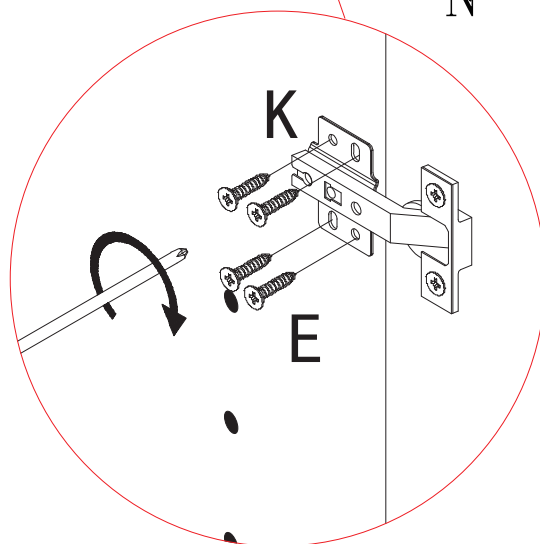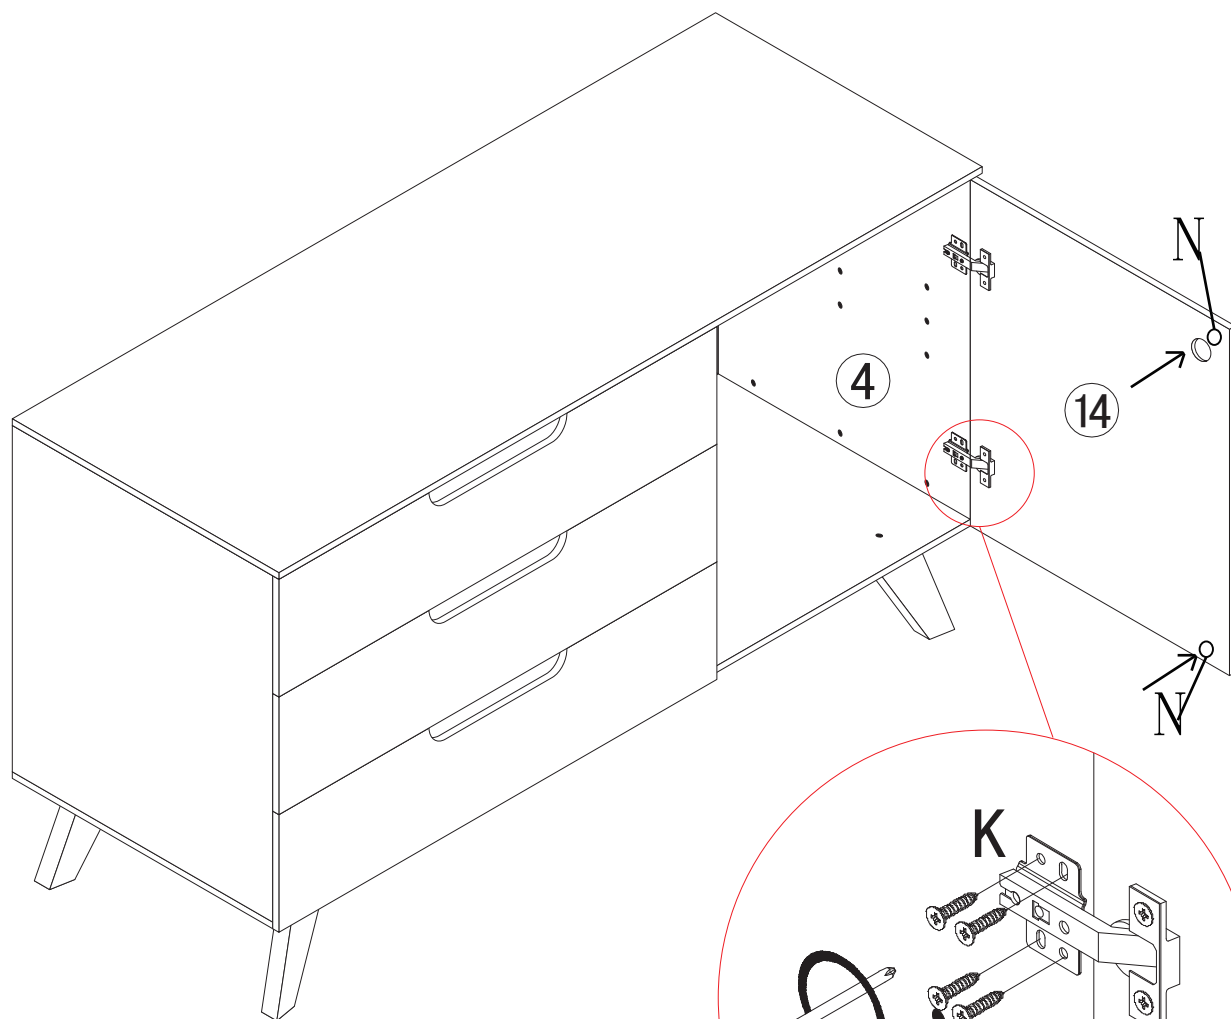

Step17

