

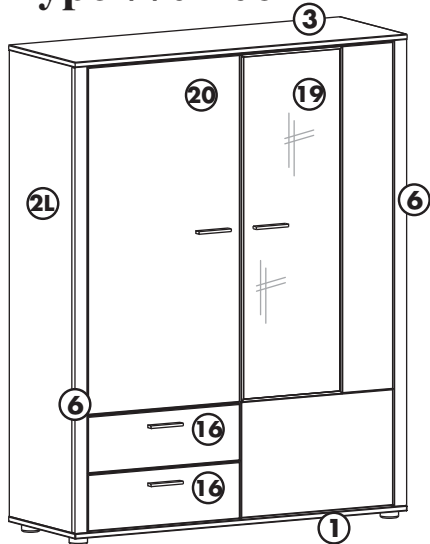


Type 770-106

Sie brauchen:
You need:

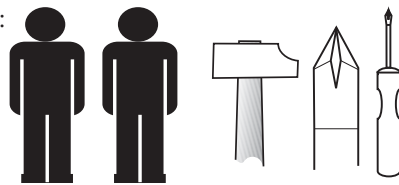

Type 770-105

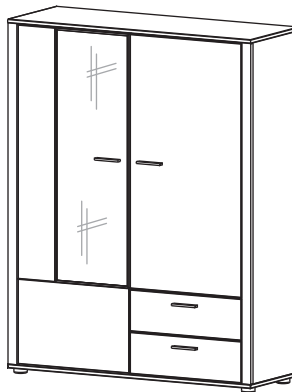

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.













Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!











Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings



CAD und Design
Studio 11 770_106 / 10.23

 5x gedämpft c4	 2x sl3	 2x sr3	 8x 6,3 x 11 es	 5x d9
 4x 8 mm ak	 5x fu1	 8x 5 mm t4	 8x 7 mm tg	
 5x fo1	 3x hbak4	 4x 13 mm a3	 32x e2	 6x M4 x 23 gs3
 28x rh	 28x 3 x 20 s7	 1x 3,5 x 15 s5	 1x wd	 1x rv

Beschlagliste Fittings


 1x le	 4x 3,0 x 16 RWS	 2x 3,0 x 25 RW3	 8x 4,0 x 35 s17
 16x 8 x 40 p1	 6x 3,5 x 17 RW5	 22+4x ak4	 9x tad
 28x a1	 4x 111mm gr16	 1x 5 x 100 s28	 2x M4 x 12 ks
		 10x 4 x 16 s4	

A1

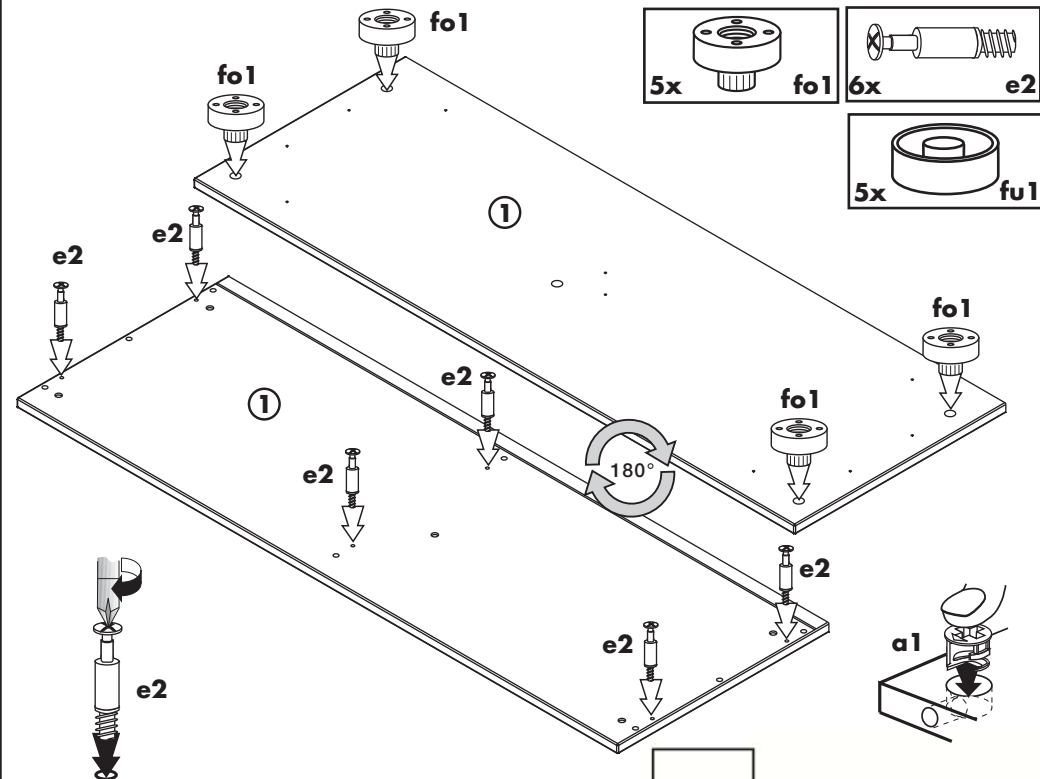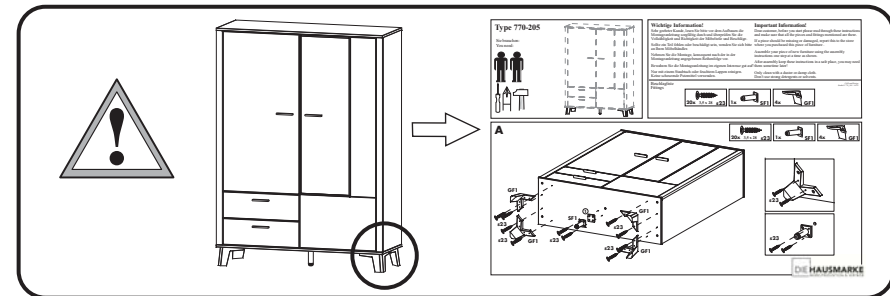


DIE HAUSMARKE
MÖBELPRODUKTION & VERTRIEB




A2

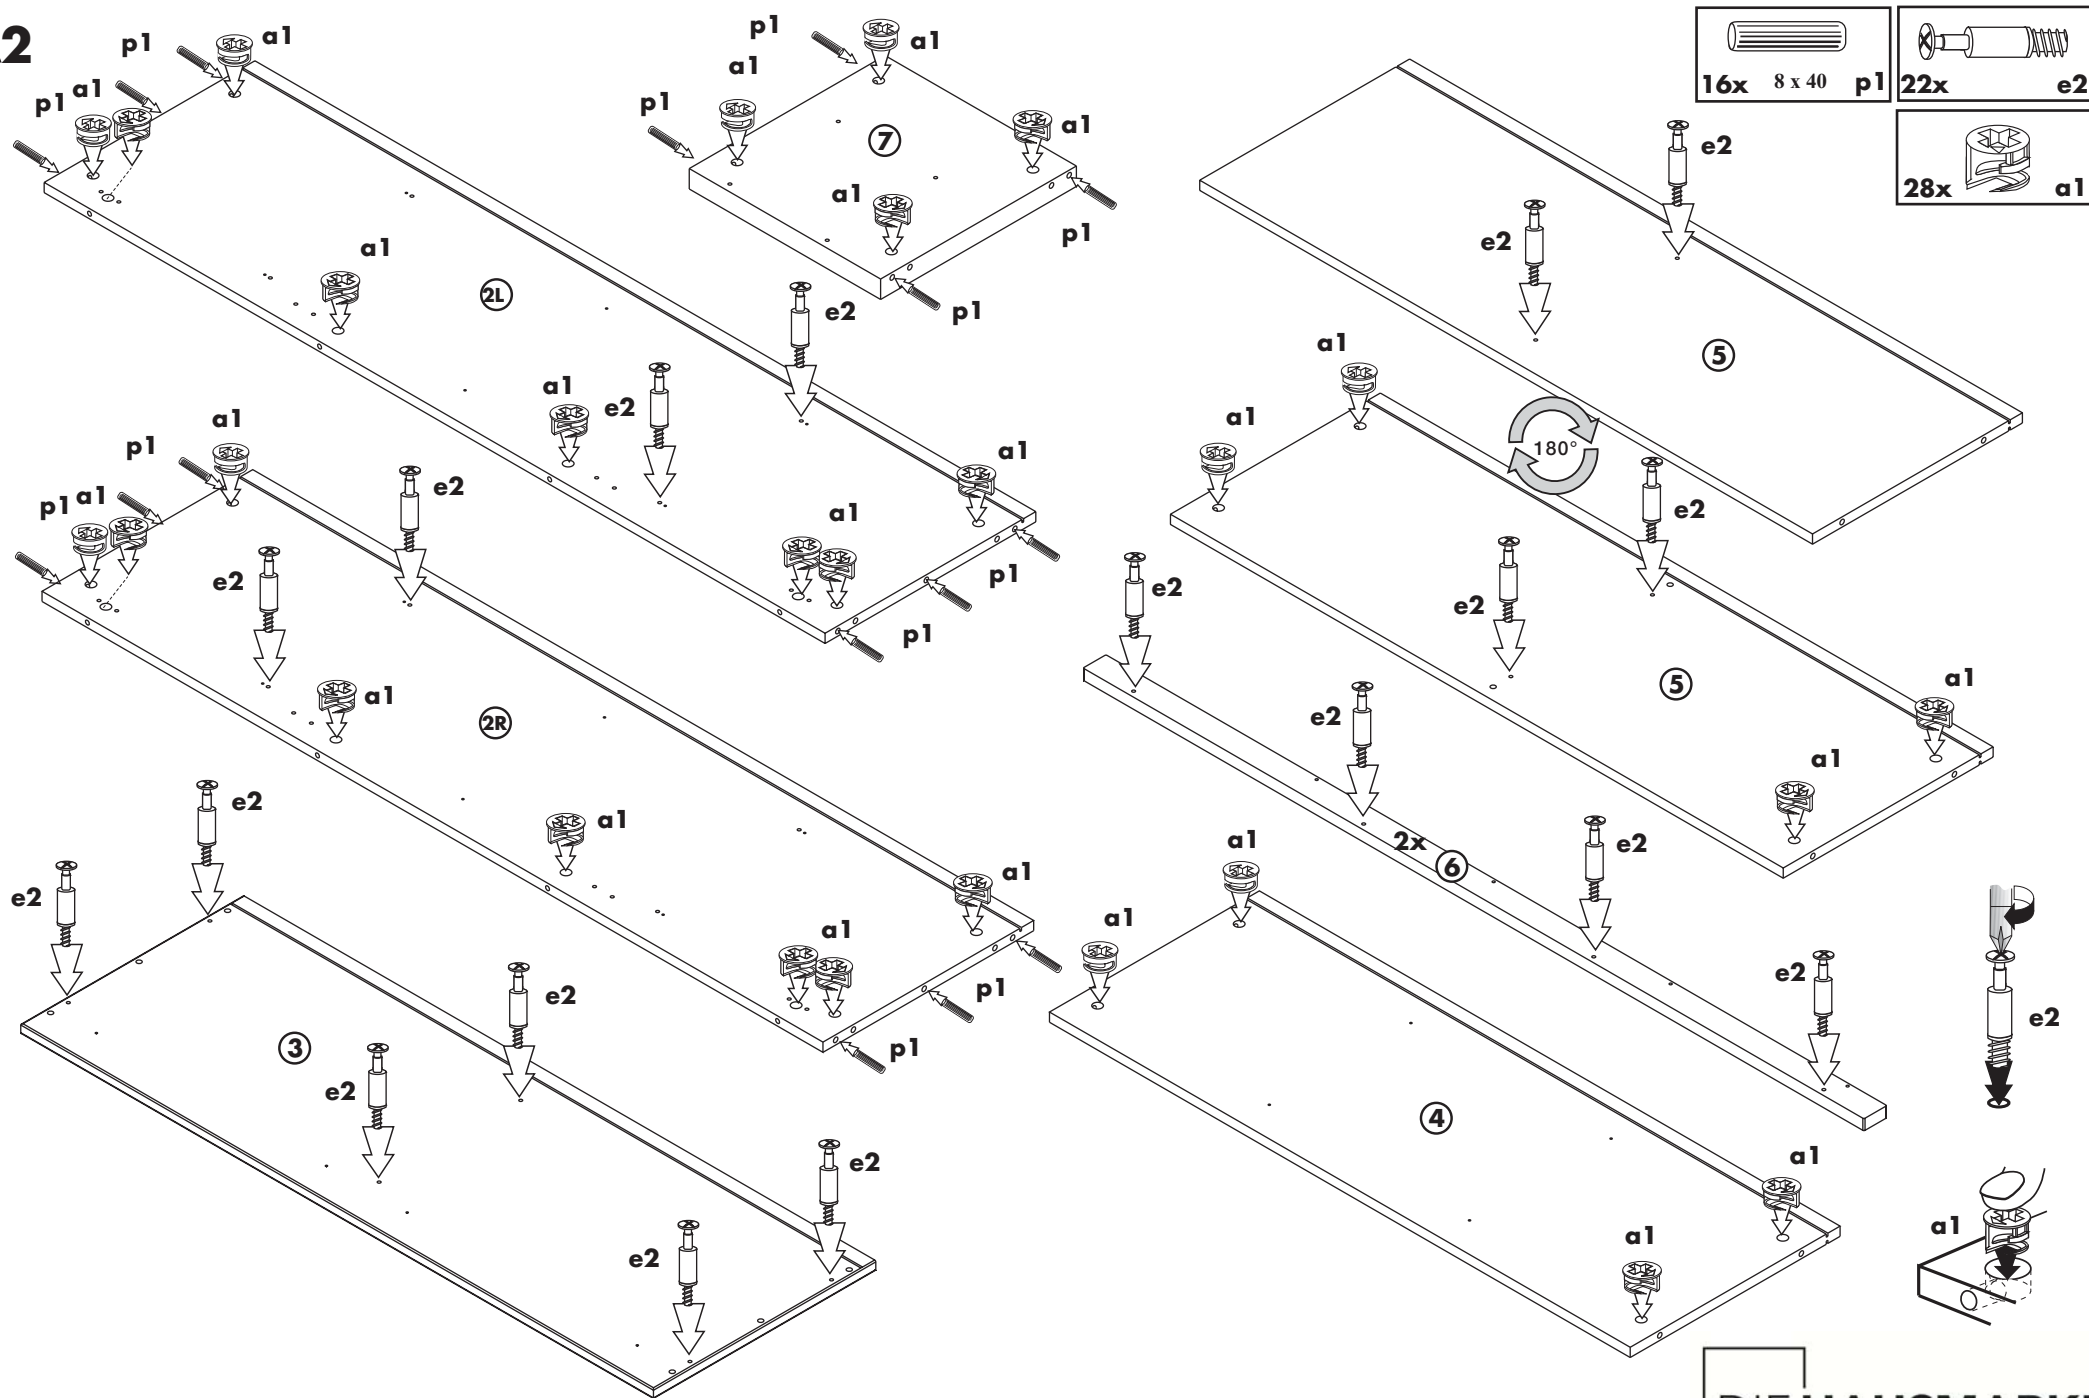



B

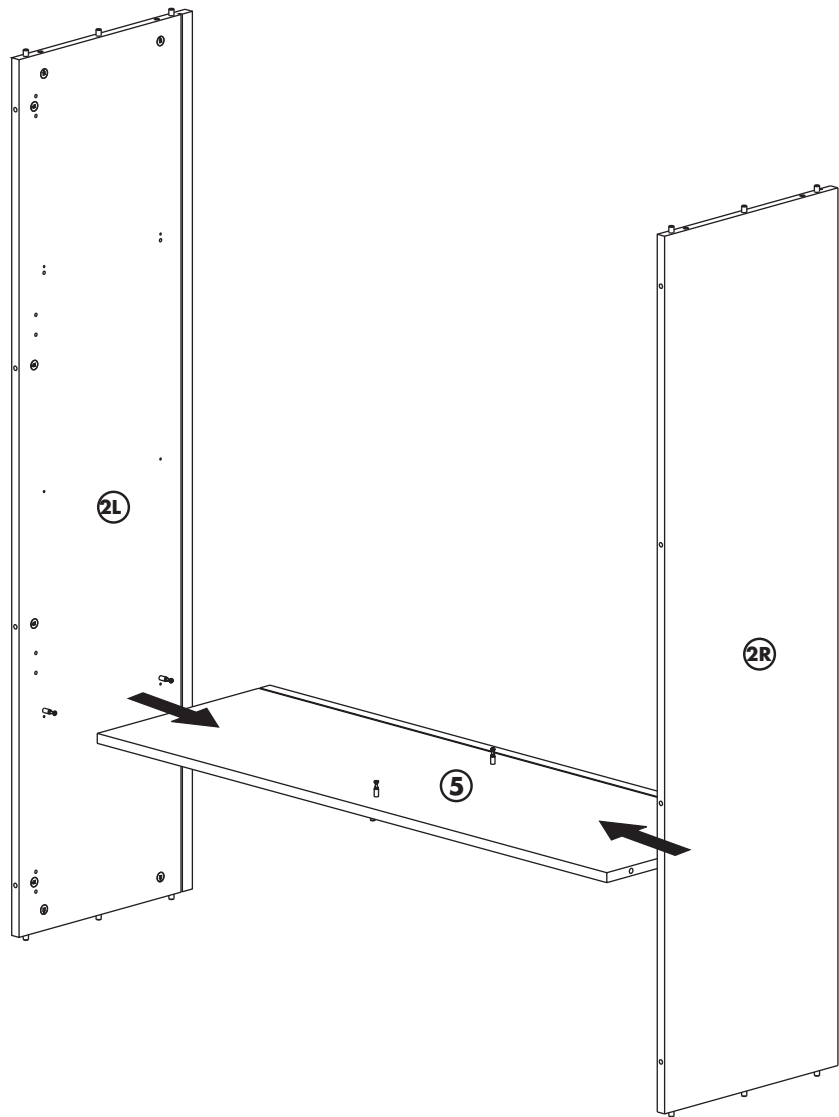




C

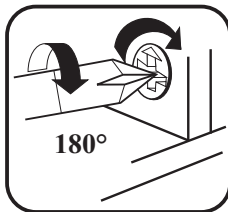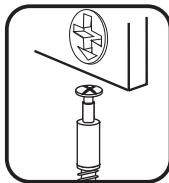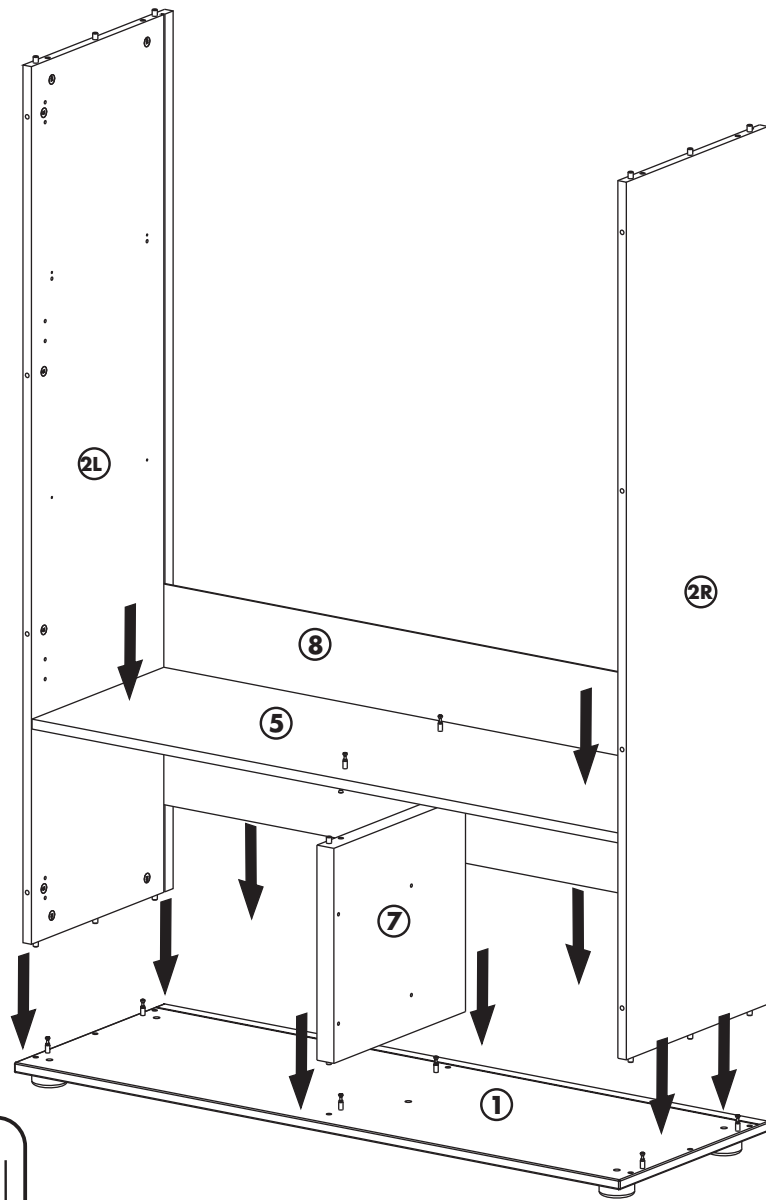




D1

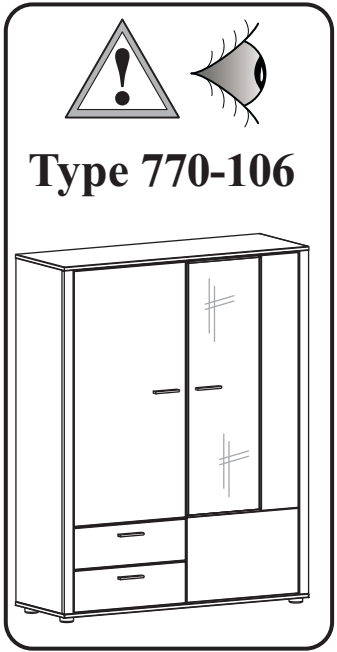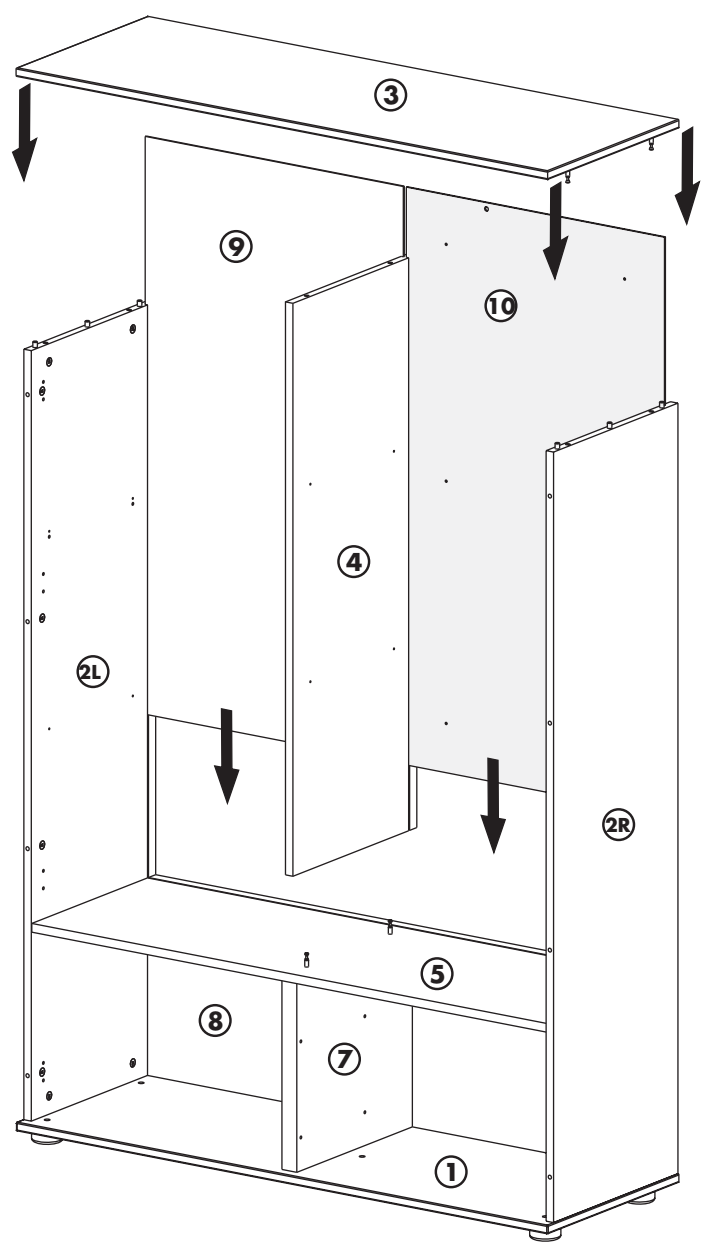




D2

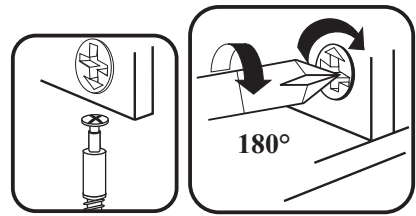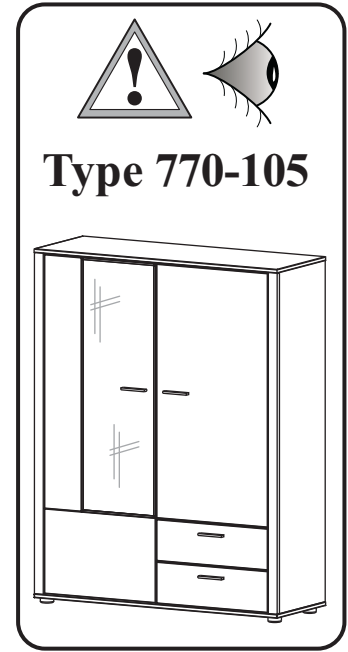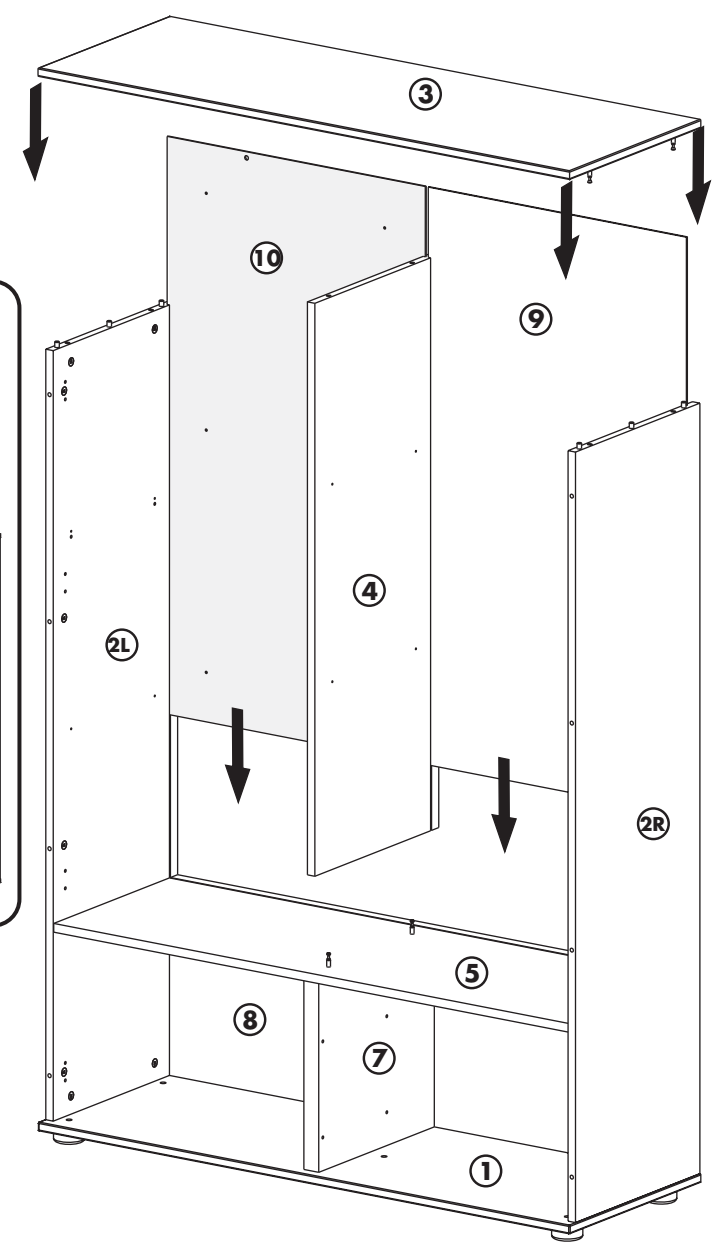

E

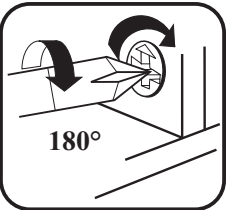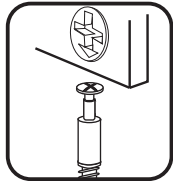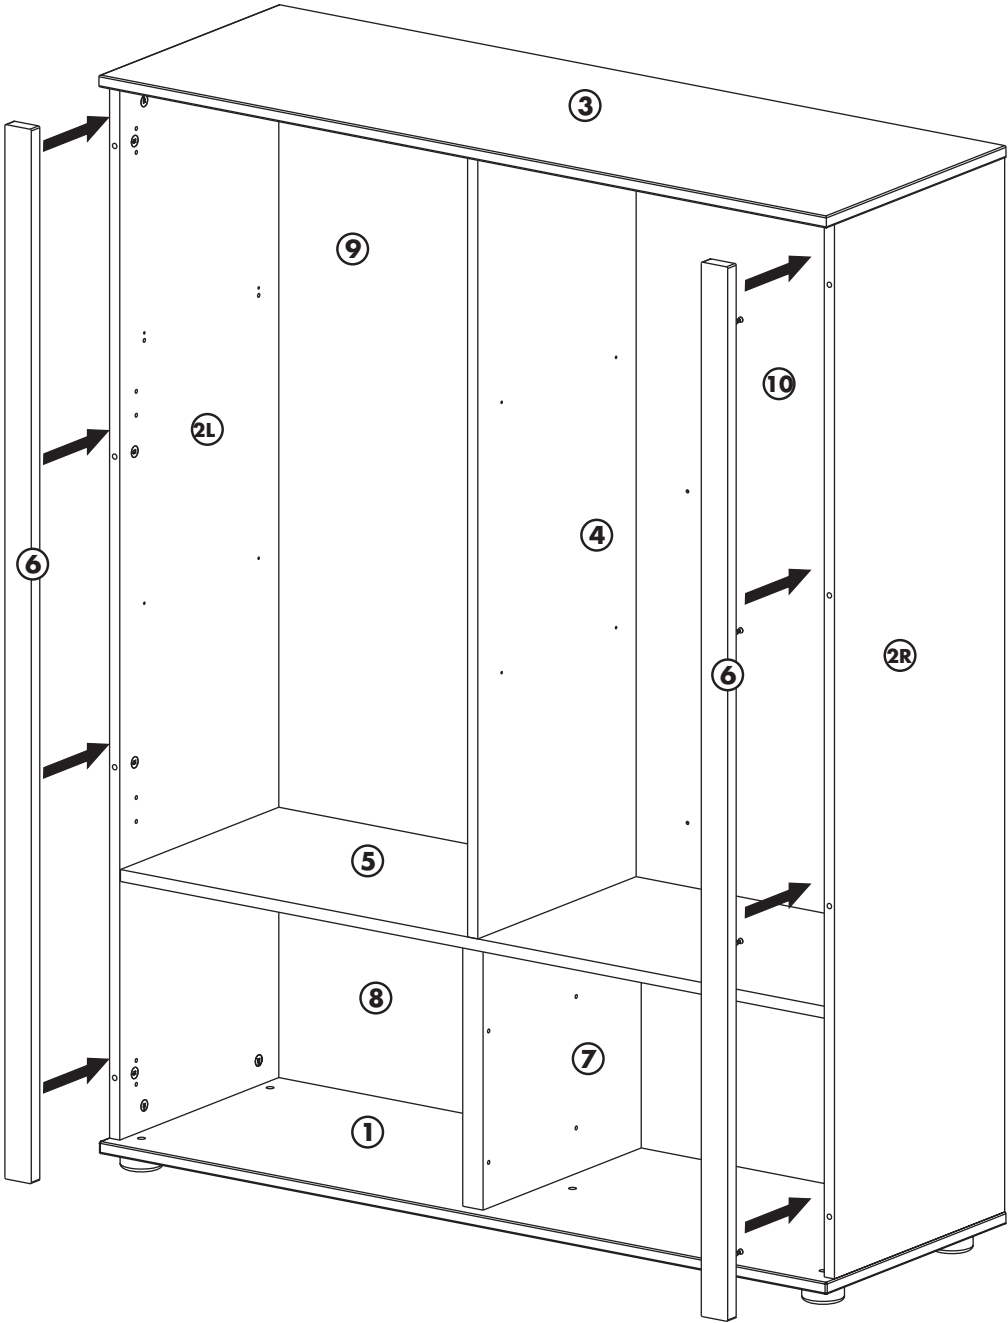



F1

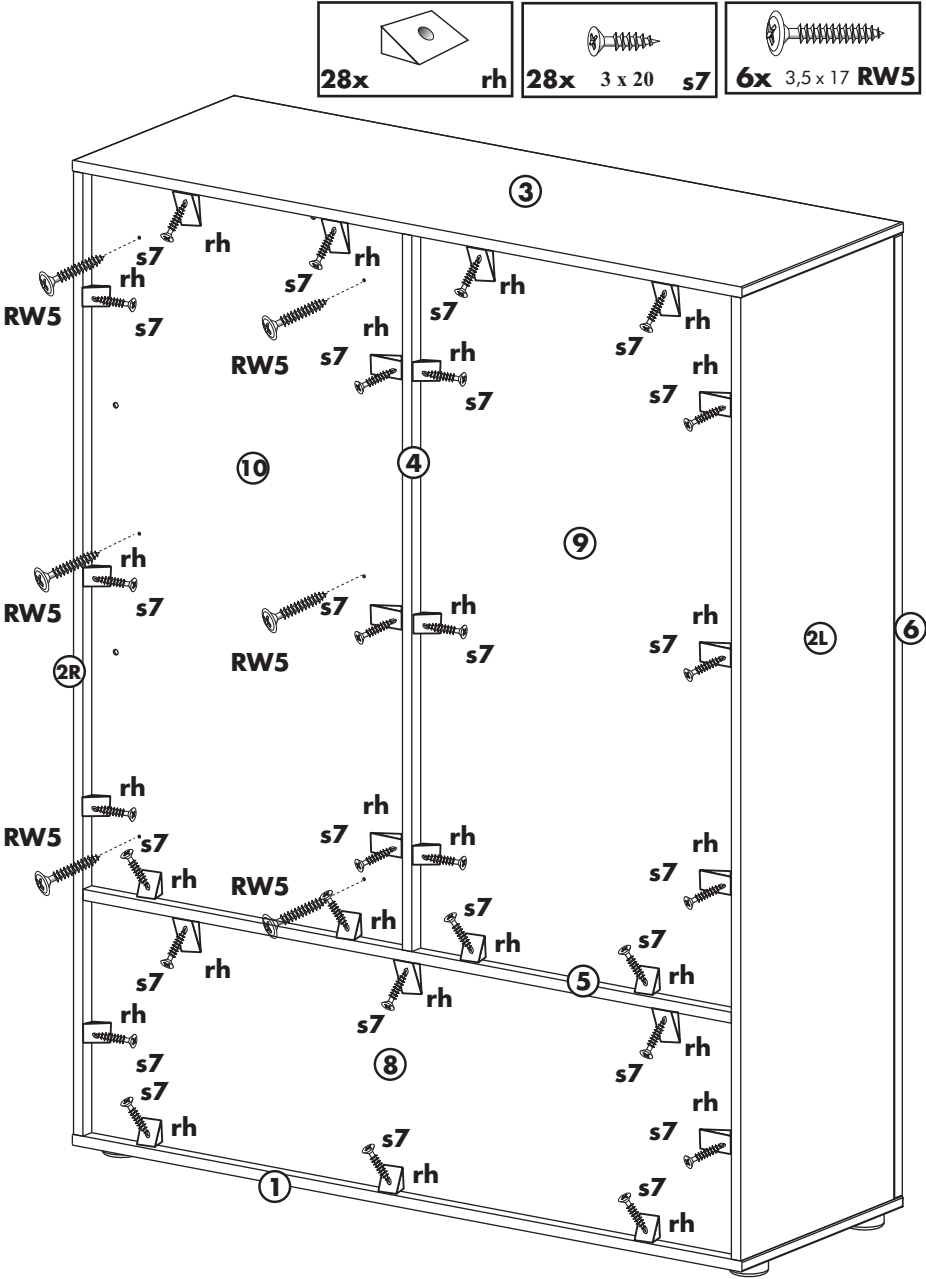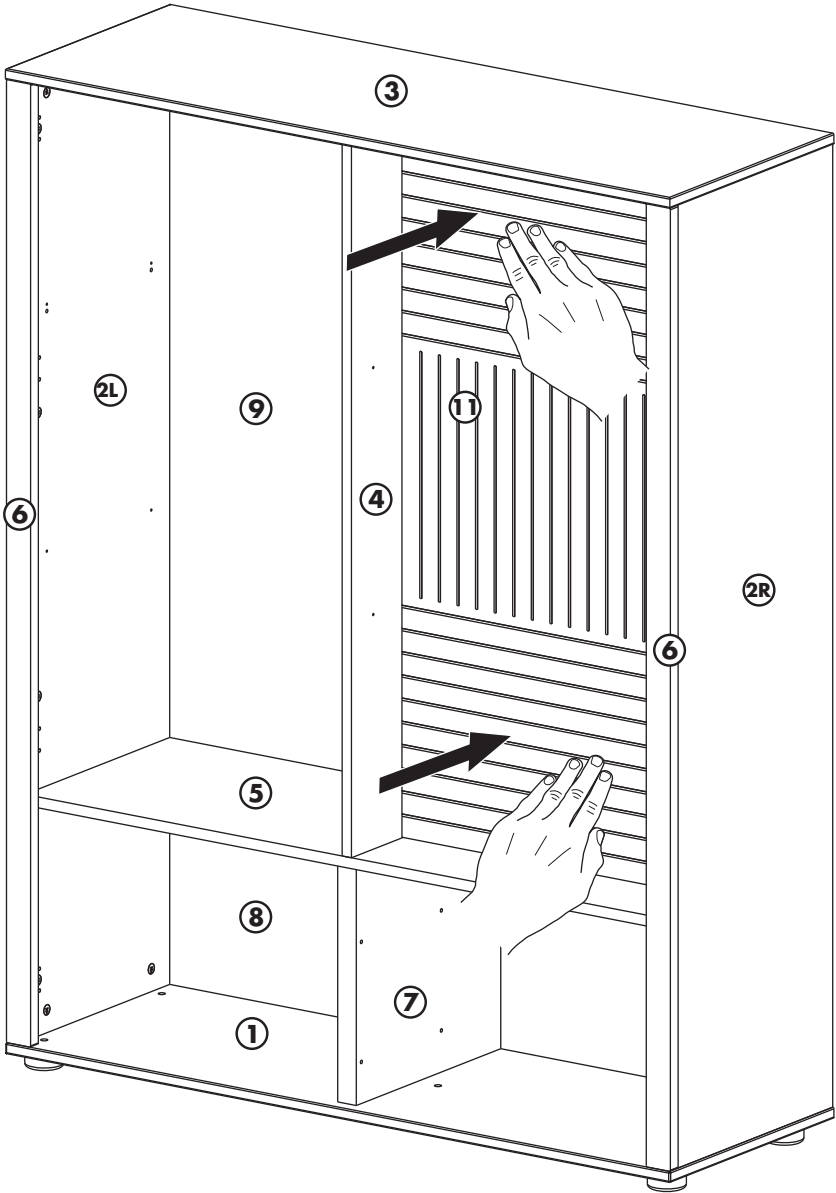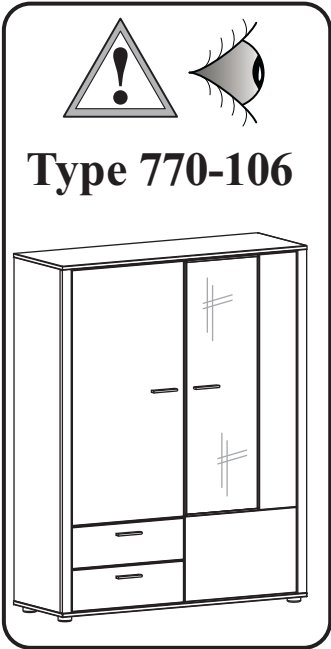



F2





Type 770-105

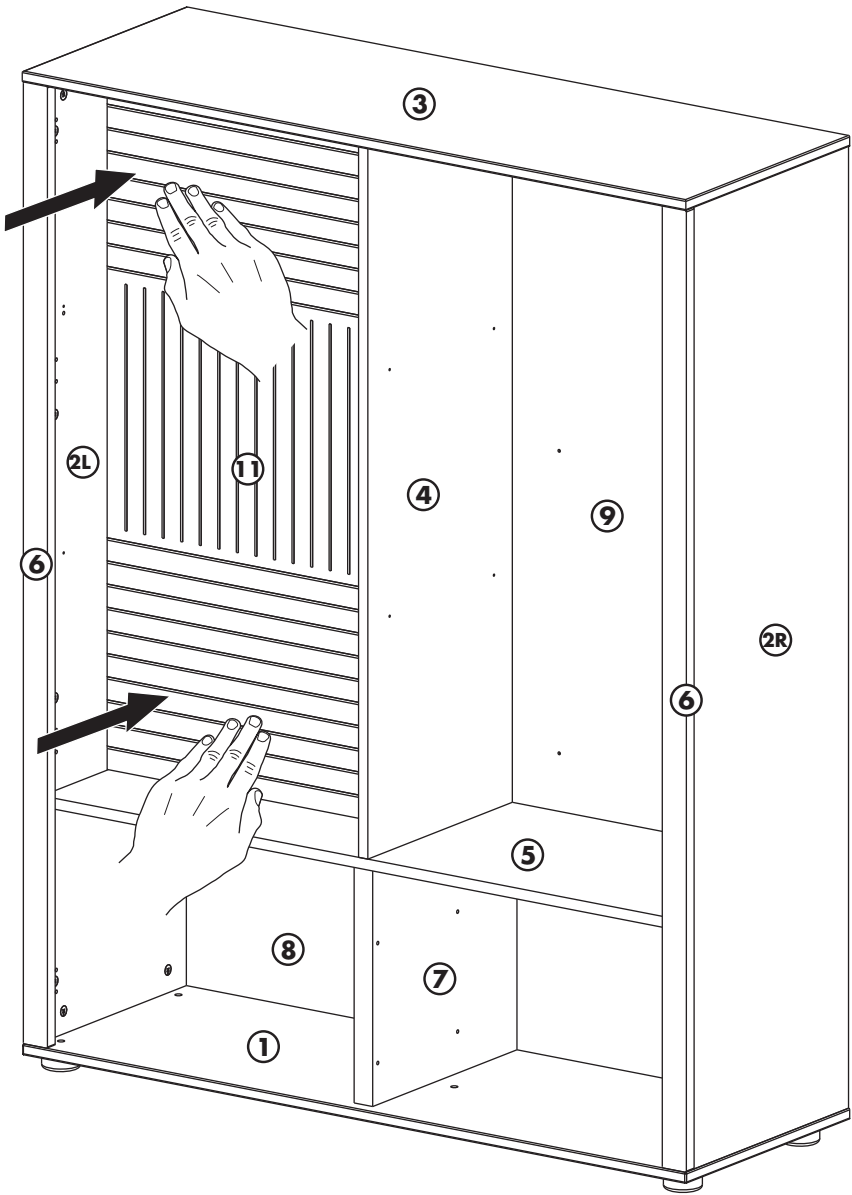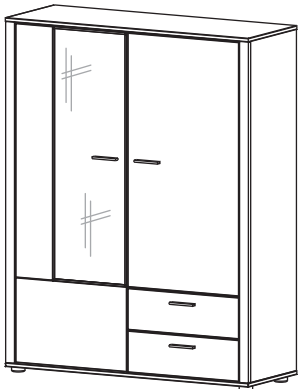

 28x rh	 28x 3 x 20 s7	 6x 3,5 x 17 RW5
--	--	---

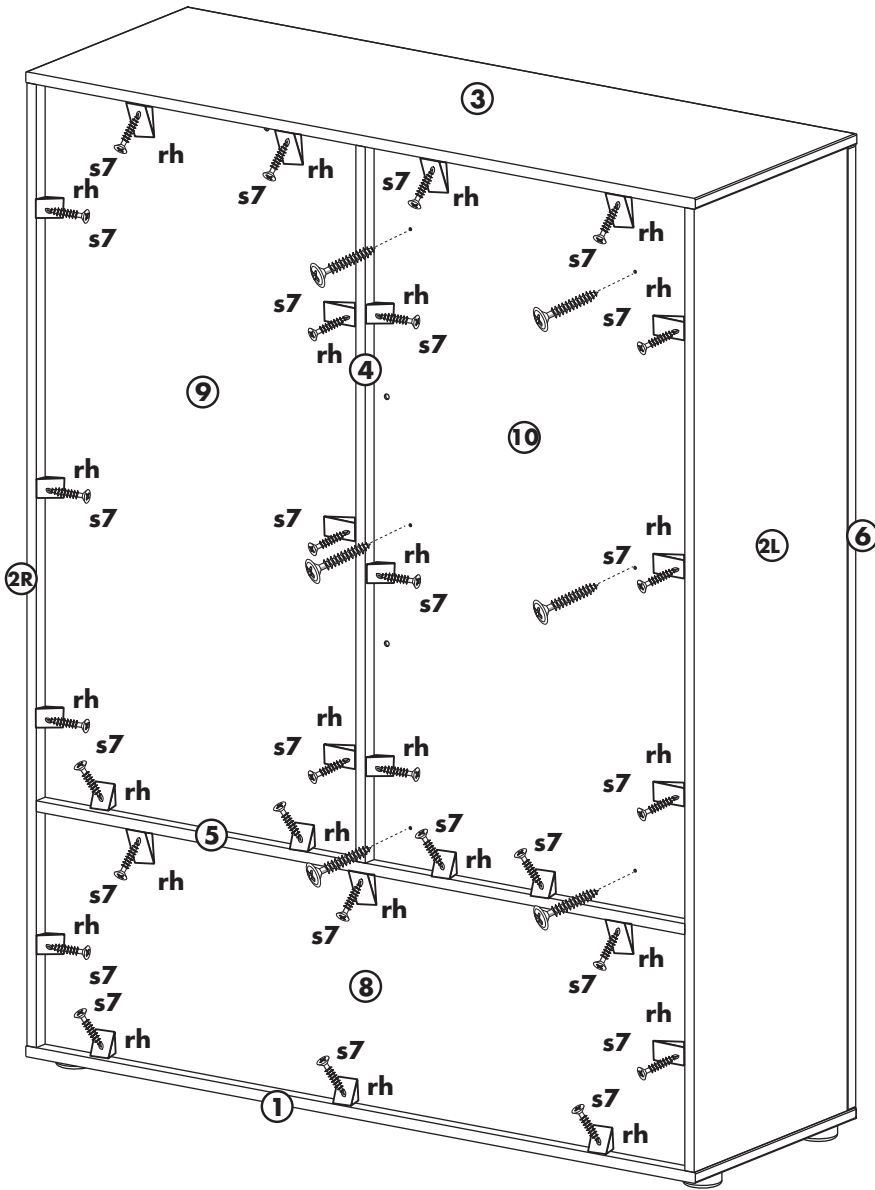






G

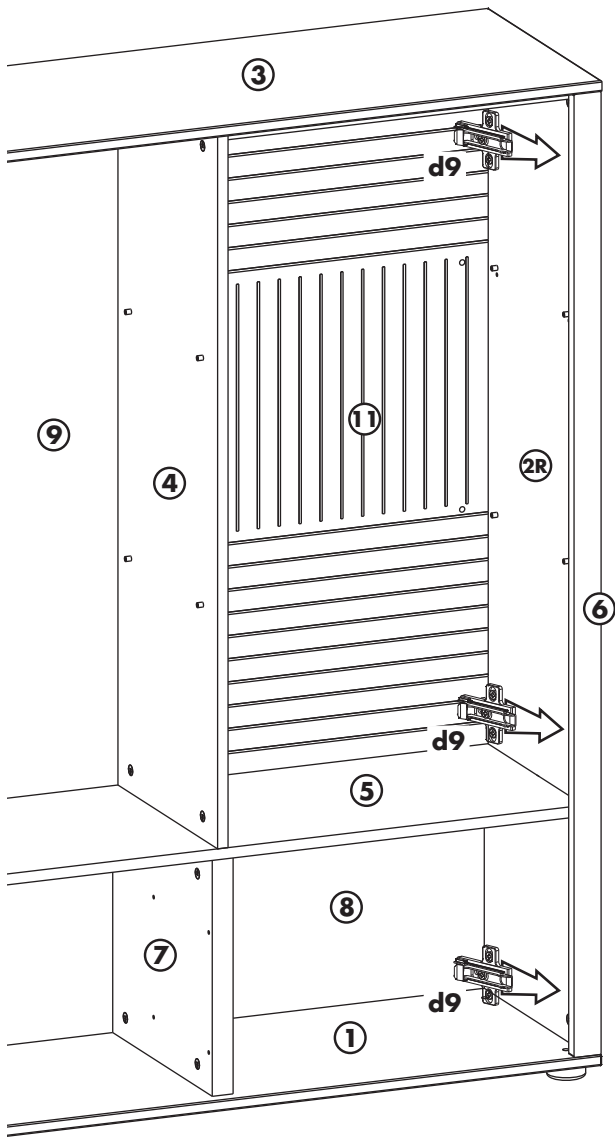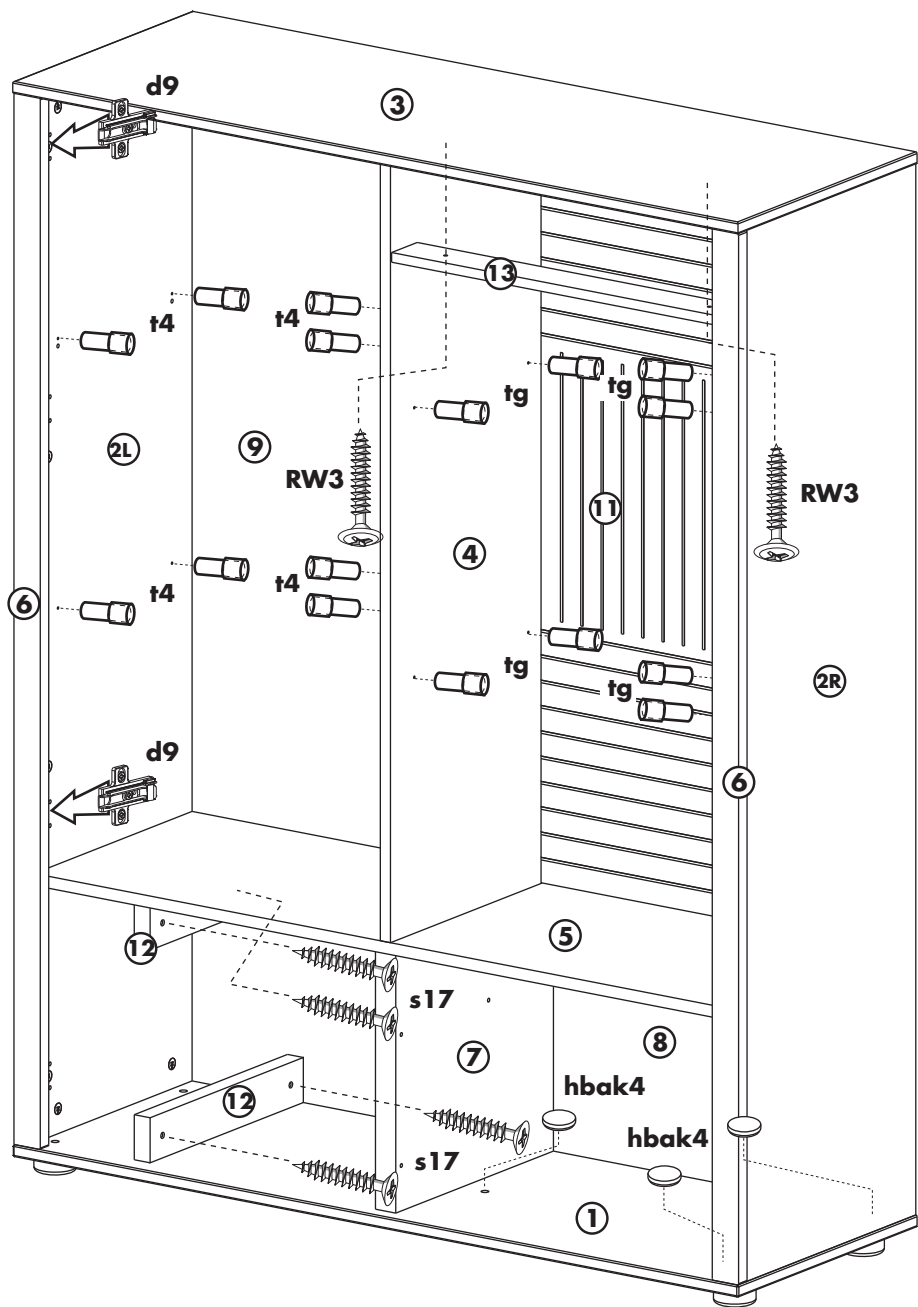

- 
4x 4,0 x 35 **s17**
- 
2x 3,0 x 25 **RW3**
- 
8x **tg**
- 
8x **t4**
- 
5x **d9**
- 
3x **hbak4**




2x

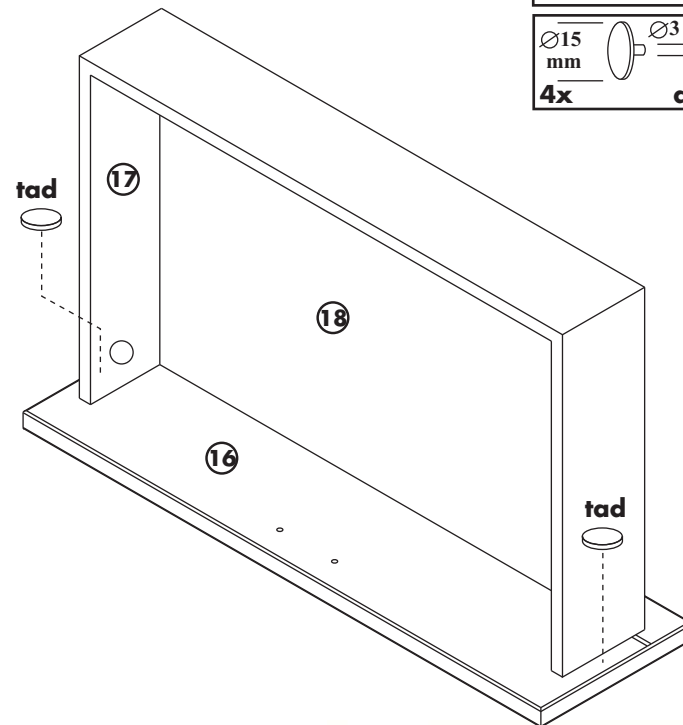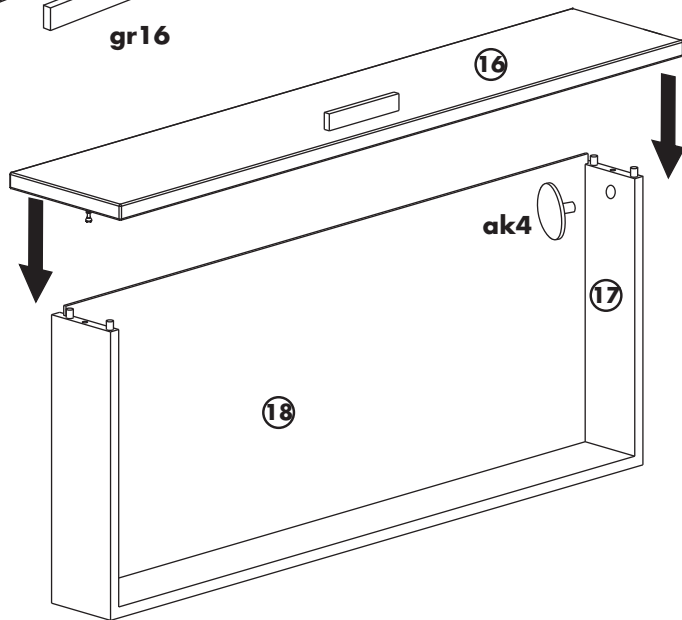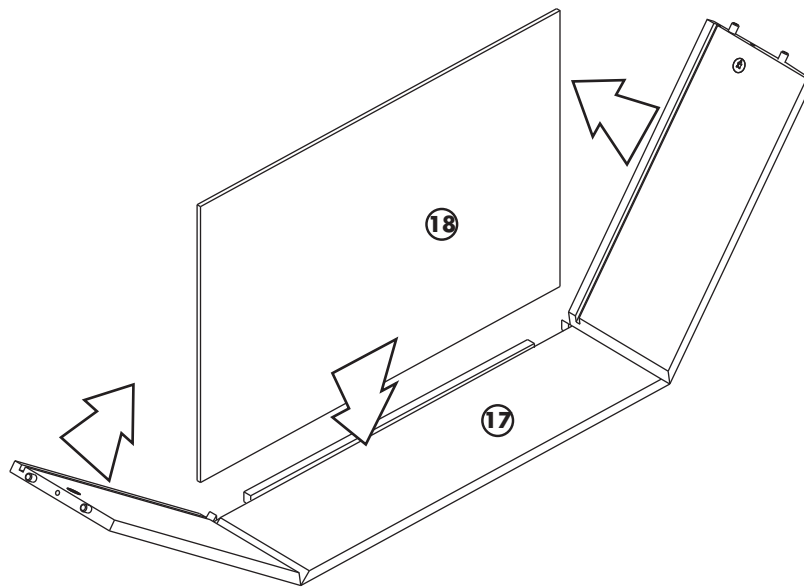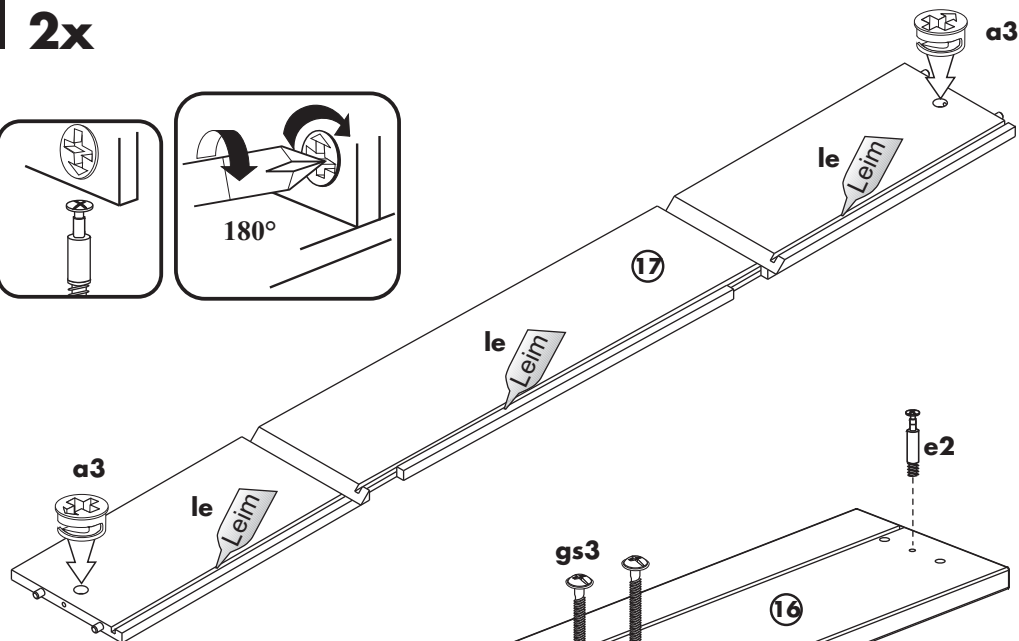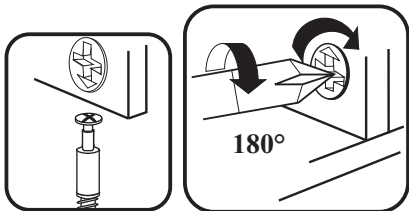




- 4x e2
- 1x leim
- 4x 13 mm a3
- 2x 111mm gr16
- 4x M4 x 23 gs3
- 4x tad
- 4x ak4

J

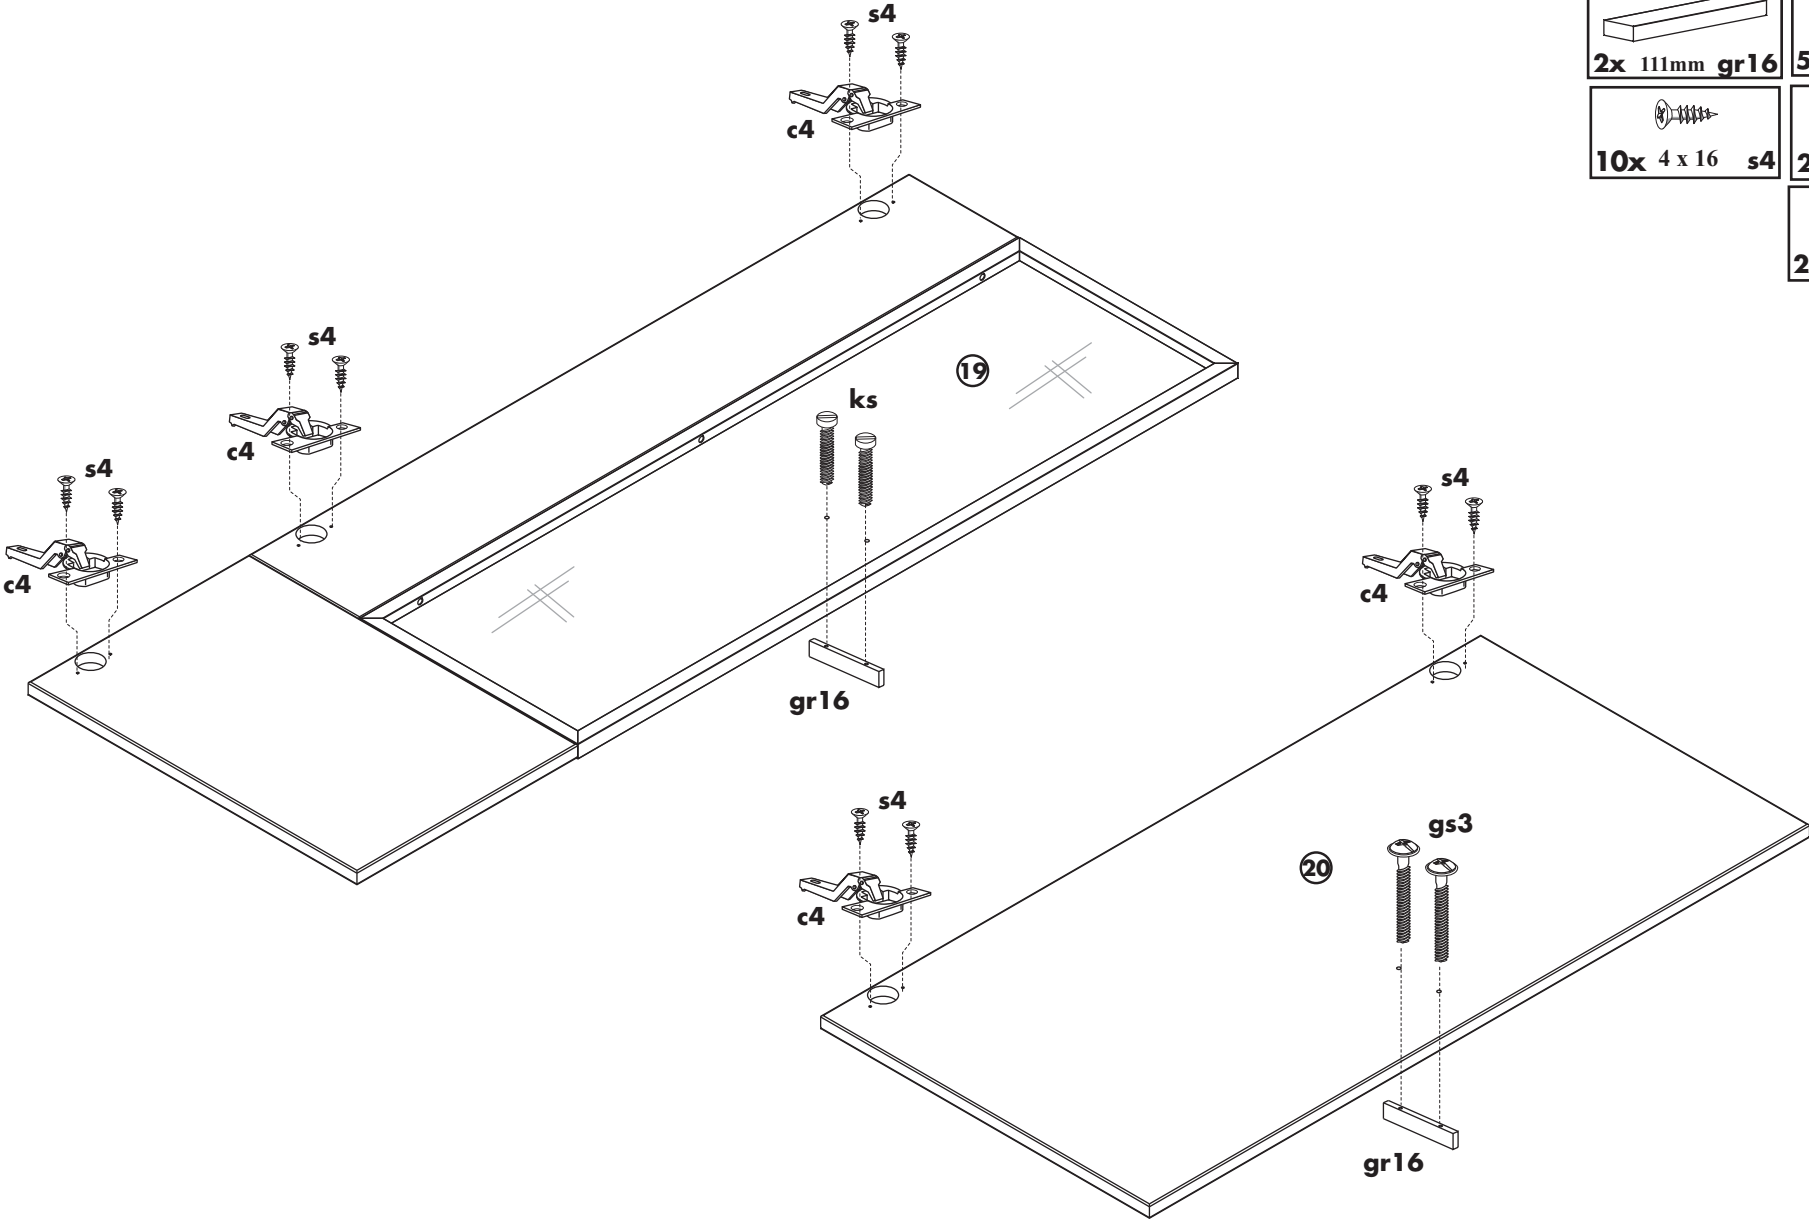


 2x 111mm gr16	 5x gedämpft c4
 10x 4 x 16 s4	 2x M4 x 12 ks
 2x M4 x 23 gs3	

K

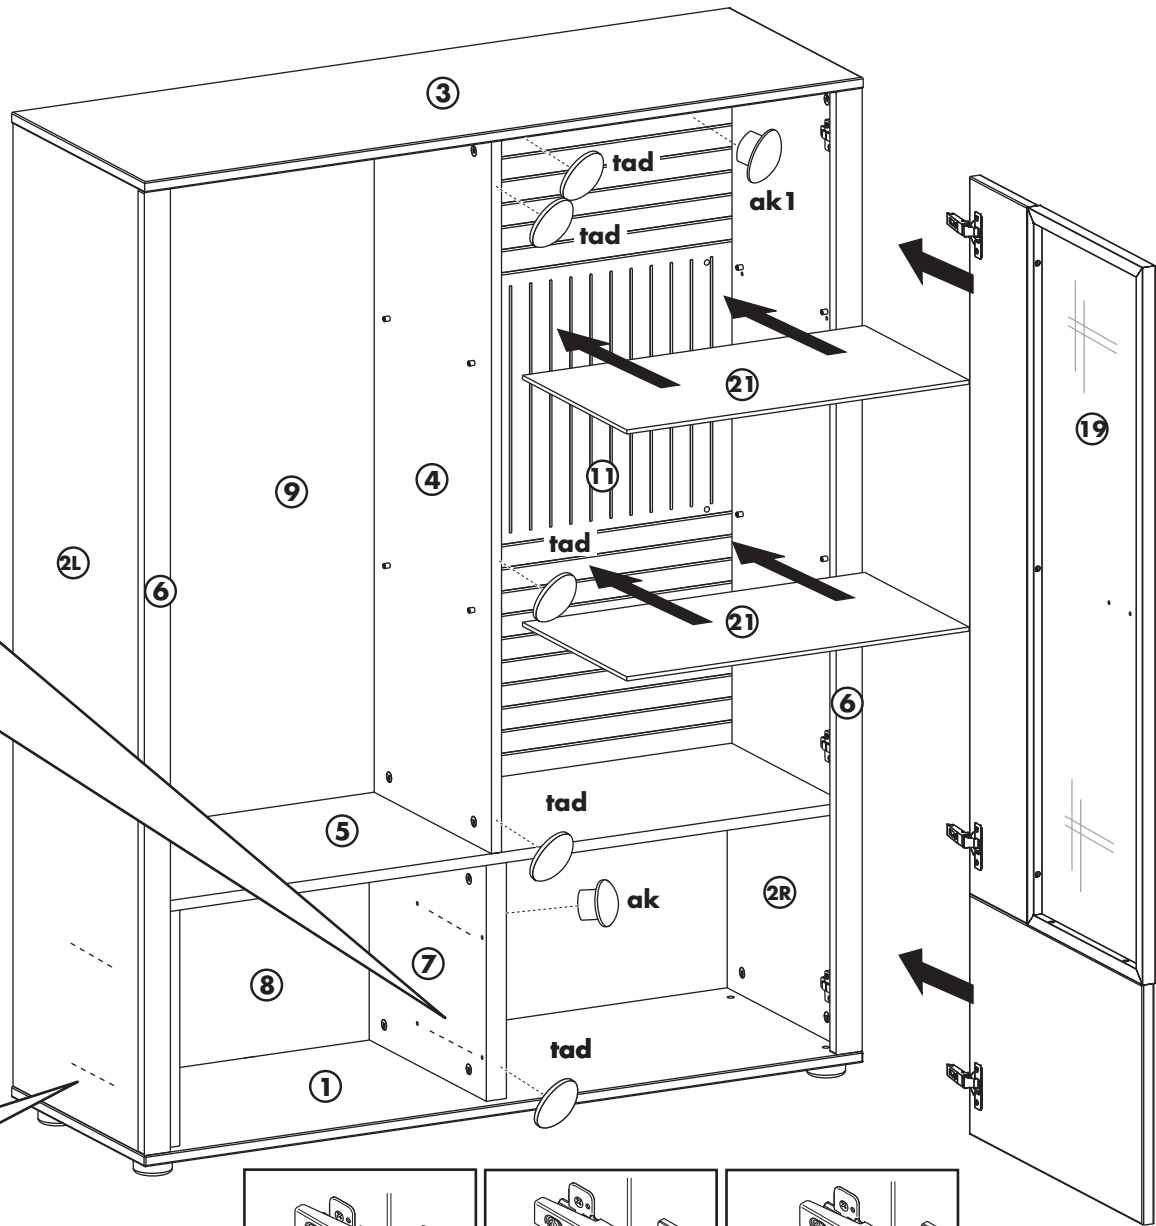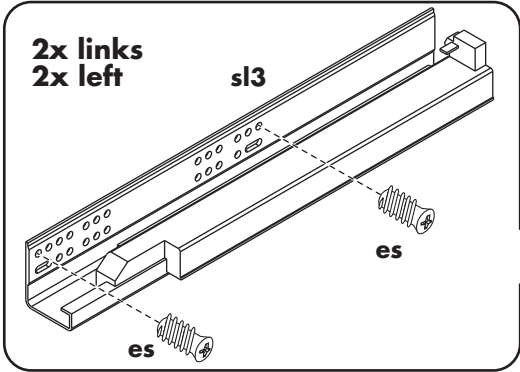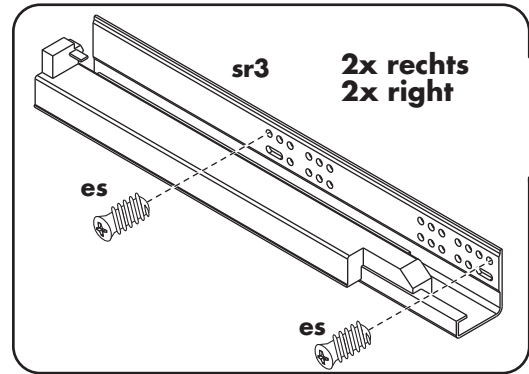


- 8x 6,3 x 11 es
- 2x sr3
- 2x sl3
- 5x tad
- 3x ak1
- 4x ak

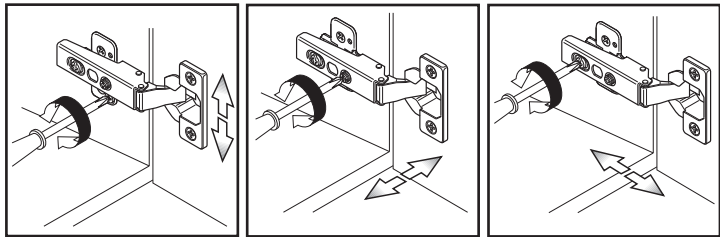

L


**Verriegelung
Lock**



1.

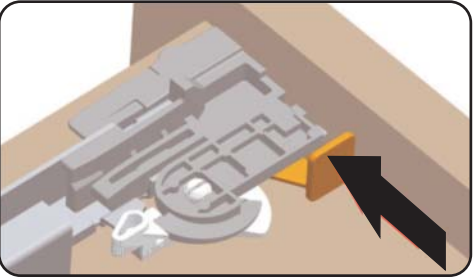

**Höhenverstellung
Height adjustment**

2.

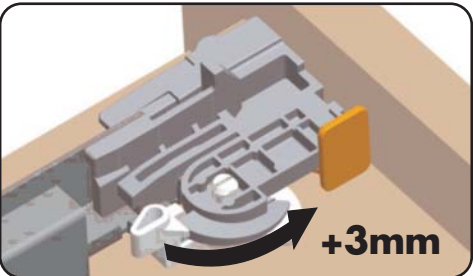


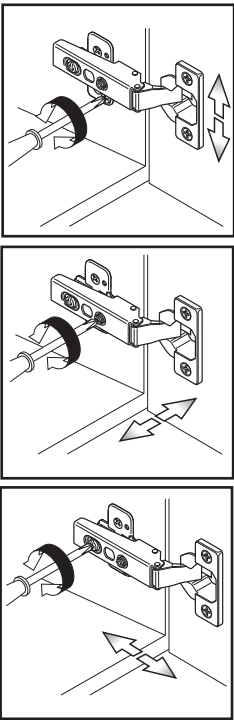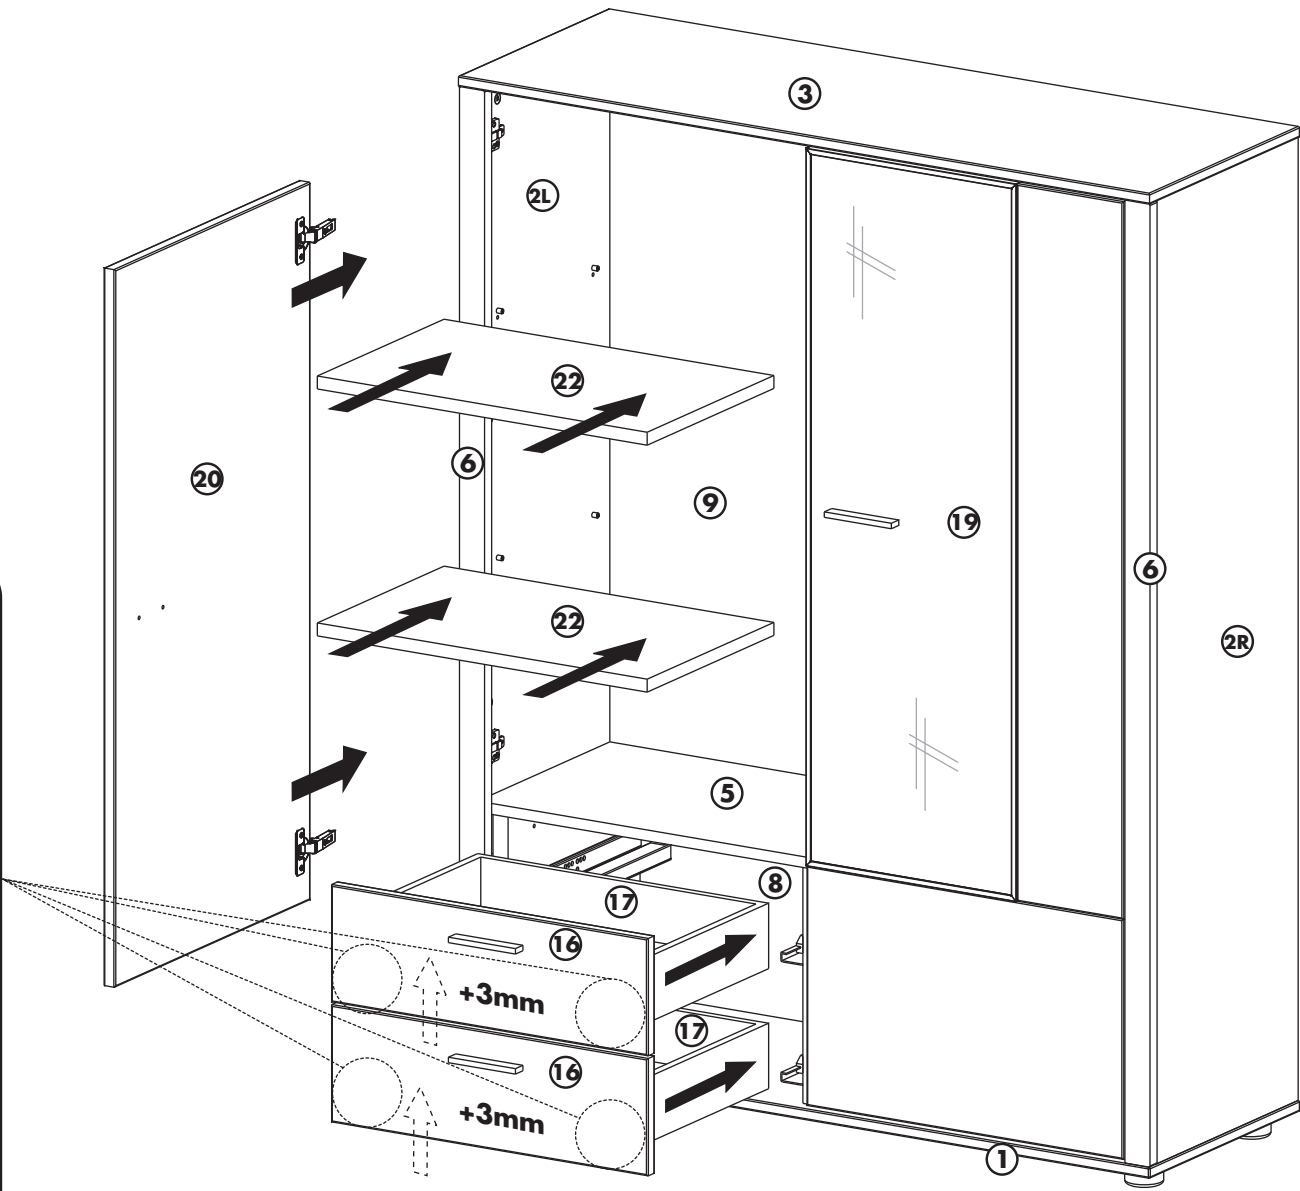



M



**Kippsicherung links
und rechts anbringen**
**Install anti-tip device
left and right**

 1x wd	 1x rv
 1x 3,5 x 15 s5	 1x 5 x 100 s28
 Ø15 mm 22x ak4	

**2. Wand markieren
mark wall**

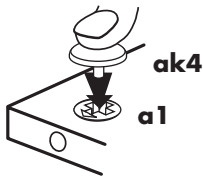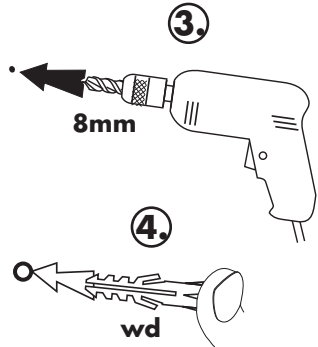

**5. Schraube eindrehen
Mount screw**

