


ASSEMBLY INSTRUCTION


MODEL : SP 0811 (6)

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Legs 60 x 70H	2 pcs
E	2000mm Center Rail	2 pcs
F	Support Leg 215mm	4 pcs
G	JCBC M6 X 40	4 pcs
H	JCBC M6 X 50	4 pcs
I	M4 x 100mm	1 pc
J	M5 x 70mm	1 pc
K	CSK M4 x 25mm	4 pcs
L	CSK M4 x 32mm	34 pcs
M	1797mm 14 Pcs Slat	1 pc
N	Small Adjuster	4 pcs
O	JCBC M8 X 20	8 pcs


Step 1 : Tighten the legs (D) to both headboard (A) and footboard (B) as shown.

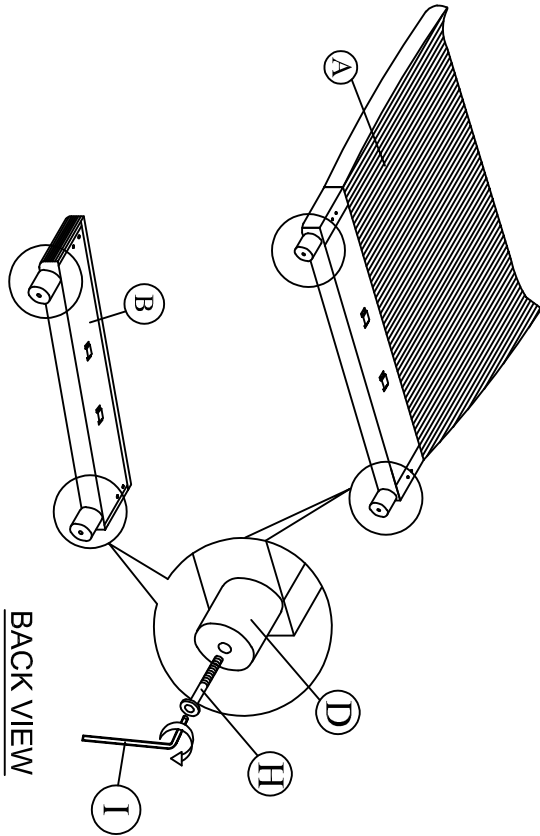


Step 2 : Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it

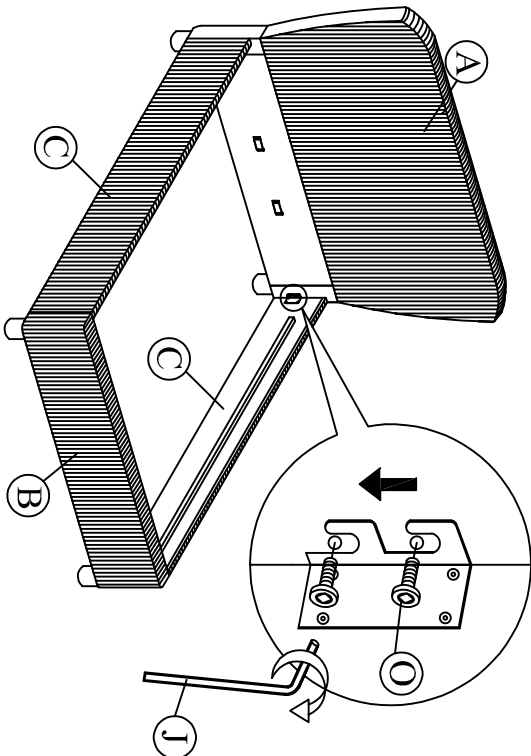

Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

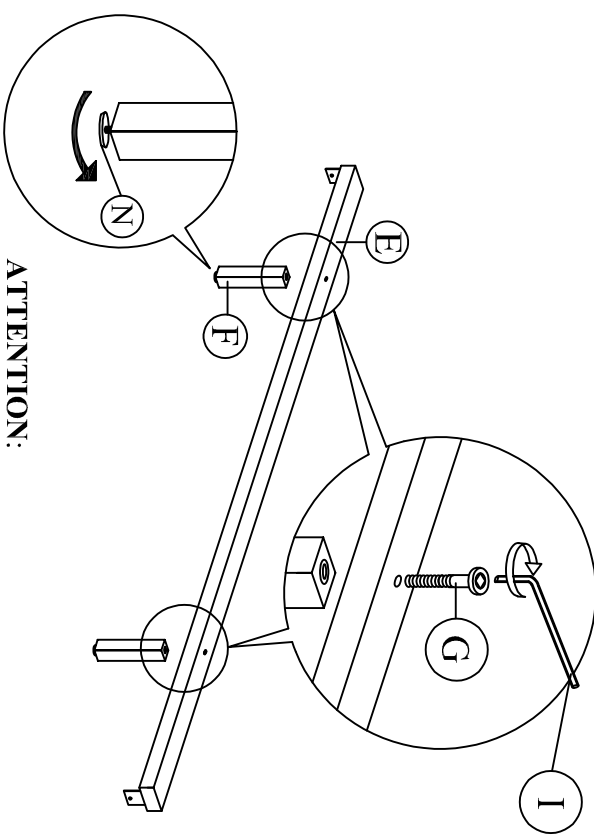

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (K) using screw driver (not included) to the headboard (A) and footboard (B).

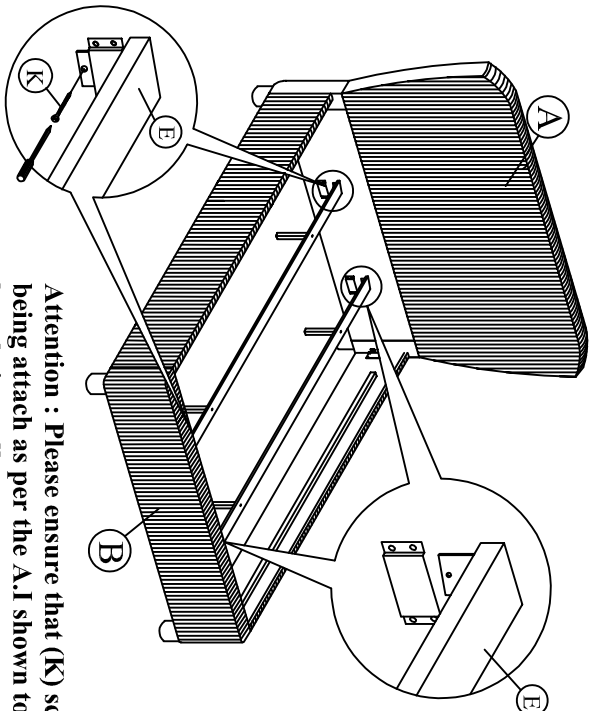

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Attention : Please ensure that (K) screw is being attach as per the A.1 shown to avoid base being collapse.

Step 5 : Affix the Slat (M) to the side rail support wood and the center rail (E). Tighten all the 4 corner.

