


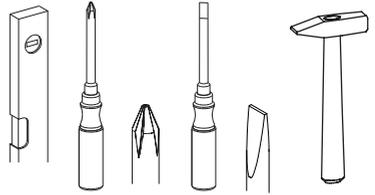
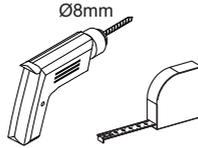


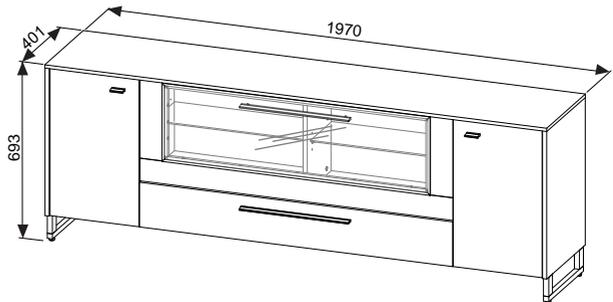

Sie benötigen:
You need:

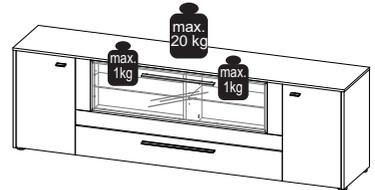

Type 650103 / 650303

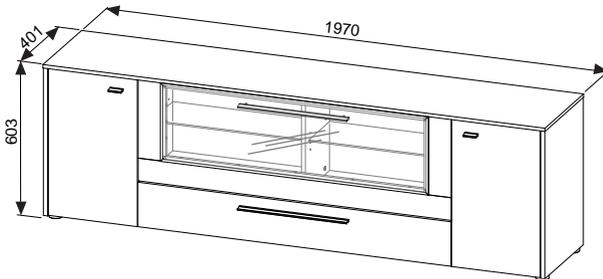

DIE HAUSMARKE
MÖBELPRODUKTION & VERTRIEB

DE

Wichtige Information!


Bitte die Montageanleitung vor Beginn sorgfältig studieren. Um eine ordnungsgemäße und mangelfreie Erstellung zu gewährleisten, muss die Montage exakt in der gezeigten Reihenfolge ausgeführt werden. Wir empfehlen die Montage nur durch fachkundiges Personal. Entsorgen Sie die Verpackung bzw. das Produkt nach Abnutzung umweltgerecht. Pflegehinweis! Bitte nur mit einem Staubtuch oder einem feuchten Lappen reinigen. Keine scheuernden Putzmittel verwenden! Hochglanzfronten erst 48 Std nach Entfernung der Schutzfolie reinigen. Hochglanzfronten nur mit weichem Tuch und 1%iger Wasser-Seife-Lösung reinigen - keine scheuernden Mittel, Säure, Lösungsmittel, Spiritus, Azeton etc. verwenden! Hochglanzfronten vor dauerhafter Feuchtigkeit schützen. Wandmontage: Der Untergrund der Wand ist vor der Montage auf die Eignung (Tragfähigkeit) zu prüfen. Das beiliegende Befestigungsmaterial ist nur für massives Mauerwerk geeignet! Beleuchtungen und Elektro Hinweise: Defekte Bauteile nur gegen solche gleicher Bauart umgehend ersetzen. Während der Reinigung des Möbels Stromzufuhr trennen. Elektrogeräte nicht verdecken (Wärmestau). Kleinkinder von Elektrogeräten fernhalten. Achtung, Heiße Oberflächen an Leuchtmitteln nicht berühren. Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

GB

Important Information!

Please carefully read through the assembly instructions before starting. To ensure proper, fault-free construction, assembly is to be carried out exactly as shown in the sequence. We recommend having the assembly done only by qualified personnel. Please dispose of the packaging and of an old product no longer in use without any danger to the environment. Care instructions! Please do only clean with a duster or a damp cloth. Do not use any scouring agents! After removing the protective foil, wait for 48 hours before cleaning high gloss fronts for the first time. Clean high gloss fronts only with a soft cloth and a 1% soap and water solution - do not use abrasive cleaning agents, acids, solvents, methylated spirits, or acetone etc.! Protect high gloss fronts from sustained exposure to moisture. Wall fixing: The foundation of the wall must be checked for suitability (stability) before assembly. The enclosed mounting material is only suitable for solid brickwork! Lighting and electrical instructions: Defective components must be replaced without delay and only with components of the same design. Disconnect from the power supply before cleaning the furniture. Do not cover electrical devices (heat build-up). Keep small children away from electrical devices. Attention! Do not touch the hot surfaces of light fittings. If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.


Type 650103 / 650303

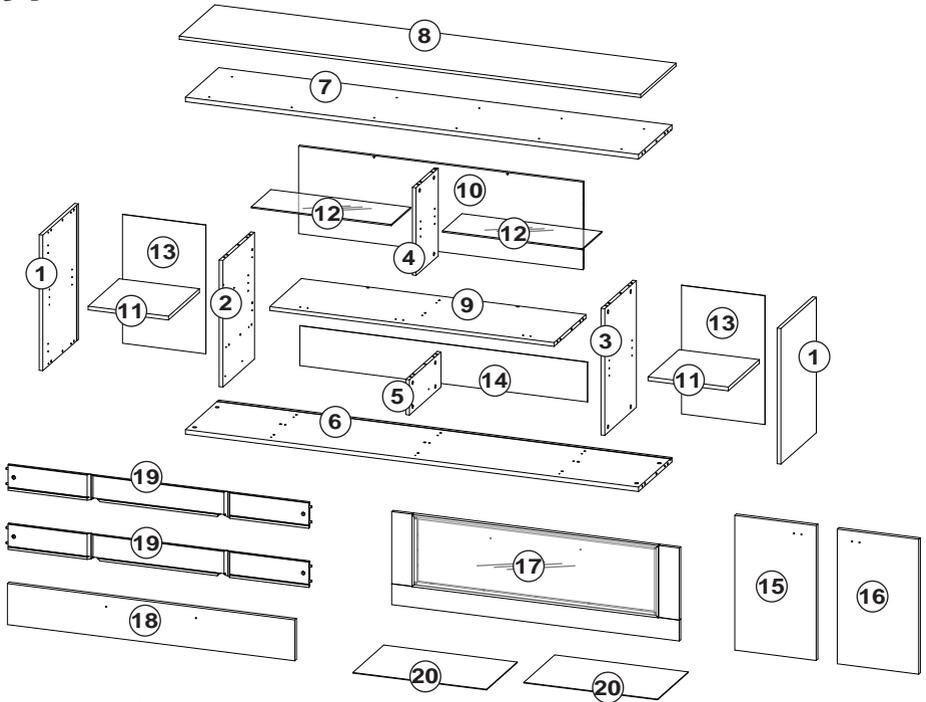


Beschlagbeutel / fitting bag

BD 36x	AA 20x	AB 8x	AC 8x	DA 44x	BB 8x	BO 8x	KS 20x
KAL 350mm 2x	NG 9x	SS 6,3x11 8x	SC 4,0x30 12x	GR1 50mm 2x	GR2 428mm 2x	GS 4,0x25 6x	GT 4,0x10 2x
KAR 350mm 2x	FO 7x	FU 7x	LE 2x	AK4 14mm 12x	WB 2x	TF 4x	TG 3x
MP1 7x	AK1 15mm 20x	AK2 8mm 2x	AK3 5mm 16x	AK5 10mm 2x	AK6 15mm 4x	KH1 3,0x15 2x	KH2 3,0x15 2x
KH3 3,0x15 2x	KH4 3,0x15 10x	RK 6x	SB 3,0x15 6x	SA 3,5x15 28x	UN 4x	KH5 4x	


Type 650303

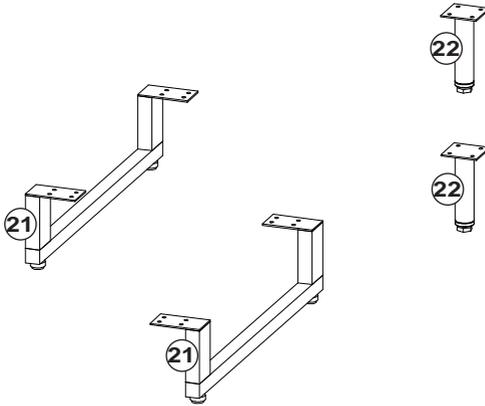

Beschlagbeutel / fitting bag




1

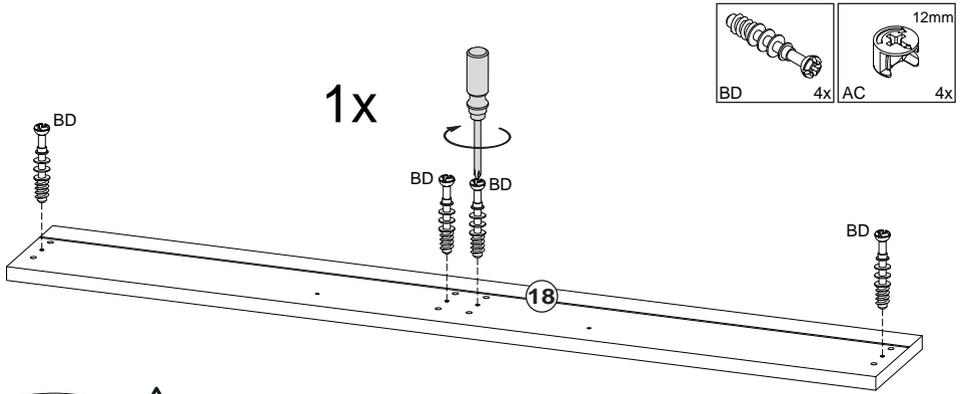

12mm


AC

2x


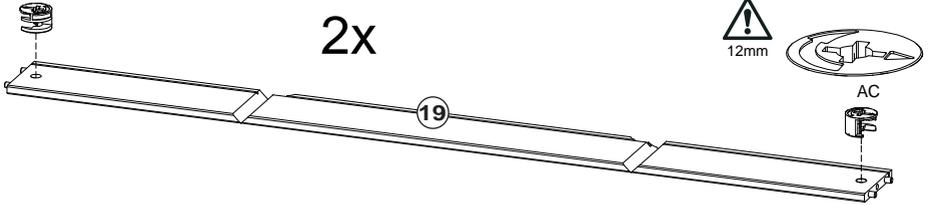


2



2x

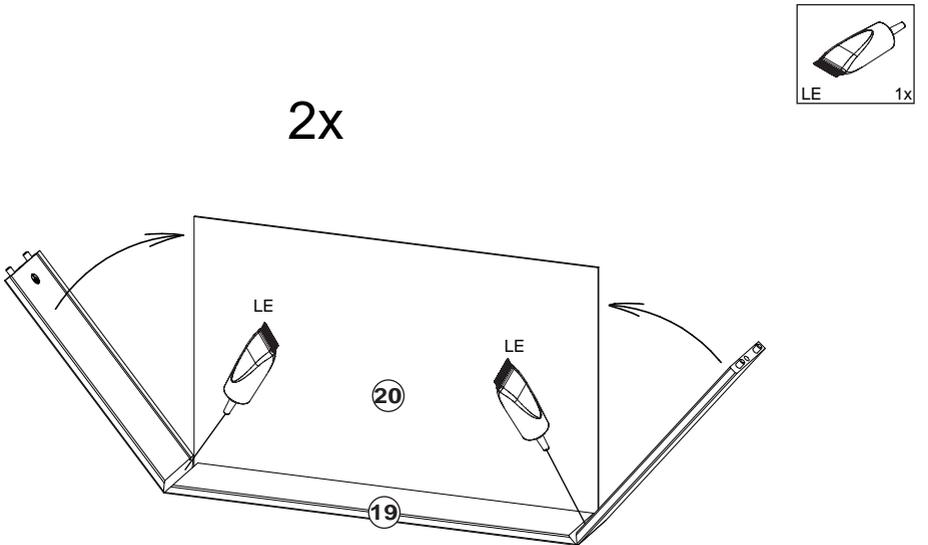

3

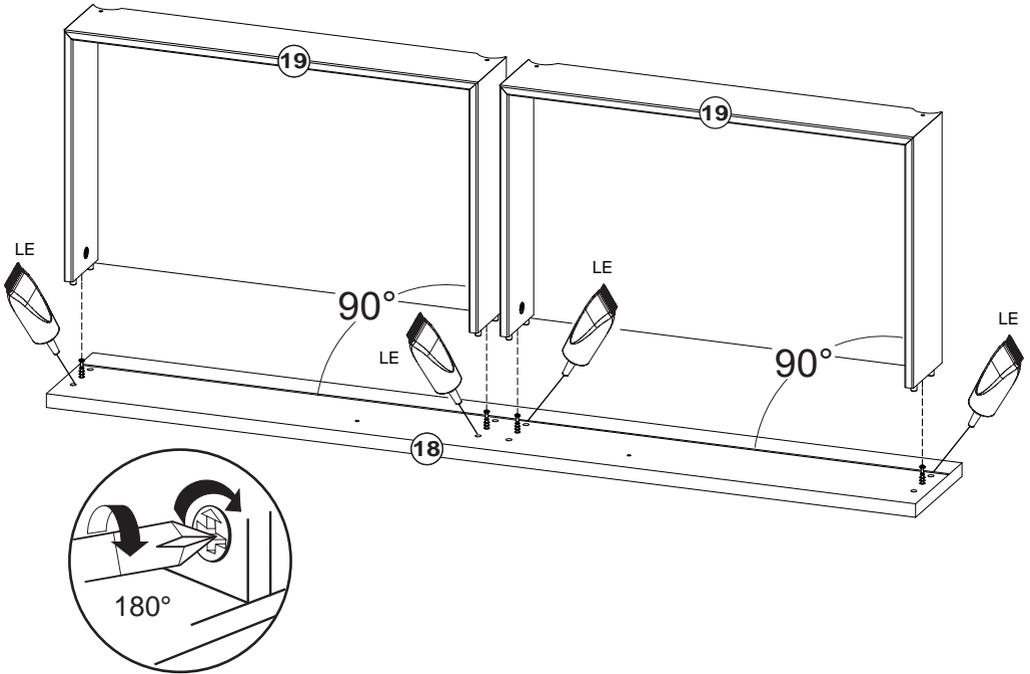



4

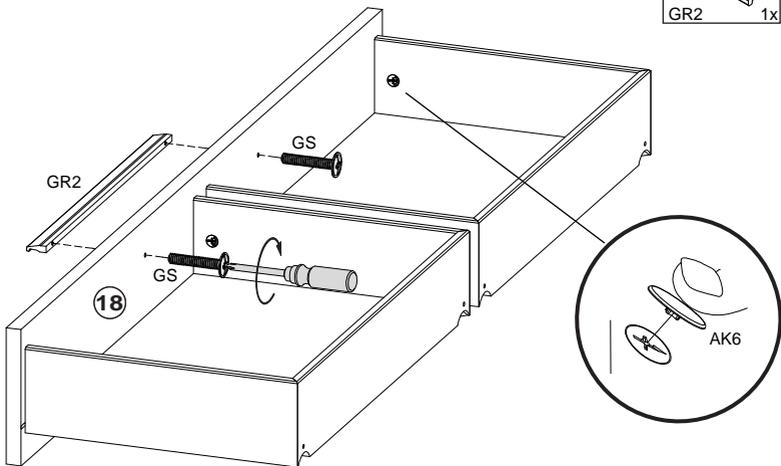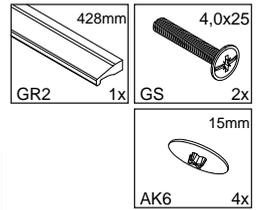




5

			
BD 12x	AB 8x	DA 12x	UN 2x

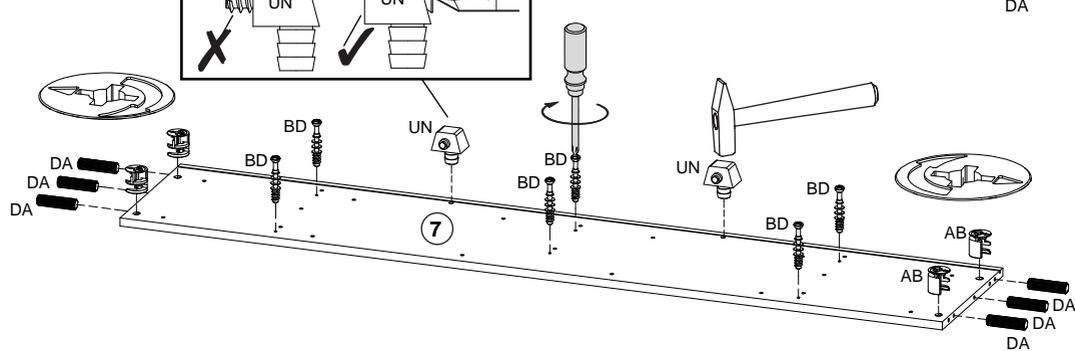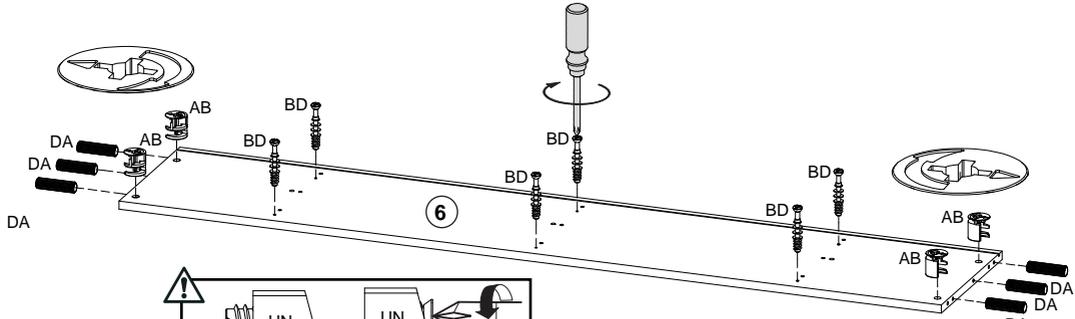



6

				
BD 4x	AA 4x	DA 6x	MP1 3x	UN 2x



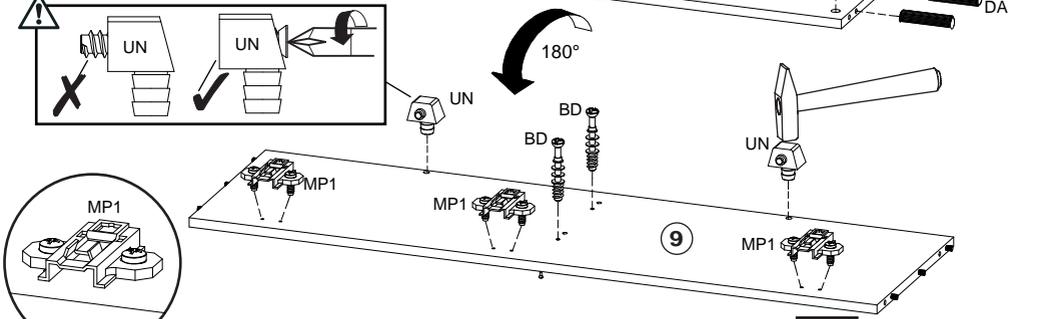
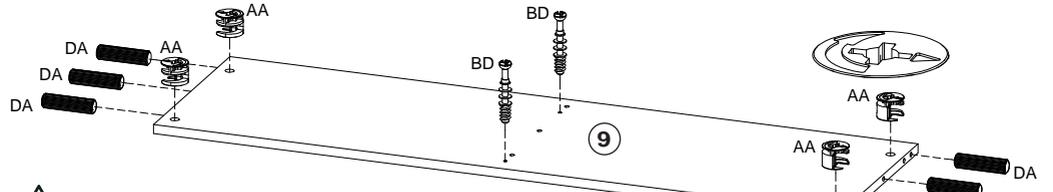


7




				
BD	AA	DA	KH2	KH4
8x	8x	12x	2x	6x

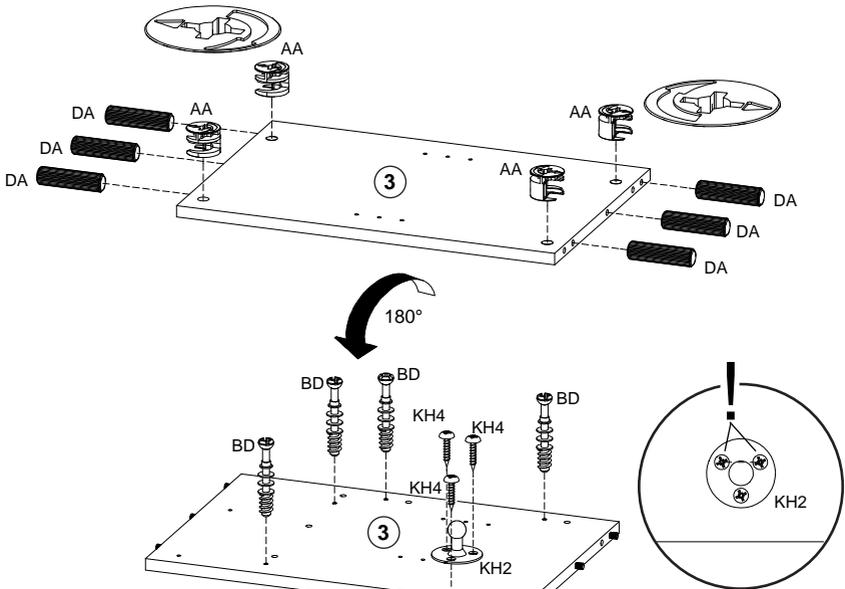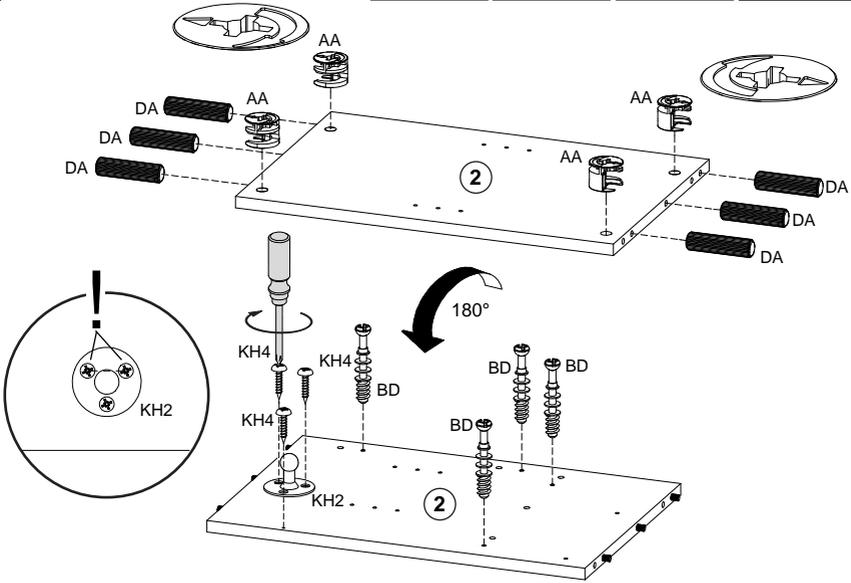


8

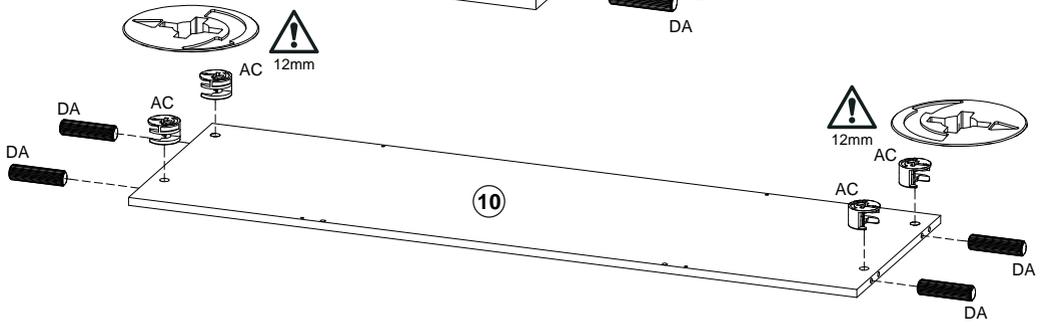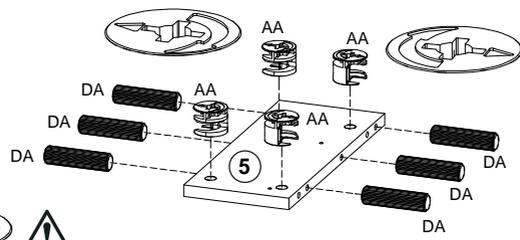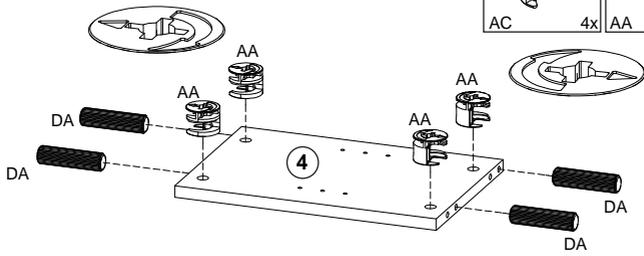




9

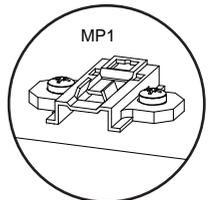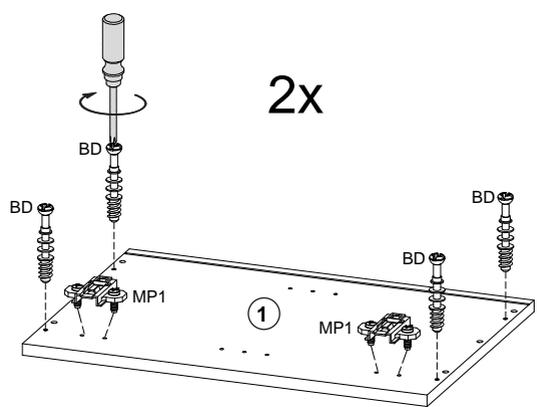


10

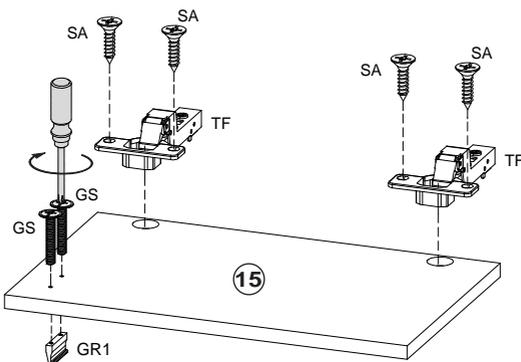

	50mm		4,0x25
GR1	2x	GS	4x
	K17		3,5x15
TF	4x	SA	8x

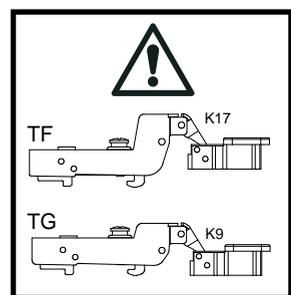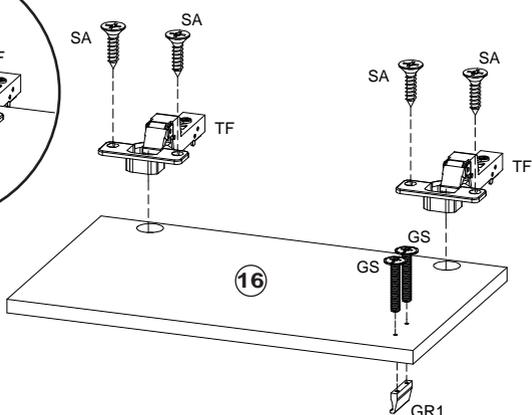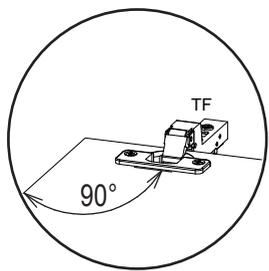


11

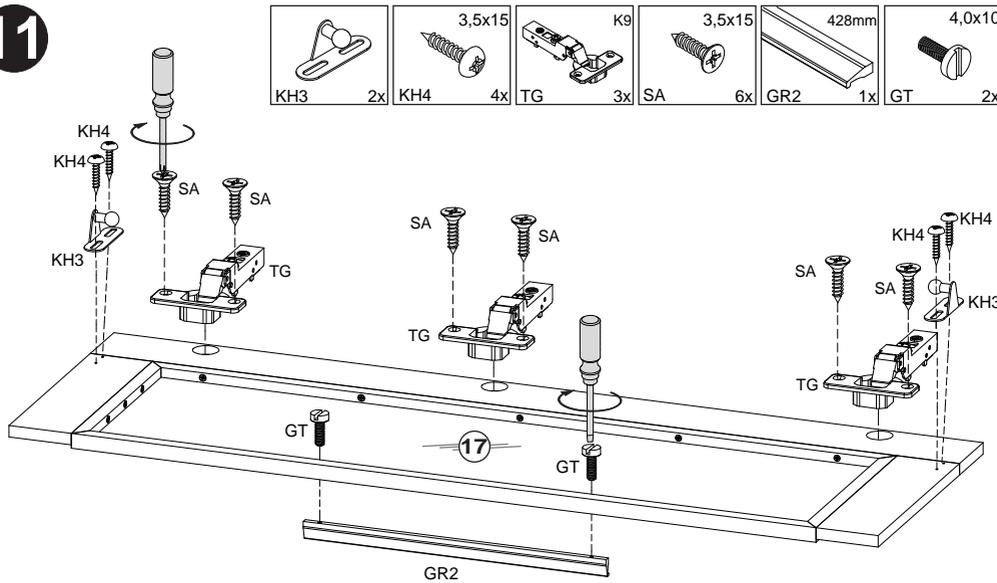


	3,5x15		3,5x15		4,0x10
KH3	2x	KH4	4x	KG	3x
	3x	SA	6x	GR2	1x
KH4	4x	SA	6x	GR2	1x
TG	3x	SA	6x	GR2	1x
SA	6x	GR2	1x	GT	2x


12

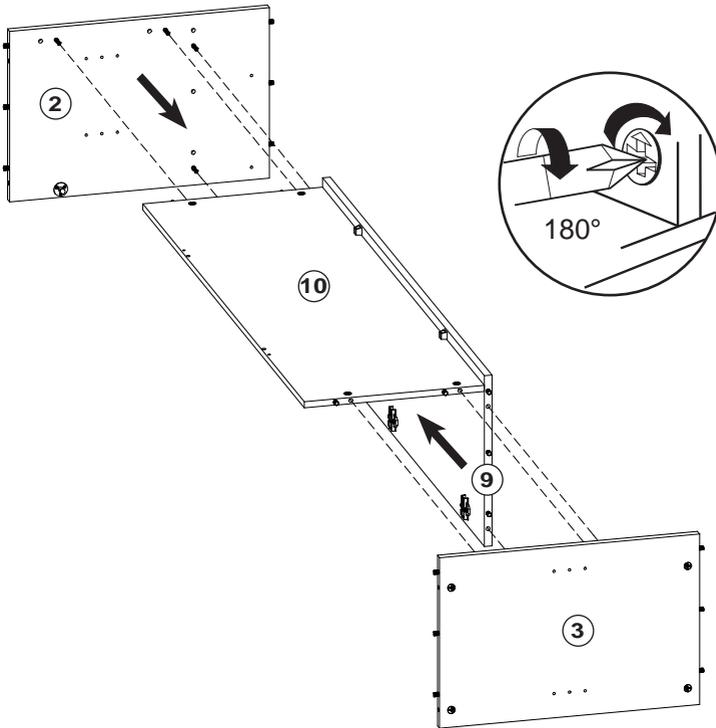


13

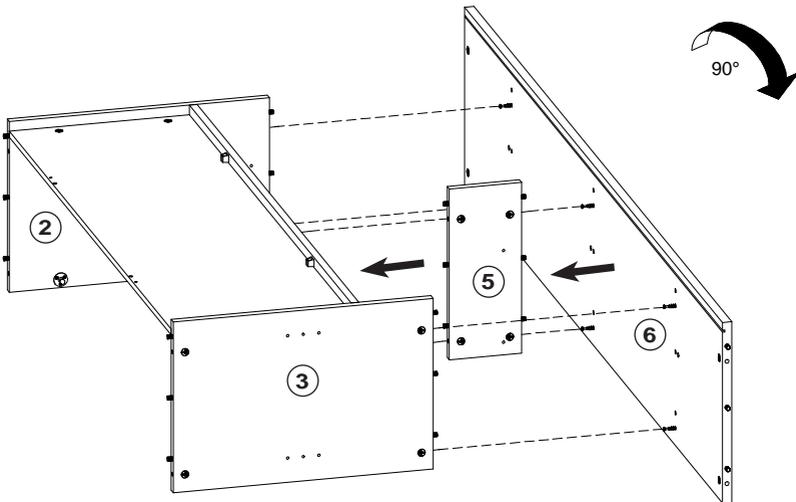



14

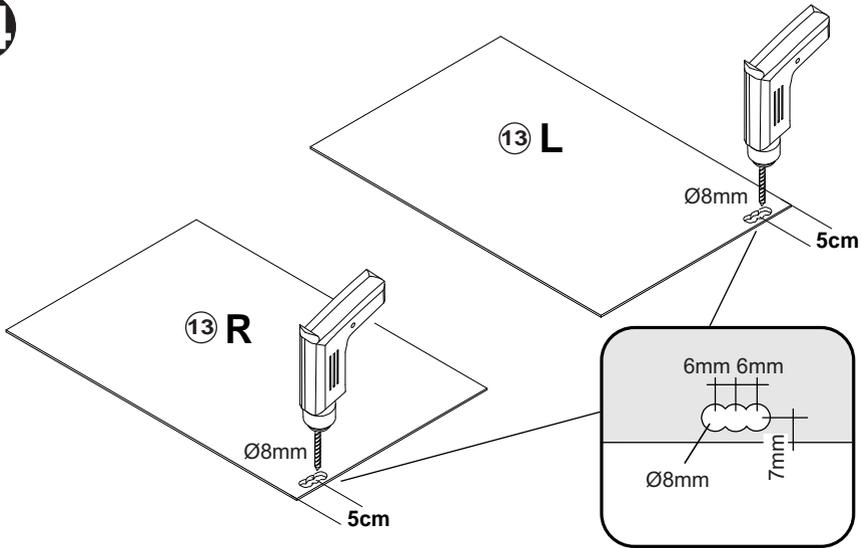



15

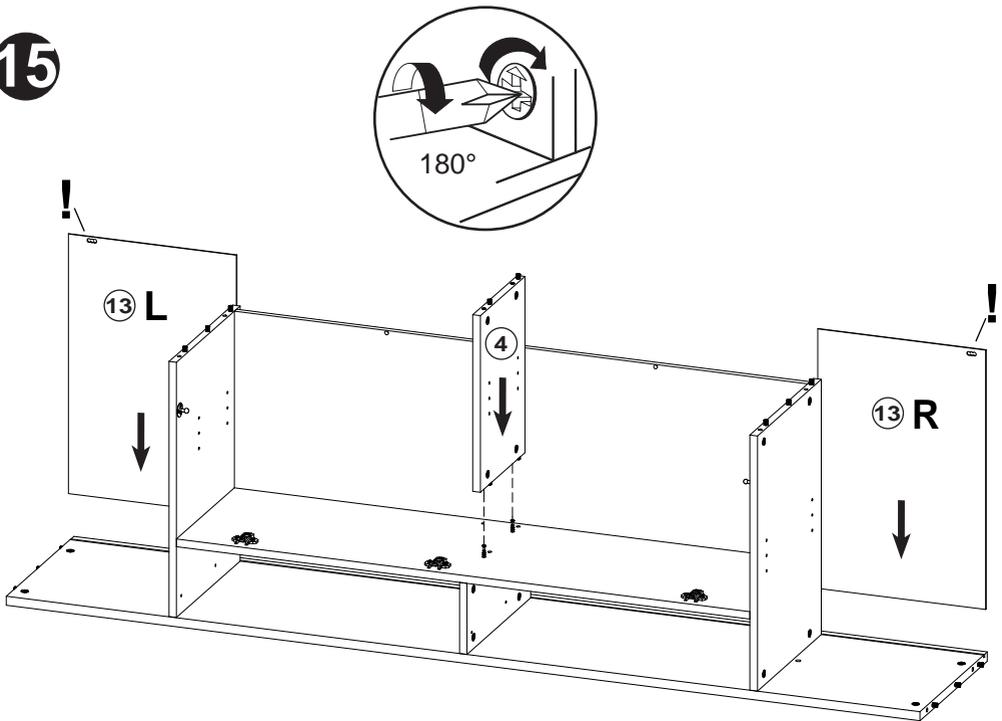


16

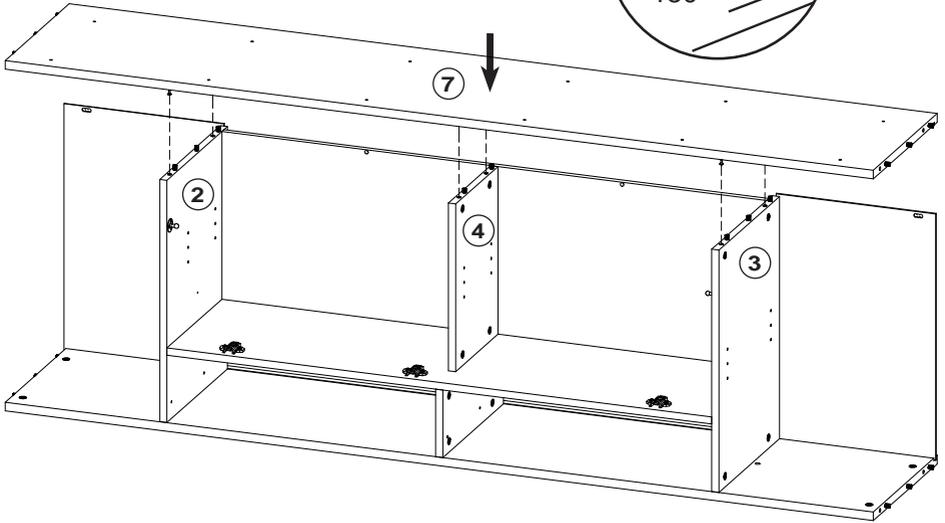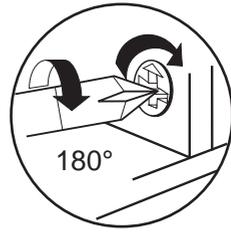

17




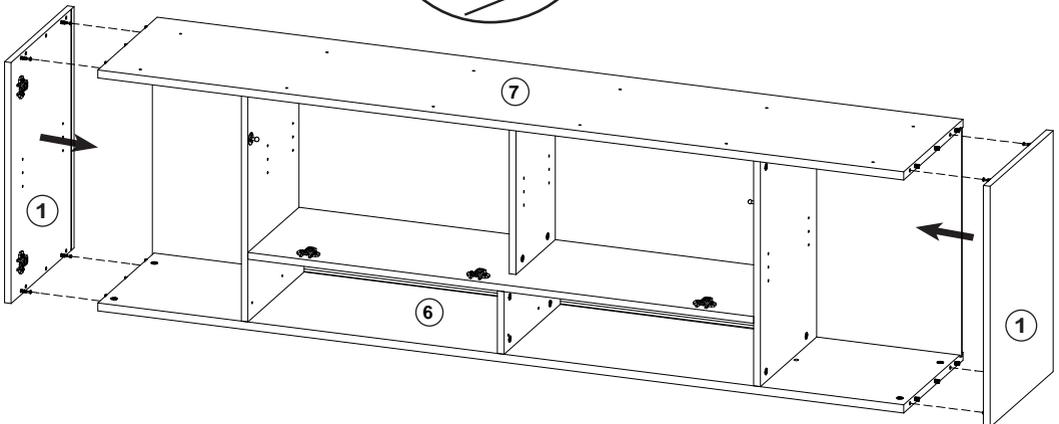
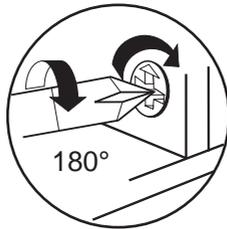


18

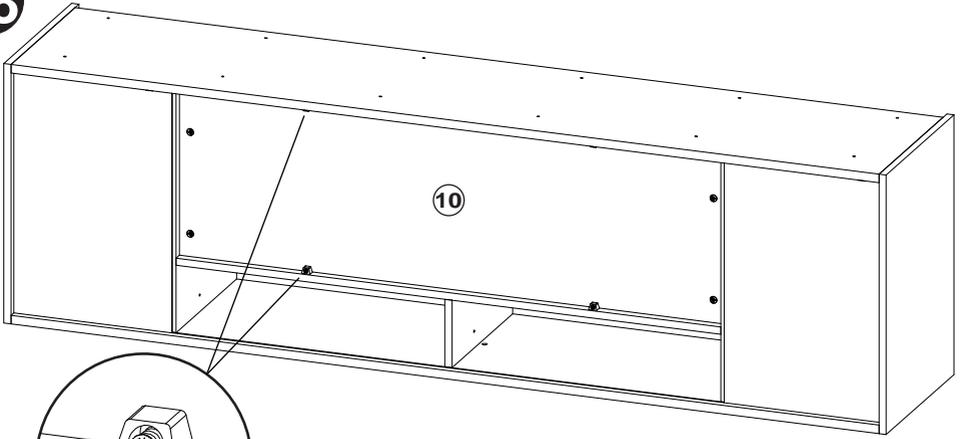


10




19

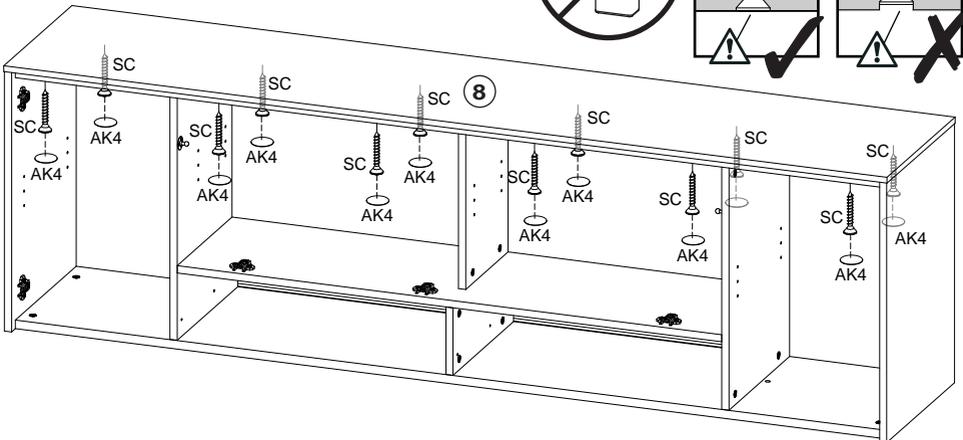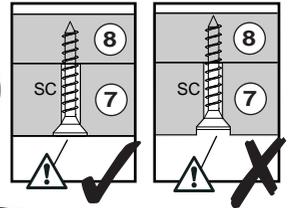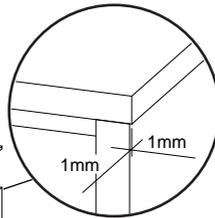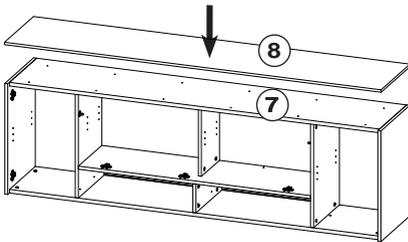

20




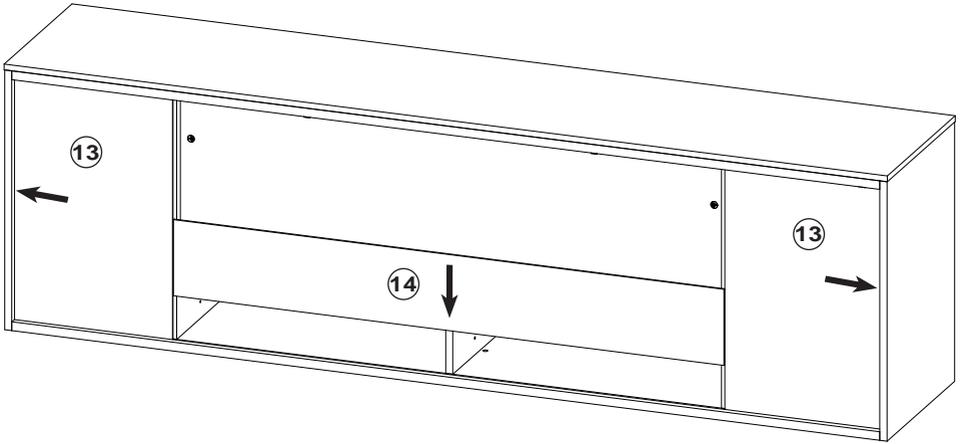


21

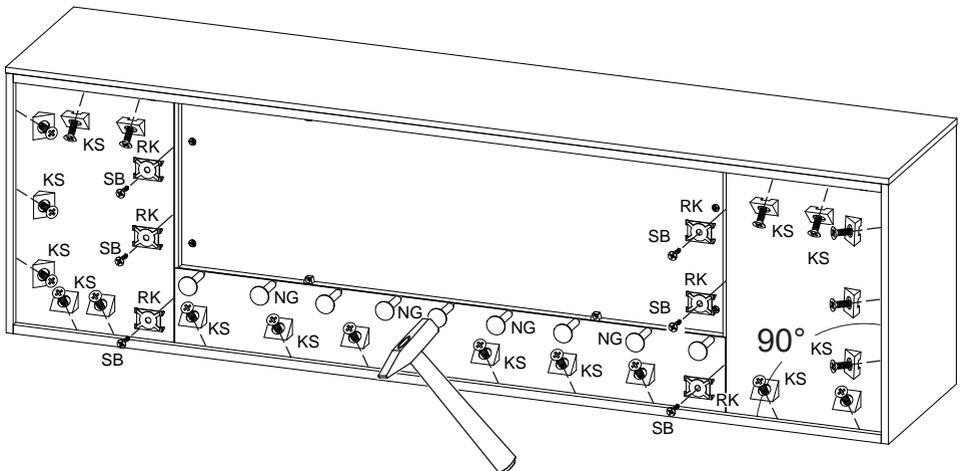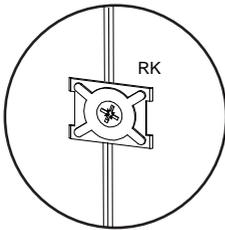

22



Type 650303

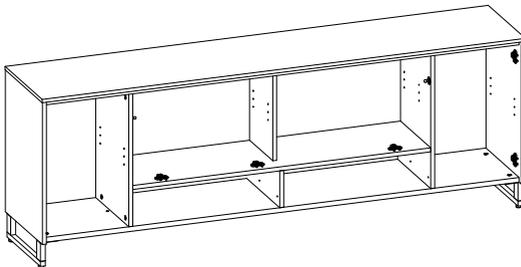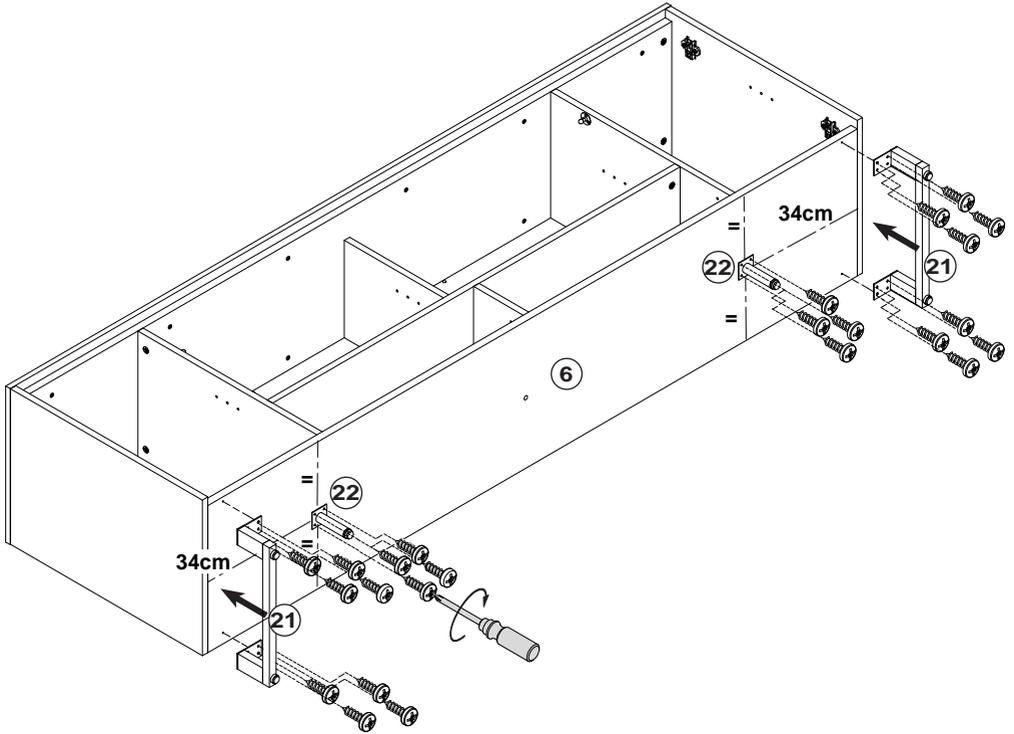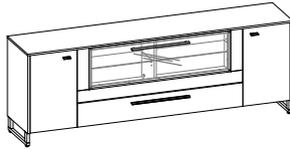

23




Type 650103

Type 650303

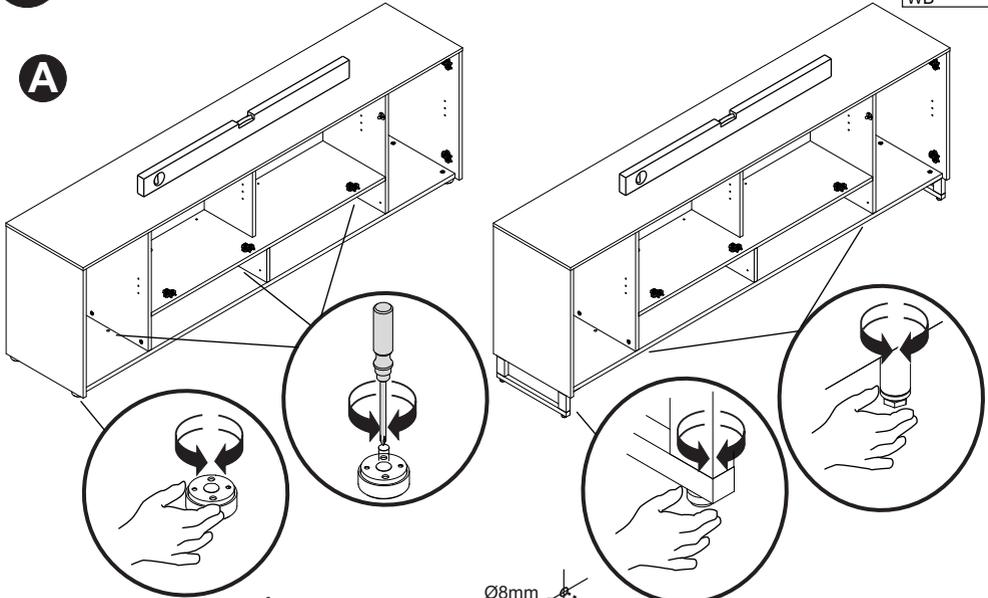








Wandmontage: Der Untergrund der Wand ist vor der Montage auf die Eignung (Tragfähigkeit) zu prüfen. Das beiliegende Befestigungsmaterial ist nur für massives Mauerwerk geeignet!

Wall fixing: The foundation of the wall must be checked for suitability (stability) before assembly. The enclosed mounting material is only suitable for solid brickwork!


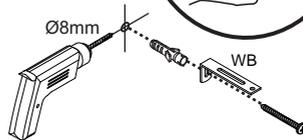
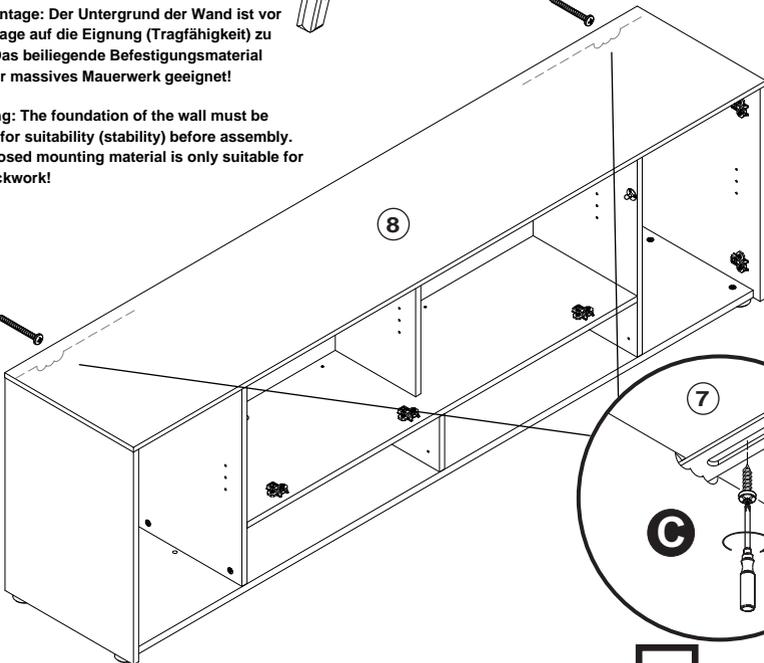
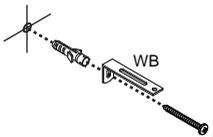
**B**

DIE HAUSMARKE
MOBELPRODUKTION & VERTRIEB



<p>6,3x11 SS 8x</p> 	<p>350mm KAL 2x</p> 	<p>350mm KAR 2x</p> 
--	--	---

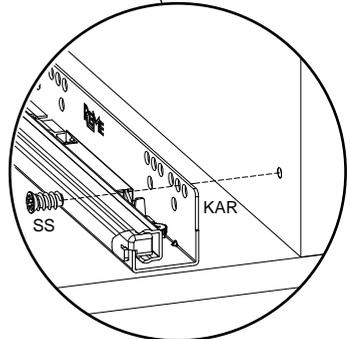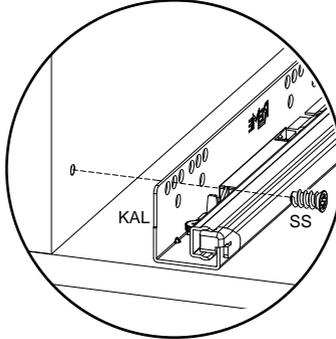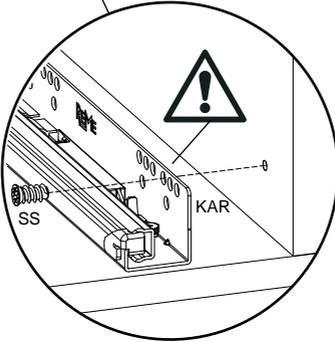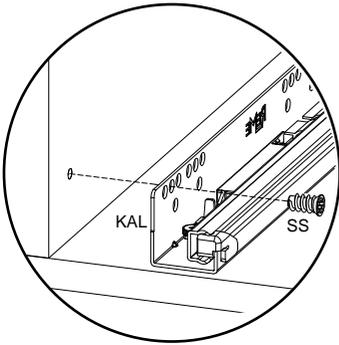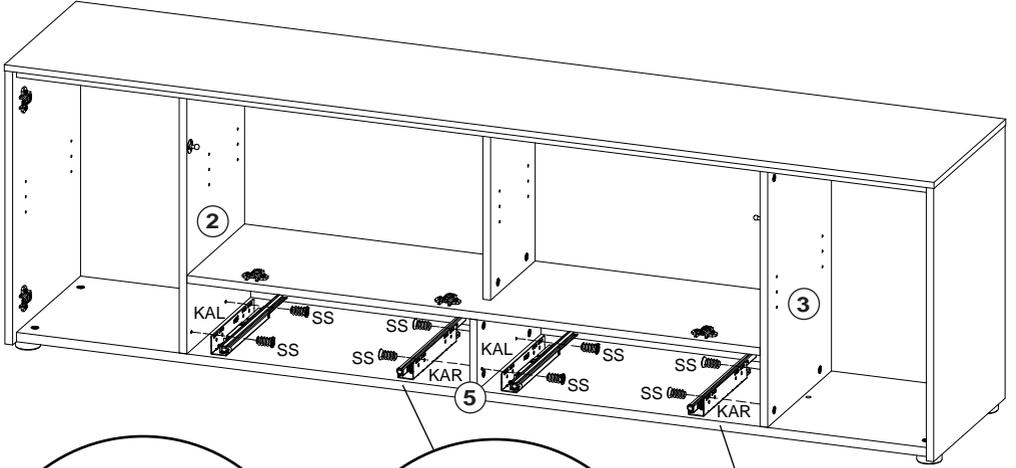



25

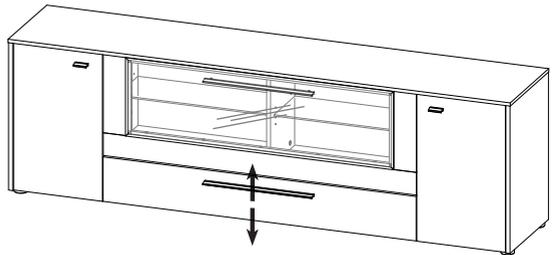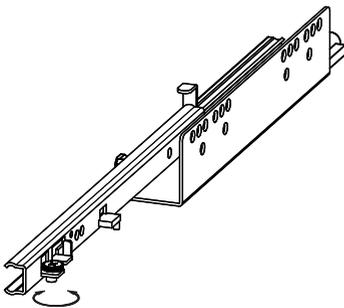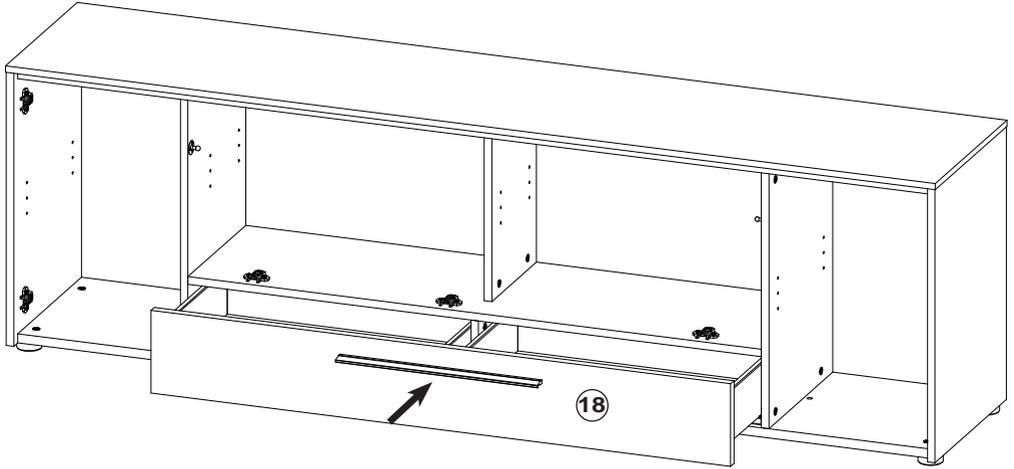
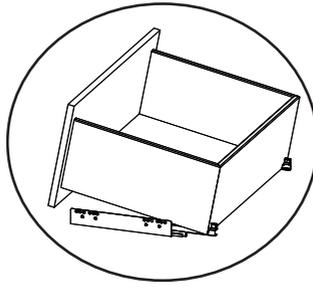


26







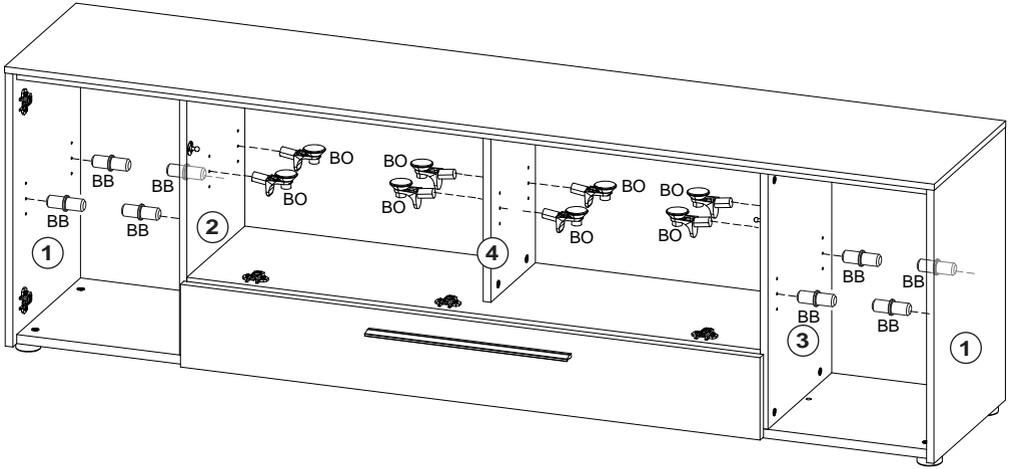



27

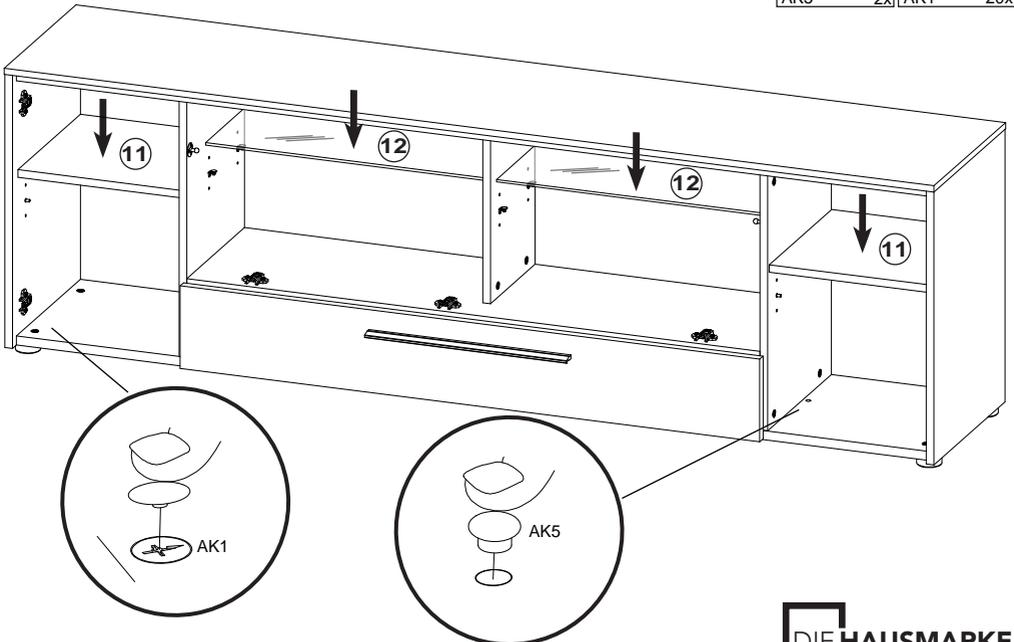

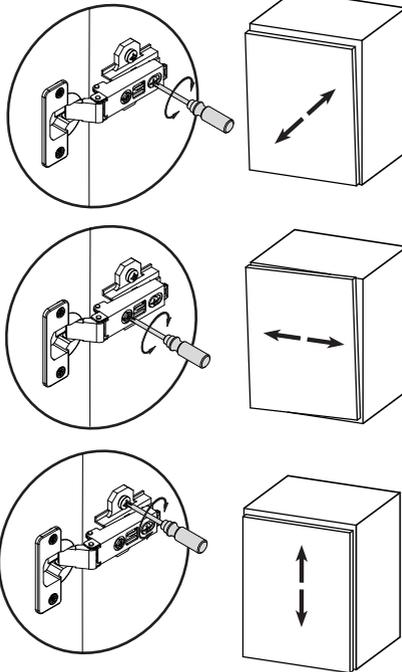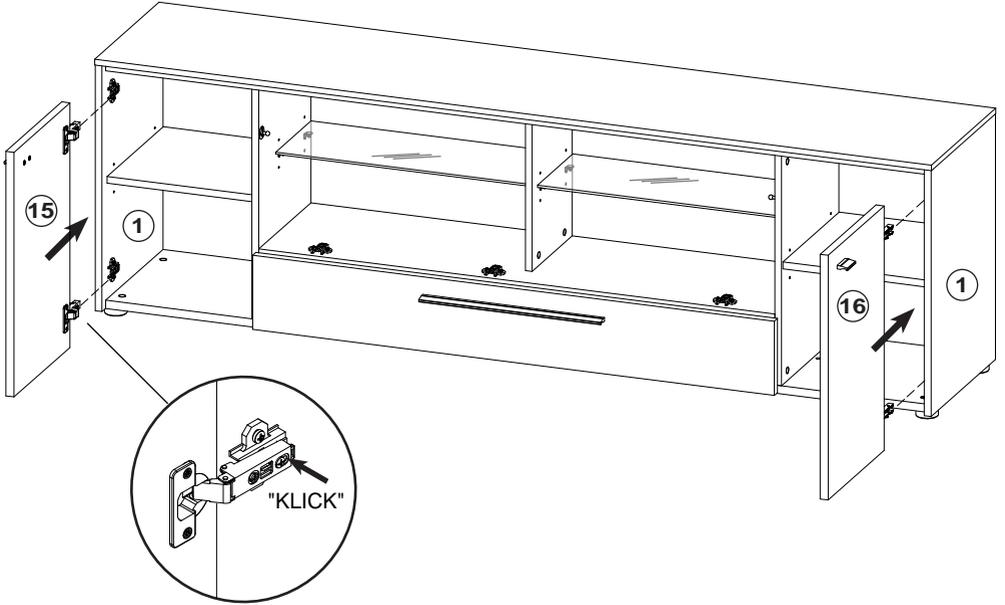


29

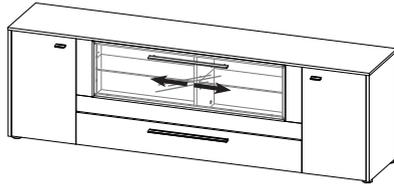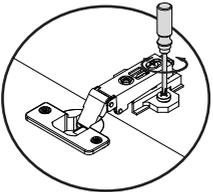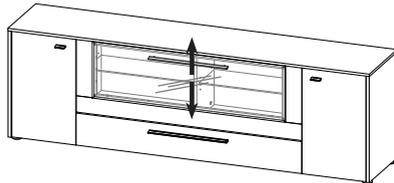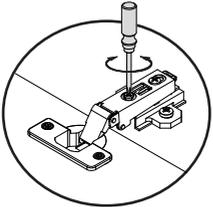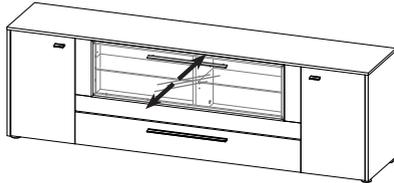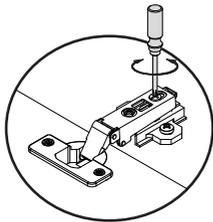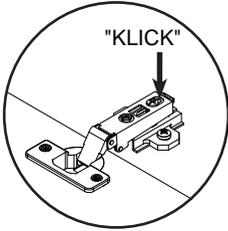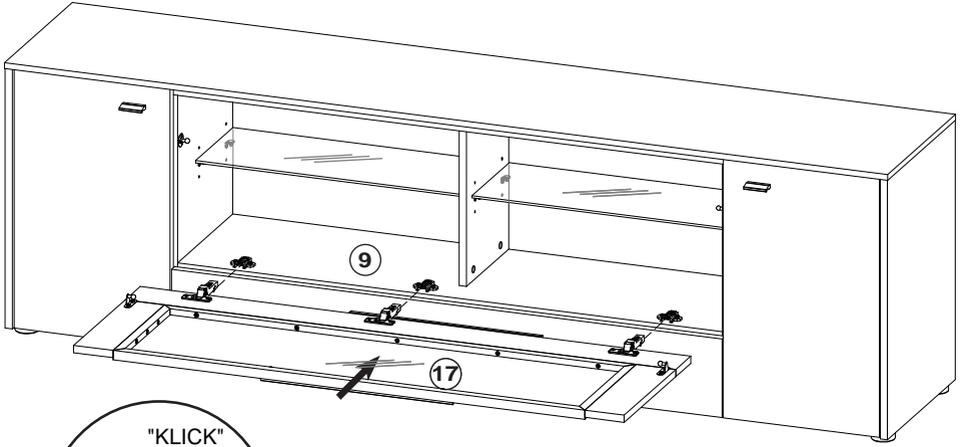




30

A


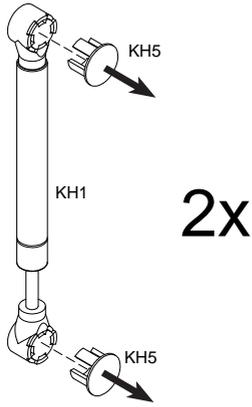


5mm		8mm			
	16x		2x		4x
					
					KH1 2x


B

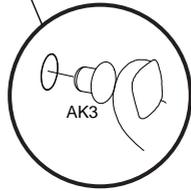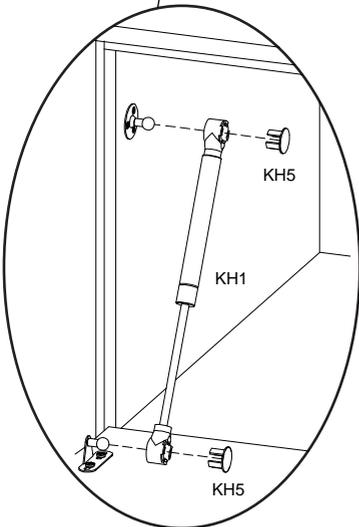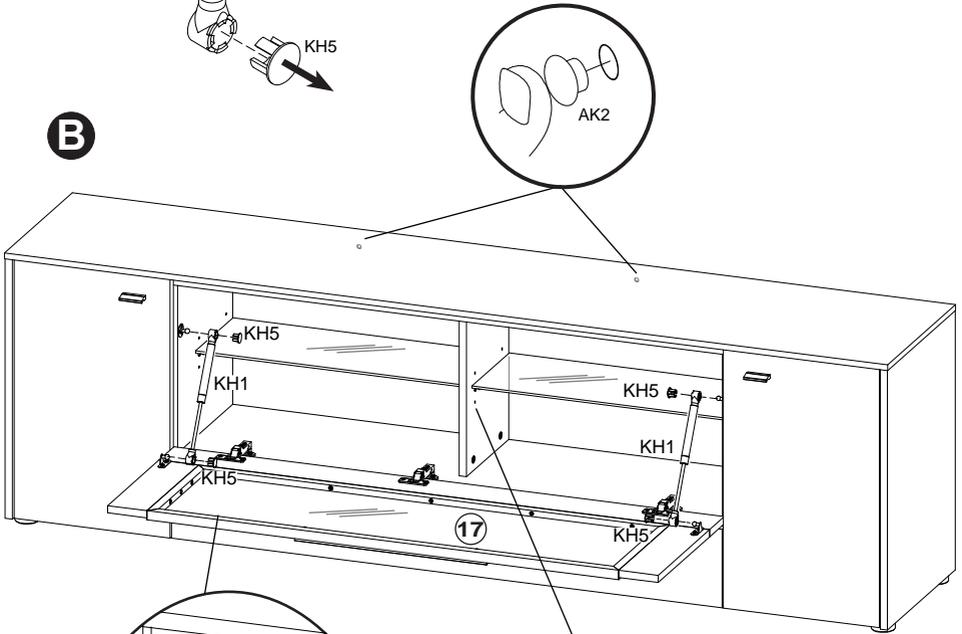


31

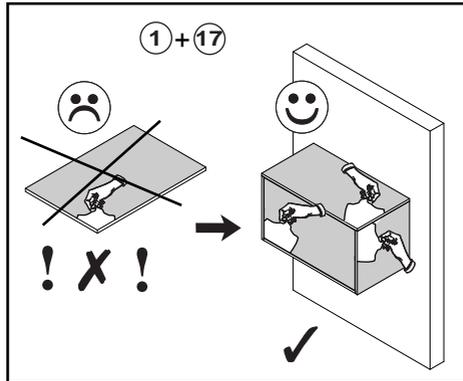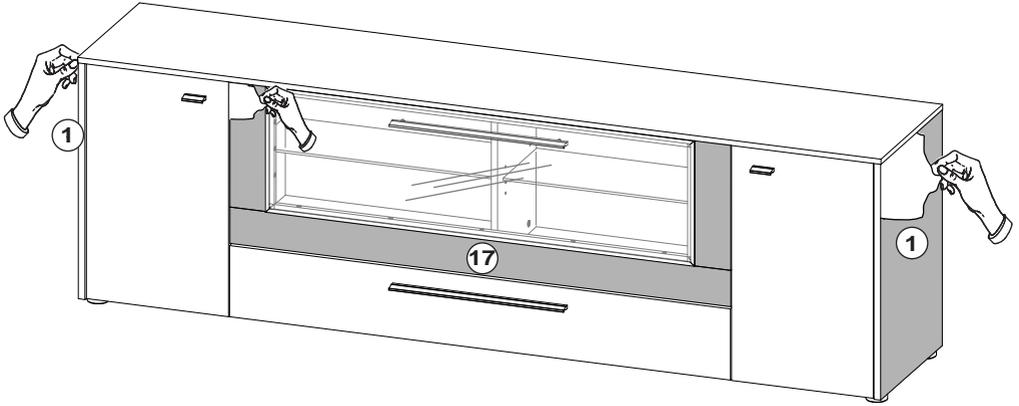


Type 22-86 2x

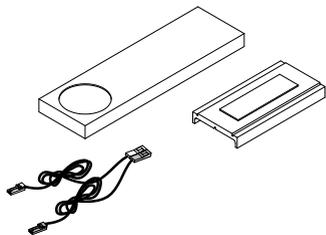


1

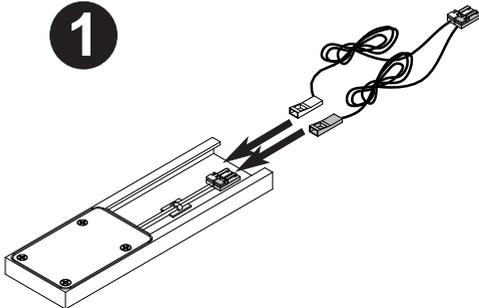



2

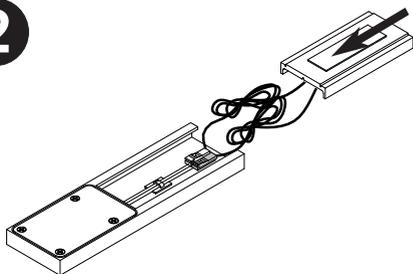

3

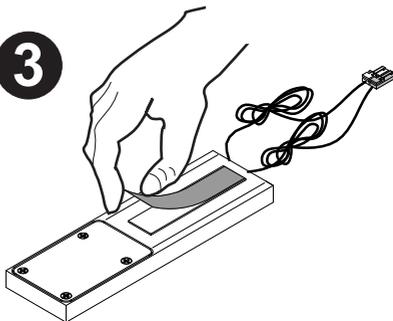

4

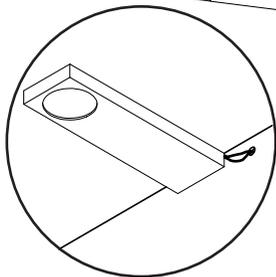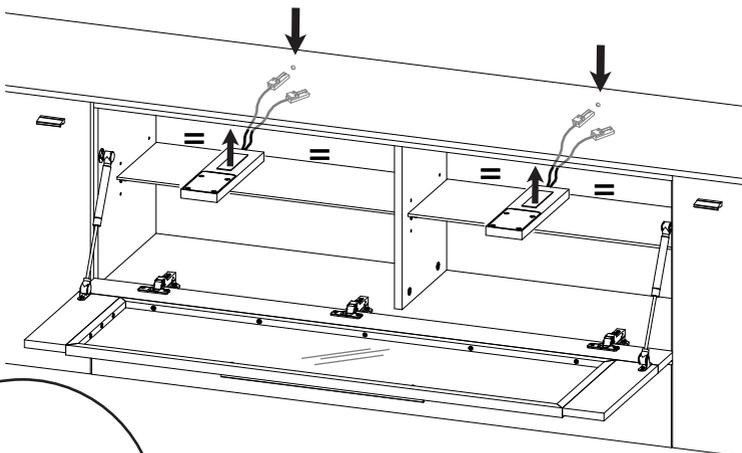

Verkabelung => Montageanleitung 22-86-K / 22-89-K
cabling = assembly instruction 22-86-K / 22-89-K