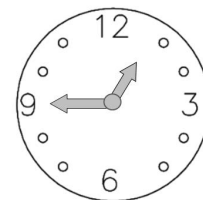
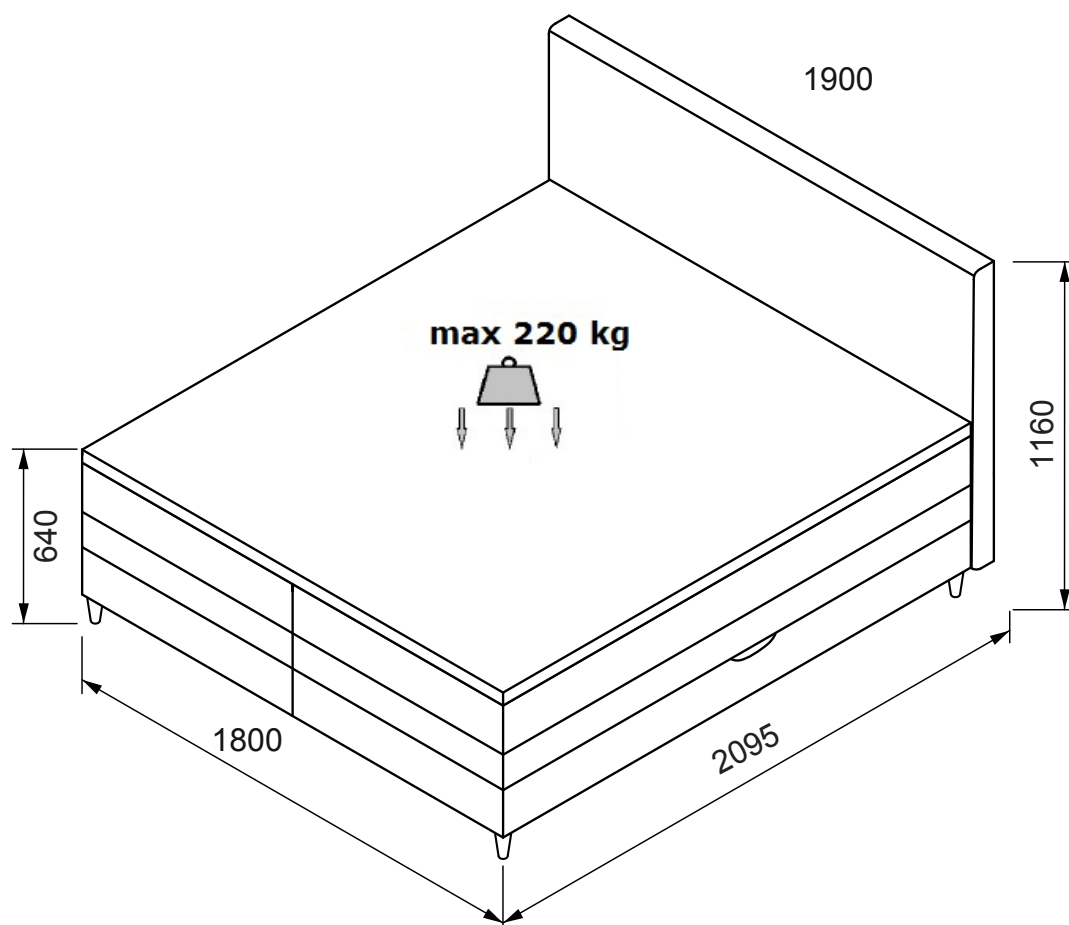


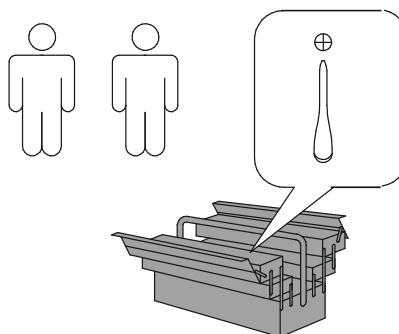
MIAMI 1,8

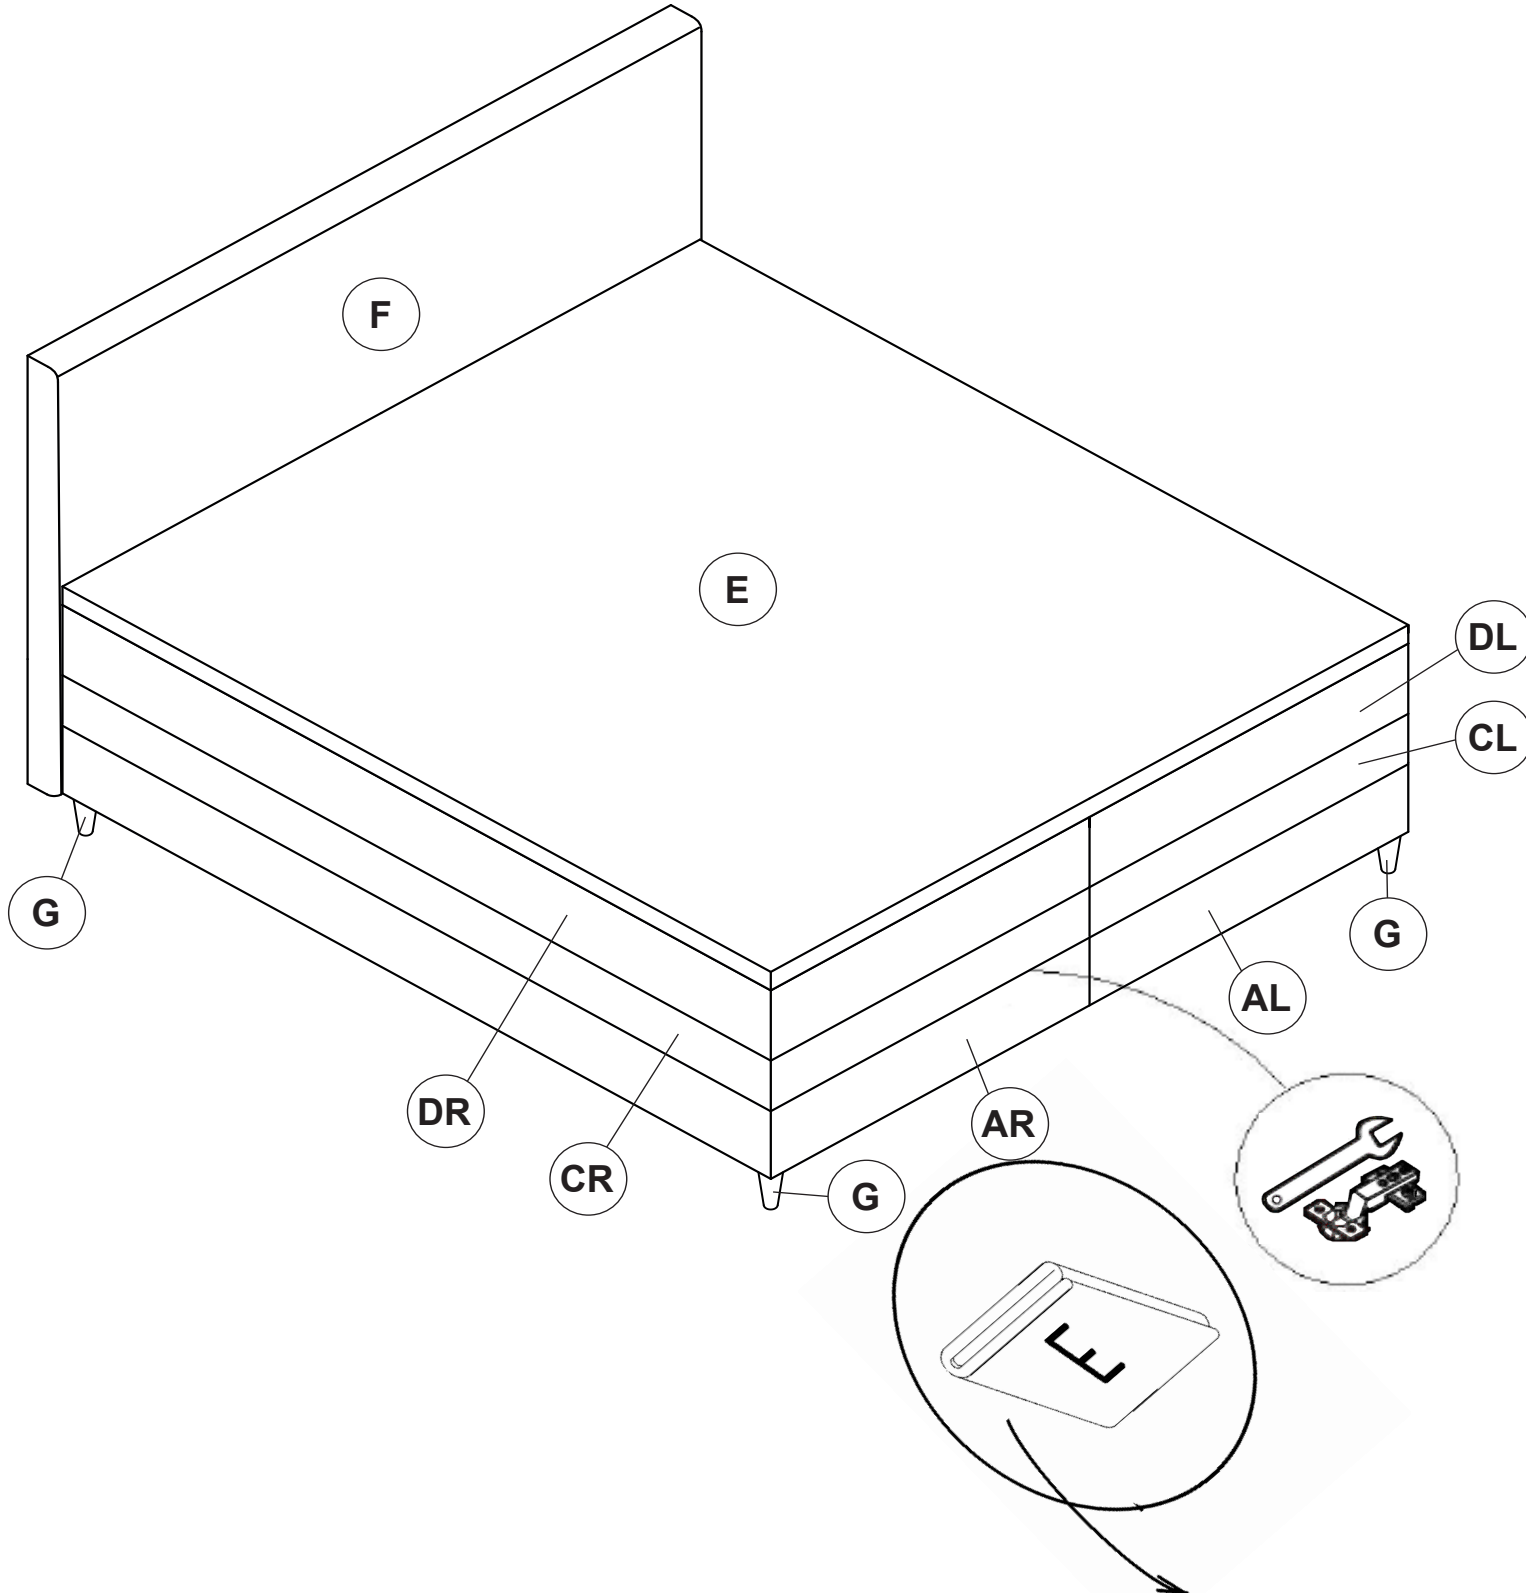


45min





- | | | | |
|----|---------------------|----|---------------------|
| DE | Montageanleitung | HR | Upute za montažu |
| SE | Installation manual | HU | Telepítési útmutató |
| CZ | Montážní návod | SK | Inštalčná príručka |
| EN | Installation manual | SI | Navodila za montažo |

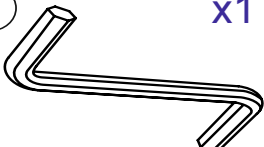






		SIZE (mm)	QUAN	Nº PACK
1	AL,AR	2000x900x220	1	1/4, 2/4
2	CL,CR	2000x900x120	1	1/4,2/4
3	G		4	1/4
4	E	2000x1800x40	1	1/4
5	D	2000x1800x170	1	3/4
6	F	1900x1075x95	1	4/4

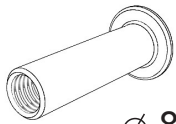
①  x2
d36 h100


② \varnothing 6x90 x8 


③  x1


④  x8
6x18

⑤  x3
 \varnothing 6x15

⑥  x3
 \varnothing 8x30

⑦  x4
4x30

⑧  x2
d20 h100

⑨  x4
d50 h100

