


# ASSEMBLY INSTRUCTION


MODEL : SP 0809 (6)

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	D1 Legs D2 130 x 60 x 30H	4 pcs
E	2000mm Center Rail	2 pcs
F	Support Leg 150mm	2 pcs
G	JCBB M6 X 40	4 pcs
H	JCBC M6 X 50	4 pcs
I	M4 x 65mm	1 pc
J	M5 x 70mm	1 pc
K	CSK M4 x 25mm	4 pcs
L	CSK M4 x 32mm	34 pcs
M	1797mm 14 Pcs Slat	1 pc
N	Small Adjuster	4 pcs
O	JCBB M8 X 20	8 pcs
P	CSK M4 x 50mm	8 pcs


Step 1 : Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

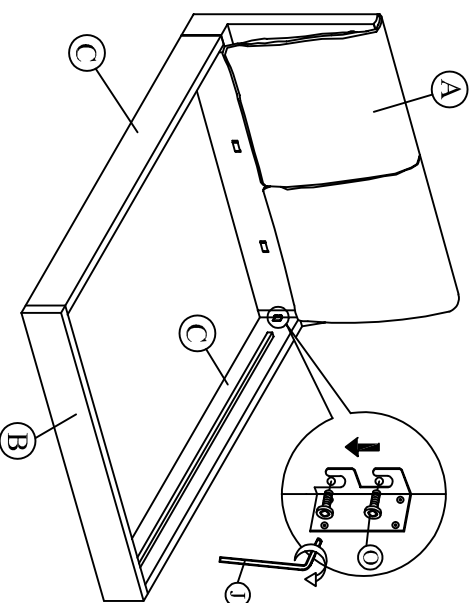

Step 2 : Install the legs (D) at Headboard(A). Install the legs and footboard (B) to side rail (C).

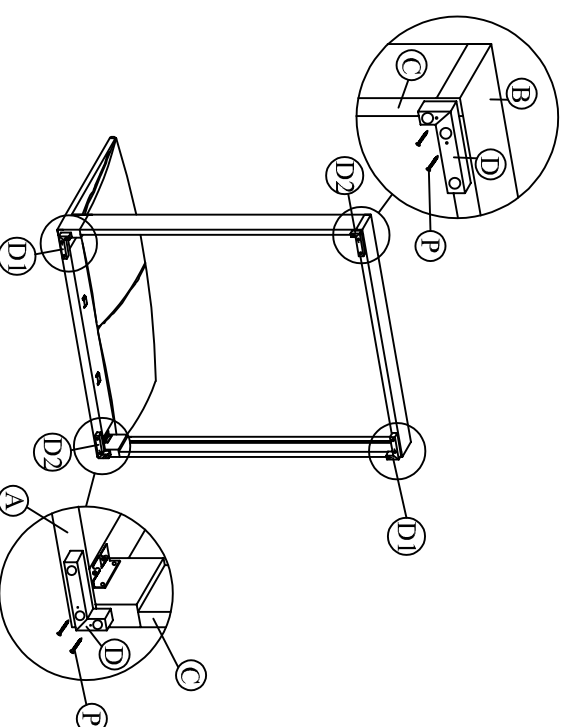


Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

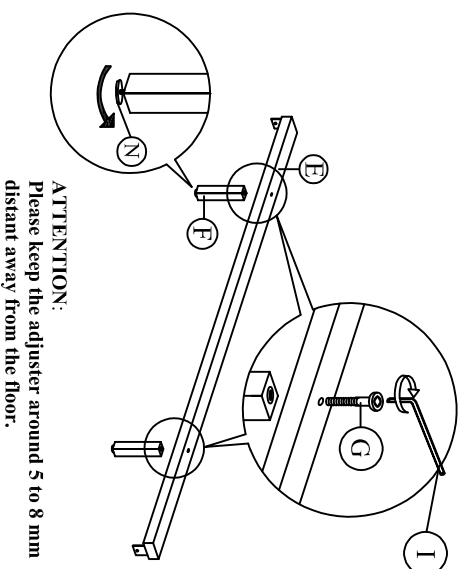

**ATTENTION:**  
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (K) using screw driver (not included) to the headboard (A) and footboard (B).

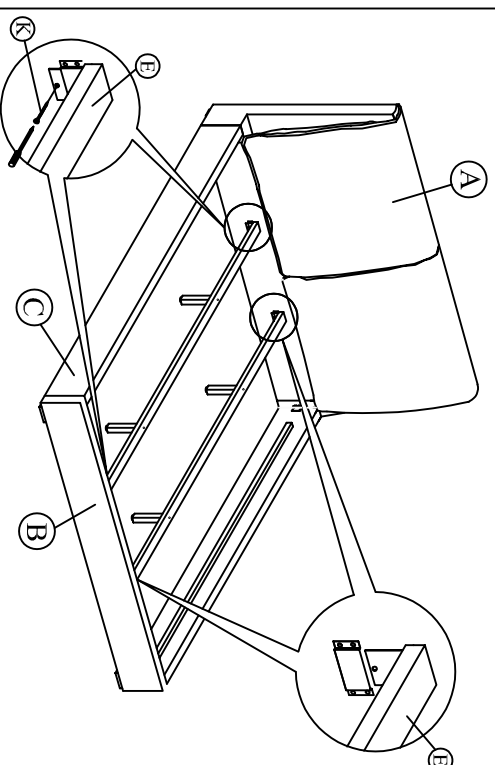

**Attention :** Please ensure that (K) screw is being attach as per the A1 shown to avoid base being collapse .

Step 5 : Affix the Slat (M) to the side rail support wood and the center rail (E). Tighten all the 4 corner.

