
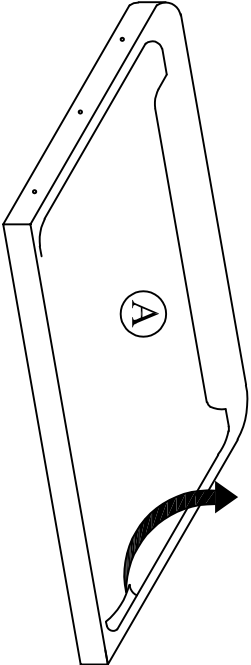









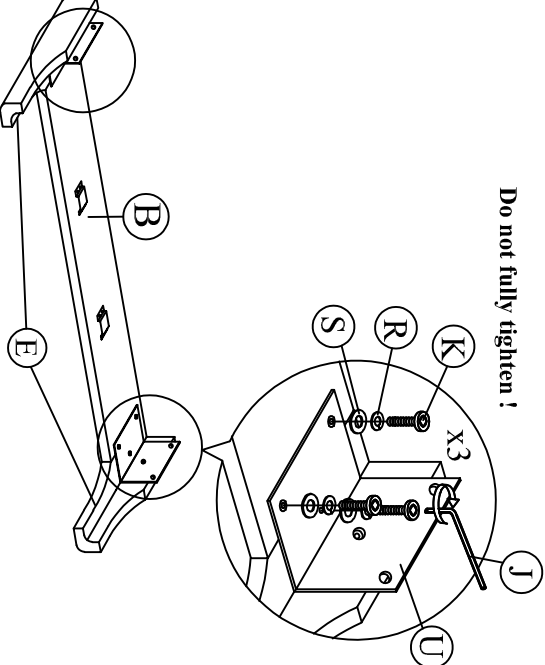












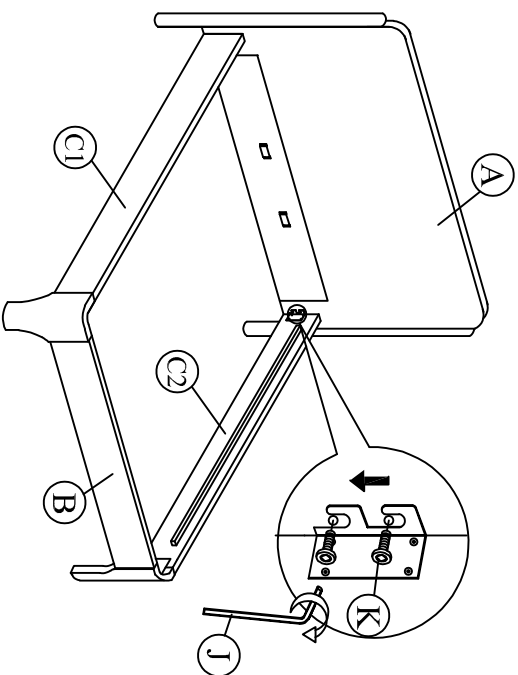



# ASSEMBLY INSTRUCTION

MODEL : CF 9488 (6)				
A		1 pc	<div>Step 1 : Unzip the black non-woven fabric on the back of headboard legs.</div> <div></div> <div>BACK VIEW</div>	
B		1 pc		
C		2 pcs		
D		2 pcs		
E		2 pcs		
F		2 pcs		
G		4 pcs		
H		1 pc		
I		1 pc		
J		1 pc	<div>Step 3 : Attach the footboard legs (E) to the footboard (B) with L-Bracket (U) as shown.</div> <div></div> <div>BACK VIEW</div>	
K		16 pcs		
L		4 pcs		
M		6 pcs		
N		4 pcs		
O		34 pcs		
P		6 pcs		
Q		6 pcs		
R		12 pcs		
S		12 pcs		
T		4 pcs	<div>Step 4 : Attach footboard (B) to the side rail (C) as shown.</div> <div></div> <div>BACK VIEW</div>	
U		2 pcs		

Step 5 : Attach side rail (C) to the headboard (A) as shown.

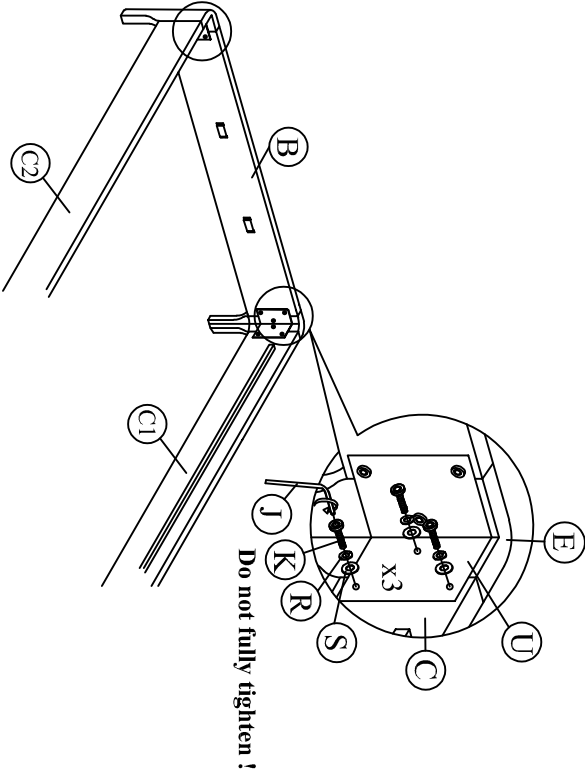


Step 6 : Attach the support legs (G) to the center rail (F) of the bed as shown.

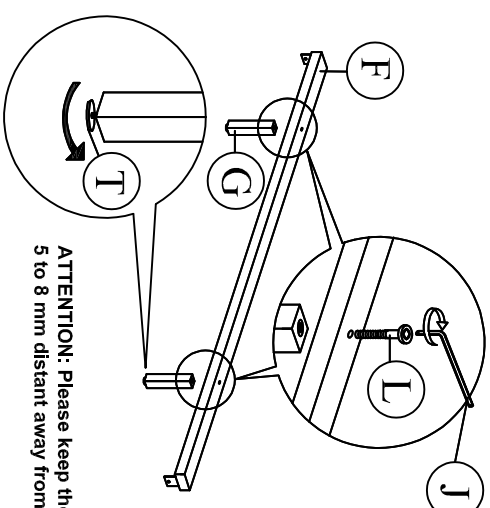

**ATTENTION:** Please keep the adjuster around 5 to 8 mm distant away from the floor.


X 2

Step 7 : Slide the center rail (F) to the headboard (A) and footboard (B). Tighten screws (N) using screw driver (not included) to the headboard (A) and footboard (B).

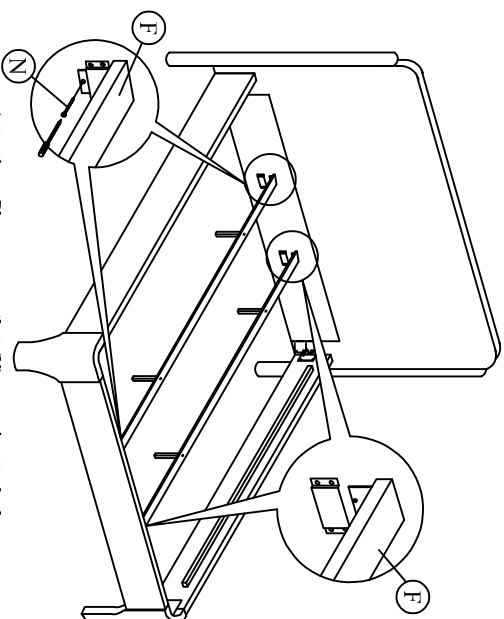

**Attention :** Please ensure that (N) screw is attached as per the A.1 shown to avoid possibility of base collapsing.

Step 8 : Affix the slat (H) to the support wood on side rail (C) and the center rail (F). Tighten all the 4 corner.

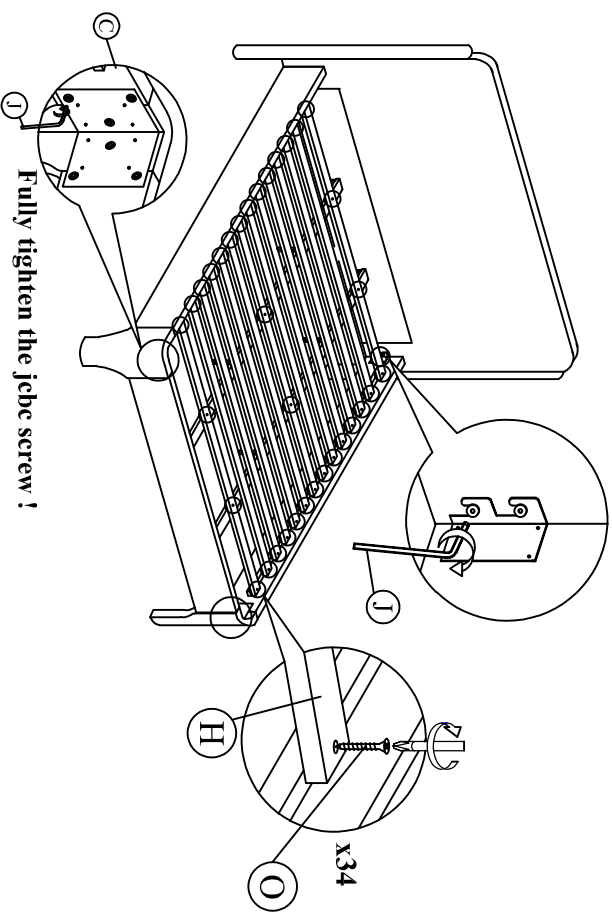

**Fully tighten the jobc screw !**