


OTTAWA 2



15 min



(A) X1

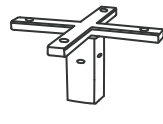

(B) X1



(C) X4



M6 X 14 mm

(D) X8



M6 X 25 mm

(E) X4




(F) X4



(G) X1





(H) X4




(I) X4


Step 1

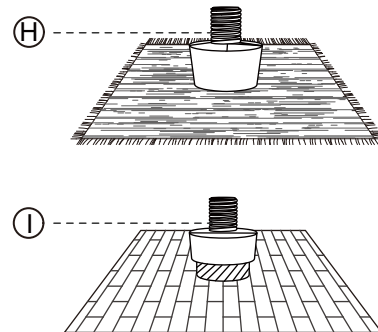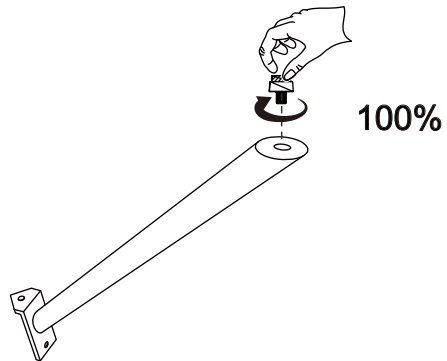


Step 2

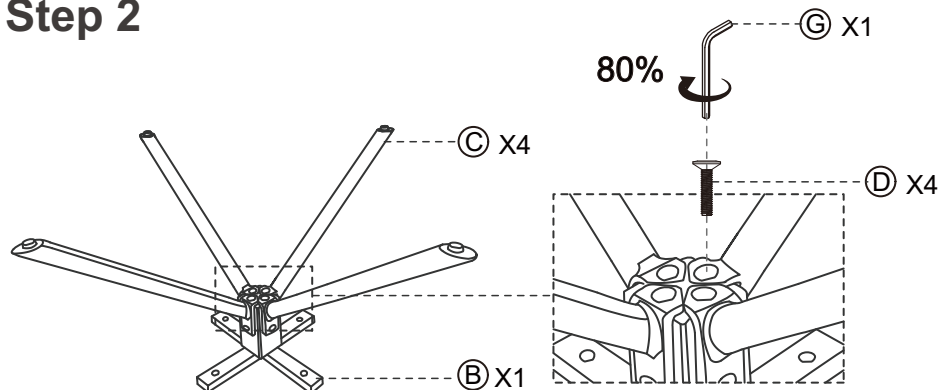


Step 3

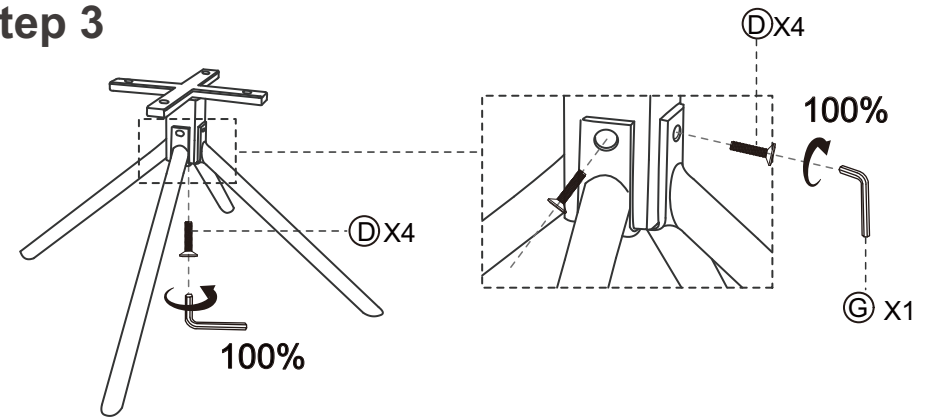

Step 4

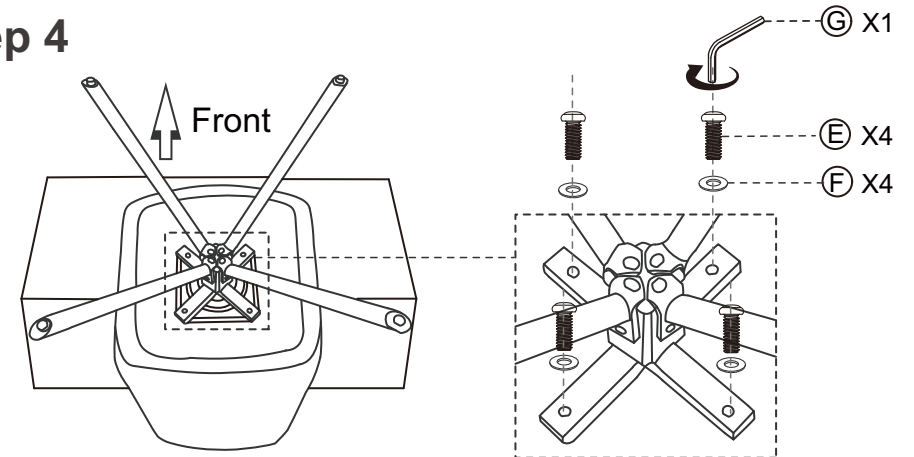

Step 5

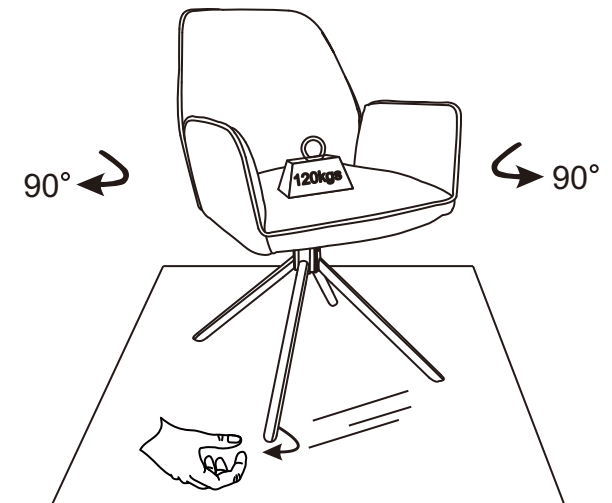



- Ⓓ Bitte überprüfen Sie in regelmäßigen Abständen den festen Sitz der Schrauben!
- Ⓔ Please check the screws for tightness at regular intervals!
- Ⓕ Veuillez contrôler régulièrement que les vis sont convenablement serrées !
- Ⓔ ¡Compruebe periódicamente que los tornillos estén bien apretados!
- Ⓘ Controllare regolarmente che le viti siano ben strette!
- Ⓟ Należy regularnie sprawdzać dokręcenie śrub!
- Ⓝ Controleer op regelmatige afstanden of de schroeven goed vast zitten!
- ⓈⓌⒺ Kontrollera med jämna mellanrum att skruvarna sitter fast ordentligt!
- ⓈⓀ V pravidelných intervaloch kontrolujte pevné dotiahnutie skrutiek!
- ⓈⓁ Redno preverjajte, ali so vijaki trdno priviti!
- ⒽⓇ Redovito provjeravajte čvrsto nalijeganje vijaka!



OTTAWA 2