
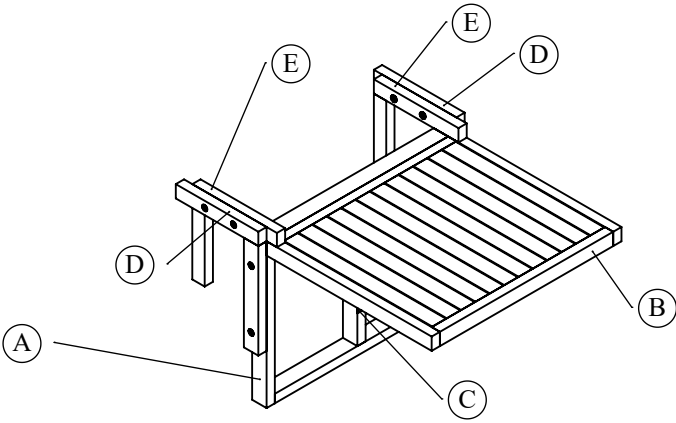
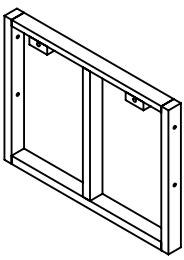
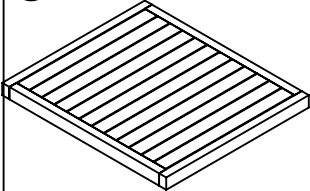













ASSEMBLY INSSTRUCTION

Article Number: 20140239/01




 1PCE	 1PCE	 1PCE	 2PCS	 2PCS
	 BOLT M6X35 = 10PCS		 SCREW M6X30 = 2PCS	
	 NUT M6 = 10PCS		 ALLEN KEY = 2PCS	

STEP 1:

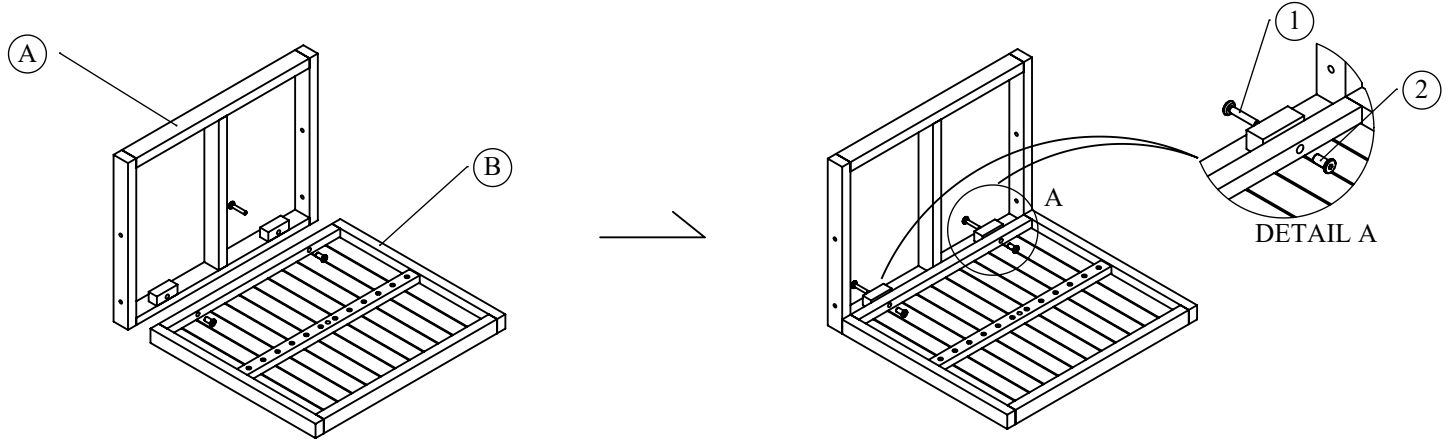


STEP 2:

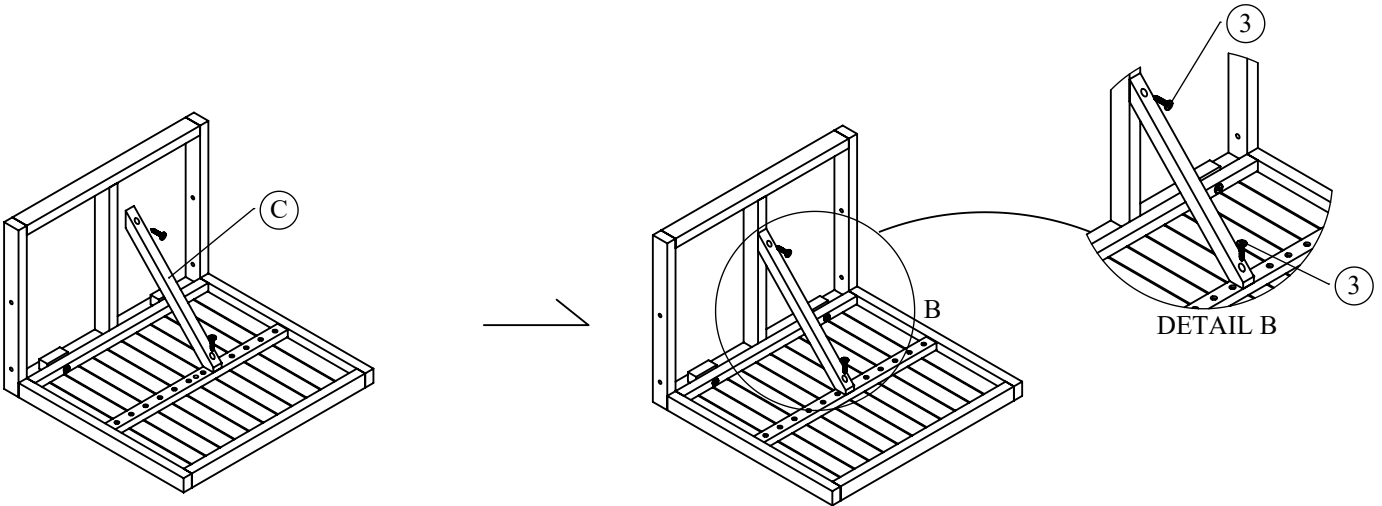


ASSEMBLY INSTRUCTION

STEP 3:

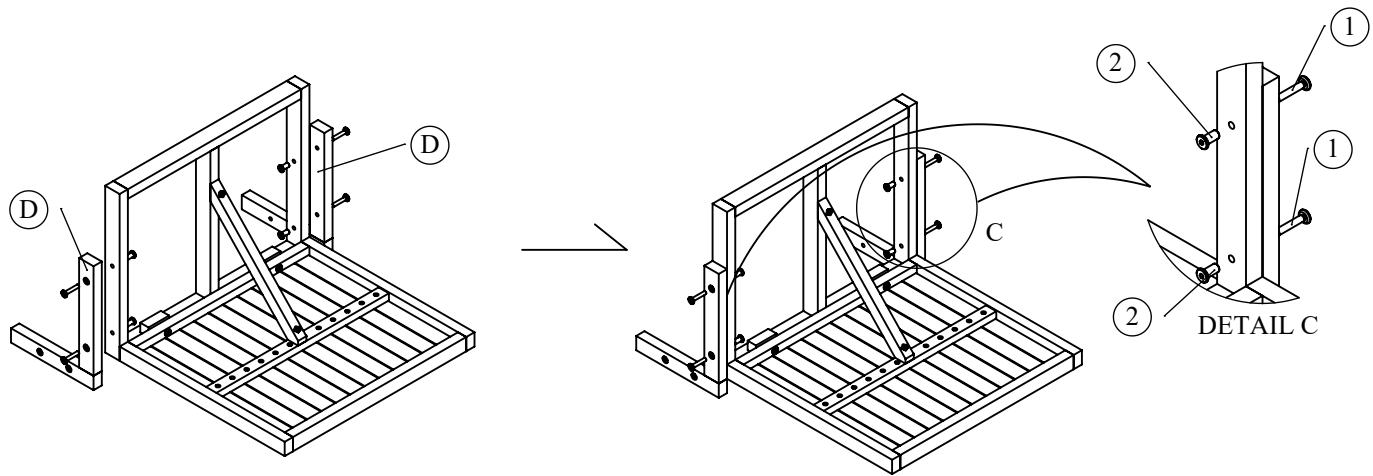

STEP 3:

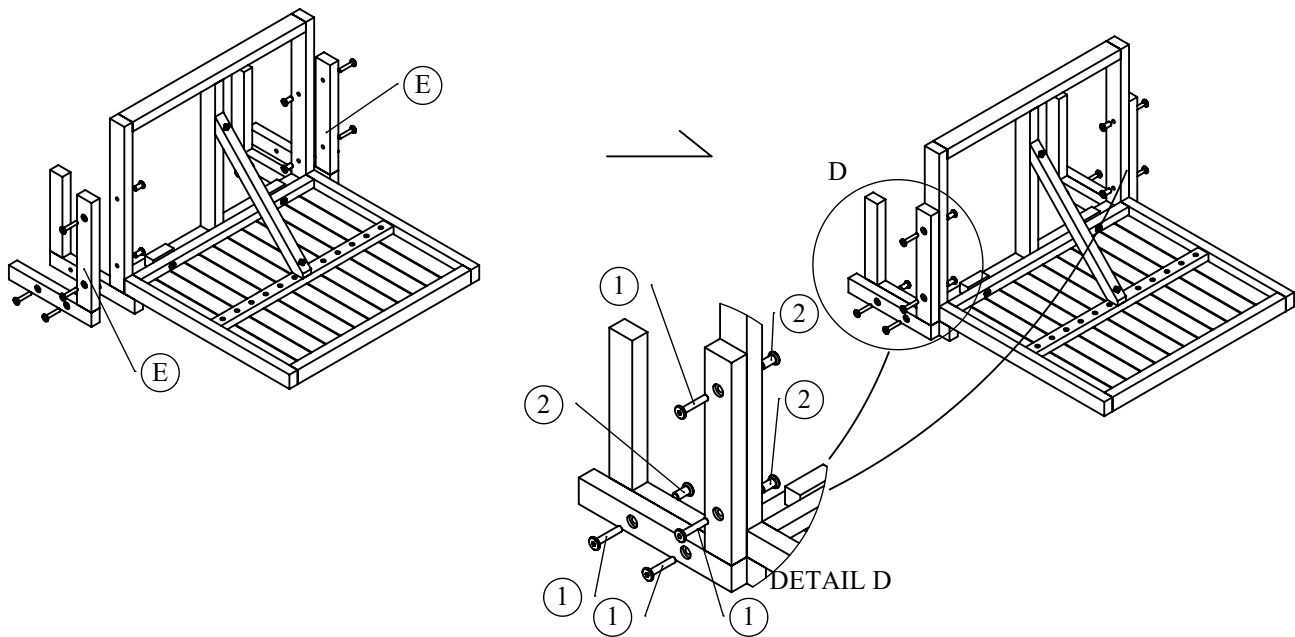

FINISHED:

