

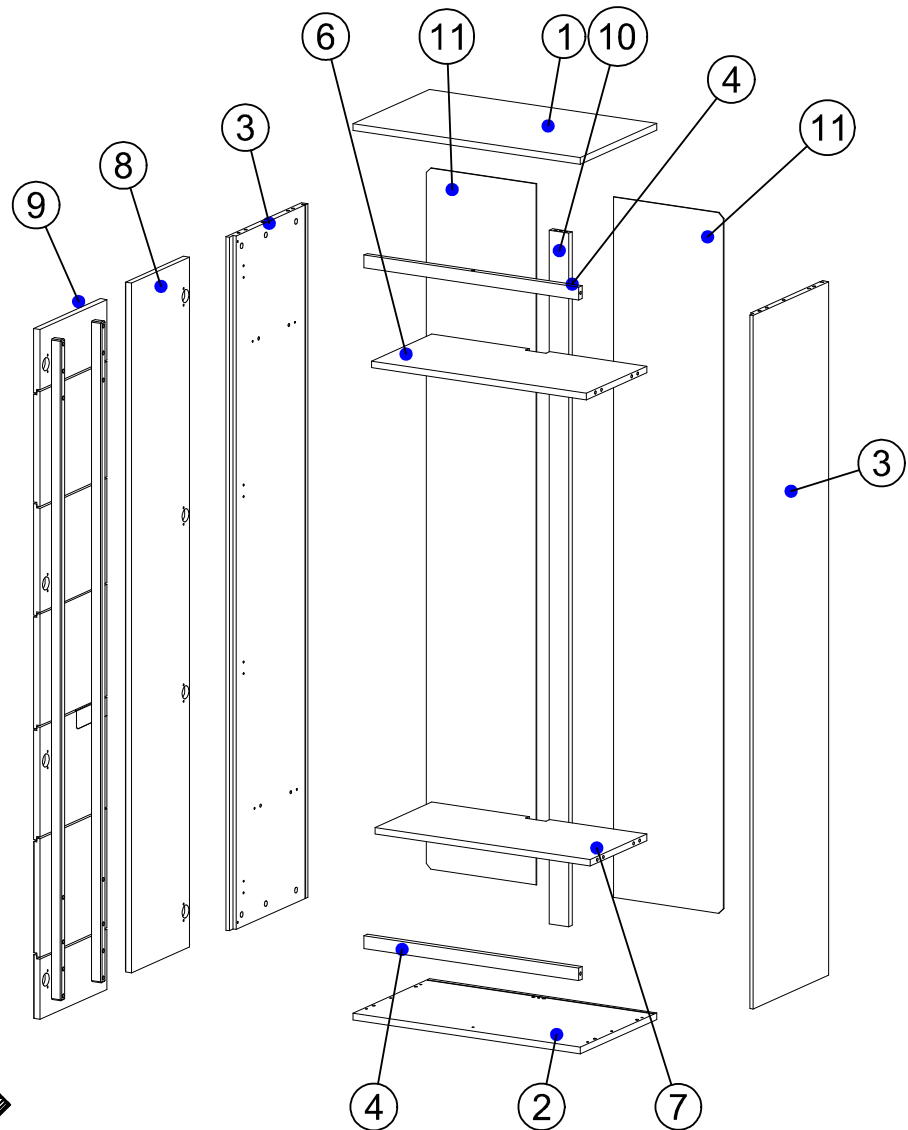


3987


versionsnummer:


12.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.





x2 80 min

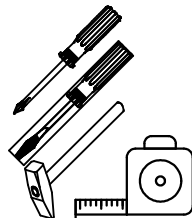


A  Ø 8x30 20	B  28	D  26	D2  2	C  Ø 4x16 4	E  Ø 6.3x13 8	F  8	G  Ø 4x30 8	H  Ø 3x16 24
J  Ø 5x13 16			O  1		V  4	P  12	N  16	U  1


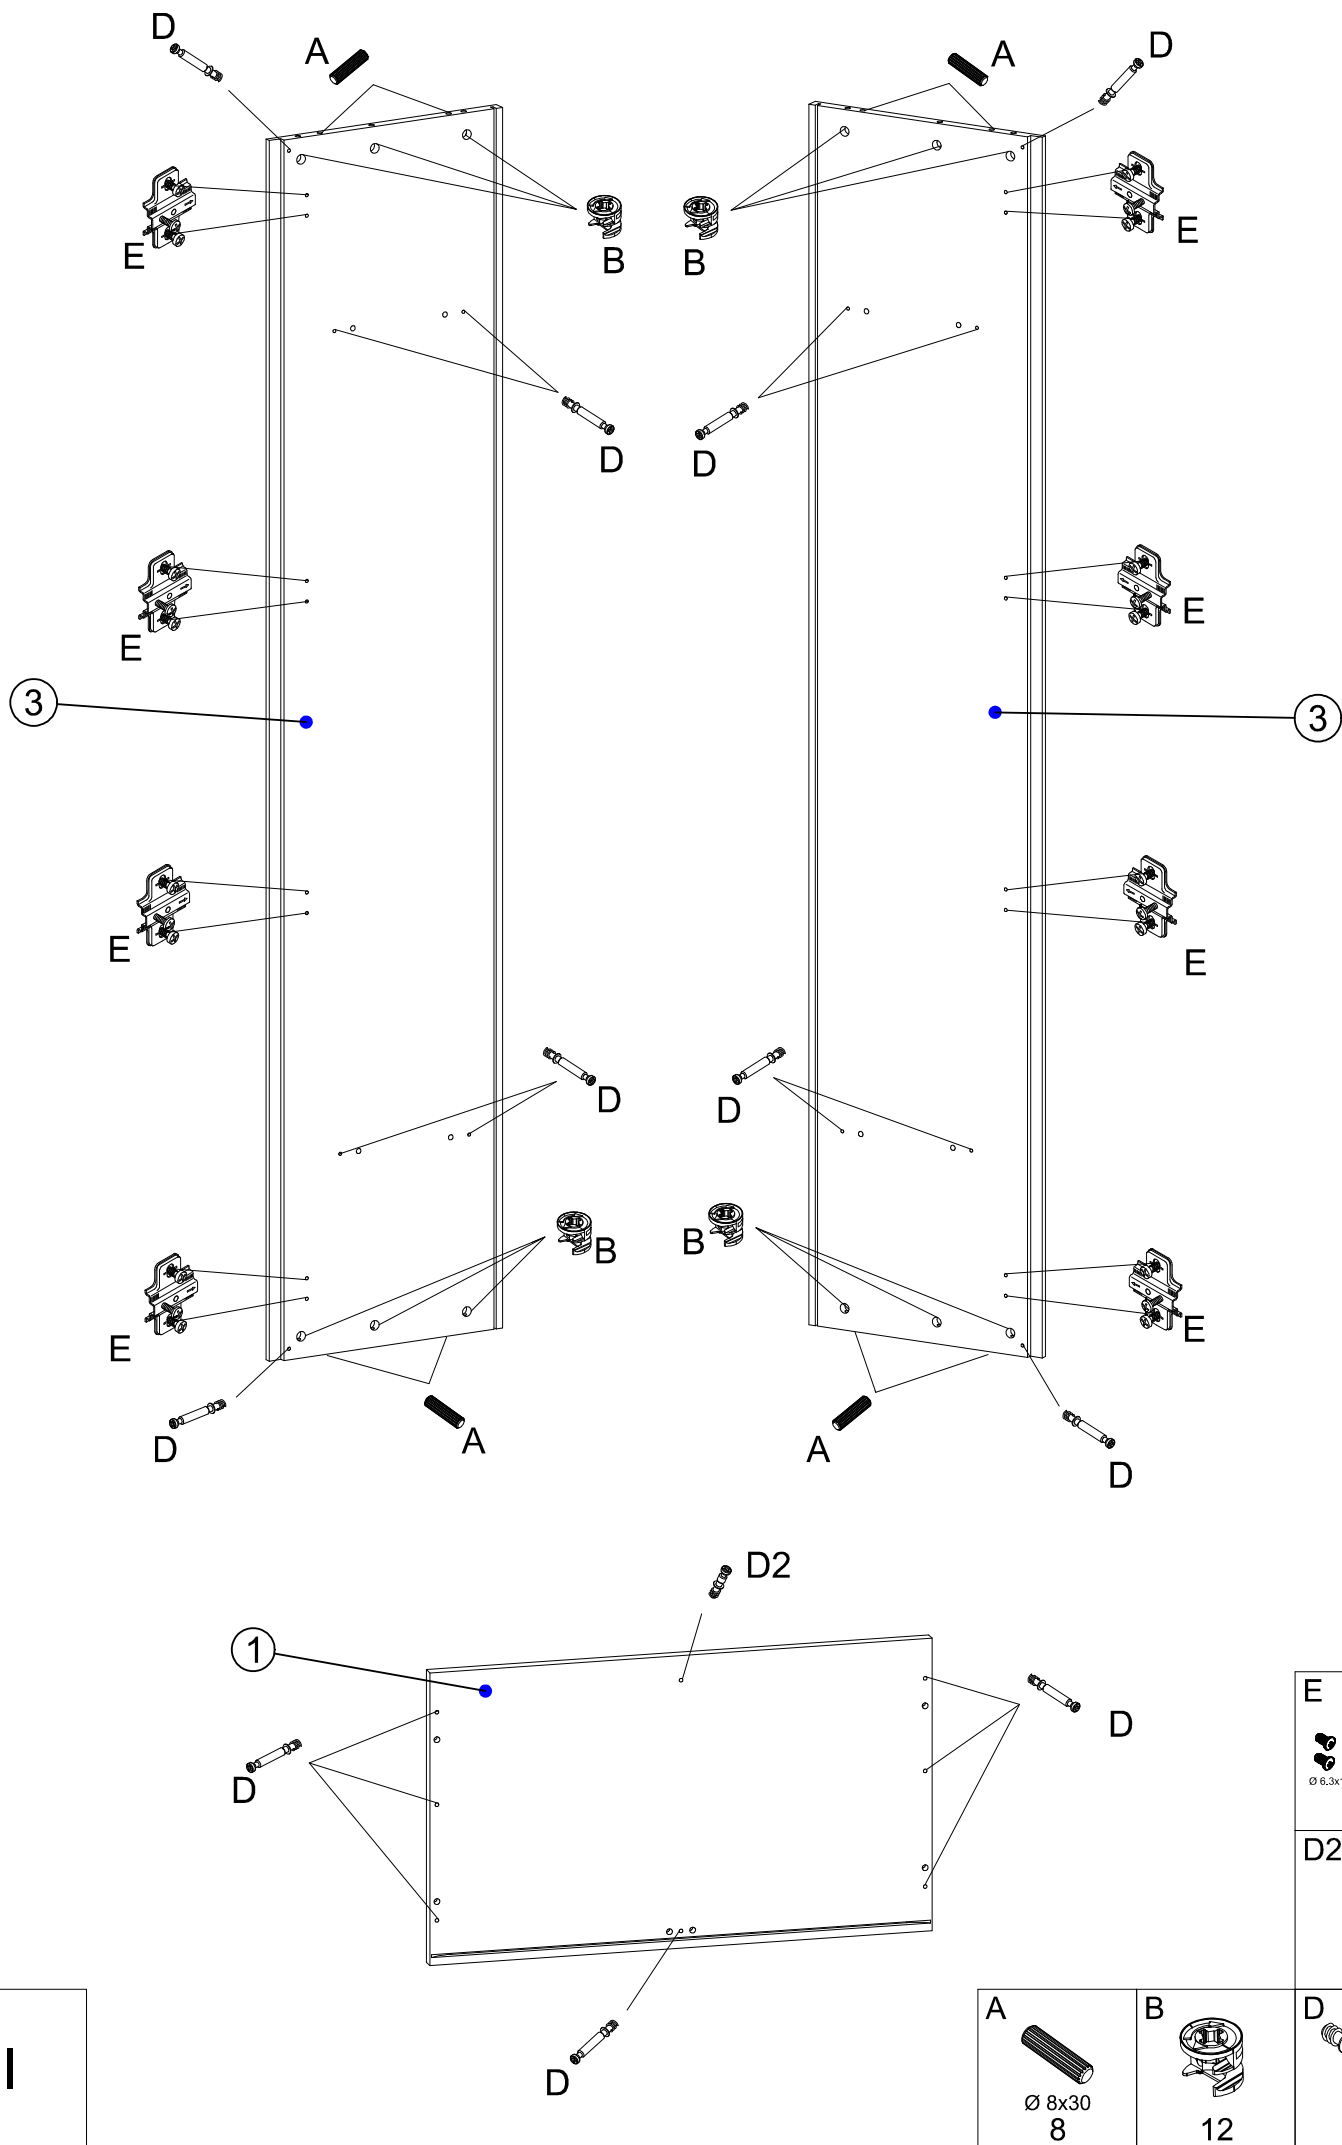


E Ø 6,3x13 8
D2 1

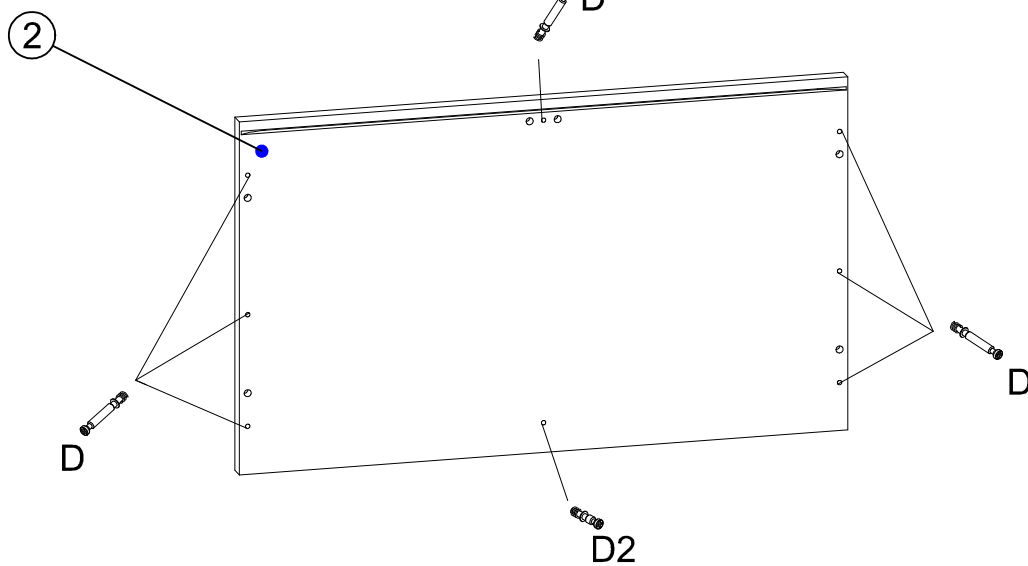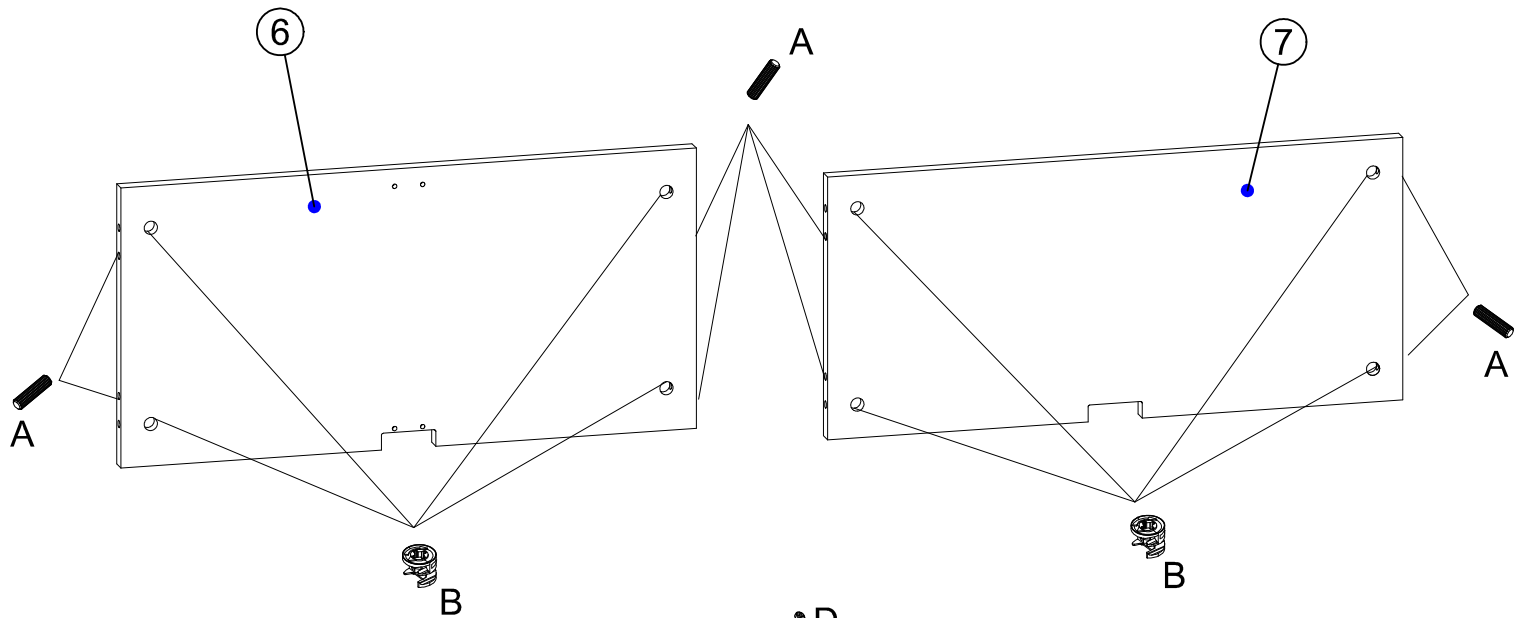





D2	
1	
A	
Ø 8x30 8	
B	
8	
D	
7	







II

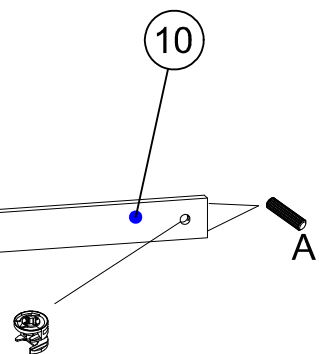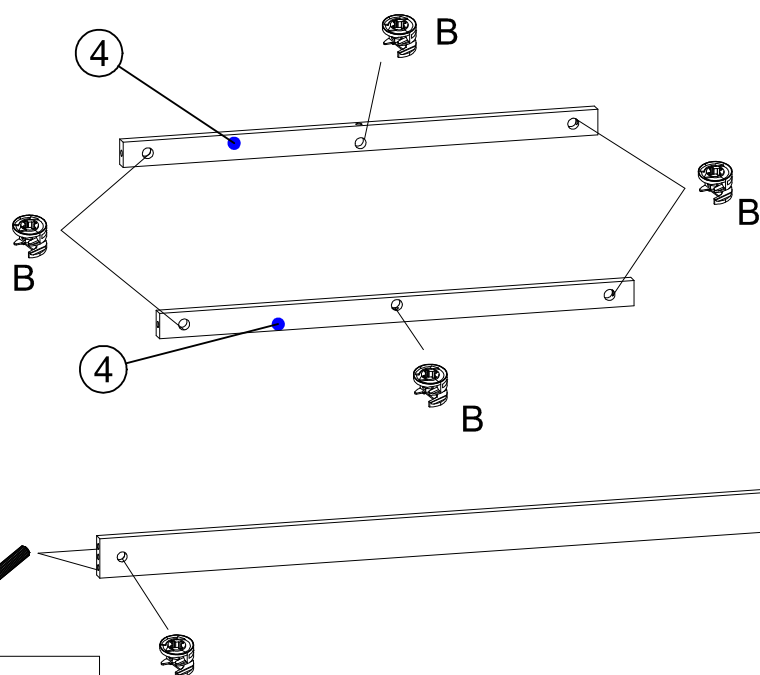

A	
Ø 8x30 4	
B	
8	

III

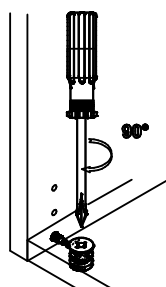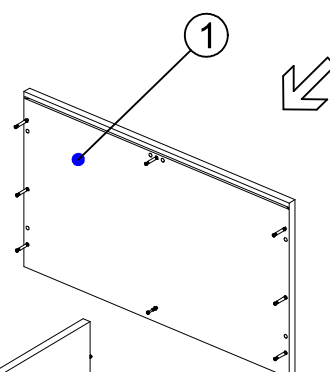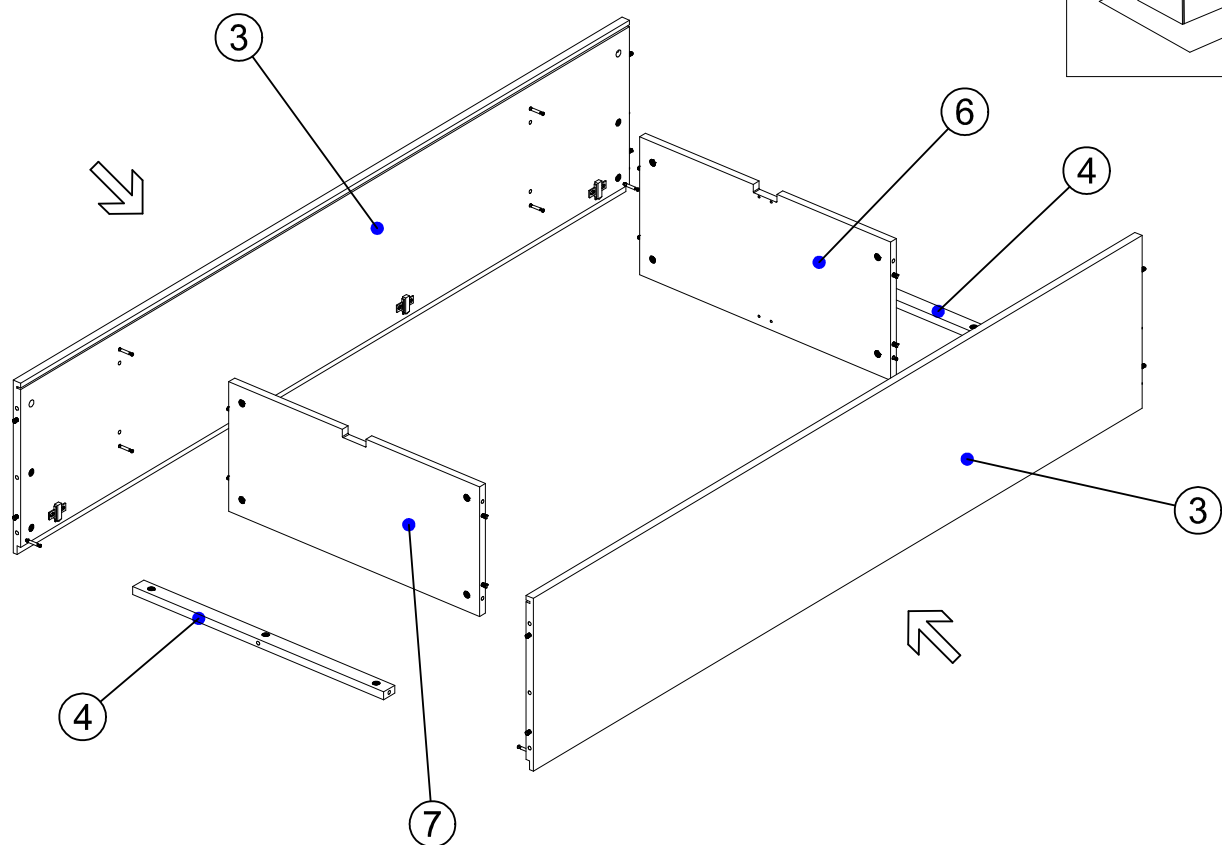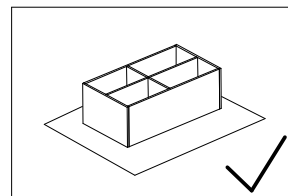

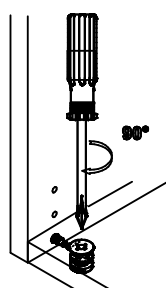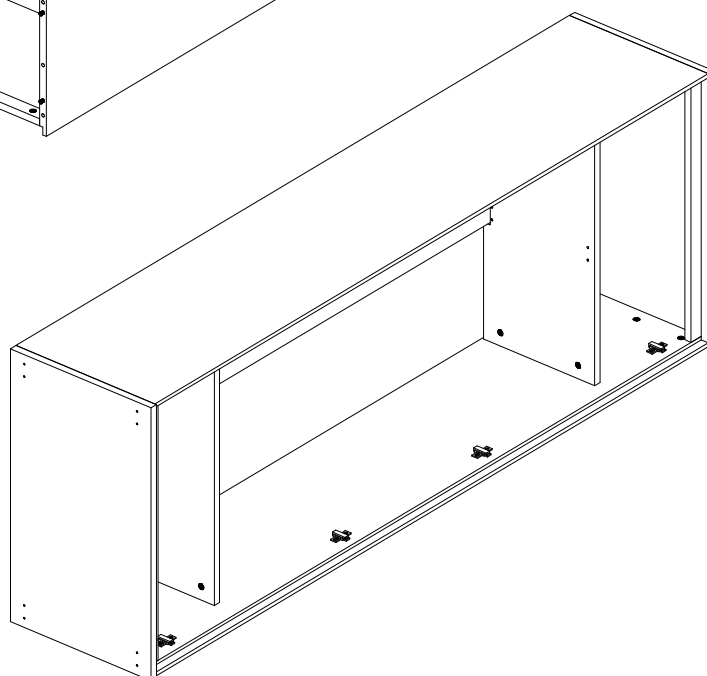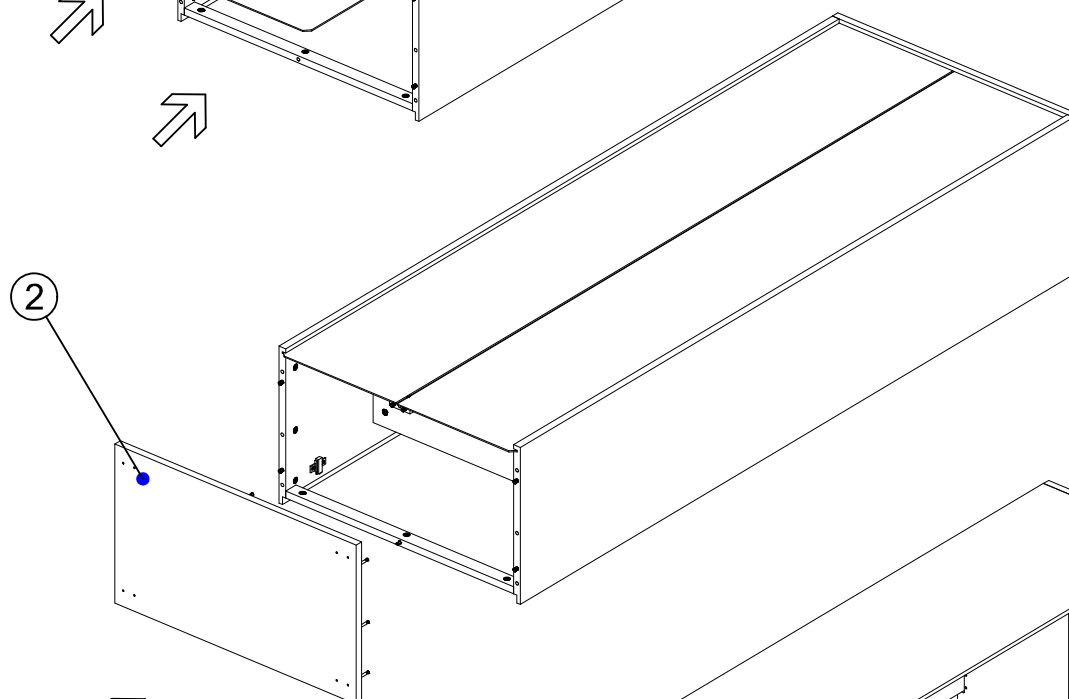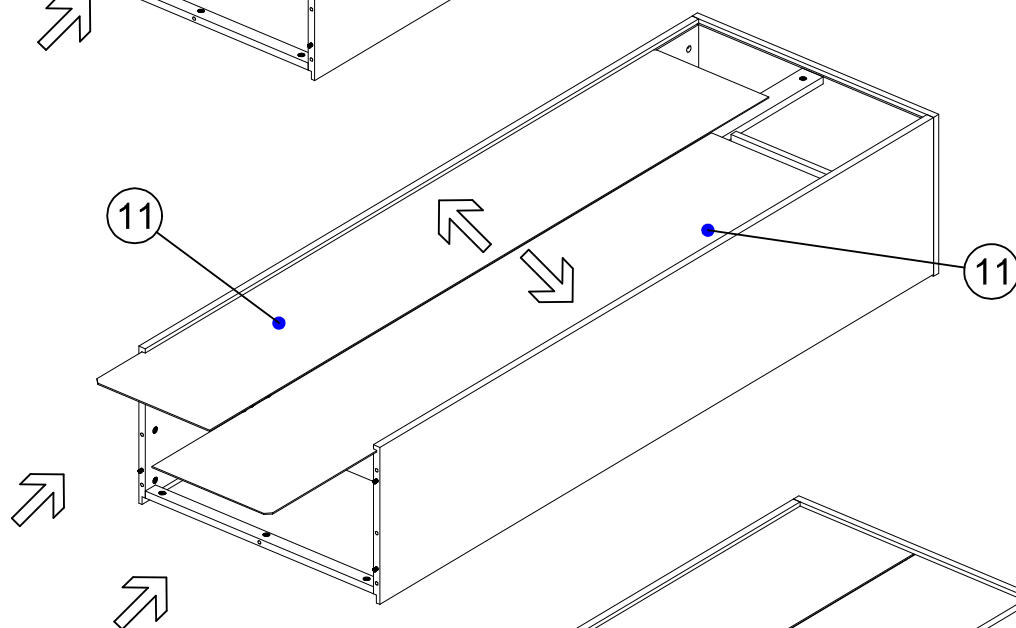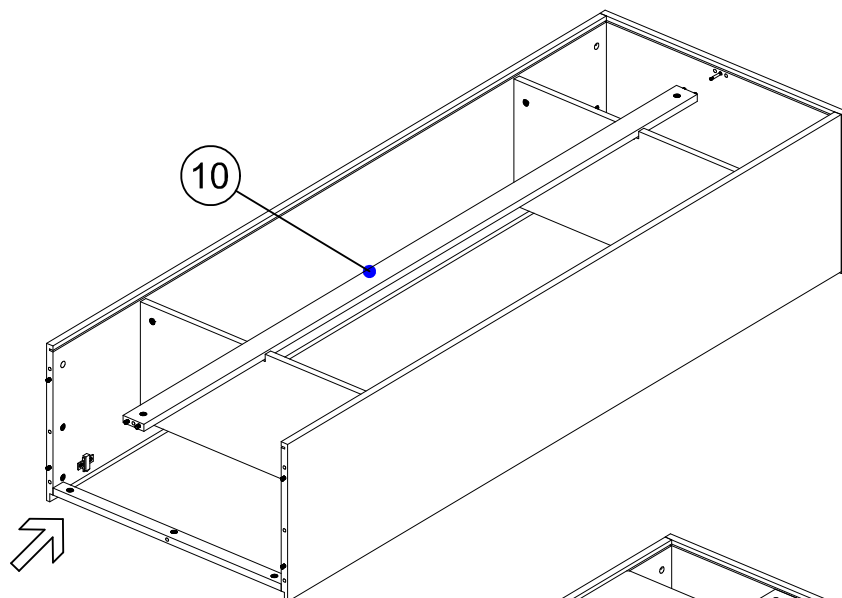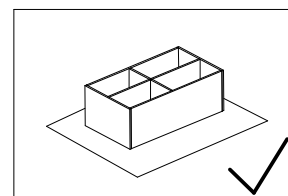

V



VI



H Ø 3x16 24	N 16	P 12
--------------------------------------	---------------------------	---------------------------

k

VII





G Ø 4x30 8	V 4
-------------------------------------	--------------------------

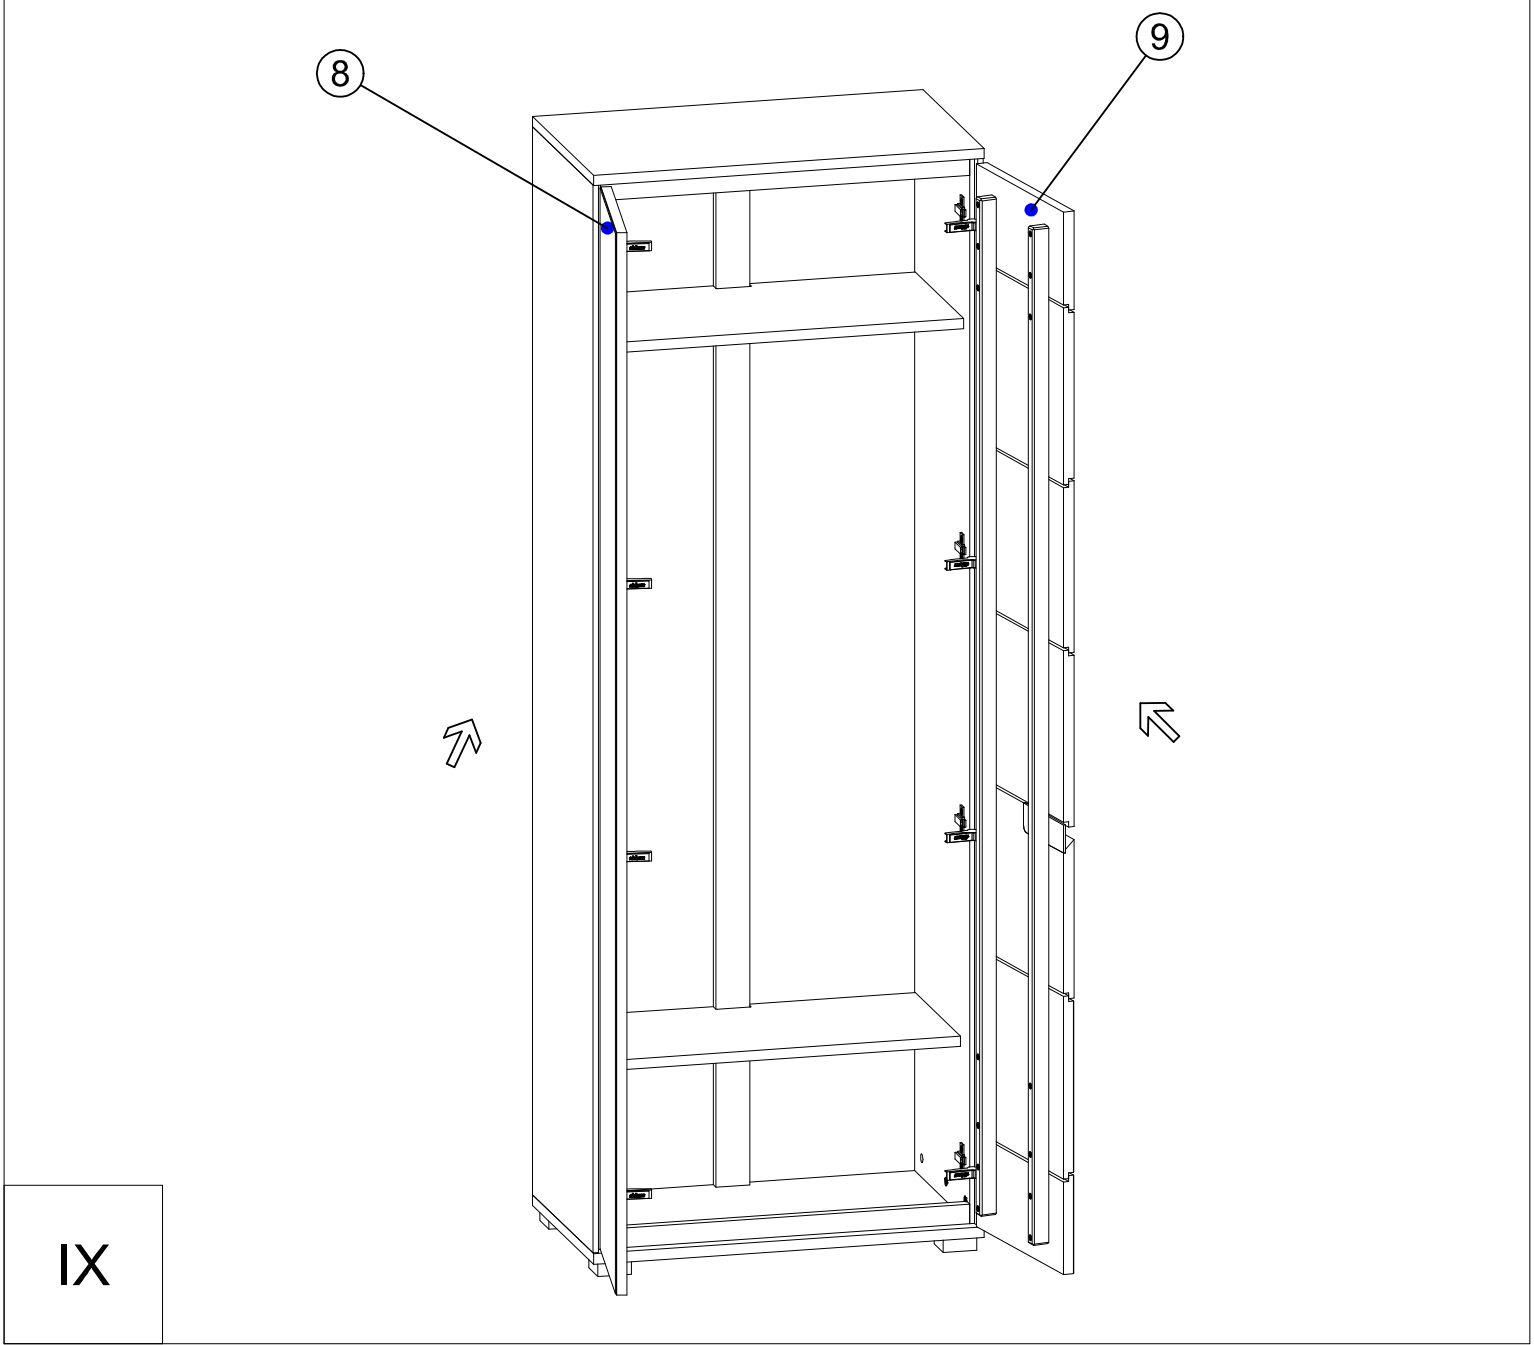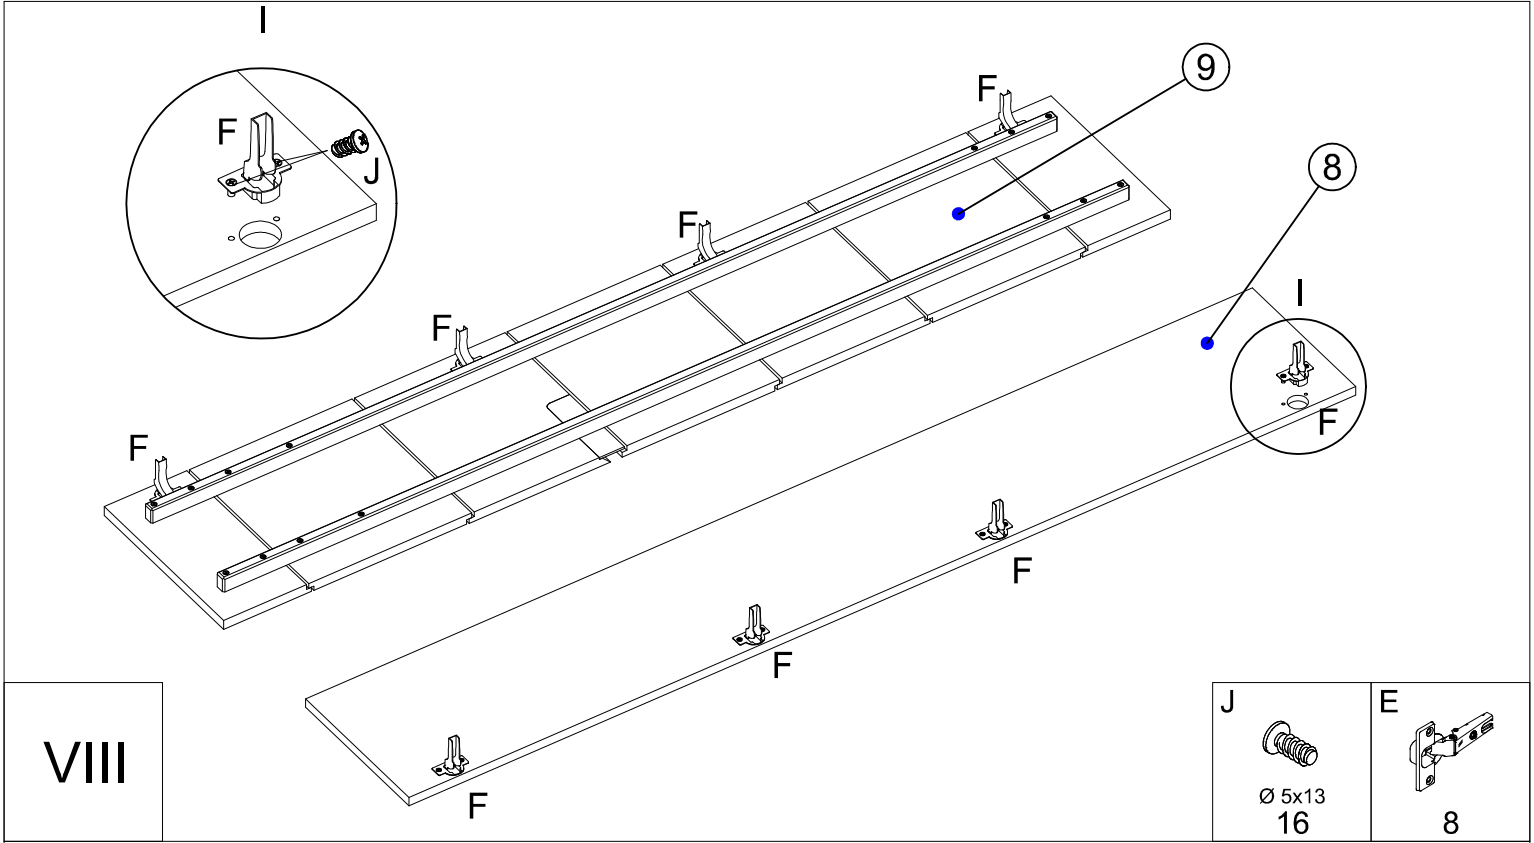

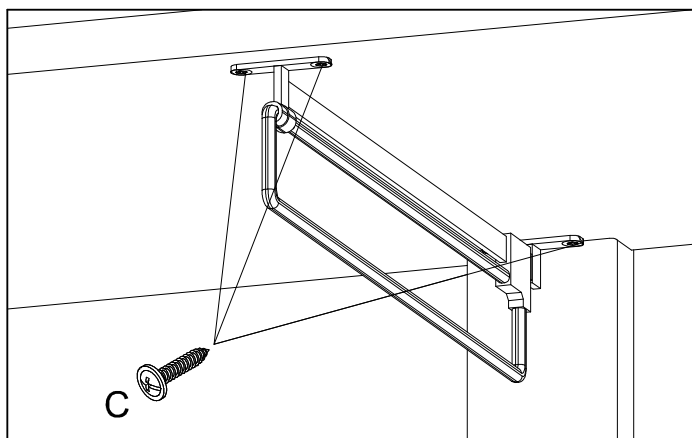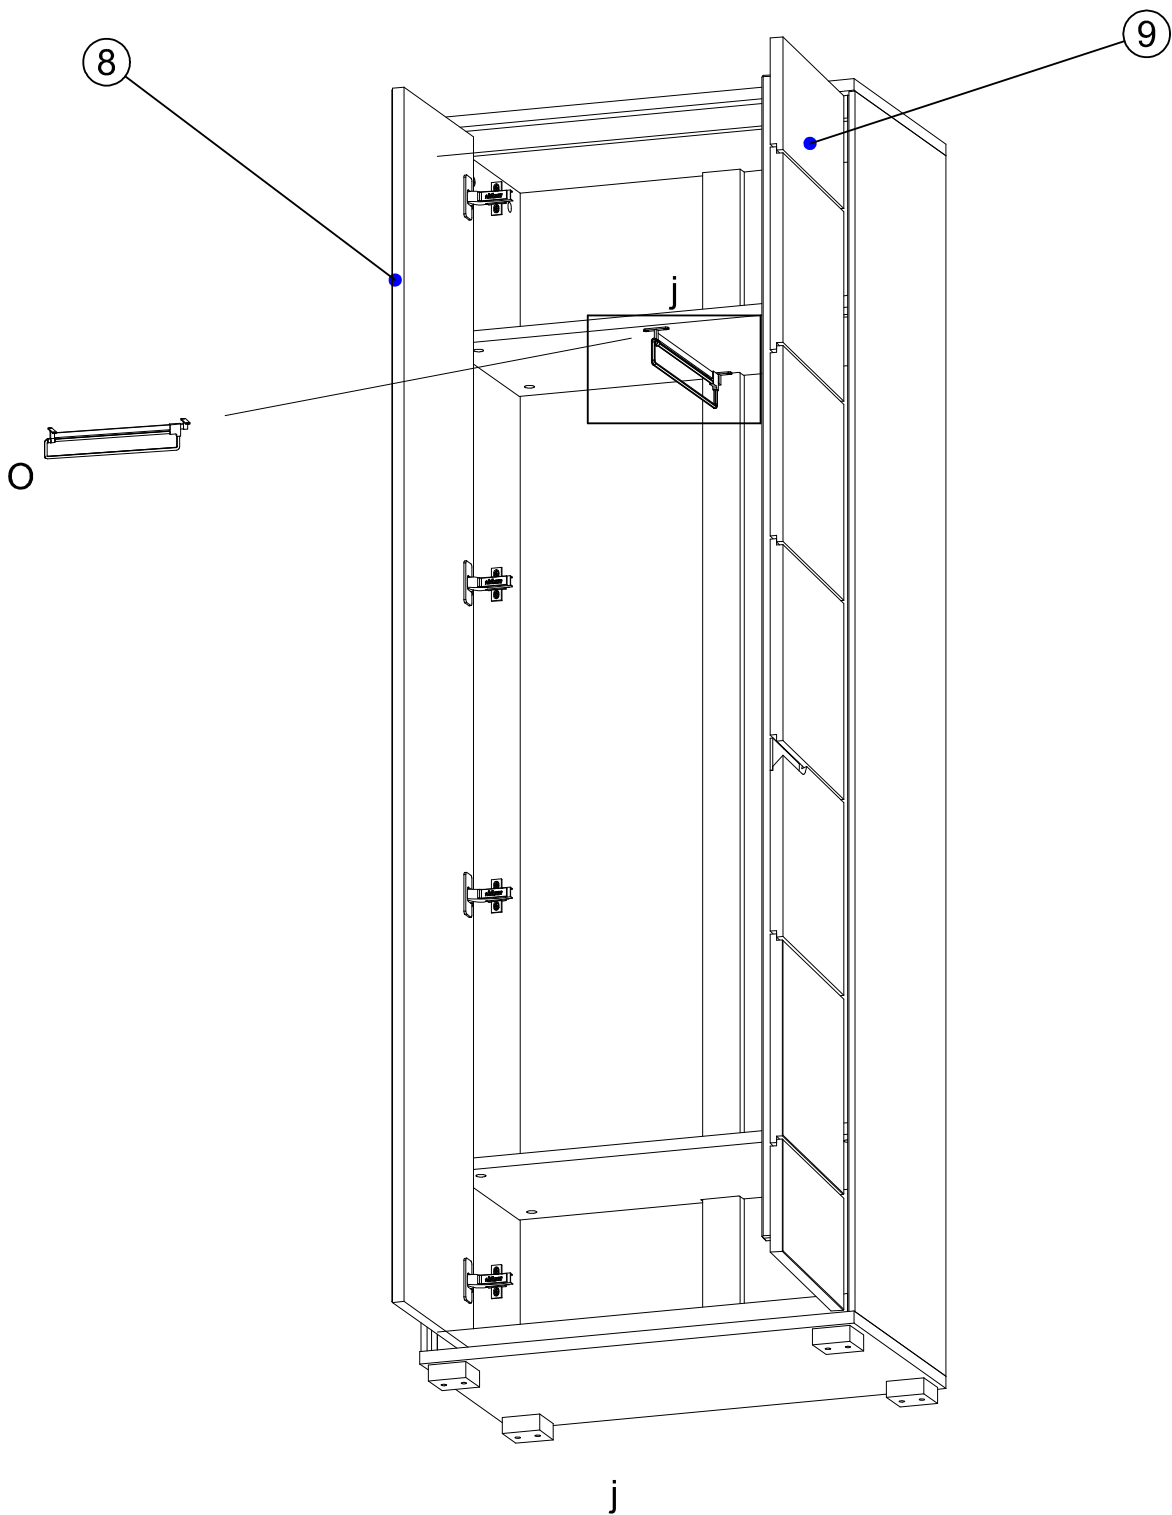

X

C  Ø 4x16 4	O  1
--	---

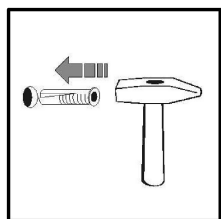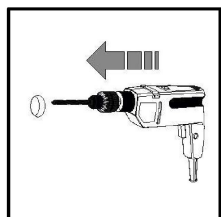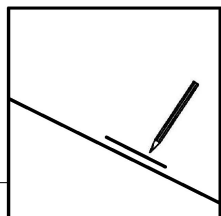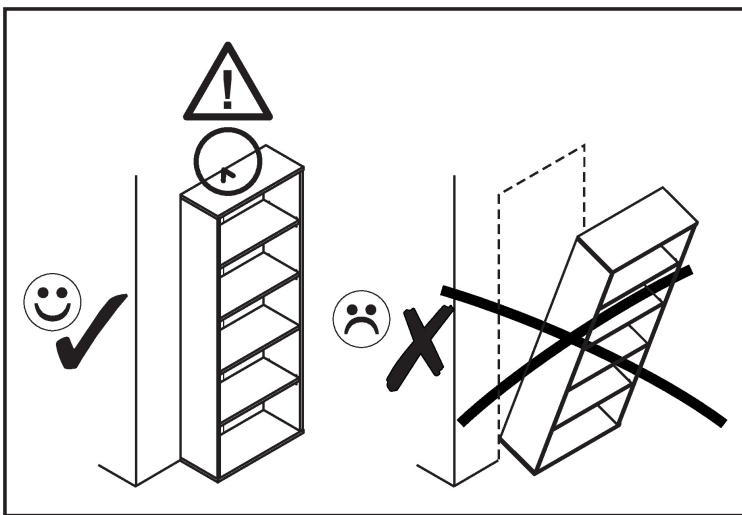

d

