
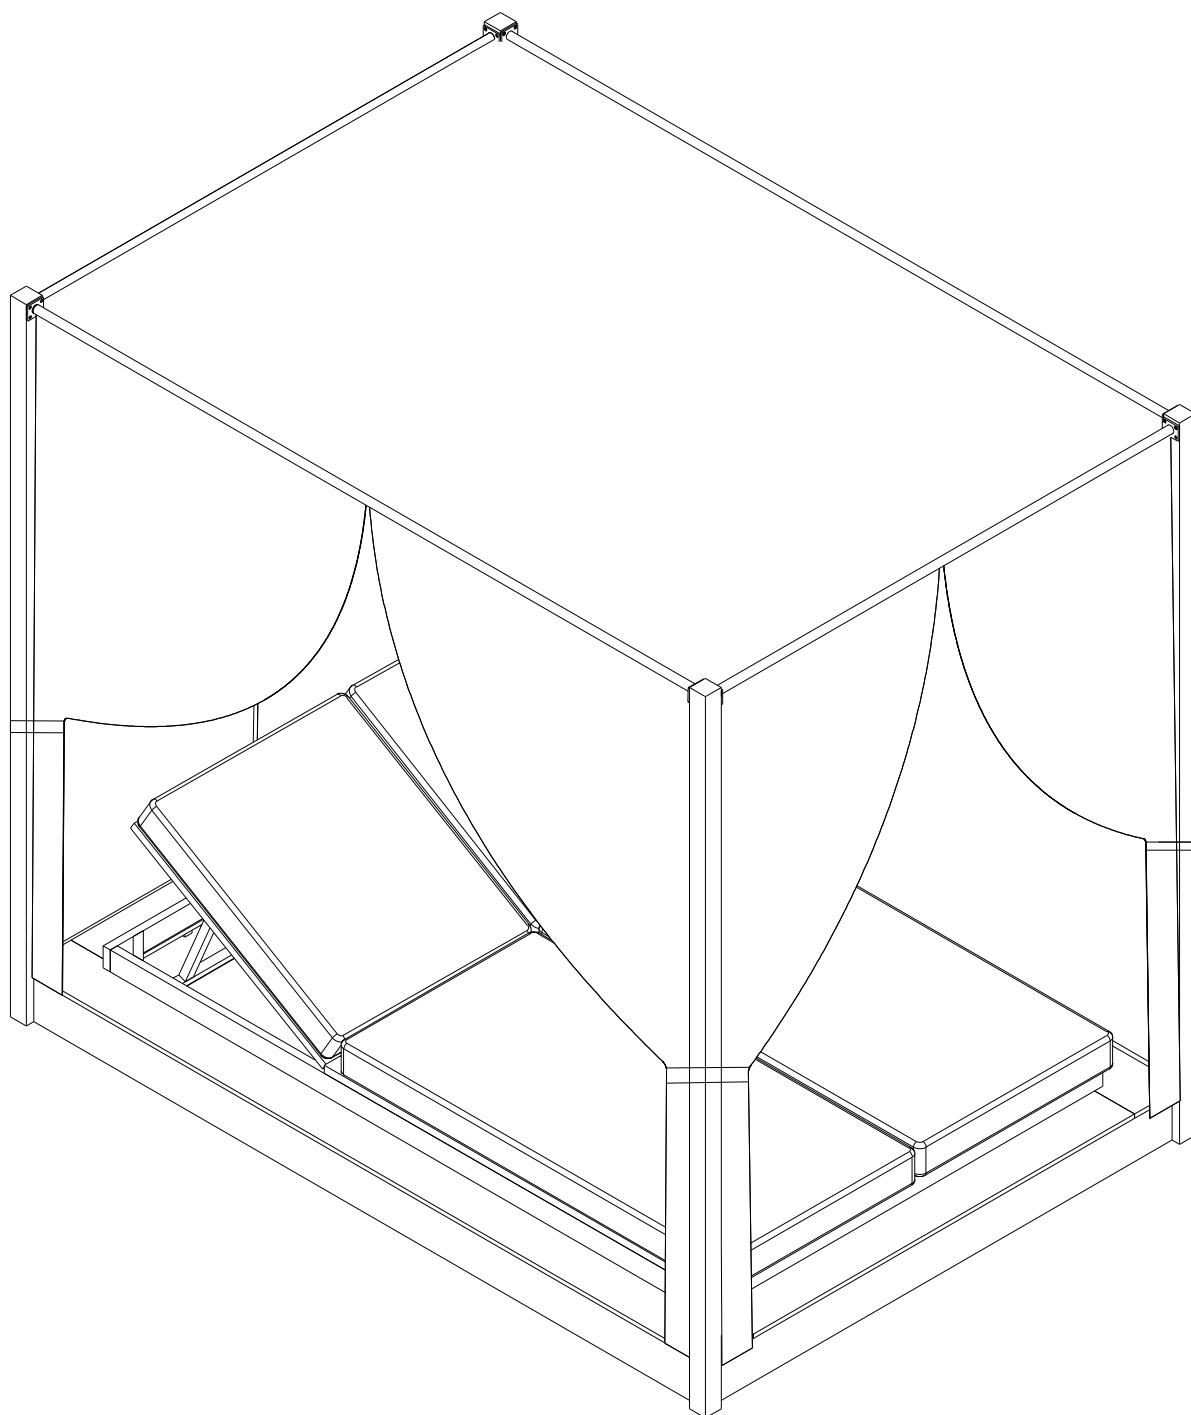
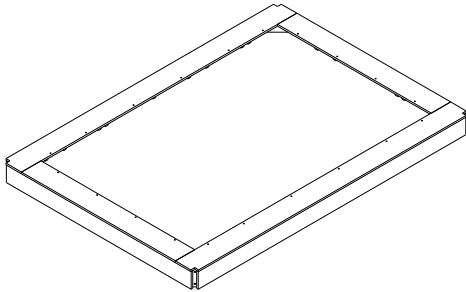
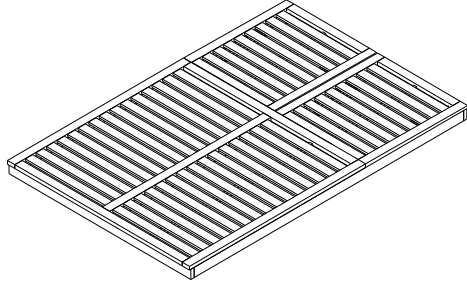
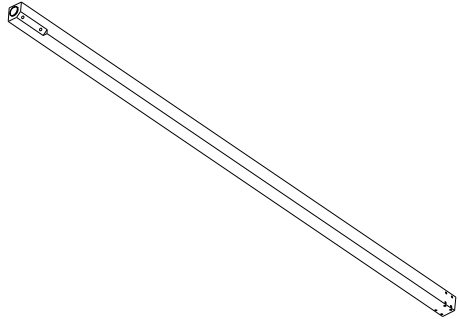

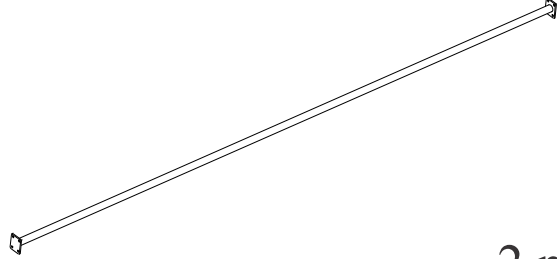
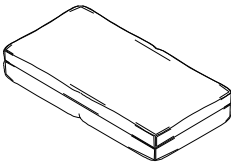


ASSEMBLY INSTRUCTION





Article Number: 20140217/01

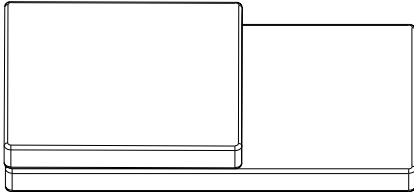

PART LIST

A  1 pc	B  1 pc
C  4 pcs	D  2 pcs
E  2 pcs	F  2 pcs
G  1 pc	H  2 pcs

HARDWARE LIST

1		Bolt M8 x 90	8 pcs
2		Bolt M6 x 35	4 pcs
3		Vis M6 x 50	20 pcs
4		Vis M6 x 25	32 pcs
5		Rondelle M8	8 pcs
6		Allen Key	2 pcs


SkyBed

3



Vis M6 x 50

20 pcs

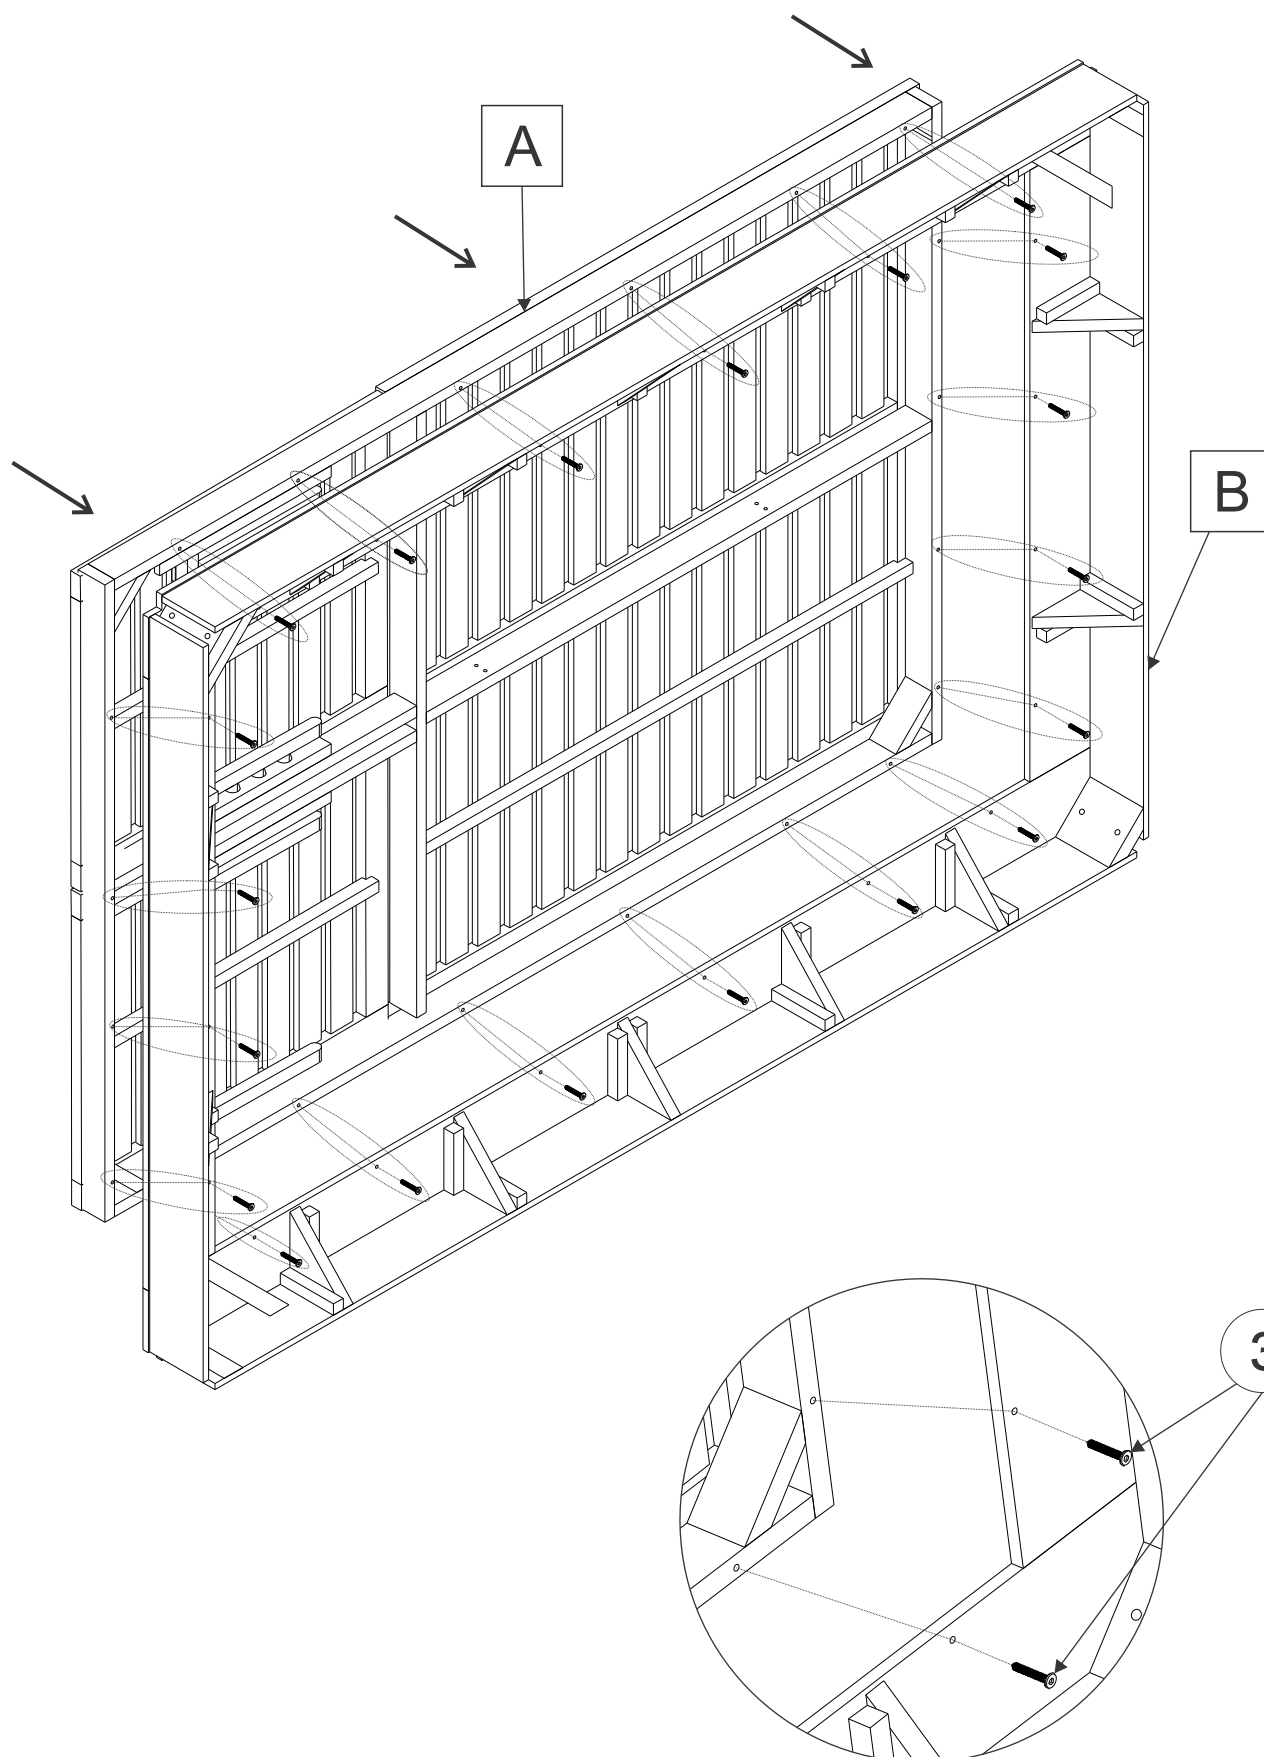



SkyBed

2





Bolt M6 x 35

4 pcs

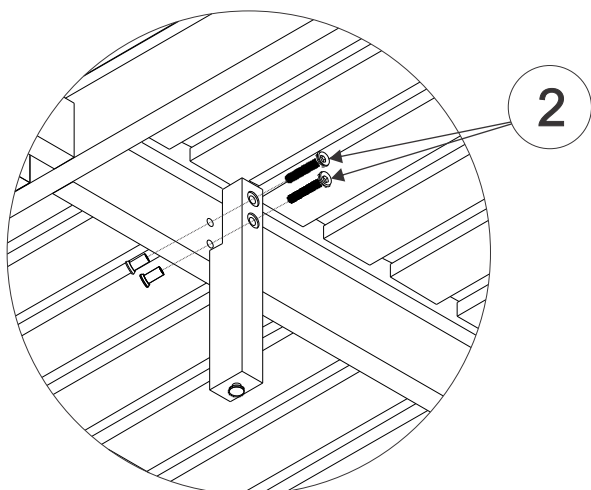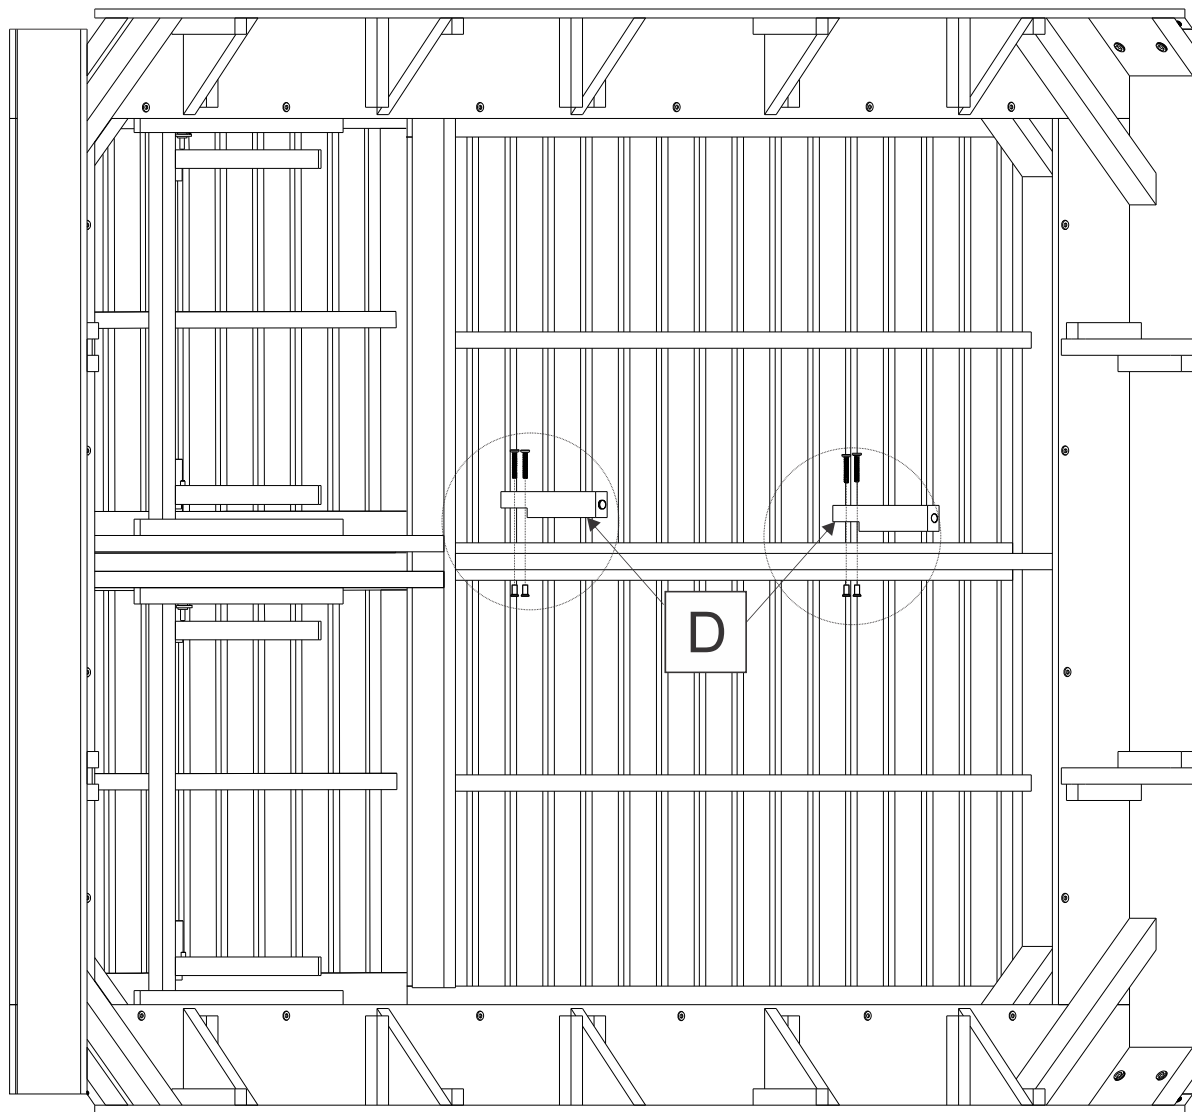


SkyBed

1		Bolt M8 x 90	8 pcs
5		Rondelle M8	8 pcs

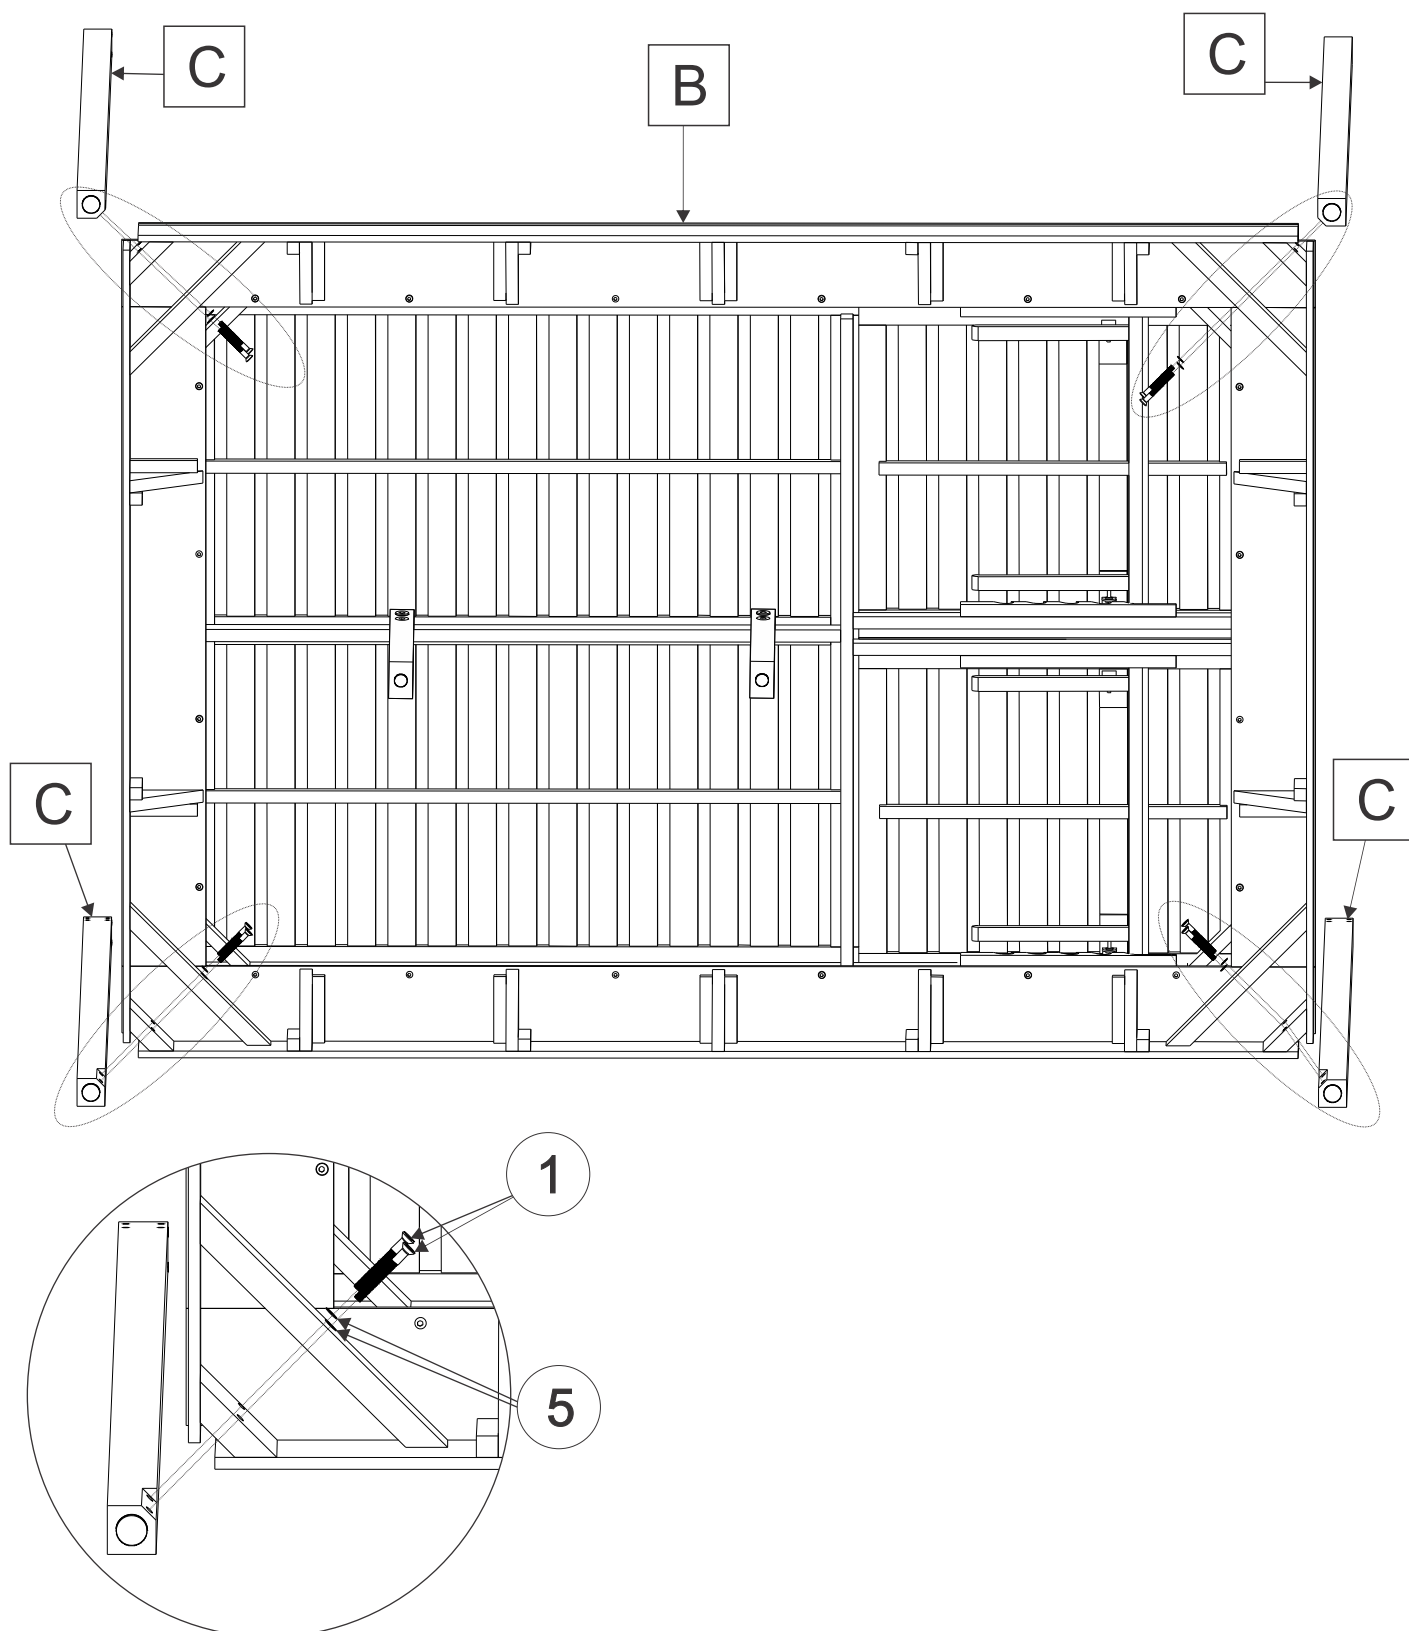


SkyBed

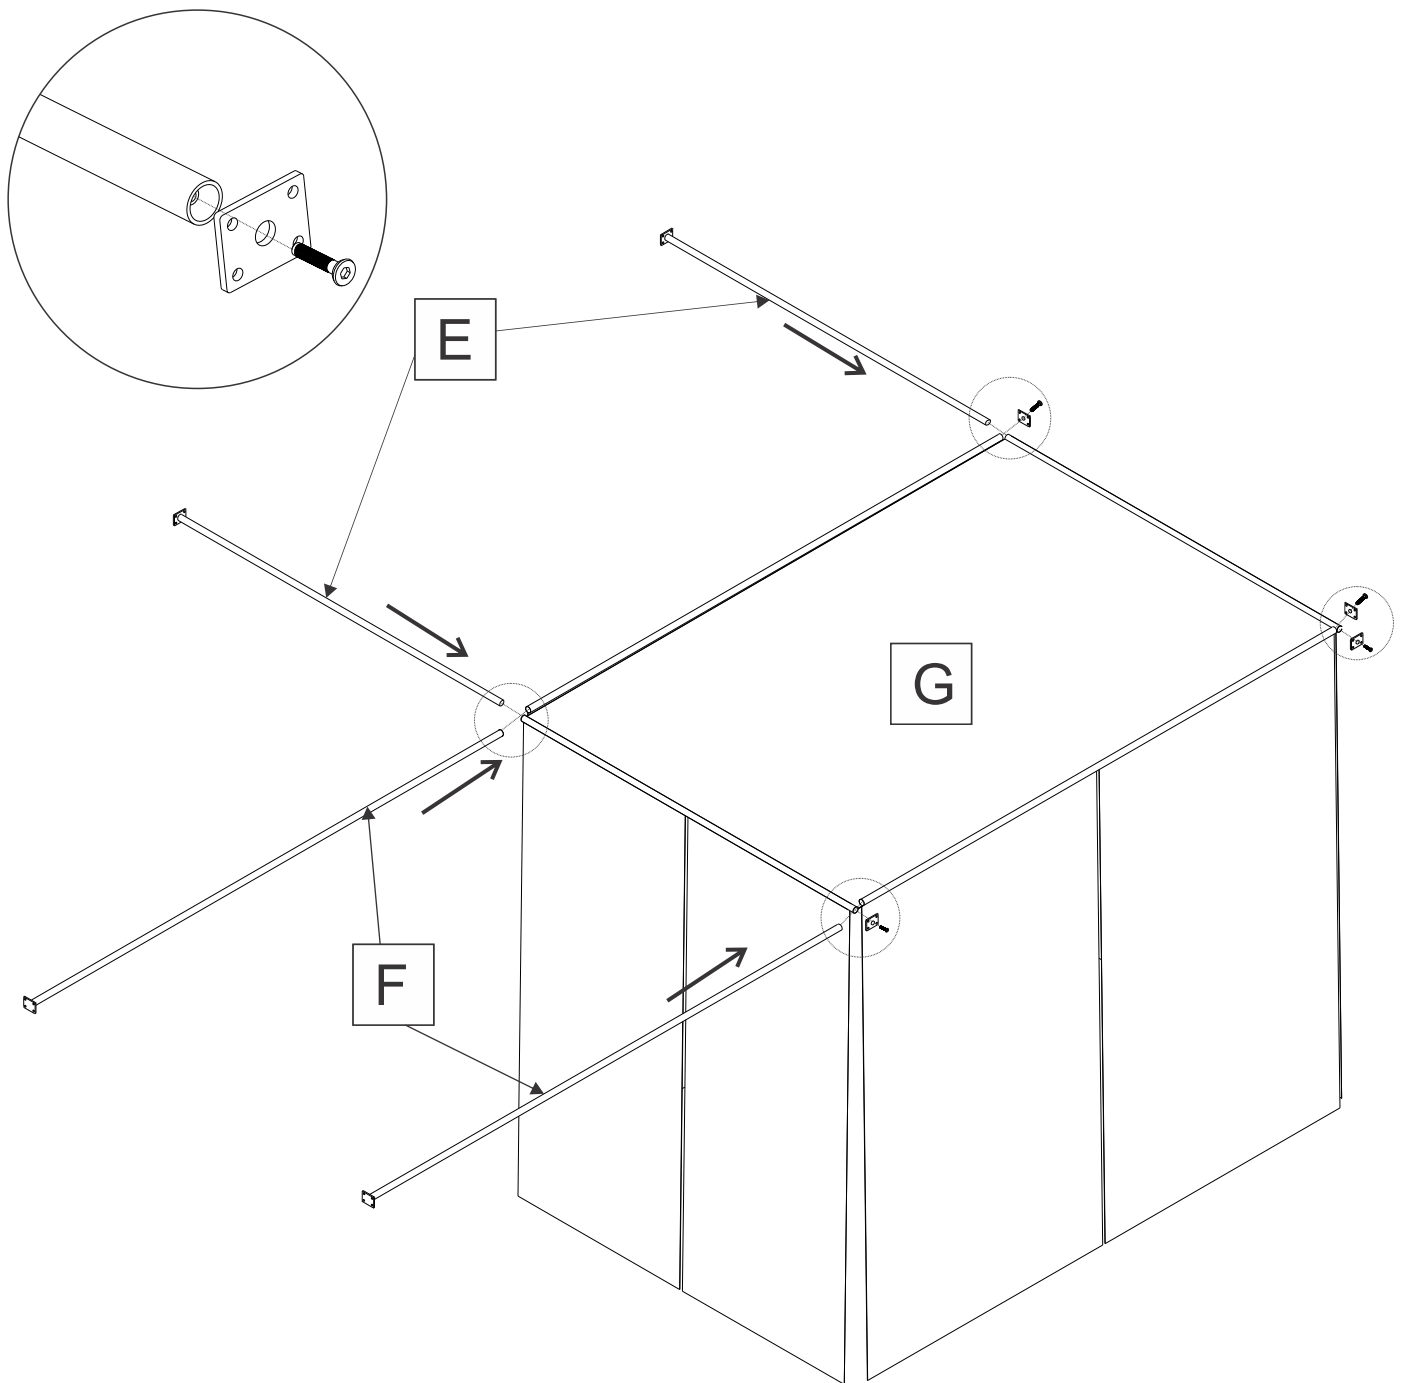

Remove the square parts from the path frames.
Place the path frames inside the canopy.
Then reassemble them.


SkyBed

4





Vis M6 x 25

32 pcs

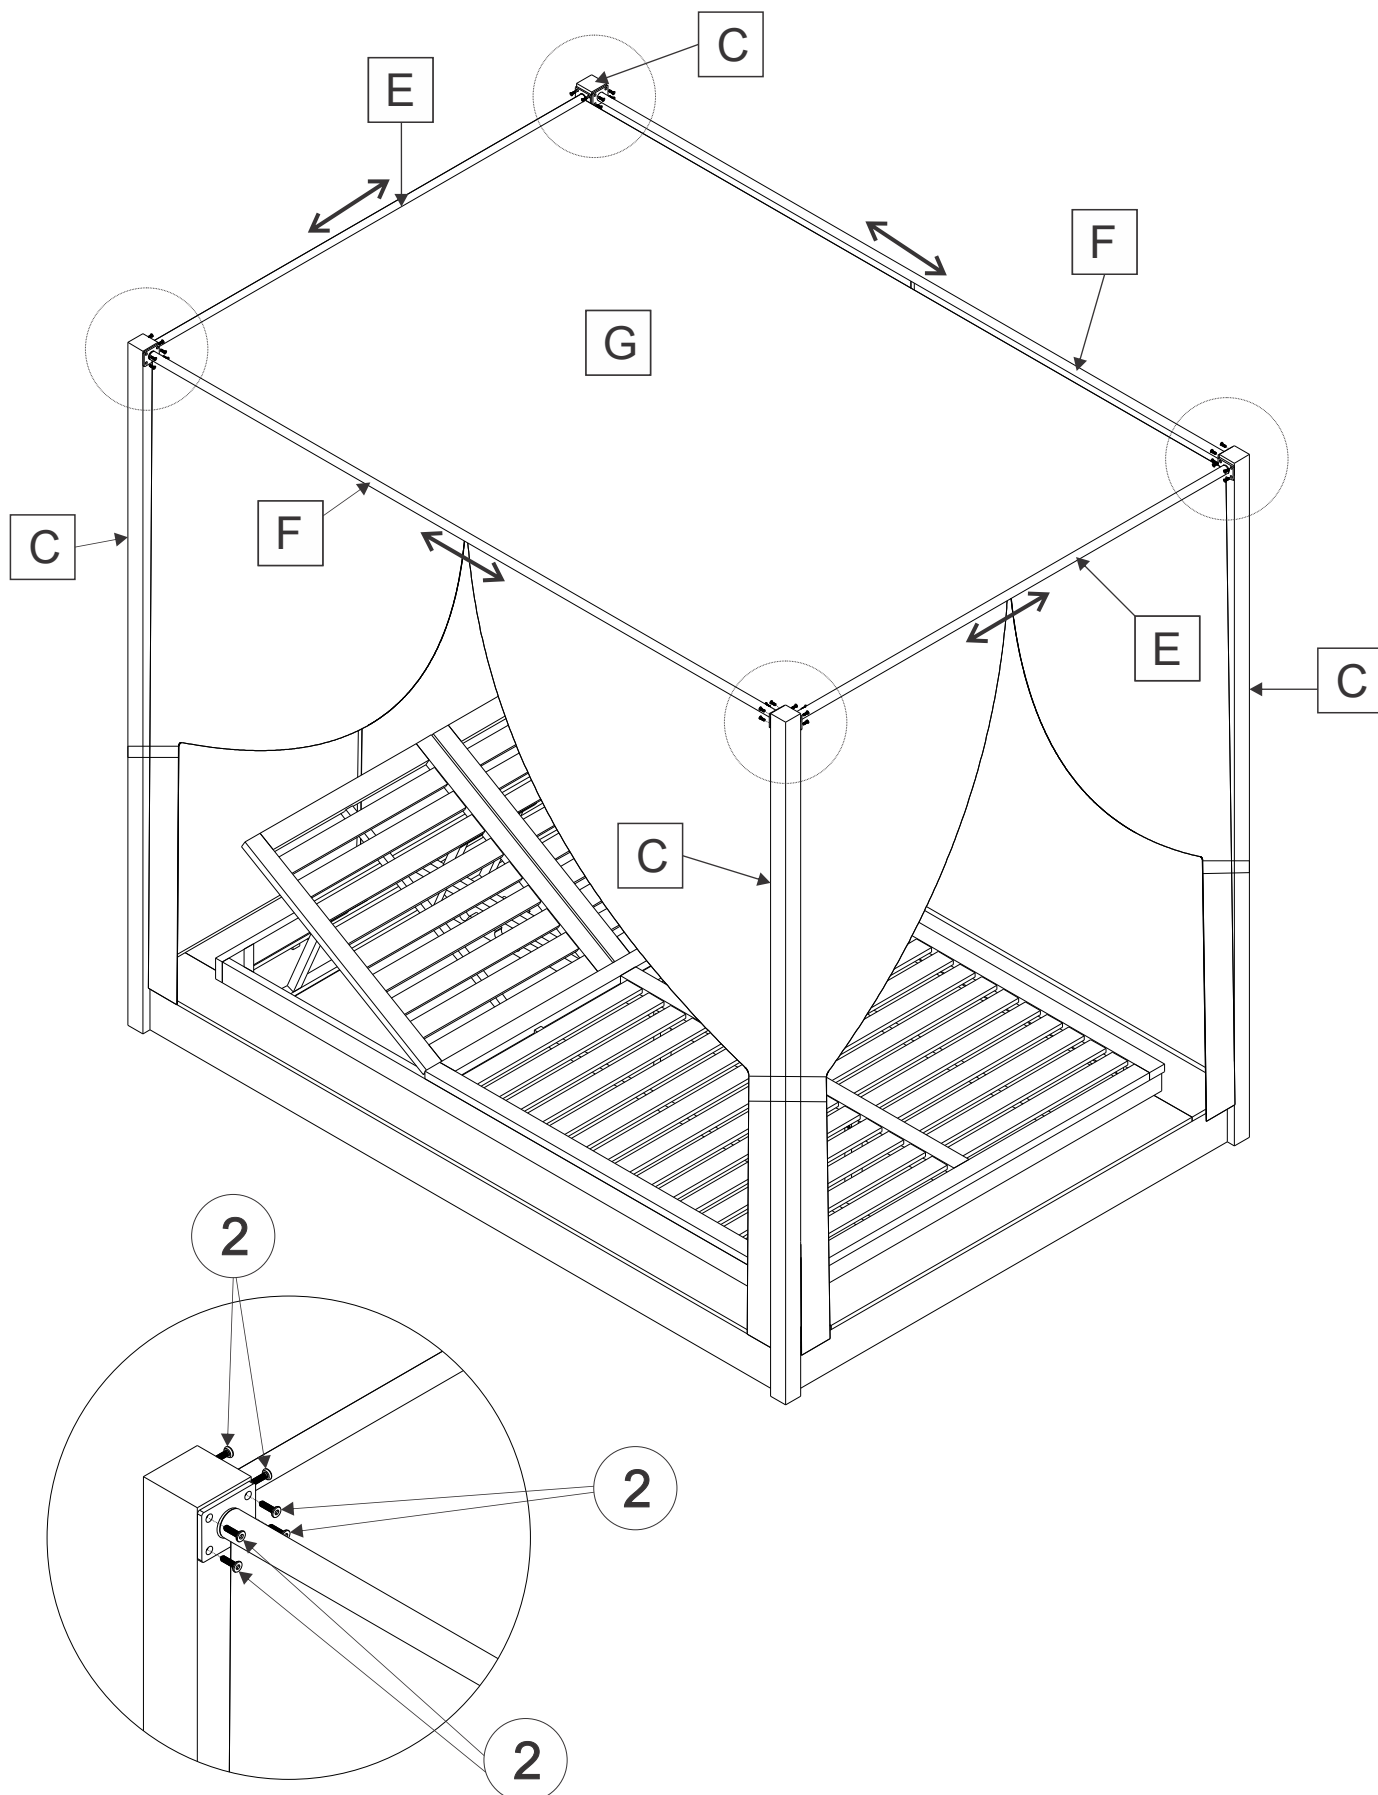

SkyBed

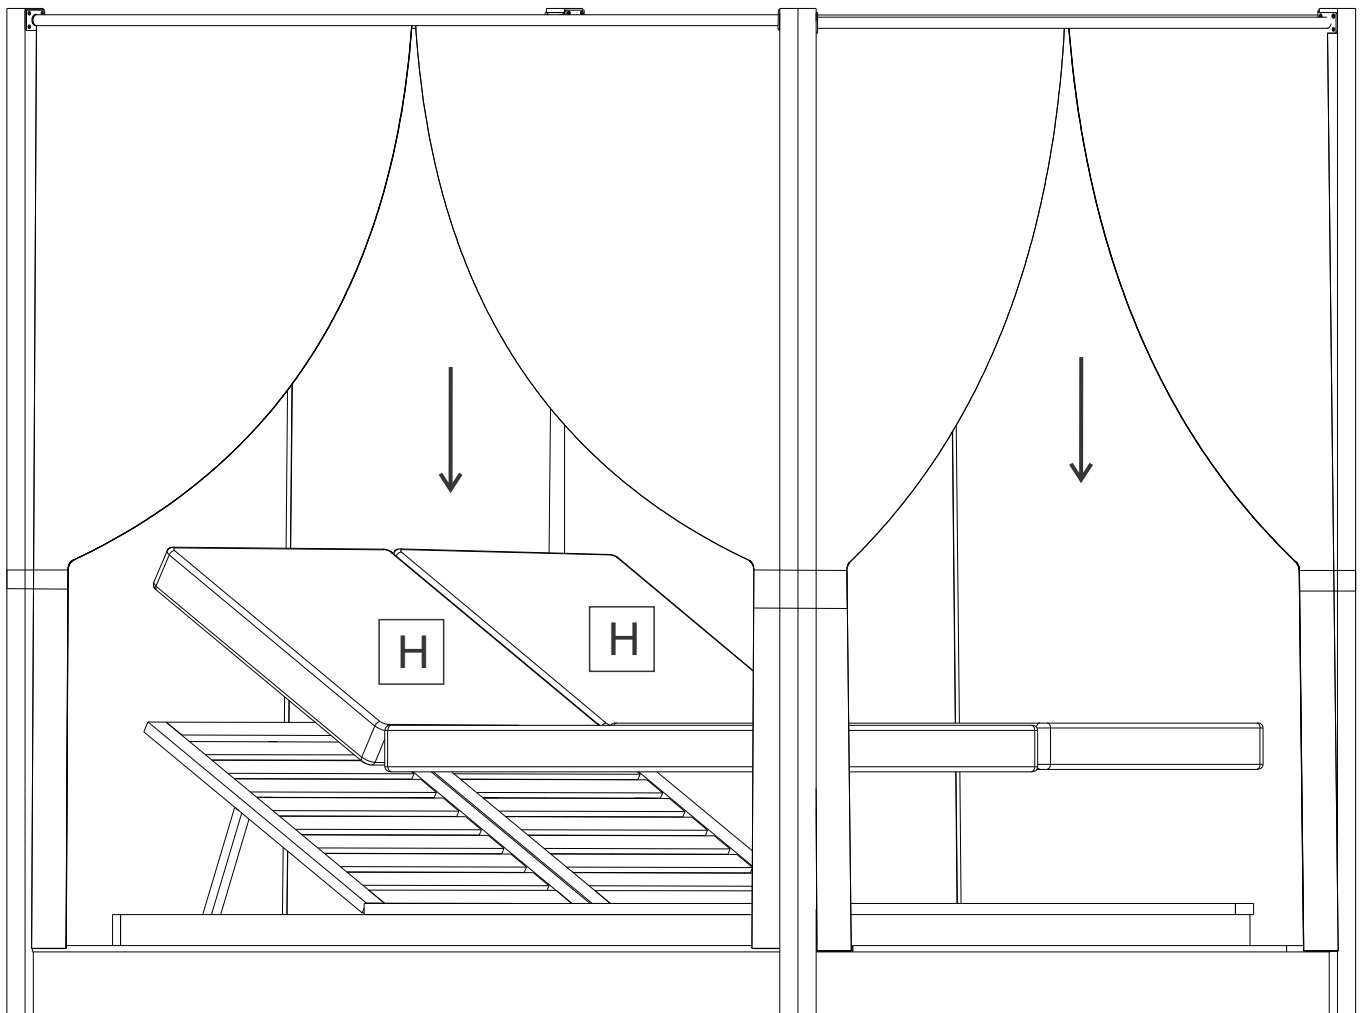

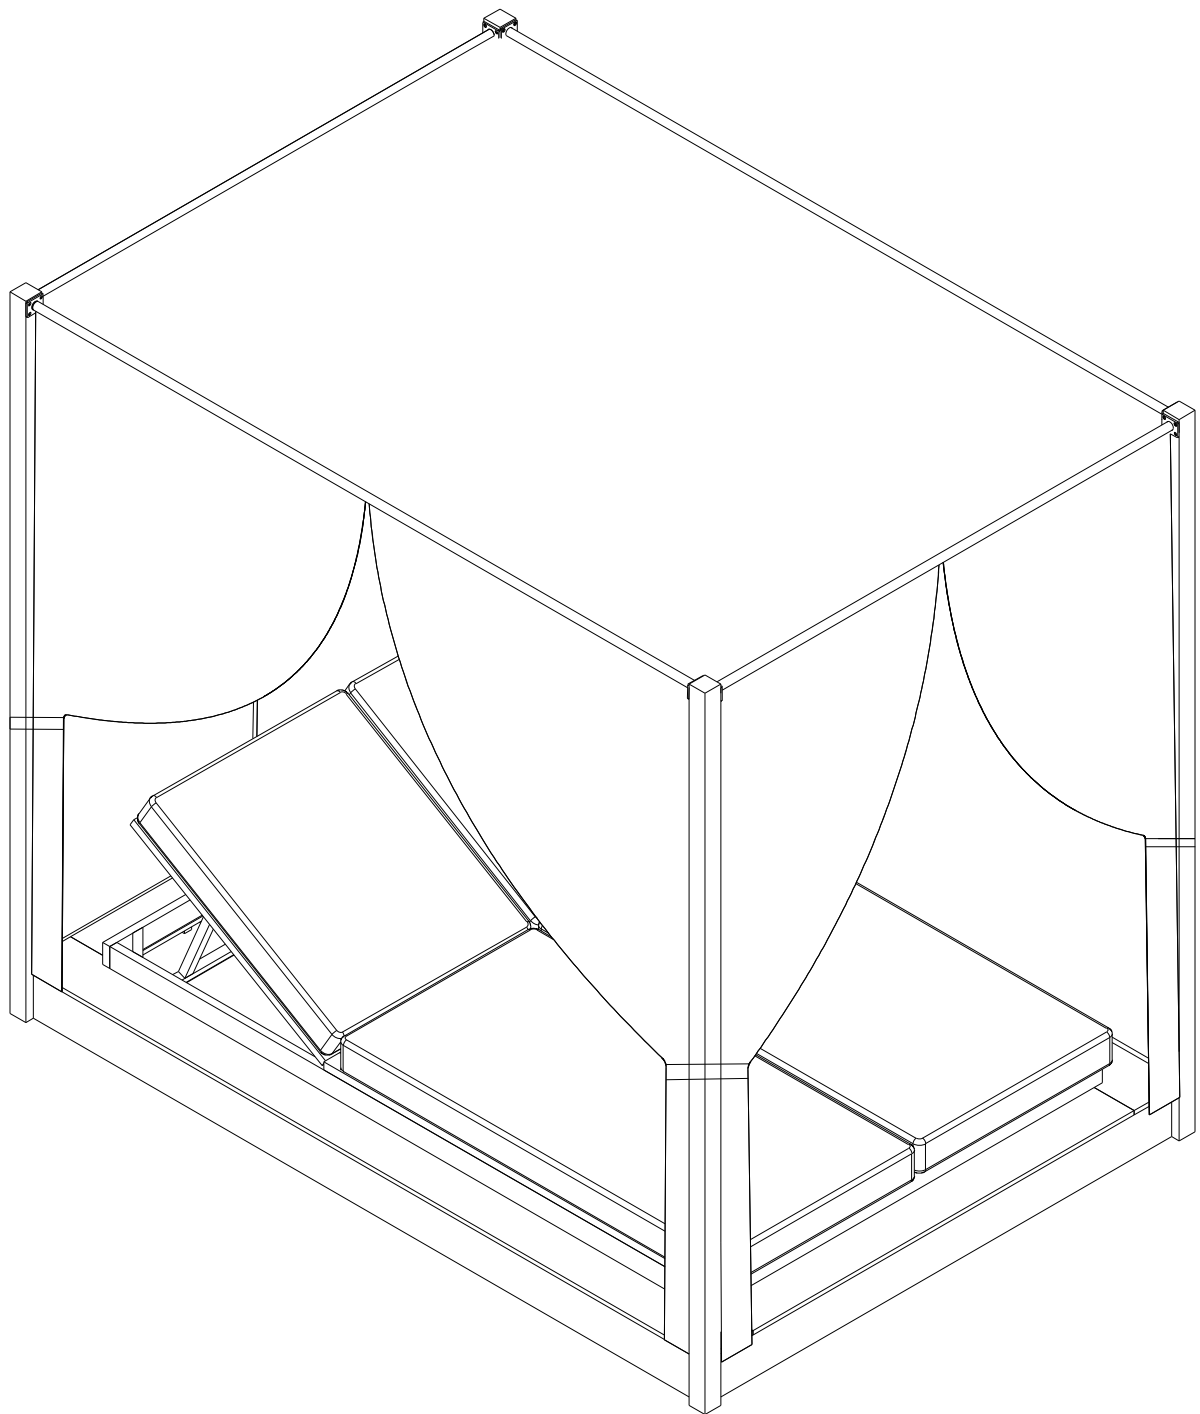

FINISH