




MIAMI 0,9

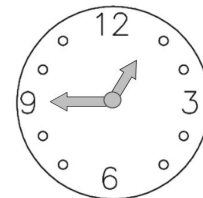


45min

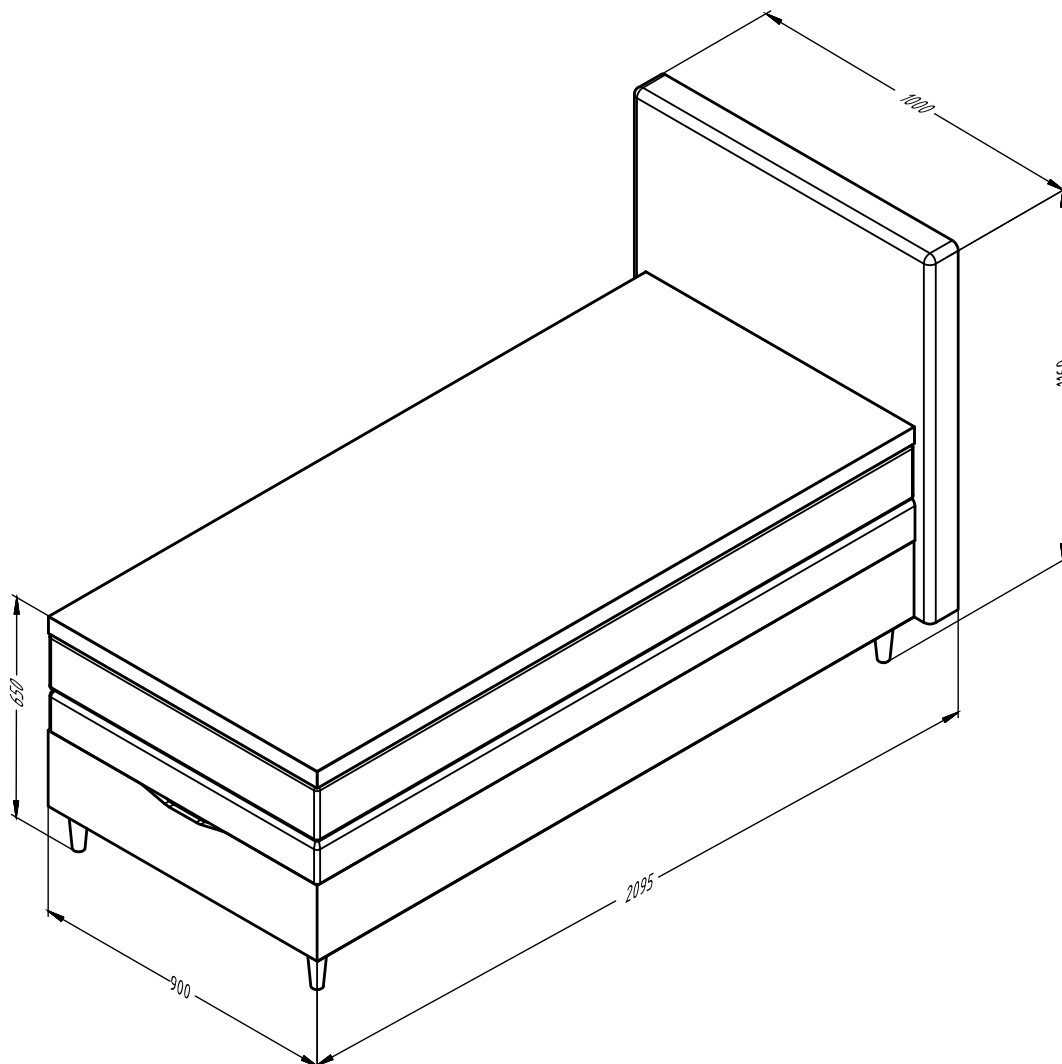



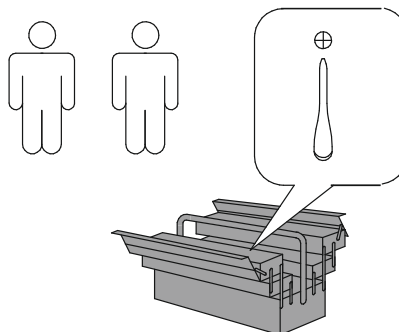- | | | | |
|----|---------------------|----|---------------------|
| DE | Montageanleitung | HR | Upute za montažu |
| SE | Installation manual | HU | Telepítési útmutató |
| CZ | Montážní návod | SK | Inštalačná príručka |
| EN | Installation manual | SI | Navodila za montažo |

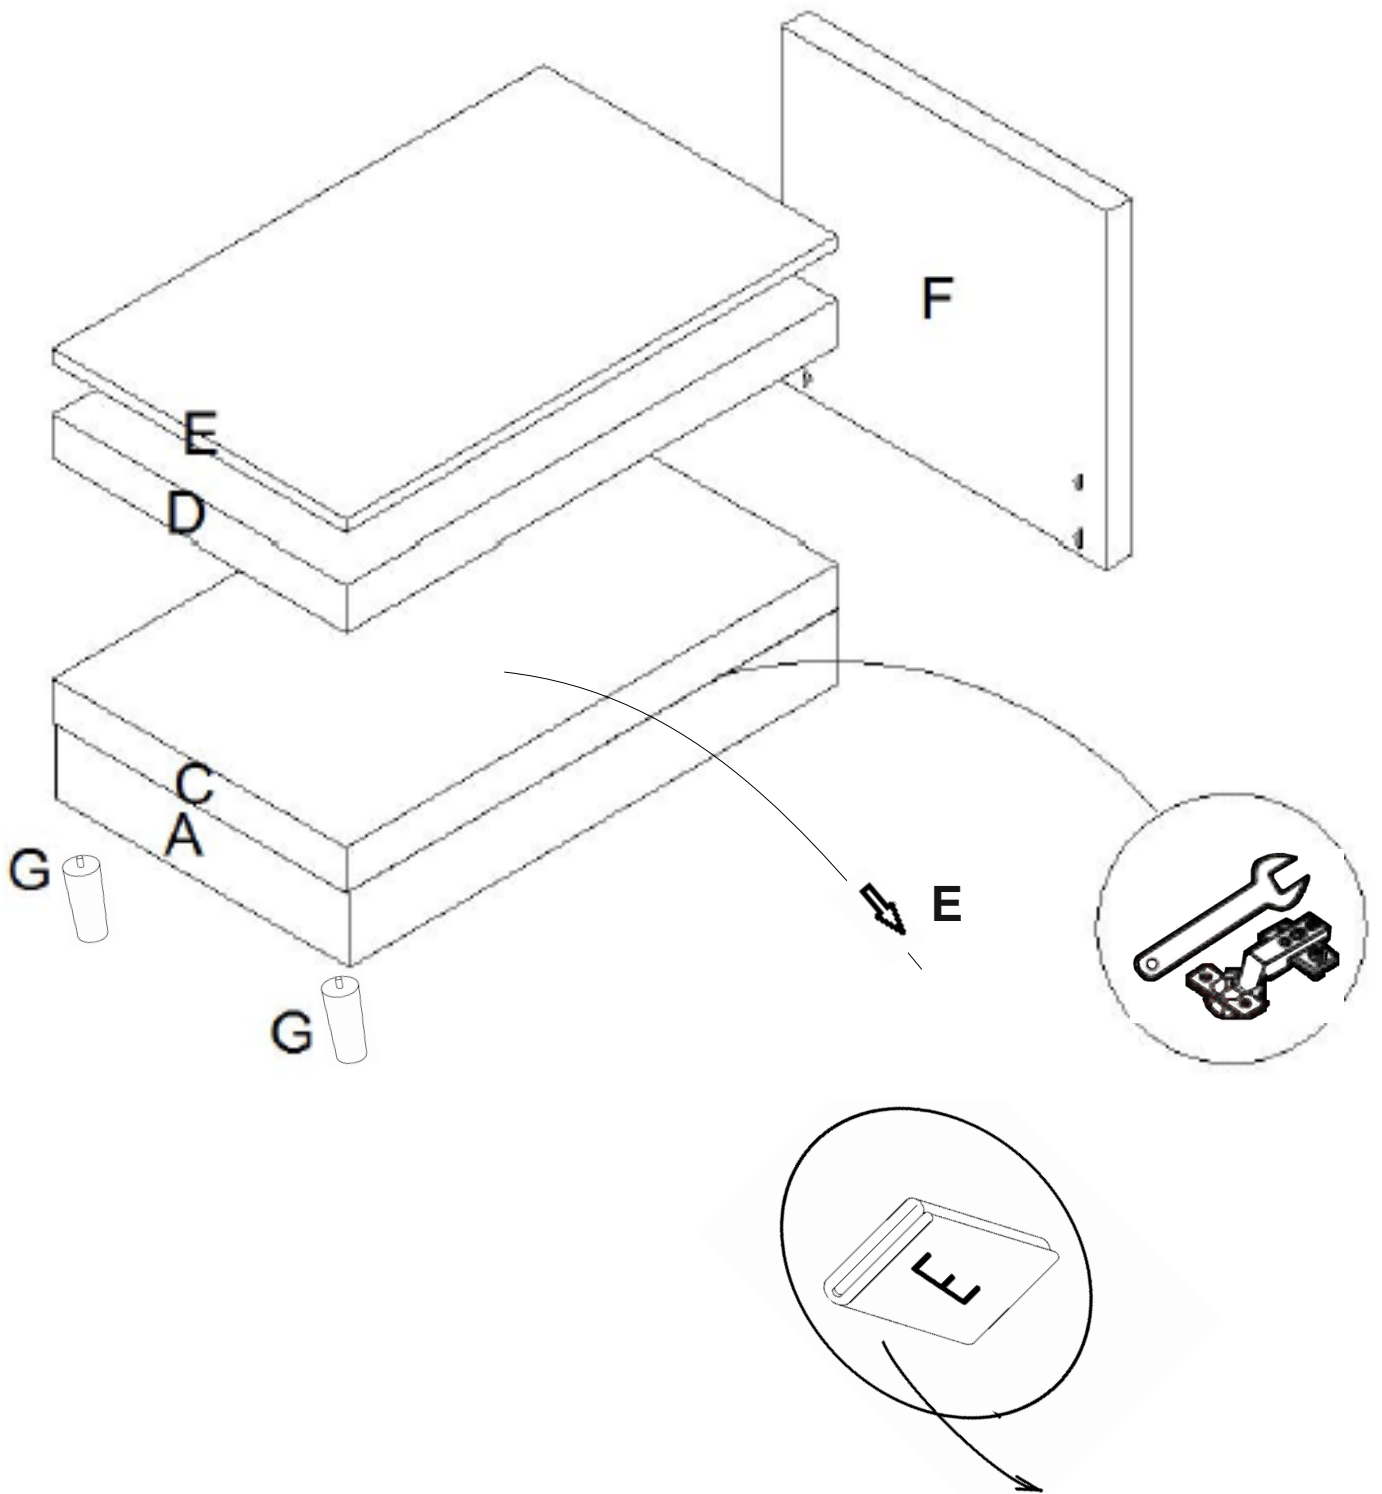





		SIZE (mm)	QUAN	Nº PACK
1	A	2000x900x170	1	1/3
2	C	2000x900x120	1	1/3
3	G		2	1/3
4	E	2000x900x40	1	1/3
5	D	2000x900x170	1	2/3
6	F	1000x1060x95	1	3/3

①  x2
d36 h100MM

② $\varnothing 6 \times 90$ x4

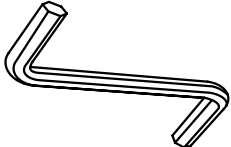
③  x1

Ⓒ x4
 d50 h100MM

④ x4
6x18
