

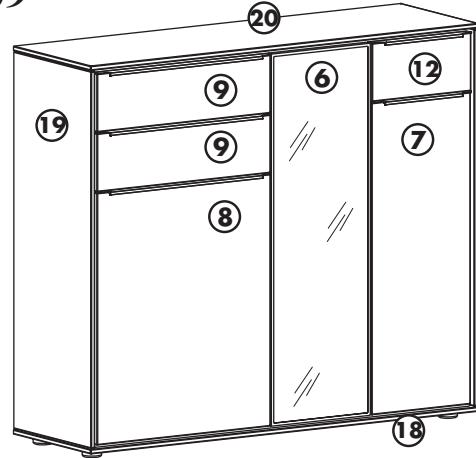


# Type 690-109

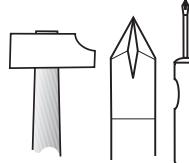

Sie brauchen:  
You need:

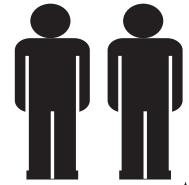

## Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollzähligkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.  
Keine scheuernde Putzmittel verwenden.

## Beschlagliste Fittings

CAD und Design  
Aarhus 690-109 10.21

|                |             |   |                                    |                                     |                                    |
|----------------|-------------|---|------------------------------------|-------------------------------------|------------------------------------|
| <br><b>16x</b> | <b>a1</b>   | <br><b>2x</b> 3,0 x 30 <b>S51</b>             | <br><b>4x</b> M4 x 36 <b>gs9s</b>  | <br><b>4x</b> M4 x 20 <b>gs8s</b>   | <br><b>4x</b> <b>c10b</b>          |
| <br><b>12x</b> | <b>t4</b>   | <br><b>12x</b> Ø17 mm<br>Ø4 mm<br><b>ak4a</b> | <br><b>8 mm</b> → ←<br><b>e4</b>   | <br><b>6 /16x</b> <b>e4</b>         | <br><b>20x</b> 8 x 40 <b>p1</b>    |
| <br><b>25x</b> | <b>rh</b>   | <br><b>25x</b> 3 x 20 <b>s7</b>               | <br><b>4x</b> D 3mm <b>d6</b>      | <br><b>5x</b> <b>fu</b>             | <br><b>5x</b> <b>fo</b>            |
| <br><b>3x</b>  | <b>gr33</b> | <br><b>2x</b> 336mm <b>gr30</b>               | <br><b>13x</b> 6,3 x 16 <b>es5</b> | <br><b>10x</b> 1,5 mm<br><b>tad</b> | <br><b>10x</b> M4 x 23 <b>gs3s</b> |

## Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture .


Assemble your piece of new furniture using the assembly instructions one step at a time as shown.





After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth.  
Don't use strong detergents or solvents.


|               |                    |               |                    |                |                    |                     |                     |               |            |
|---------------|--------------------|---------------|--------------------|----------------|--------------------|---------------------|---------------------|---------------|------------|
| <br><b>1x</b> | <b>mg5c</b>        | <br><b>1x</b> | <b>mg3k</b>        | <br><b>2x</b>  | <b>c11</b>         | <br><b>2x</b>       | <b>D 9mm d5l</b>    | <br><b>2x</b> | <b>wd</b>  |
| <br><b>2x</b> | <b>rv</b>          | <br><b>2x</b> | <b>3,5 x 15 s5</b> | <br><b>2x</b>  | <b>5 x 100 s28</b> | <br><b>4x</b>       | <b>3,5 x 10 s71</b> | <br><b>2x</b> | <b>rwk</b> |
| <br><b>6x</b> | <b>a3</b><br>13 mm | <br><b>6x</b> | <b>Ø15 mm</b>      | <br><b>6x</b>  | <b>Ø3 mm</b>       | <br><b>3x</b>       | <b>sl3</b>          | <br><b>3x</b> | <b>sr3</b> |
| <br><b>4x</b> | <b>8 x 40 p1</b>   | <br><b>4x</b> | <b>a1</b>          | <br><b>16x</b> | <b>e4</b>          | <br><b>8 mm</b> → ← | <br><b>16x</b>      | <br><b>e4</b> |            |












**A1**

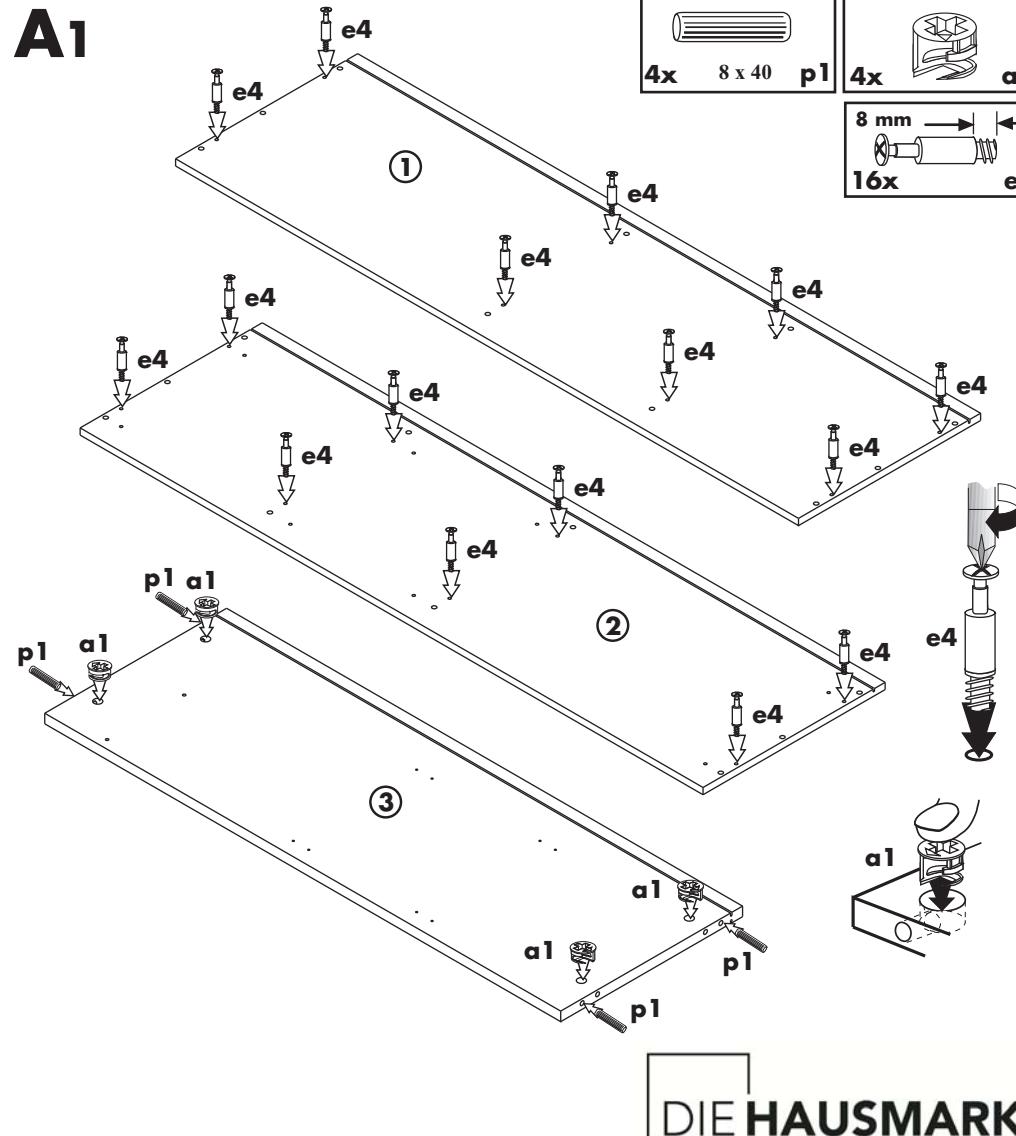

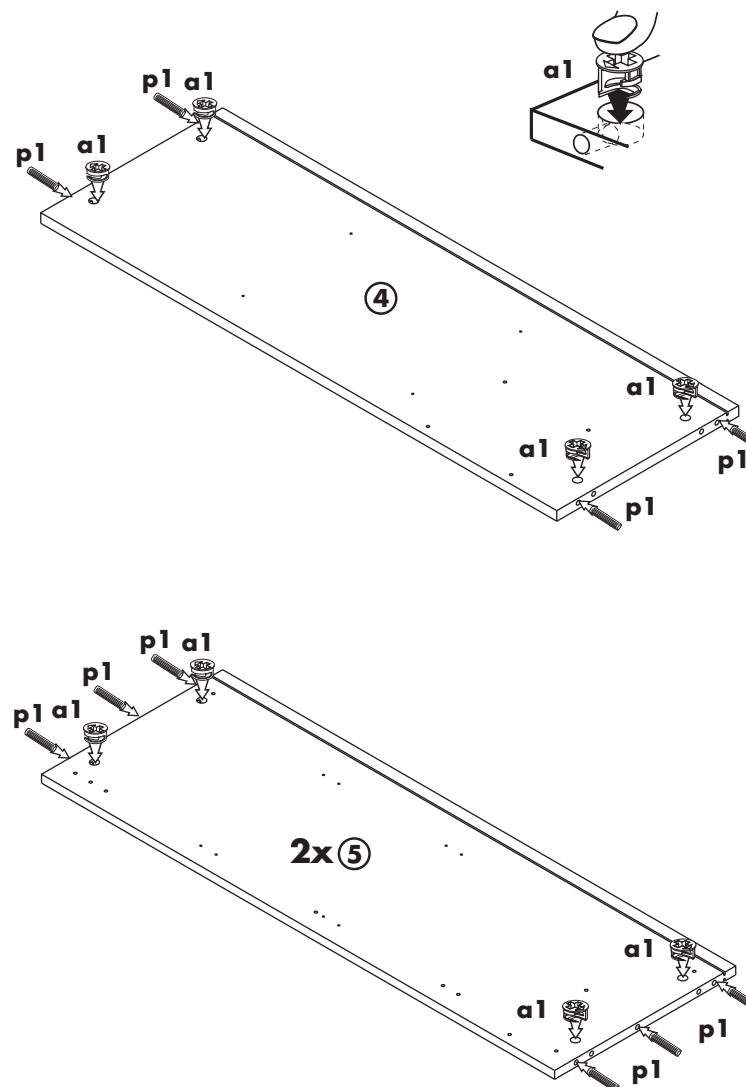
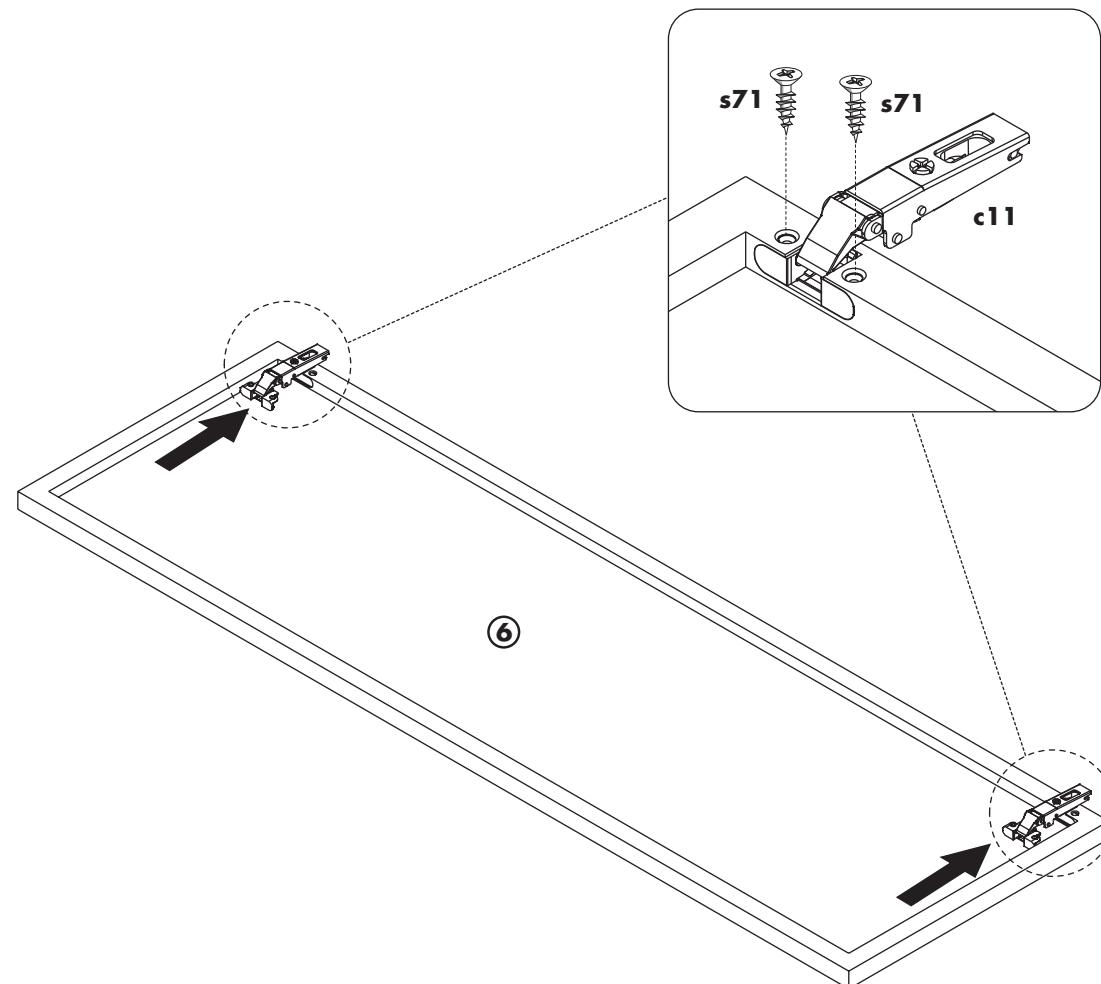
**A2****B**

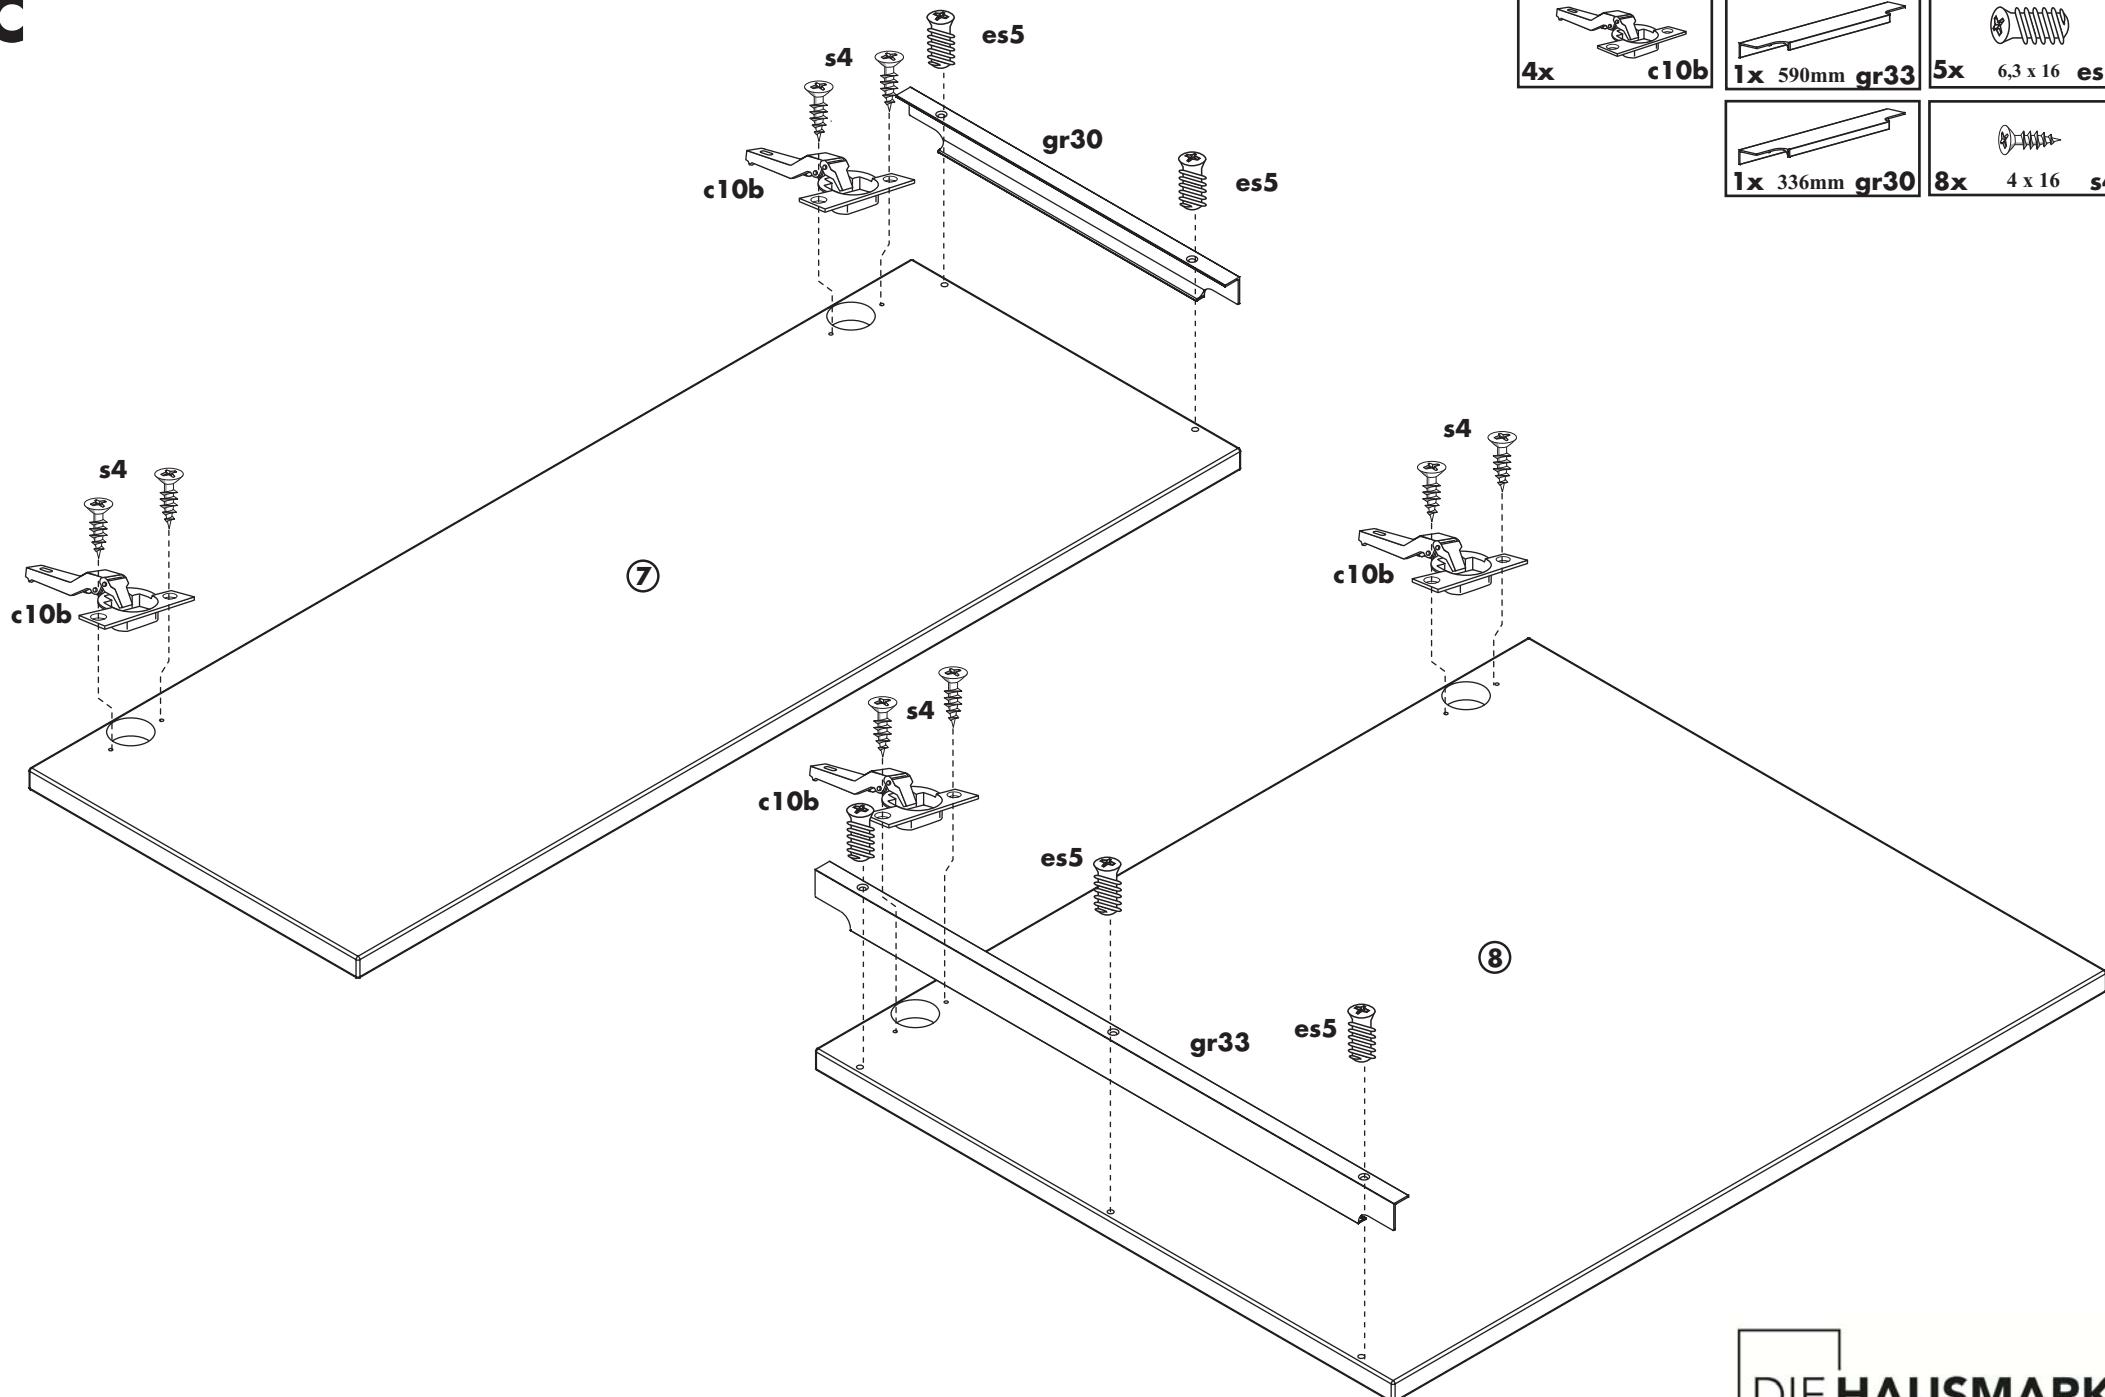**C**

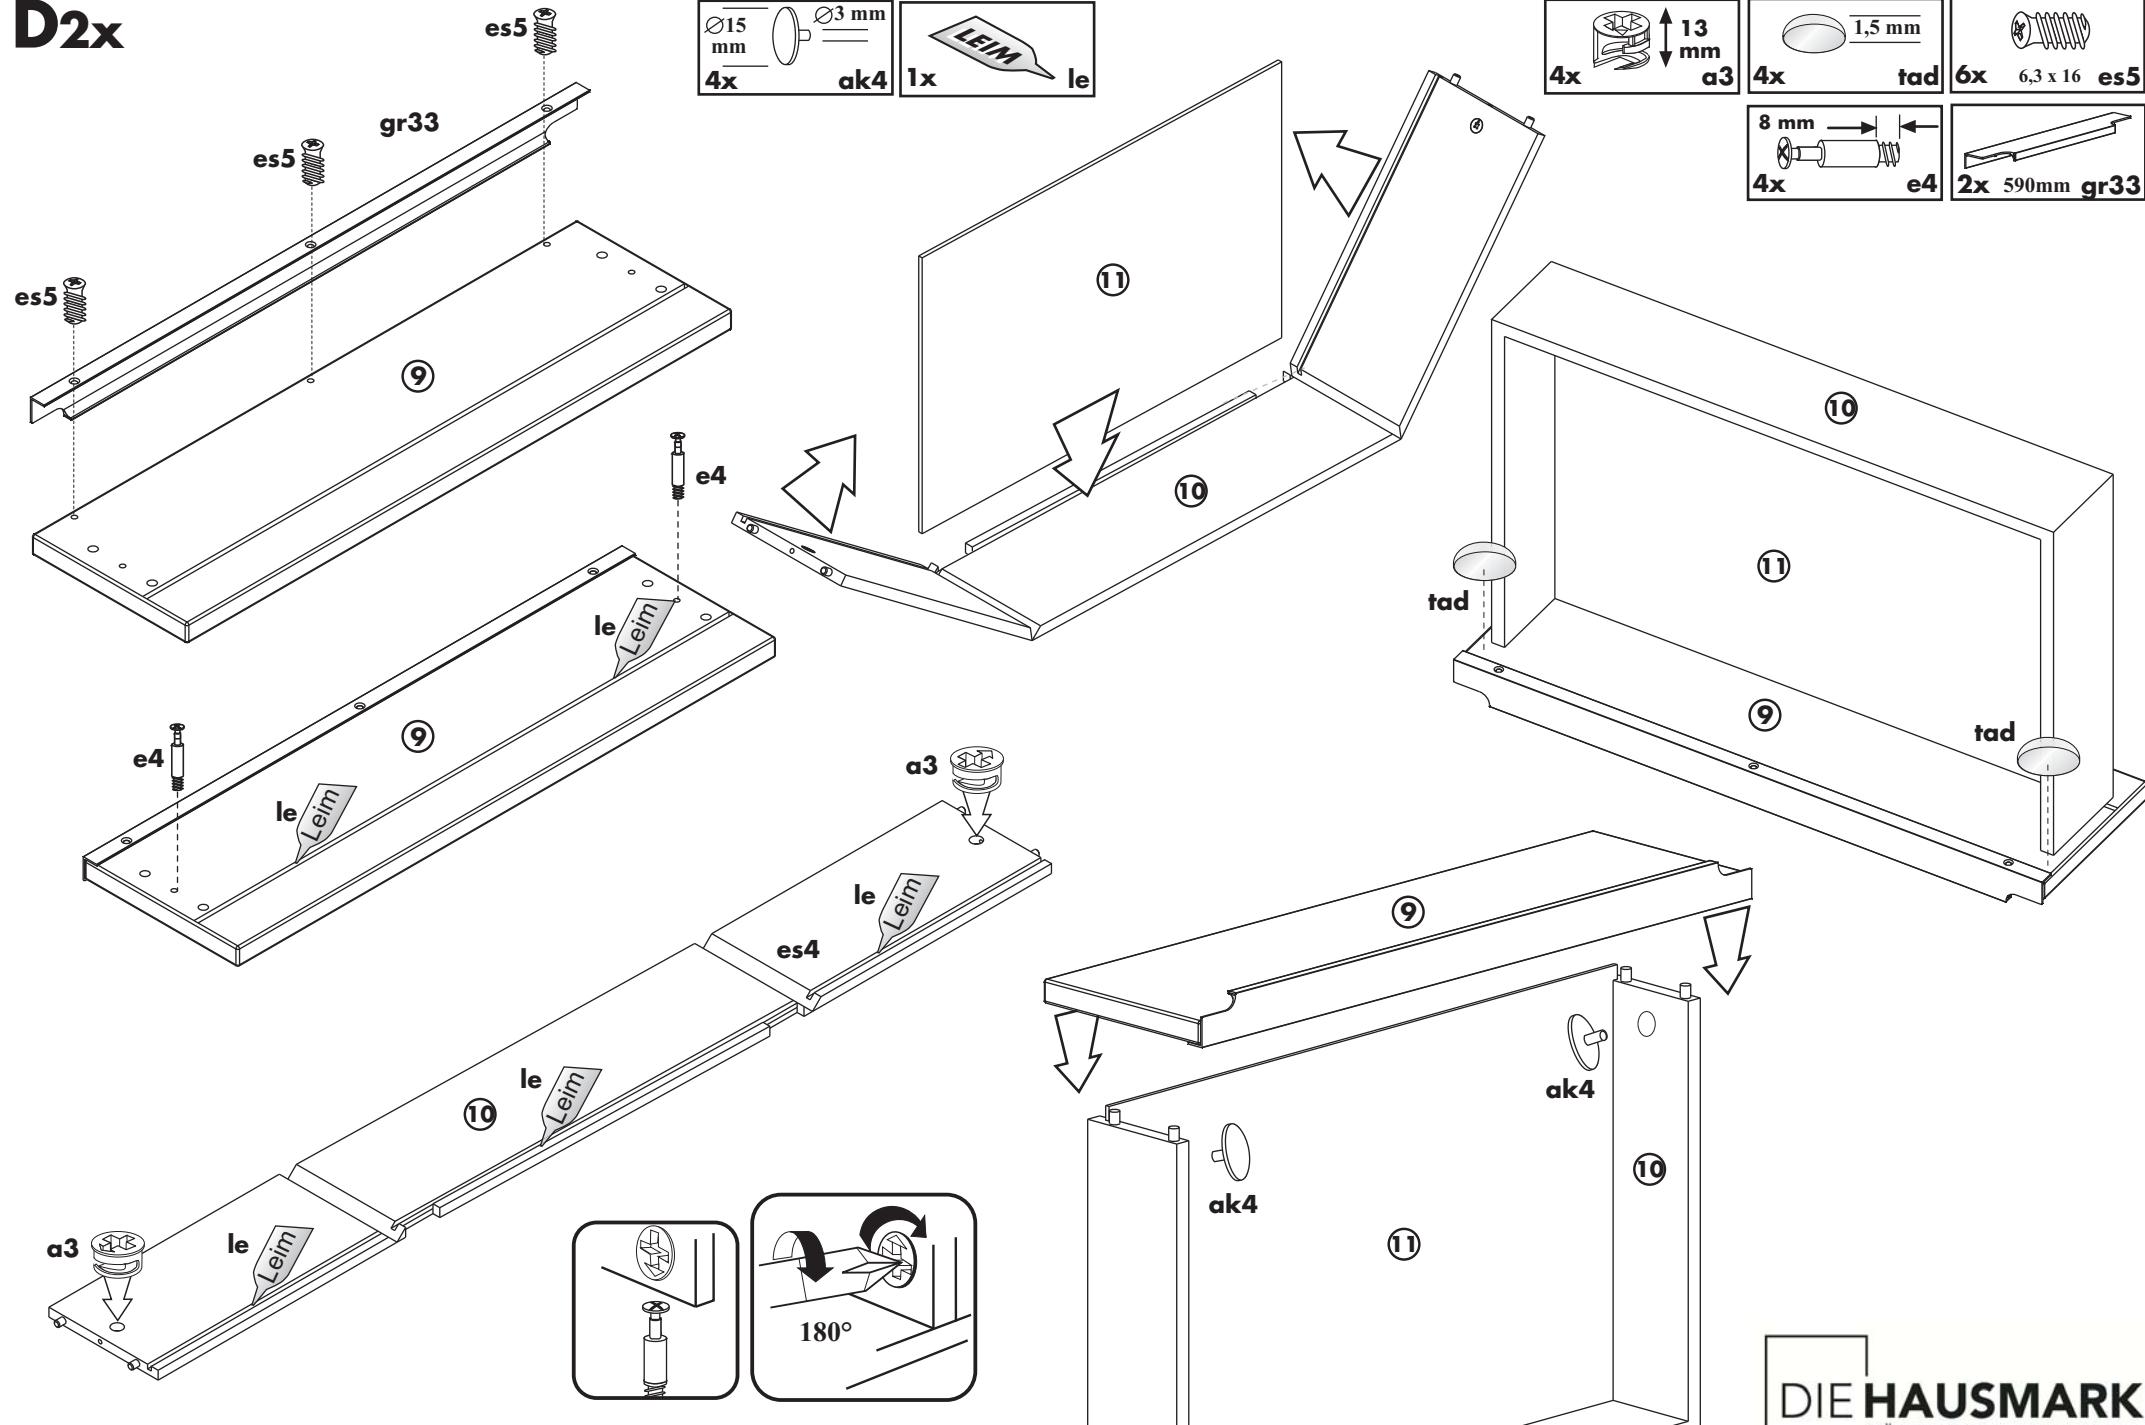
**D2x**

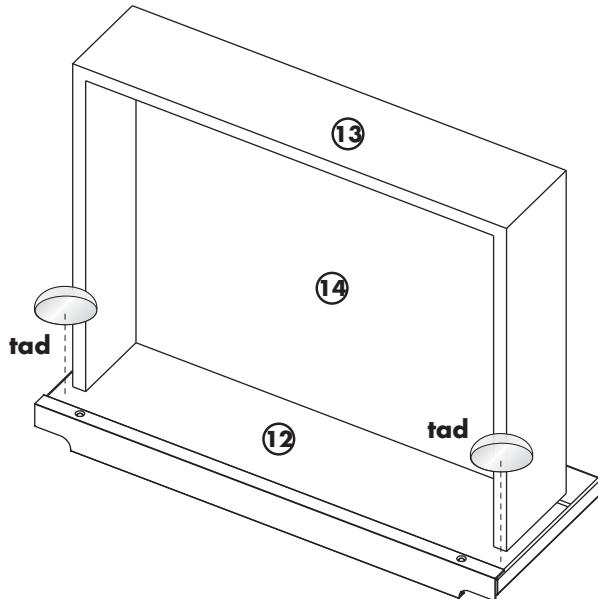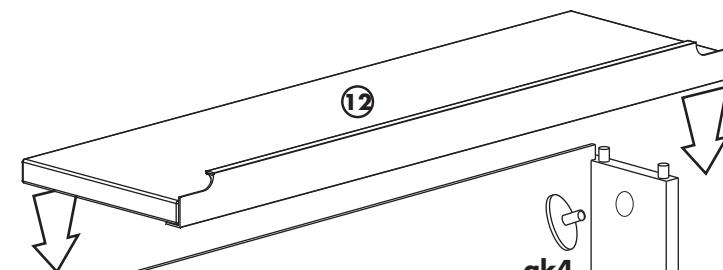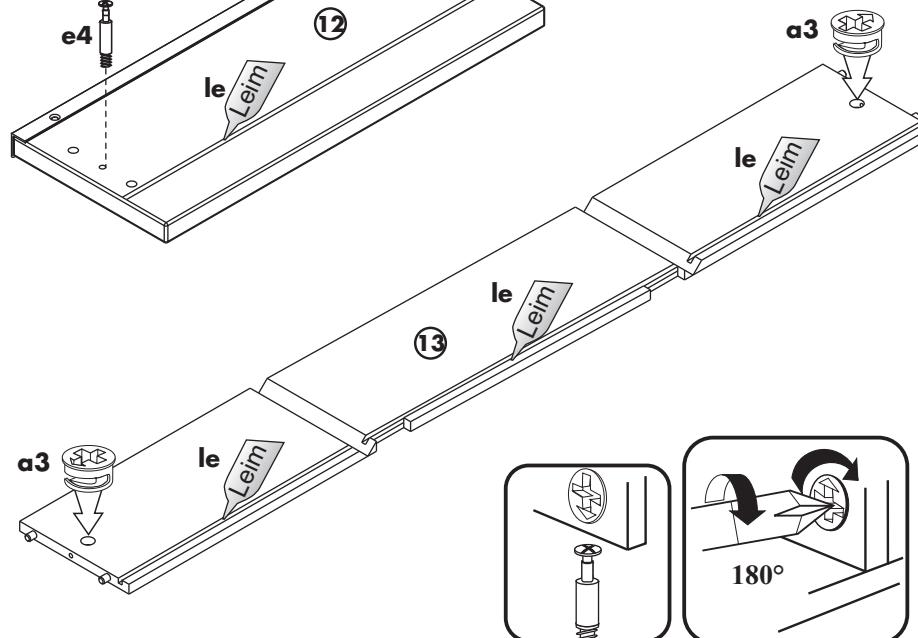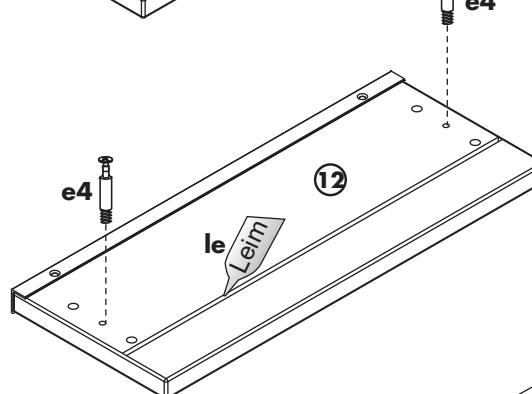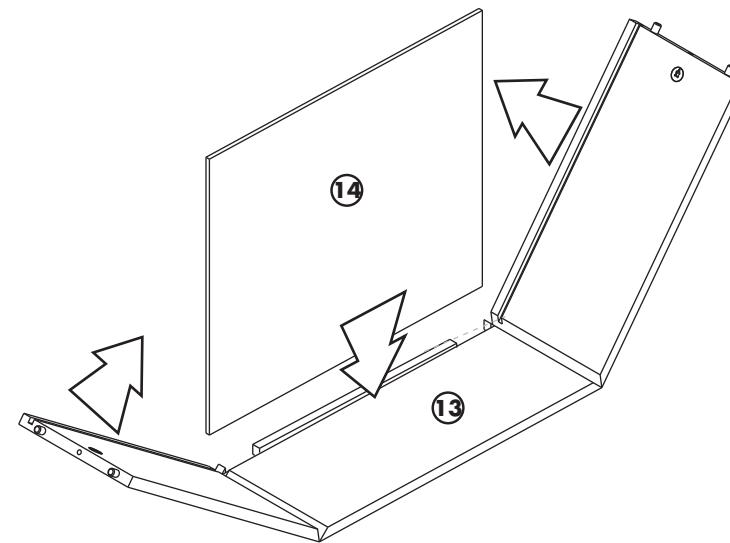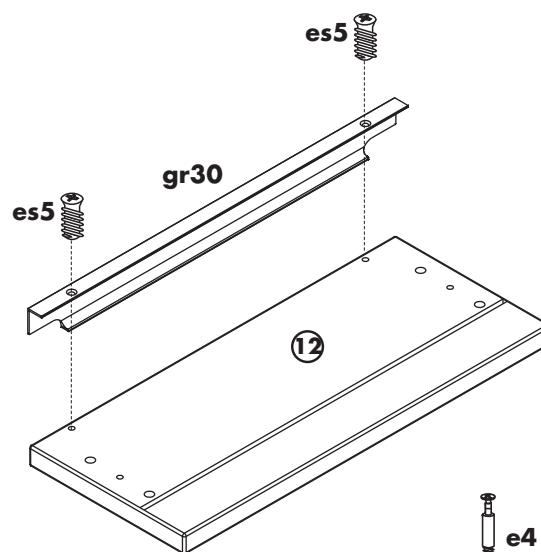**E**


F

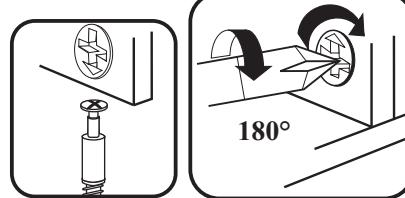
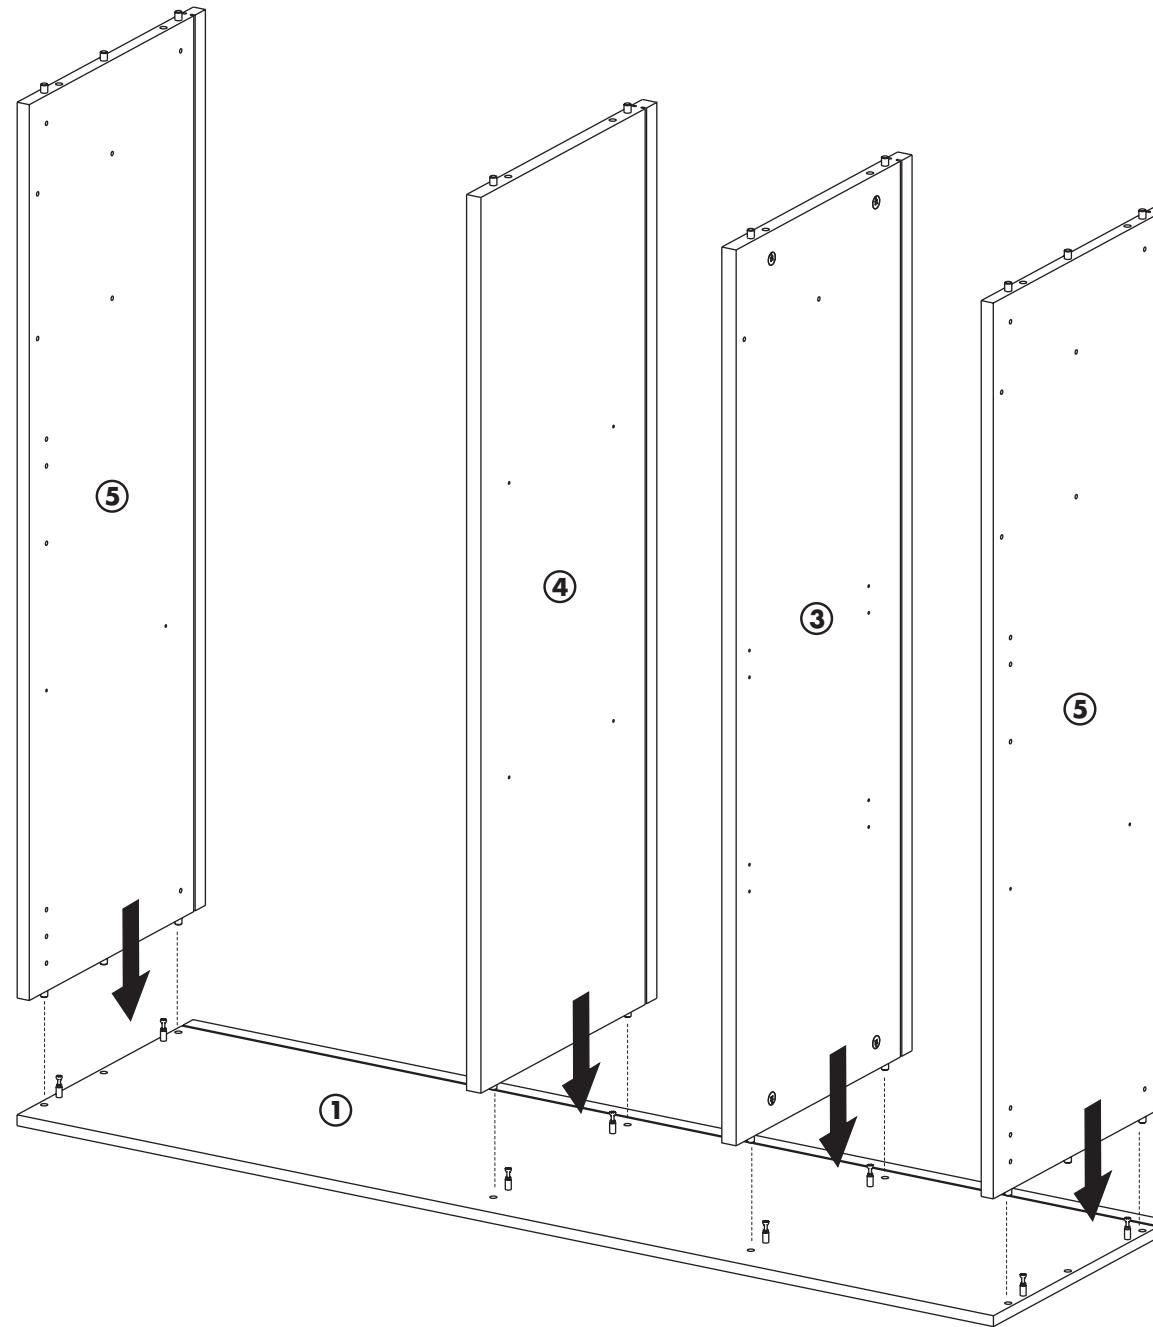



**G**

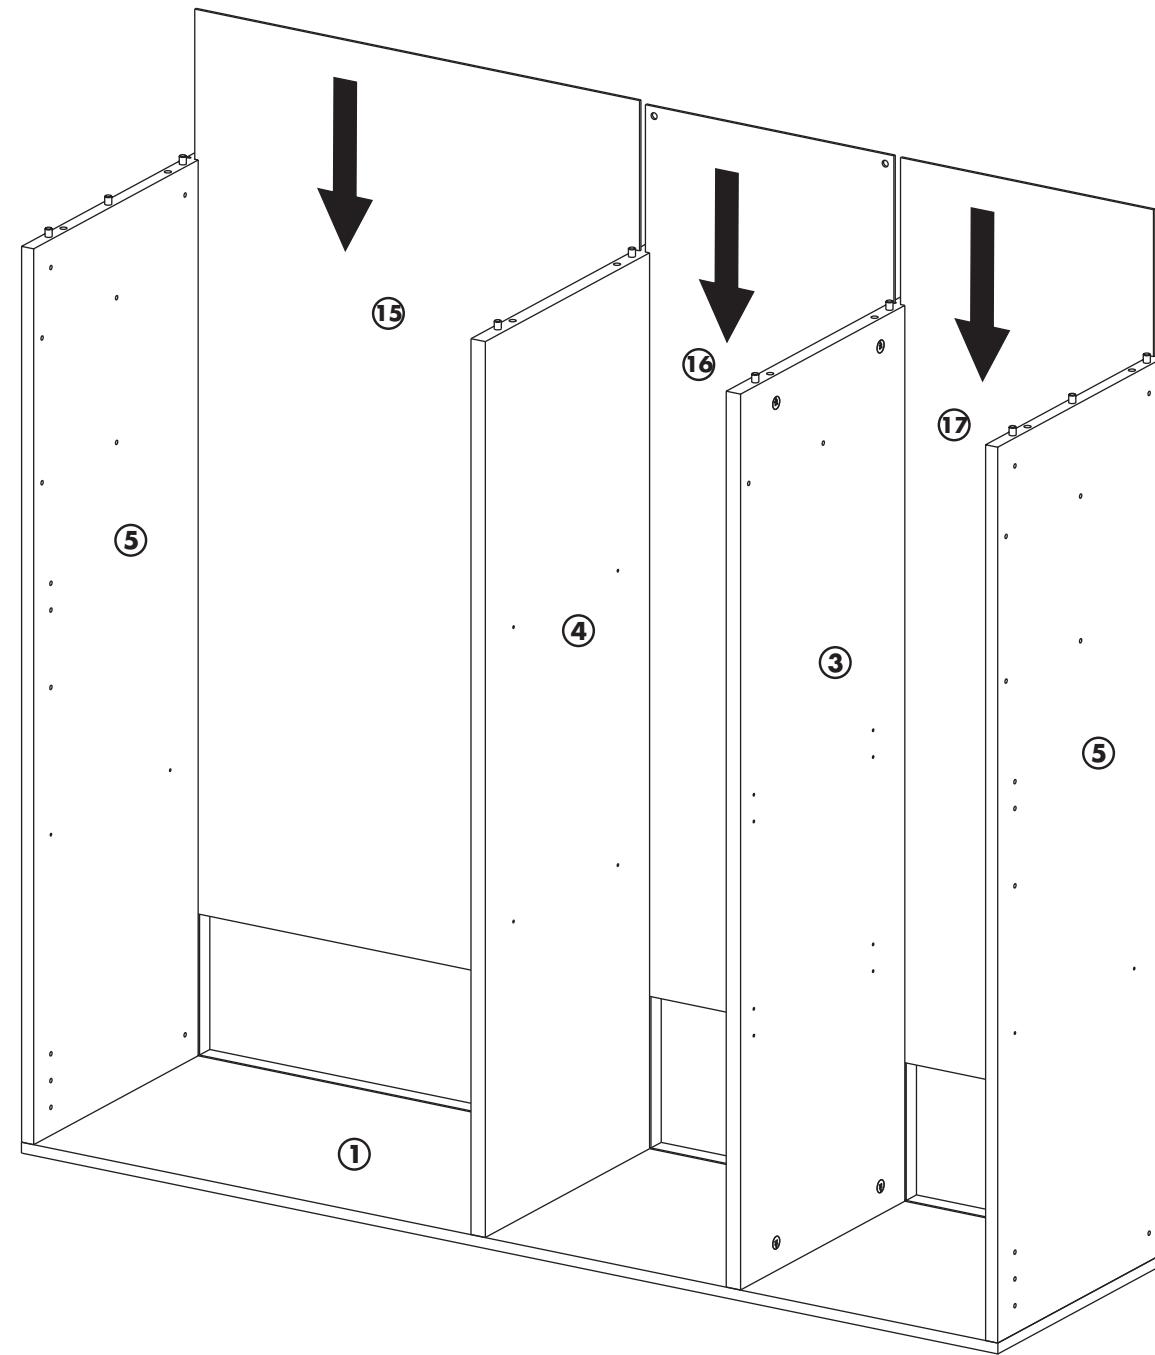


H

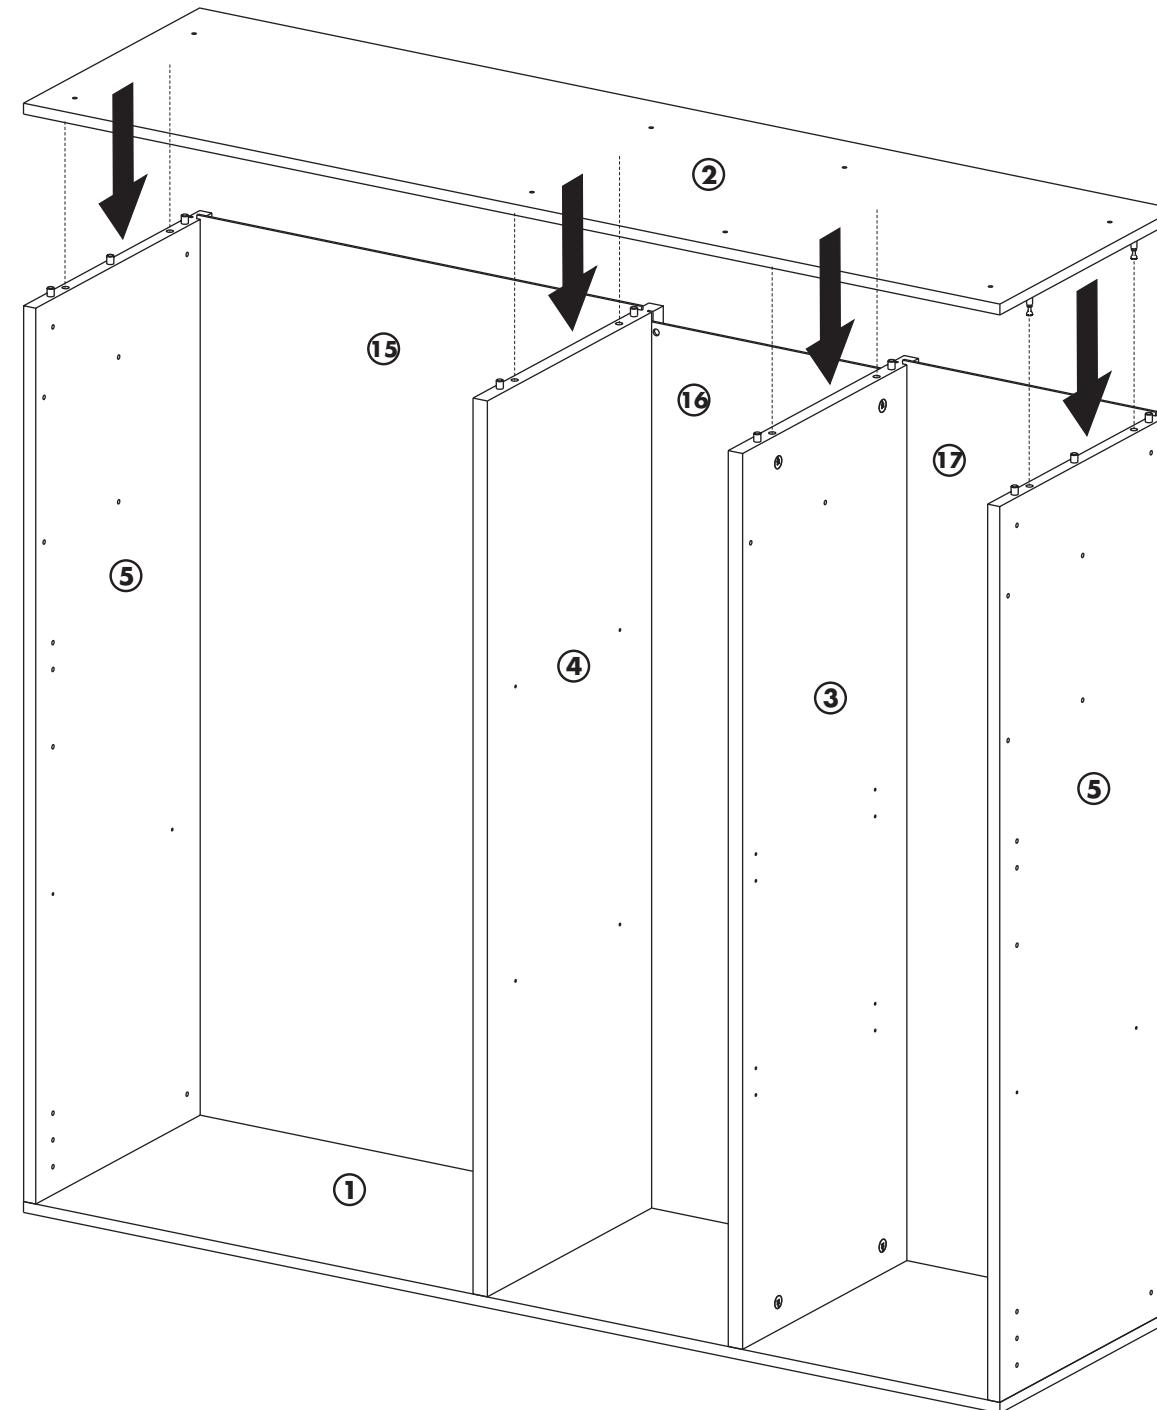

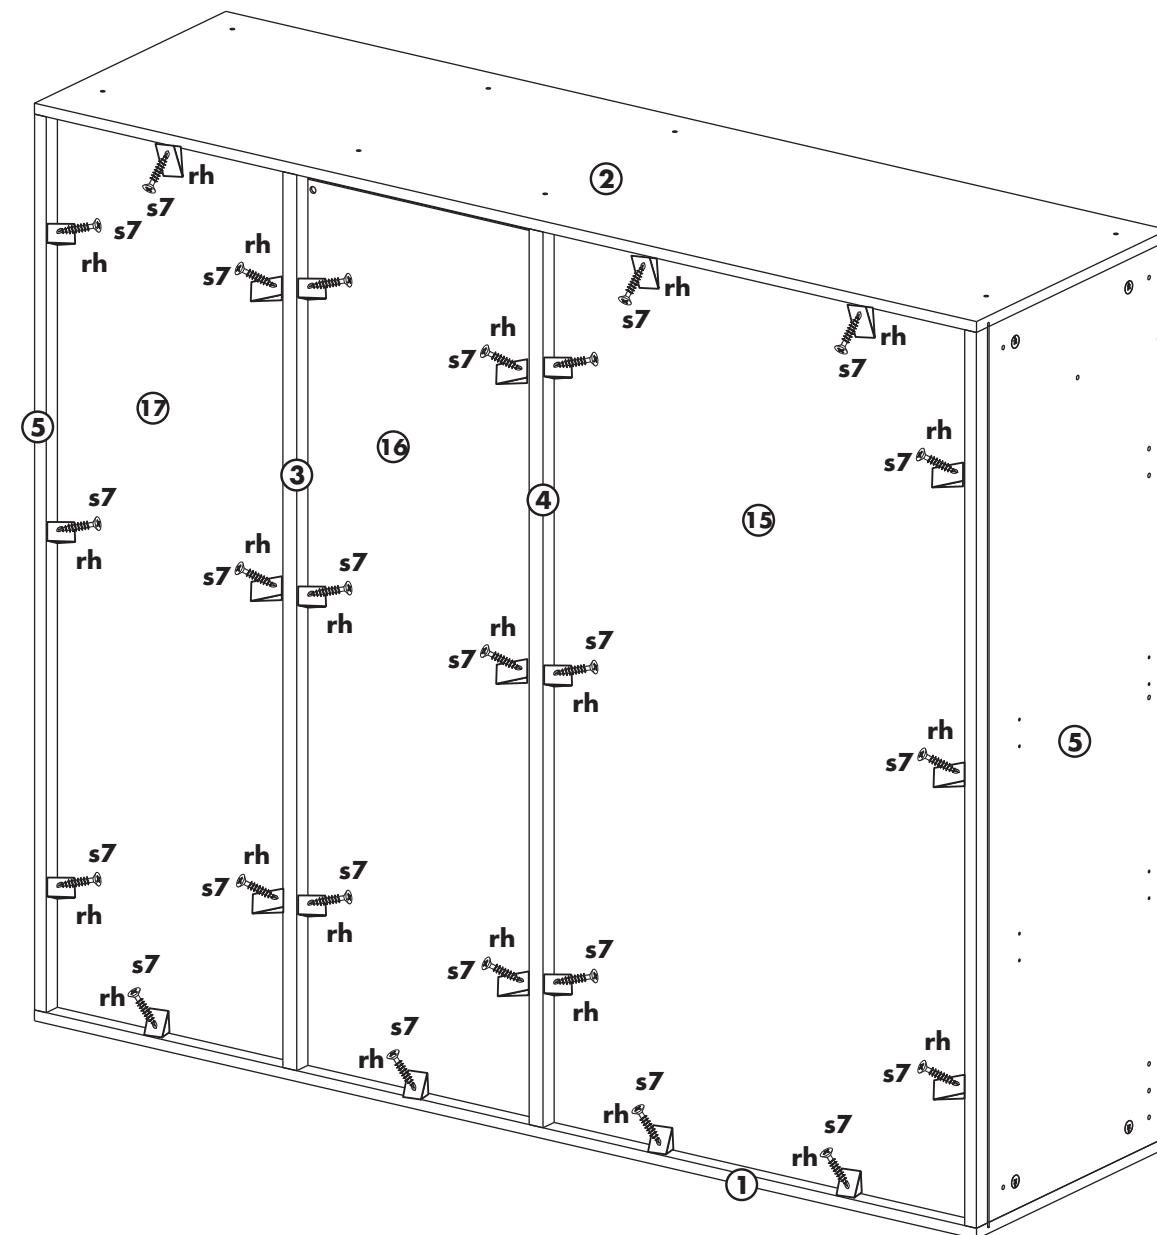

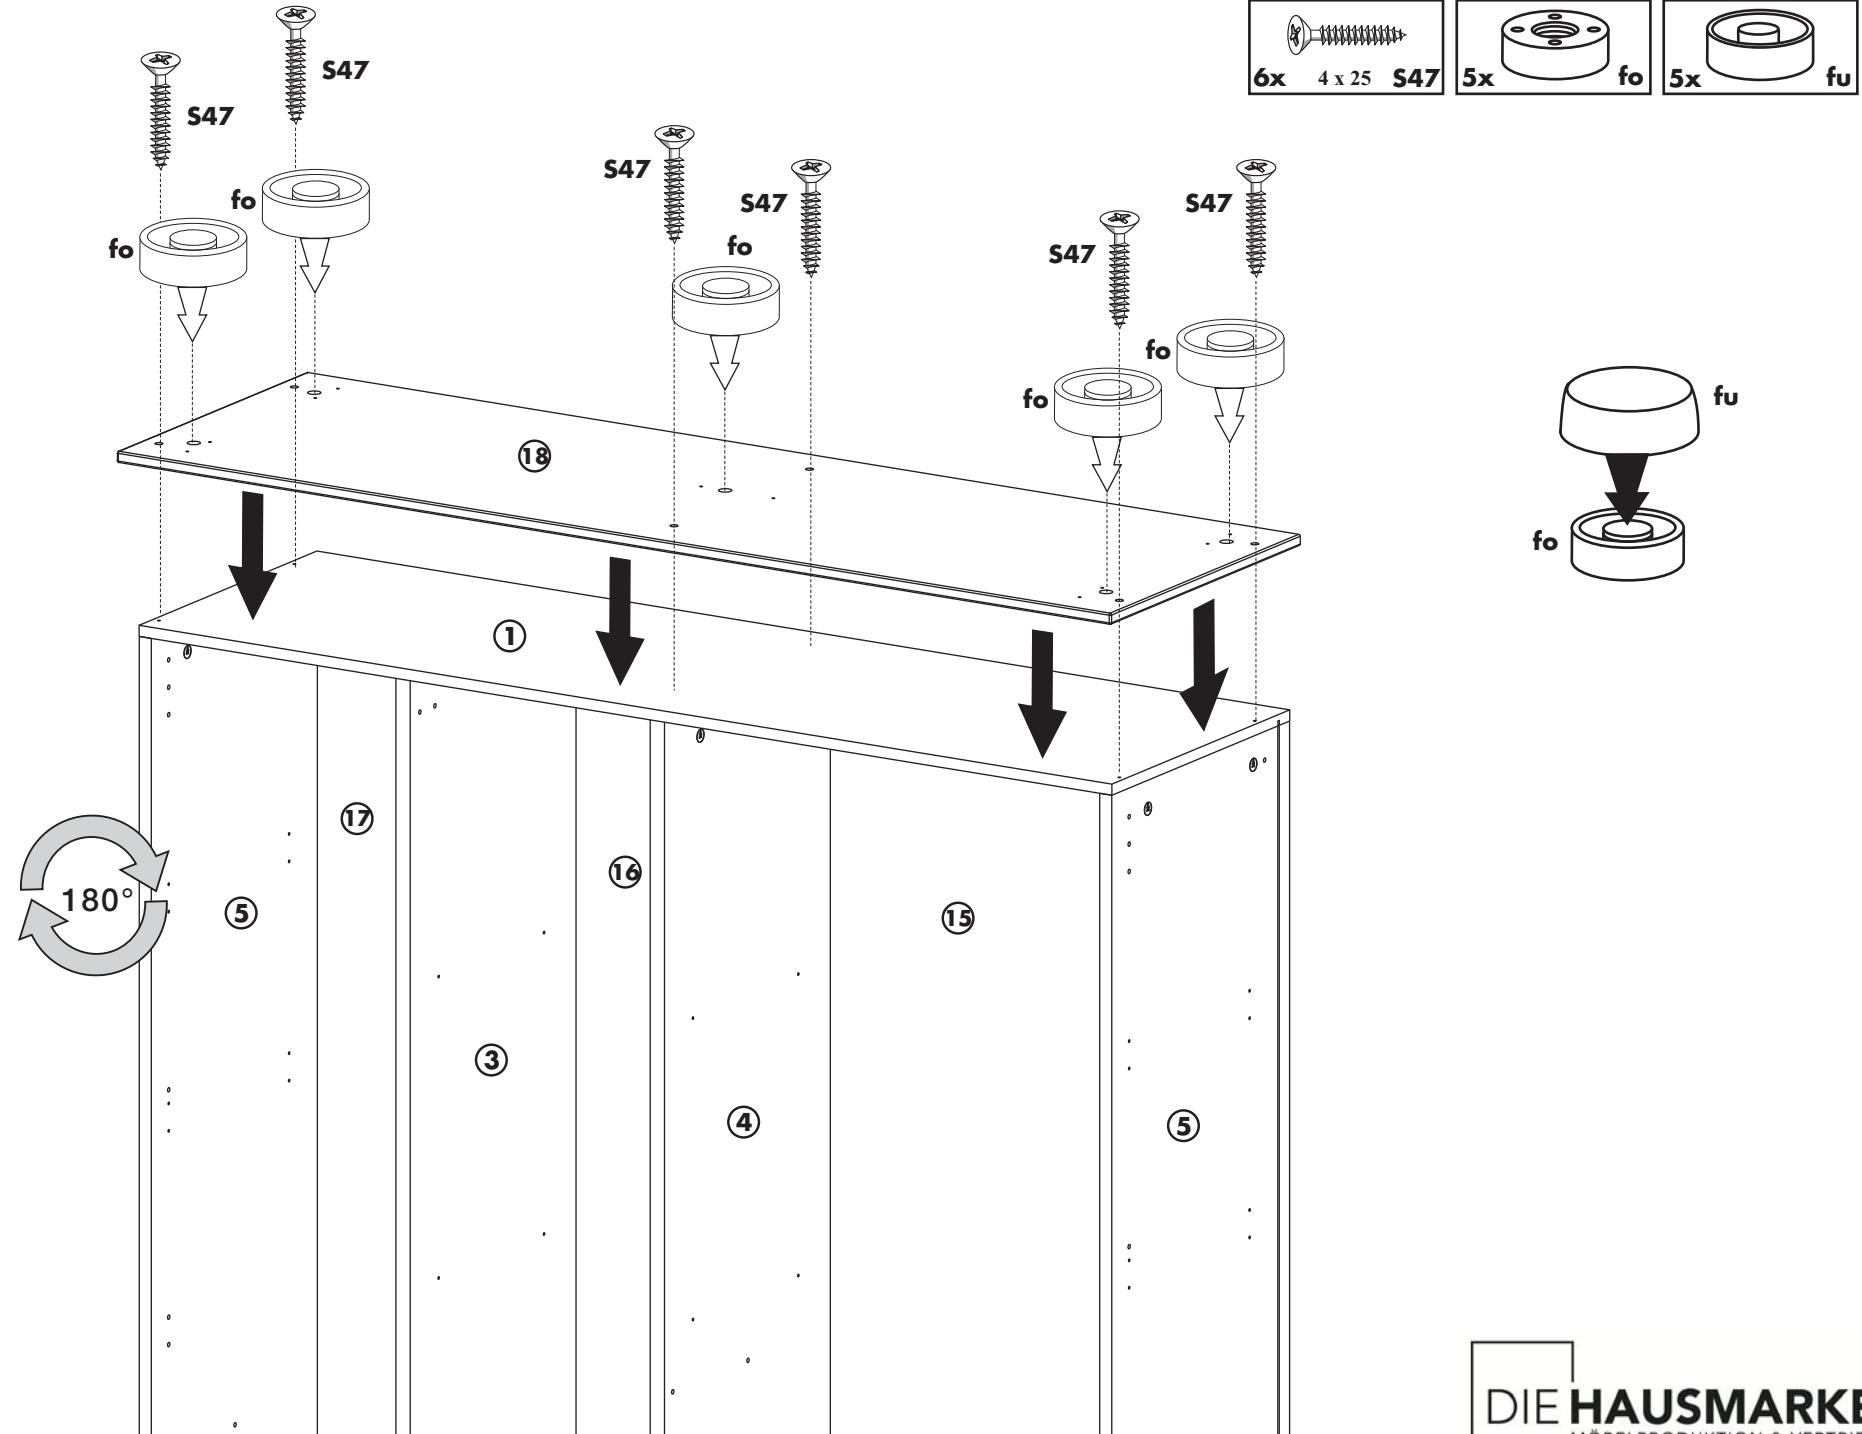**J**





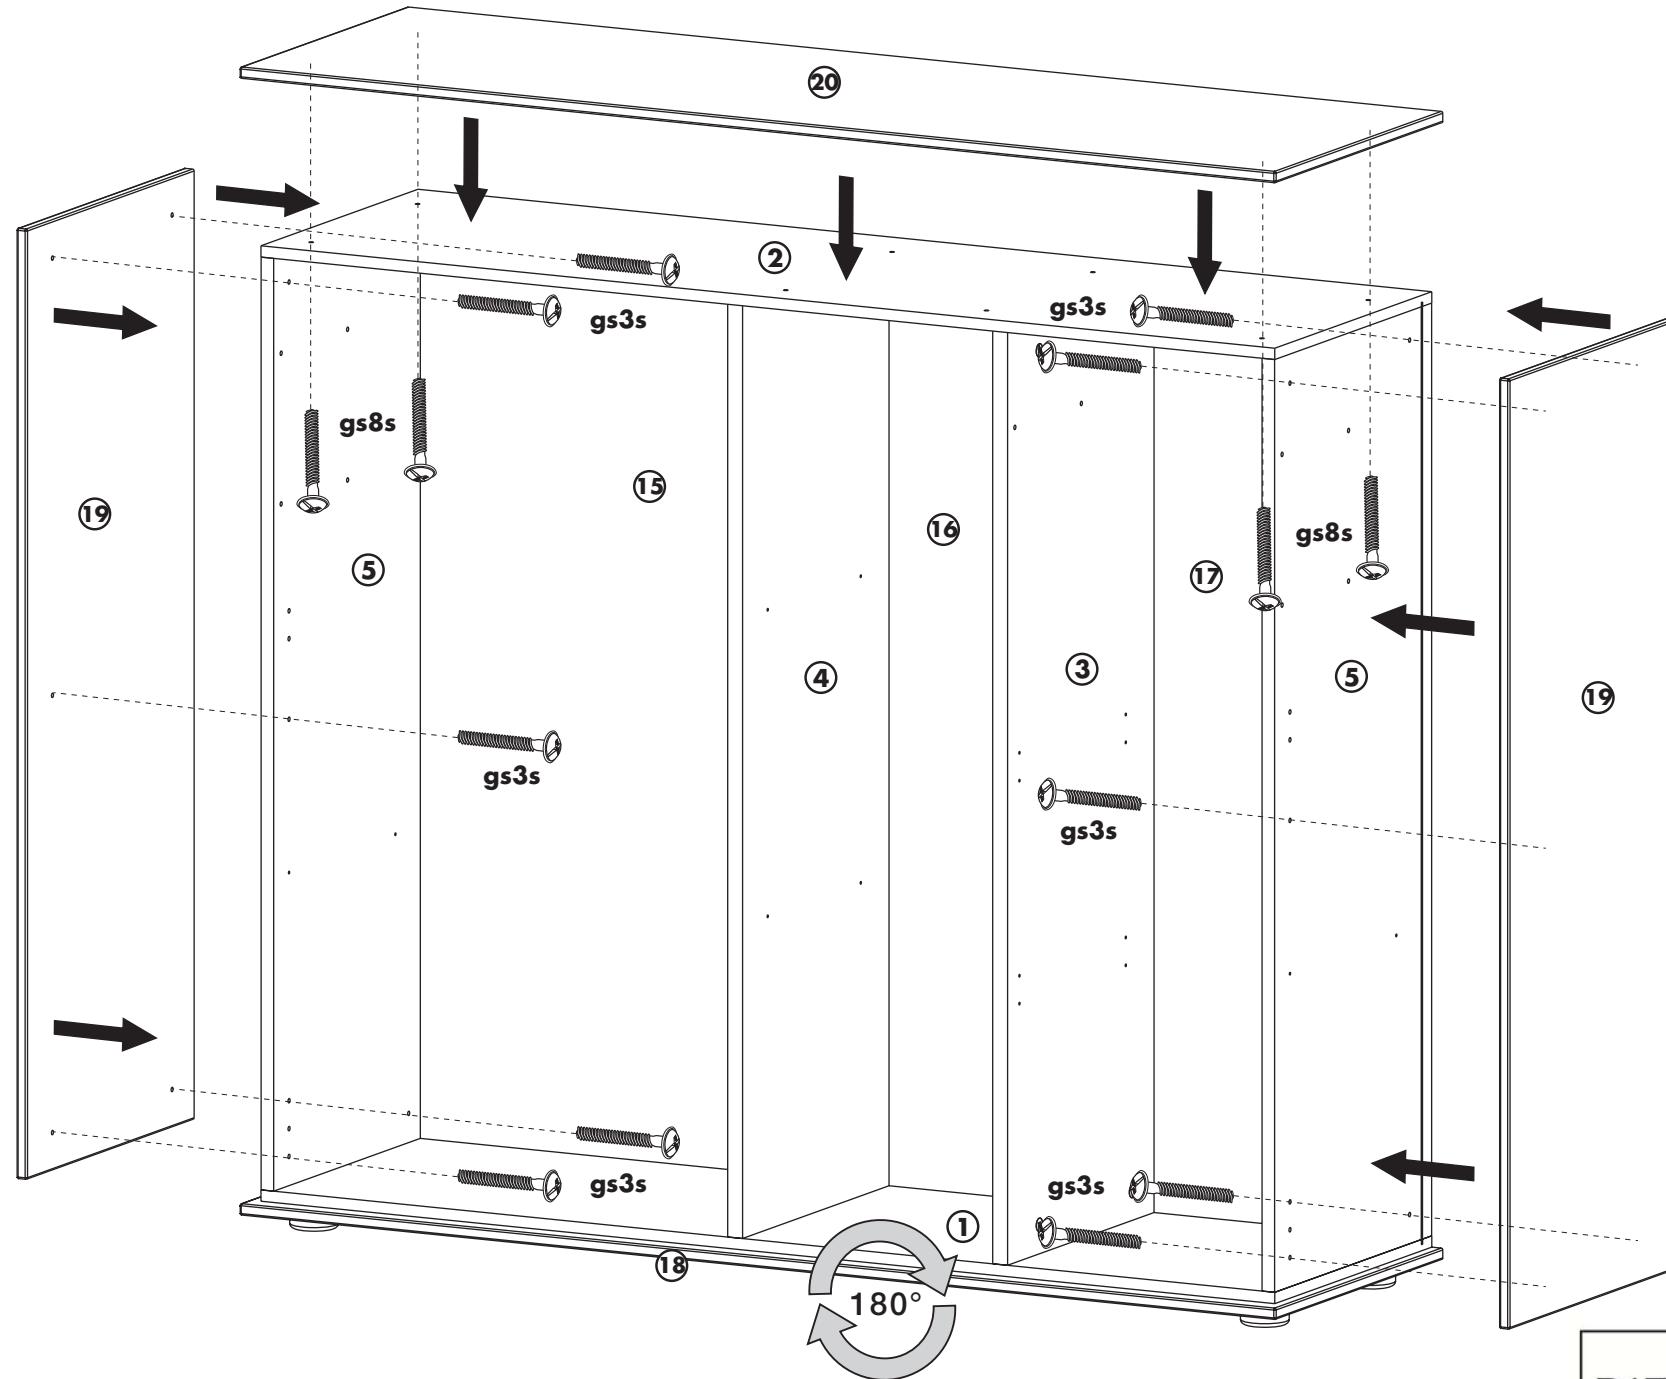
**K**



4x M4 x 20 gs8s


10x M4 x 23 gs3s




# Type 690-109

L

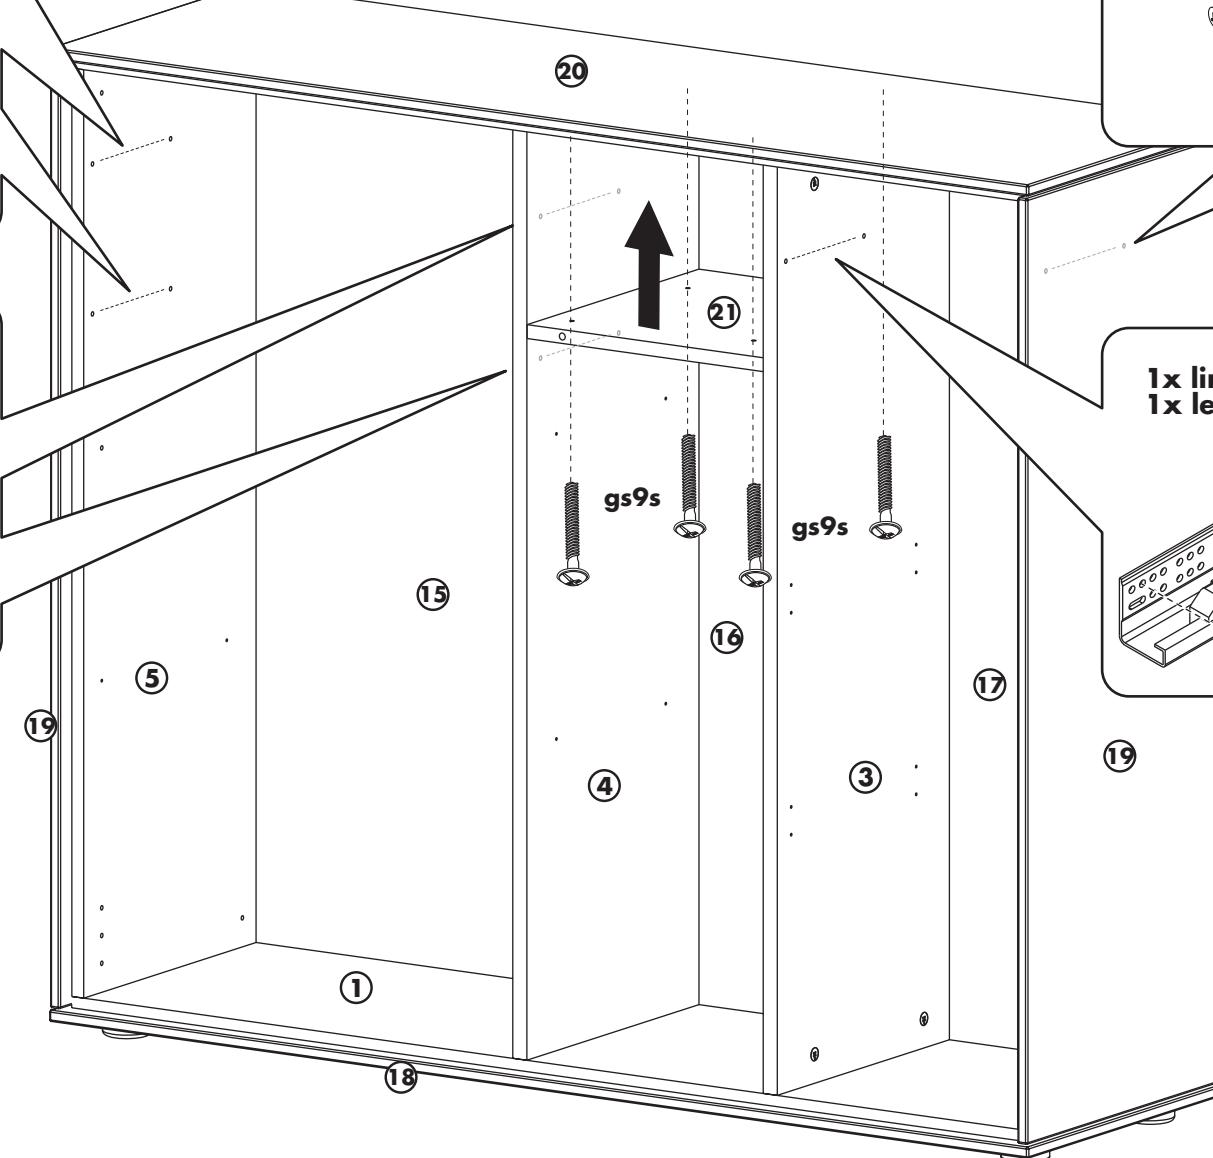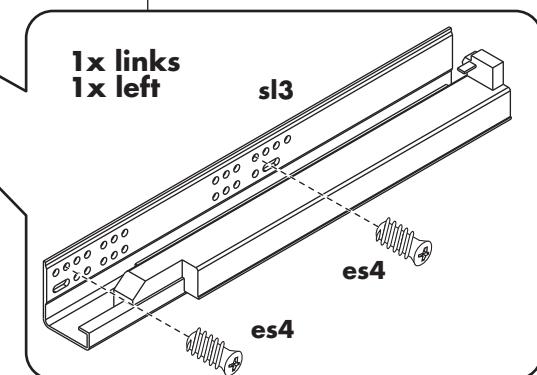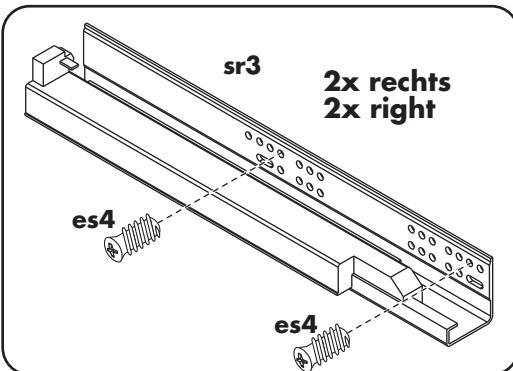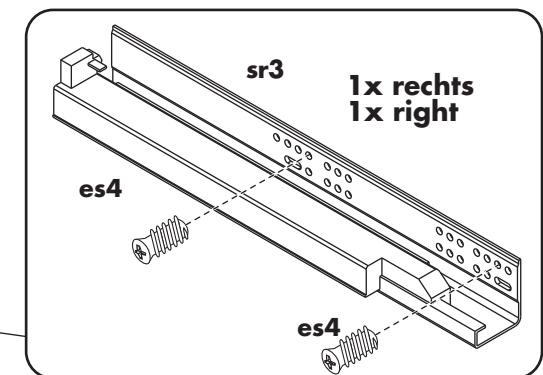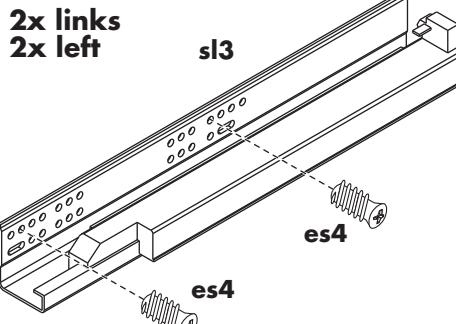

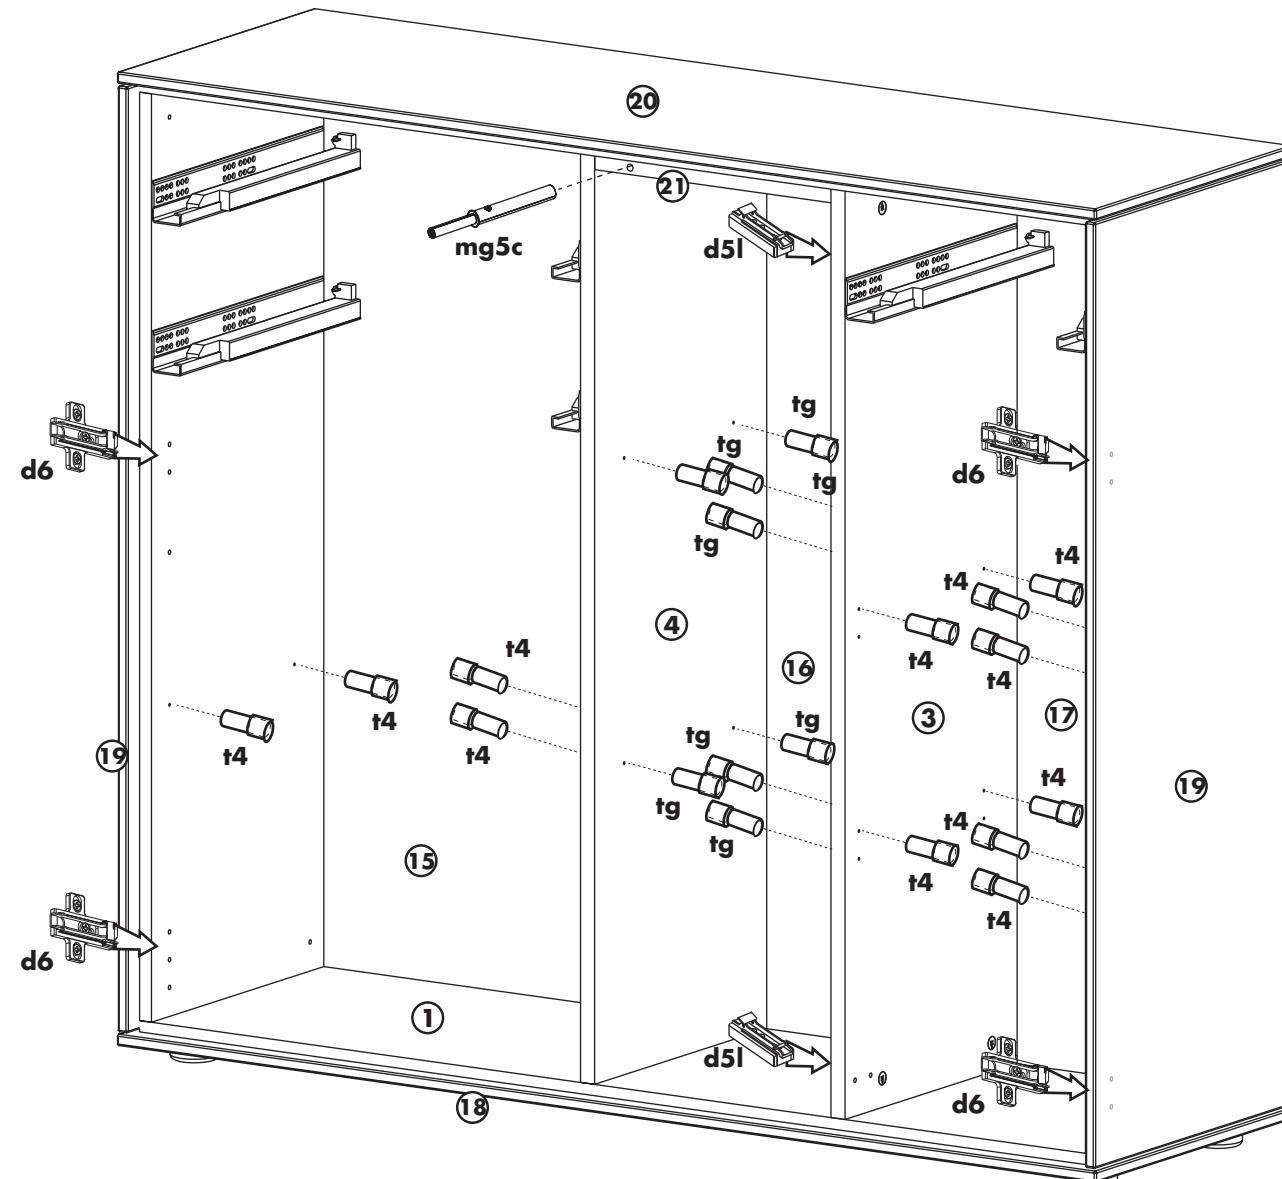**M**

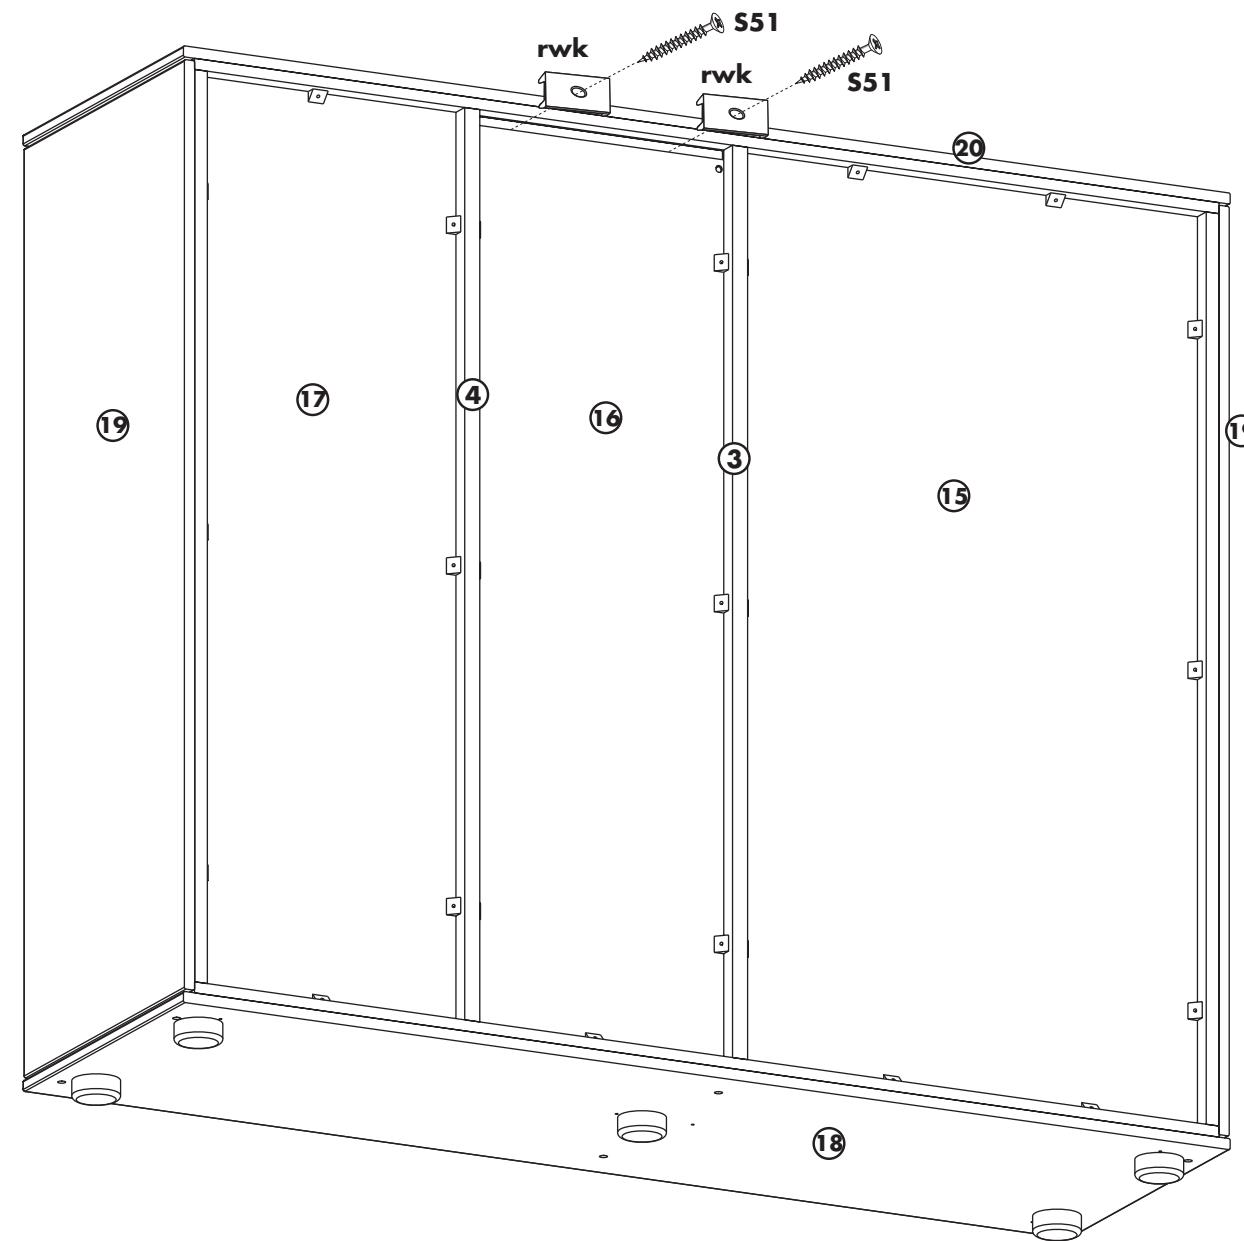**N**

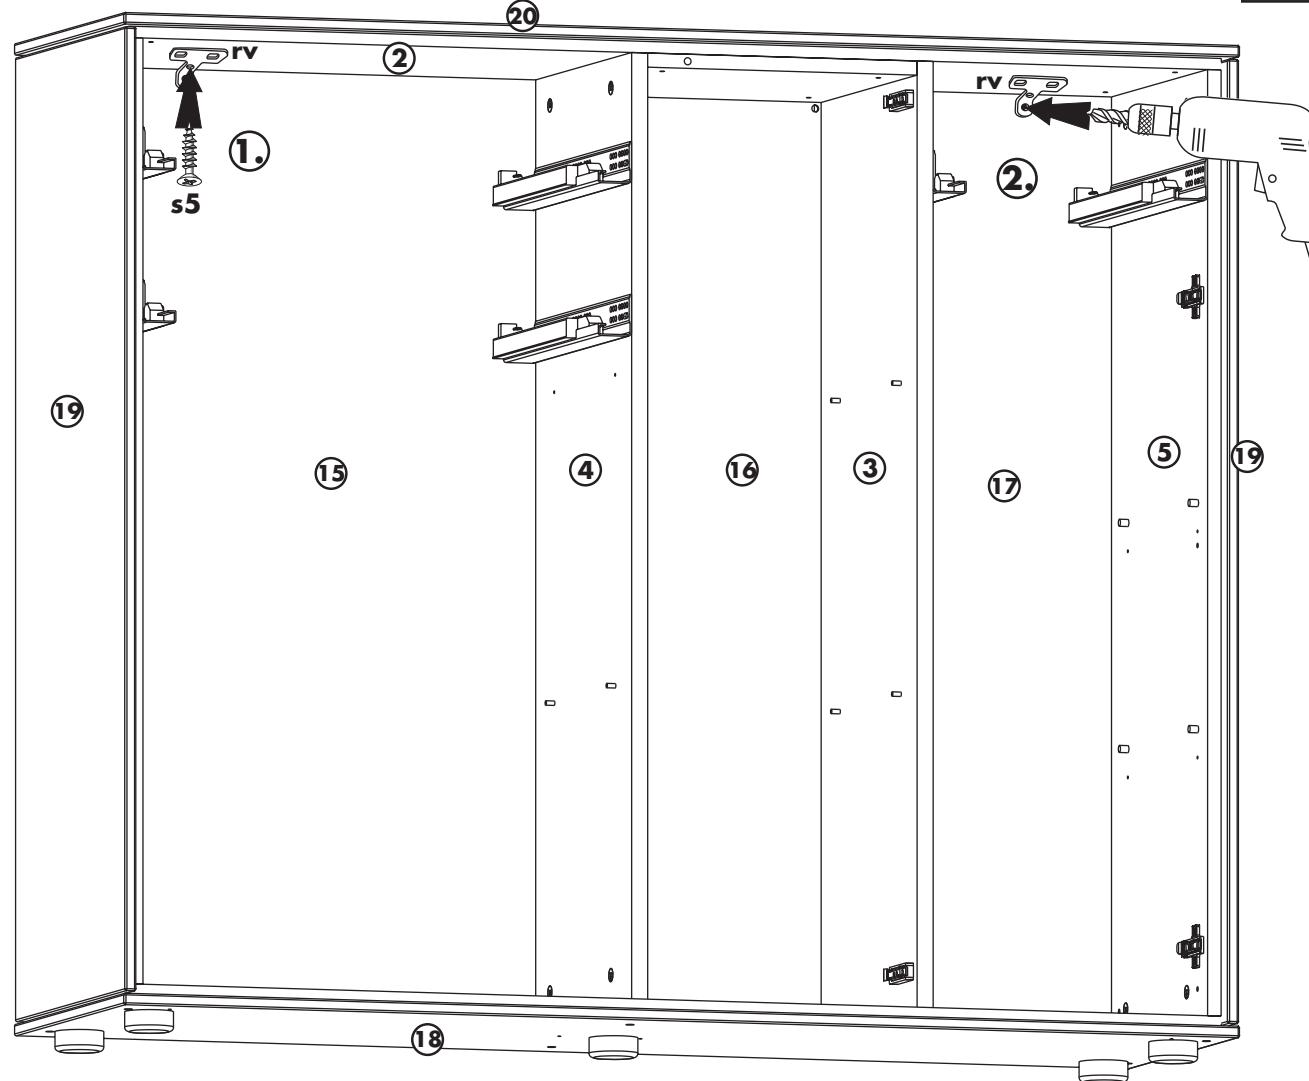

**Kippsicherung links und rechts anbringen**


**Install anti-tip device left and right**

**① Winkel anschrauben**  
**Screw on angle**

**② Rückwand durchbohren**  
**Drill back wall**

**③ Wand markieren**  
**mark wall**

**④ 8mm Loch bohren und Dübel einstecken**  
**Drill 8mm hole and insert dowel**


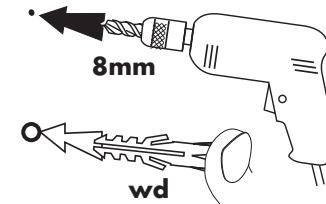


**⑤ Schraube eindrehen**  
**Mount screw**

**s28**




P

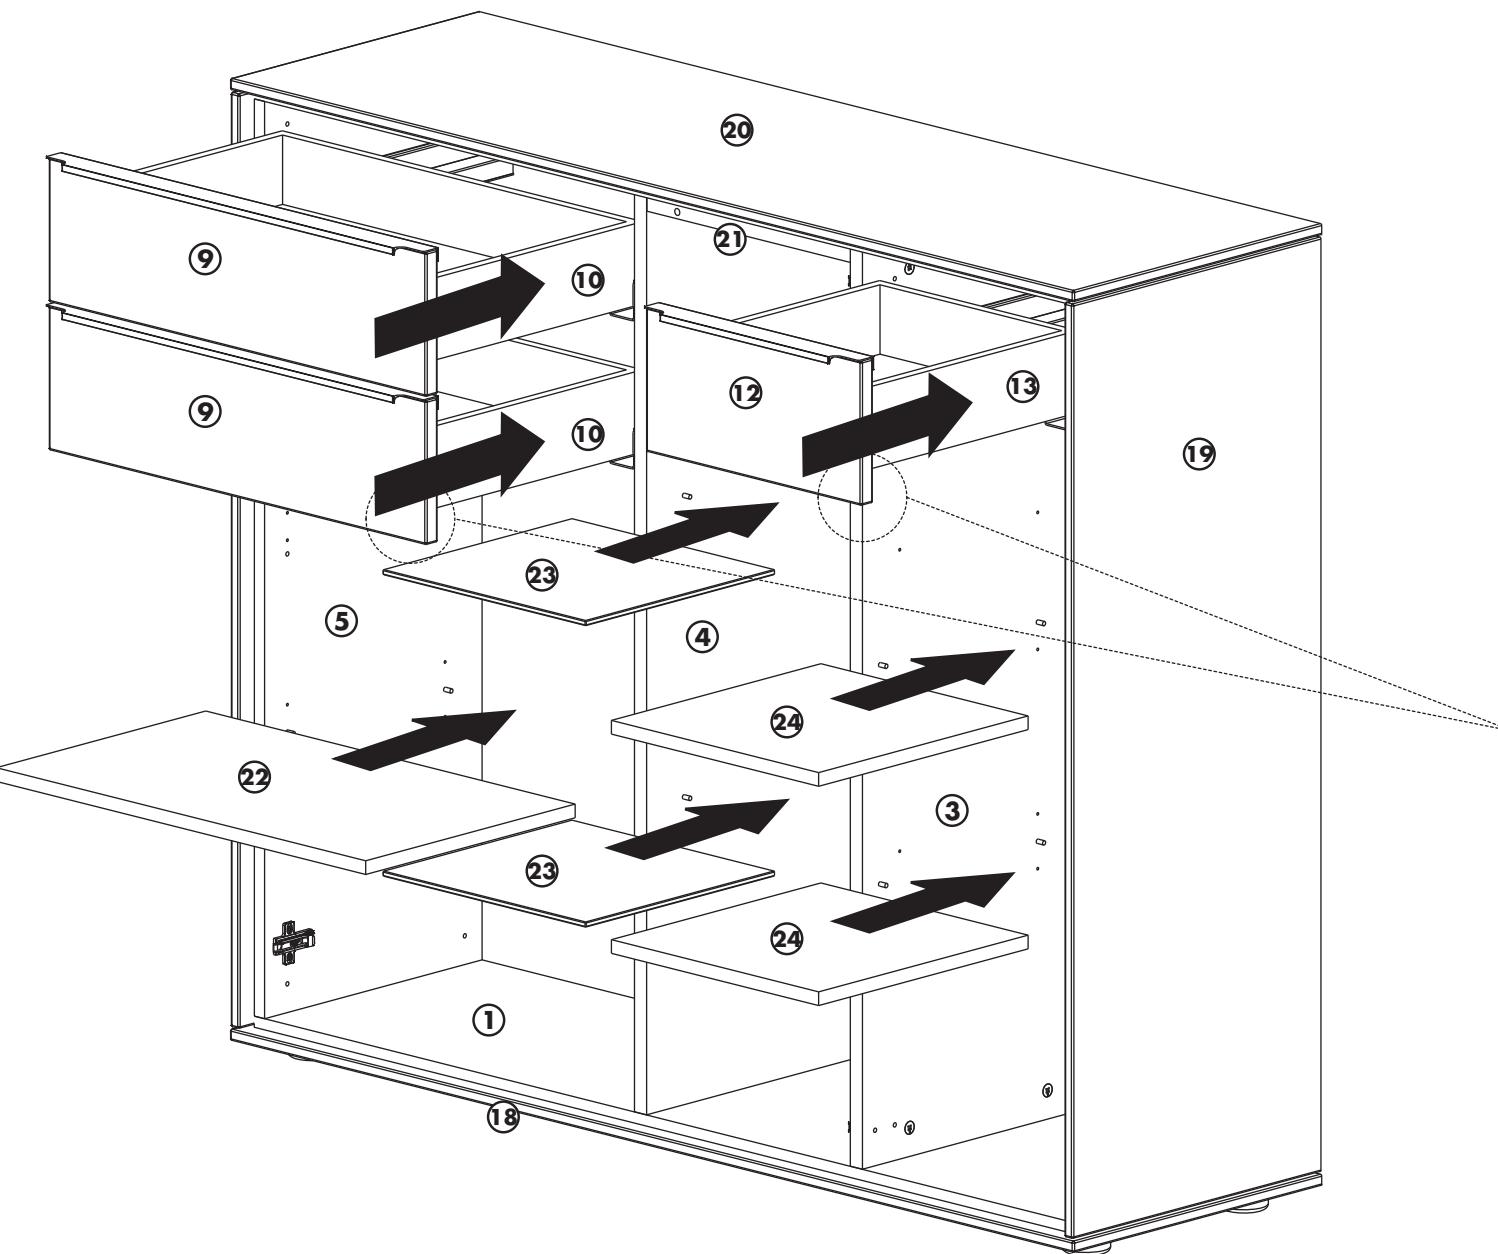


### Verriegelung Lock

1.






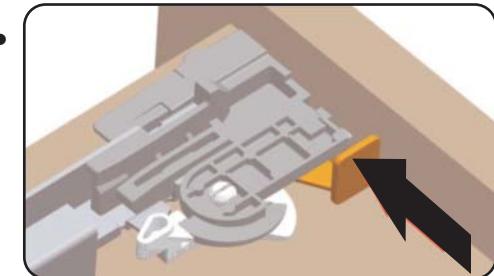


### Höhenverstellung Height adjustment

2.

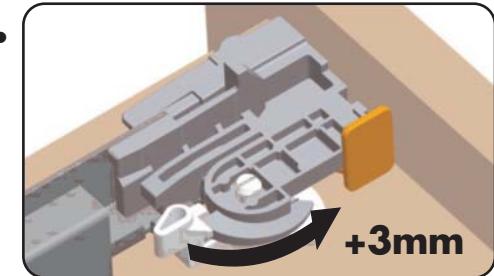

Q

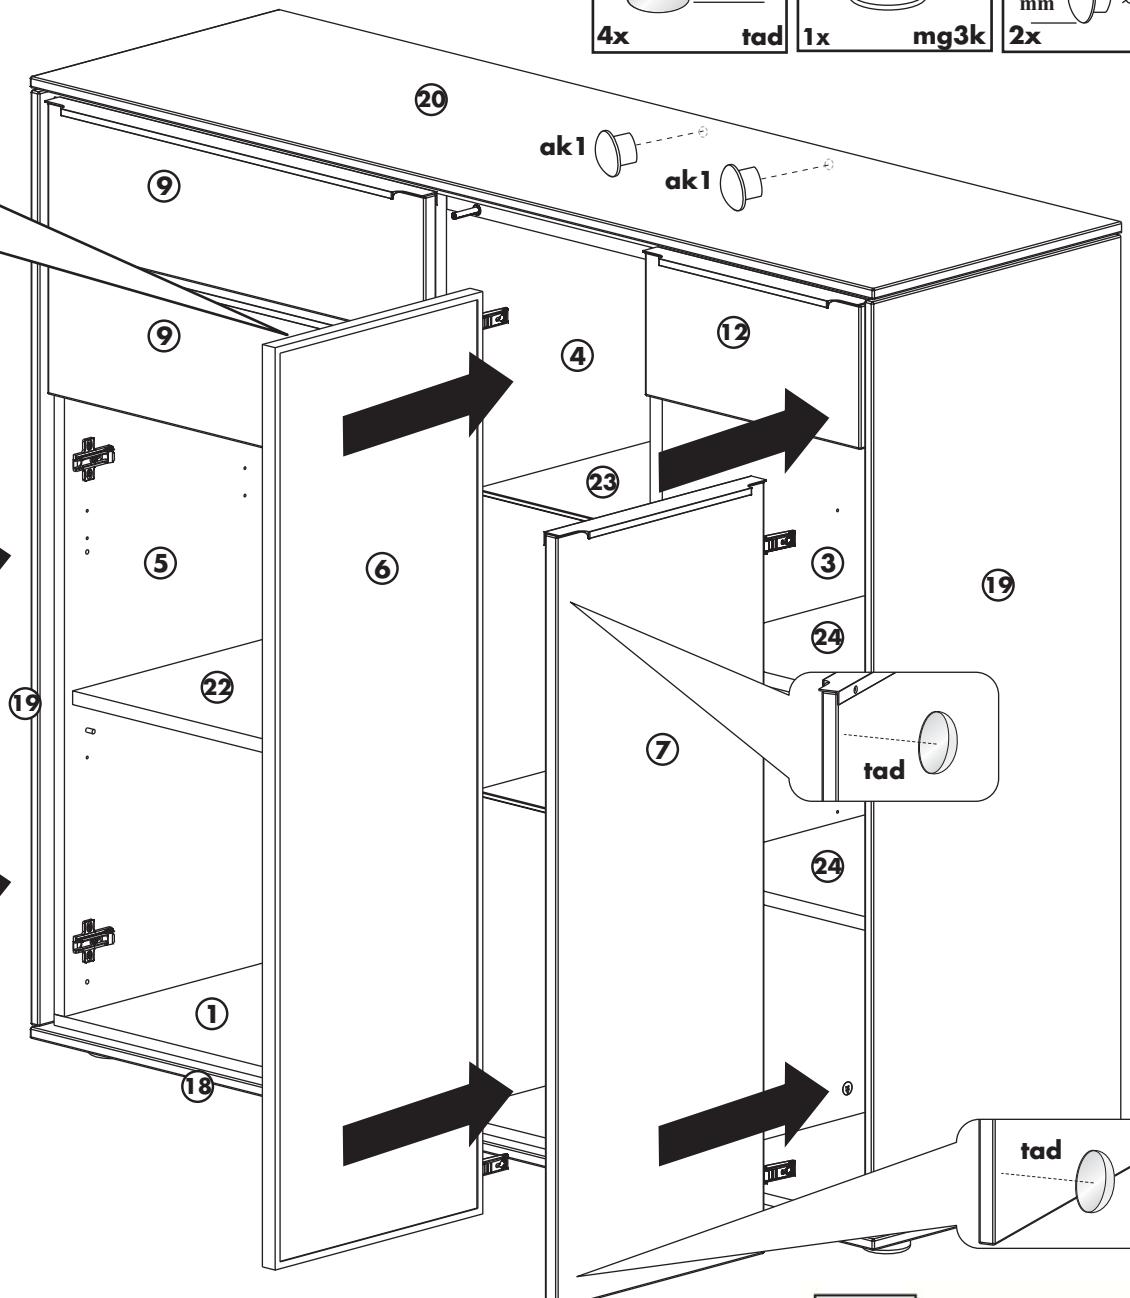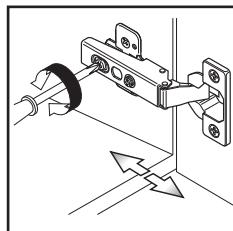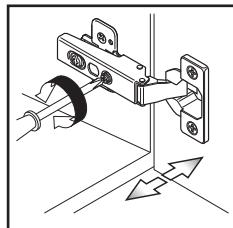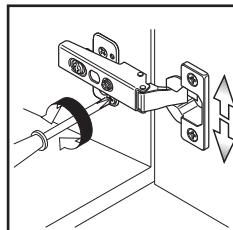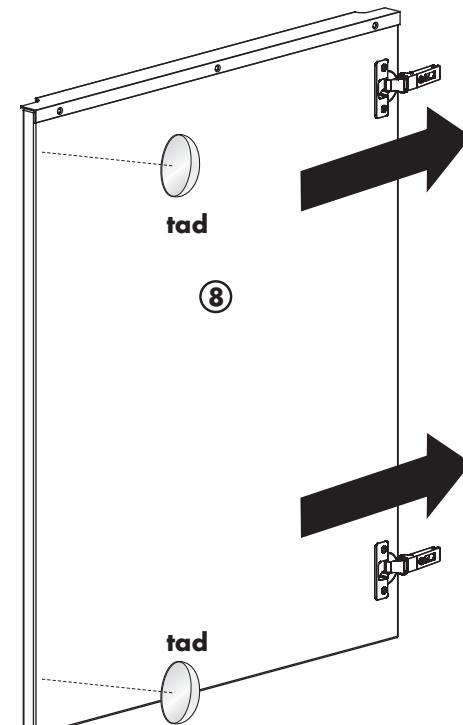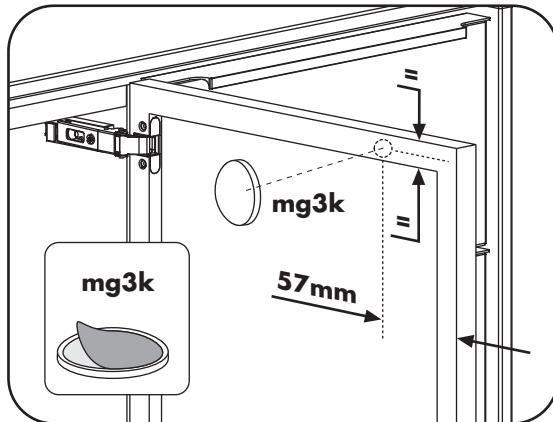

The image shows a technical drawing of three components. On the left, there is a circular component labeled "1x mg3k". In the center, there is a larger, more complex component labeled "4x tad". On the right, there are two smaller, cylindrical components labeled "2x ak1". Each label includes a dimension line indicating its size.