

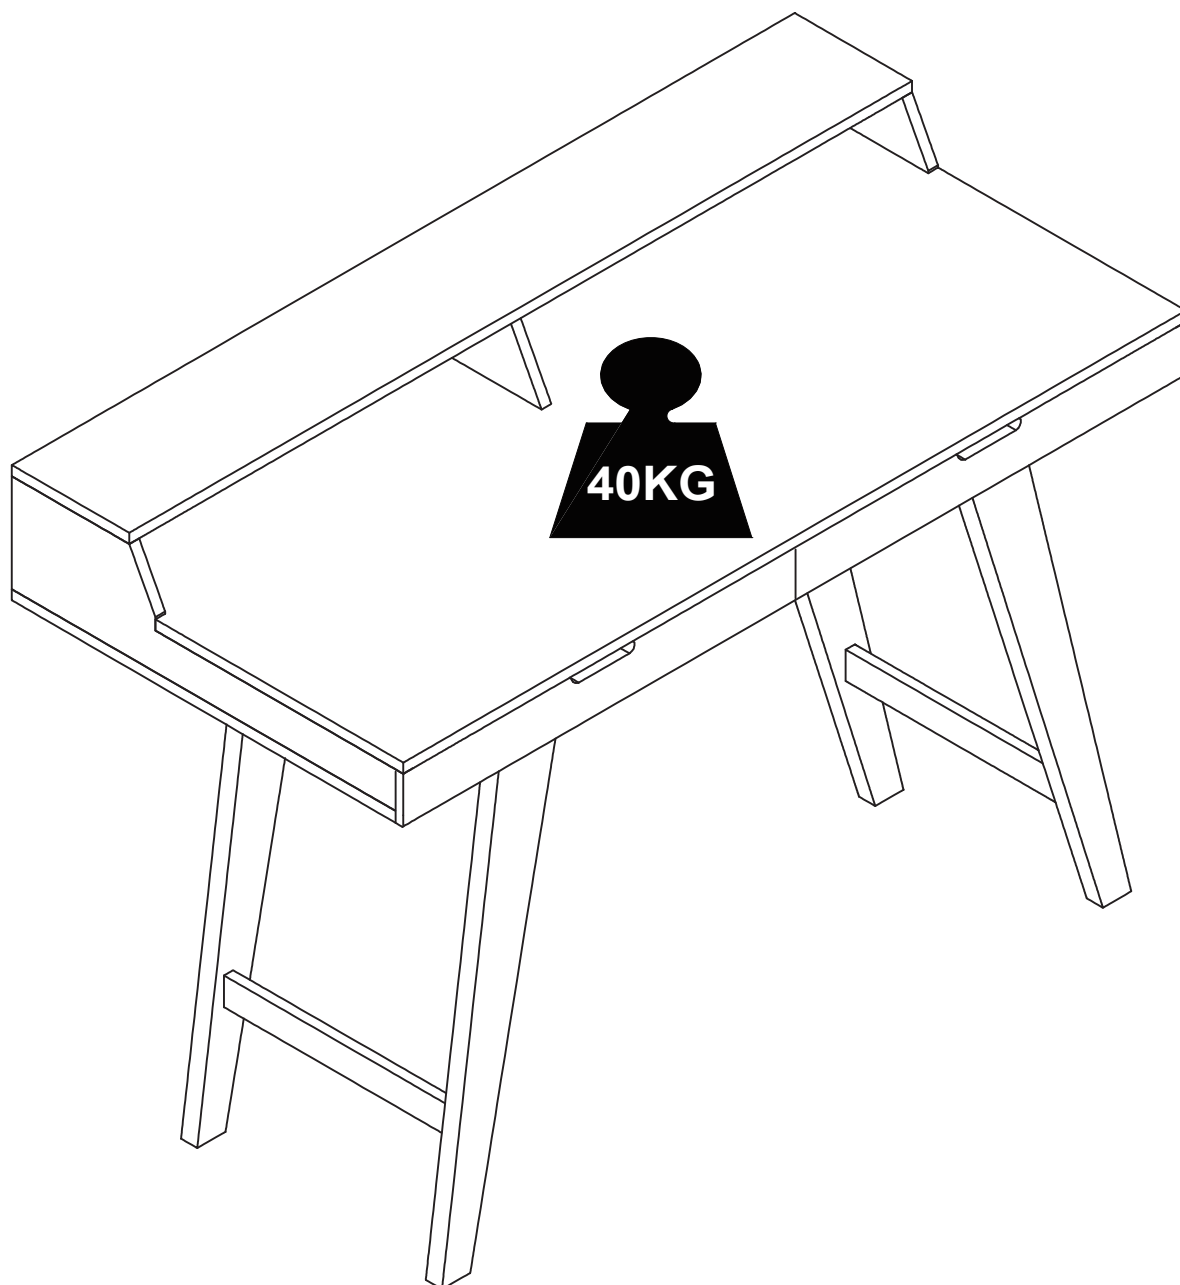
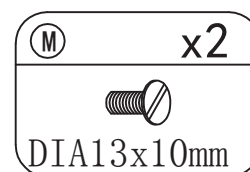
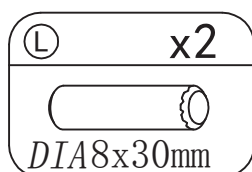
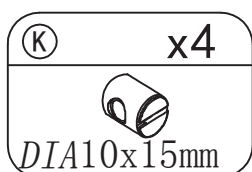
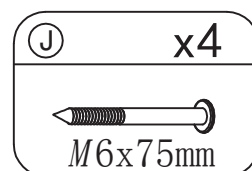
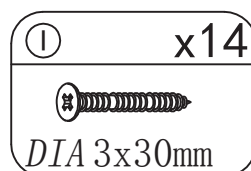
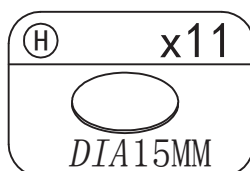
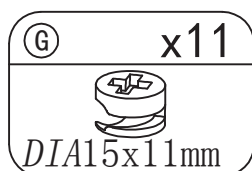
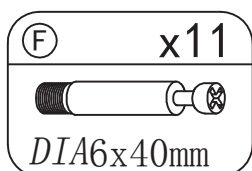
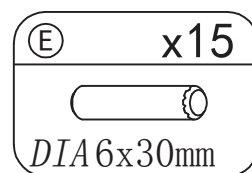
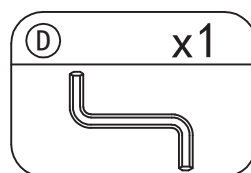
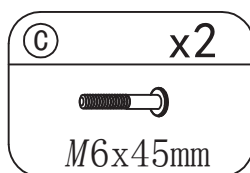
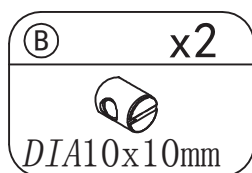






DURHAM DESK

21350002-01




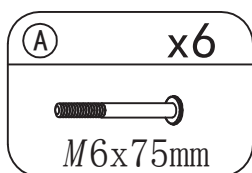


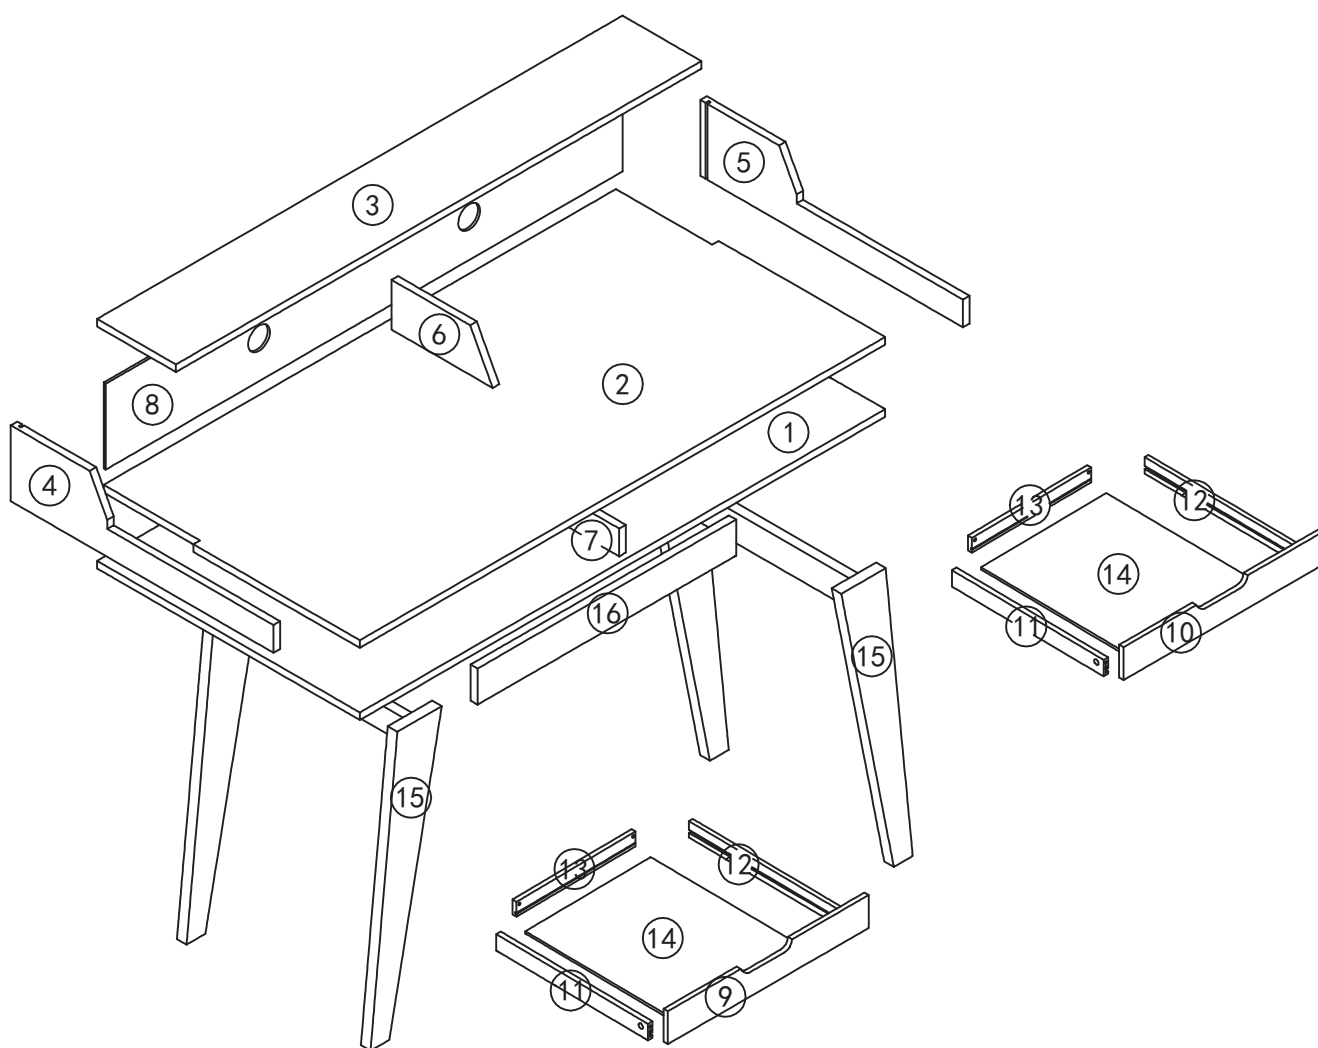


Step1

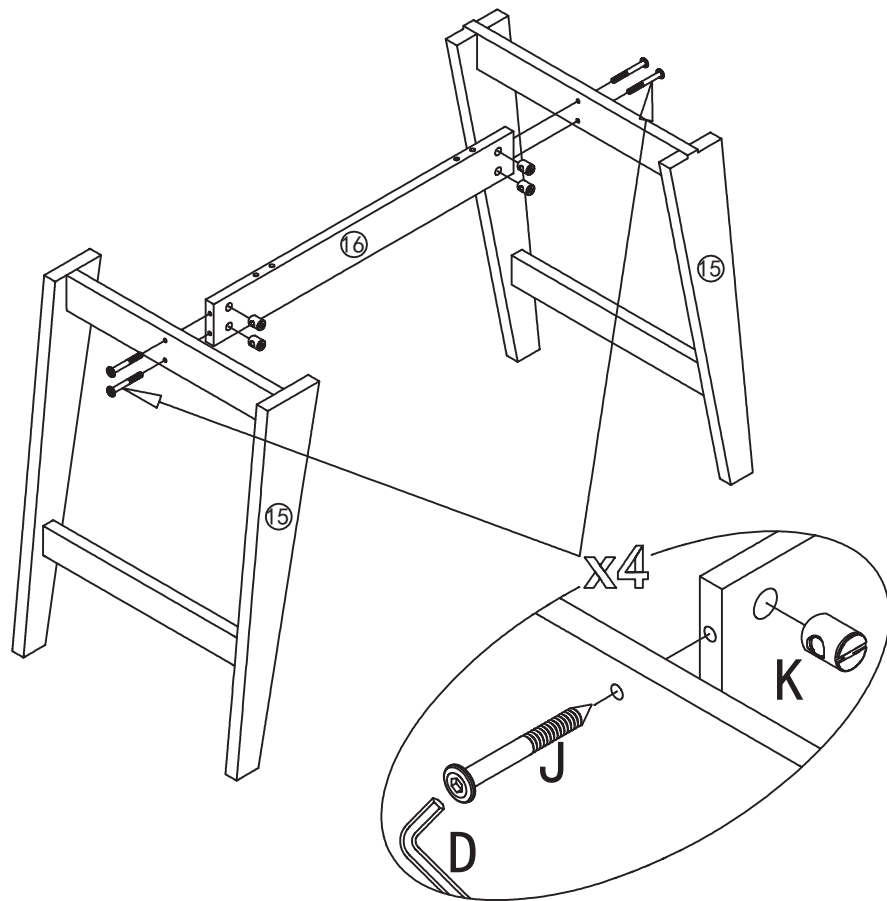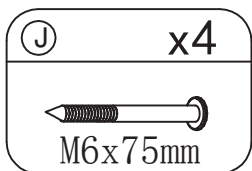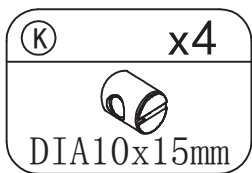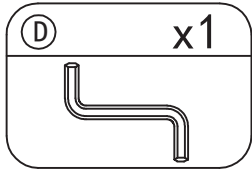


Step2

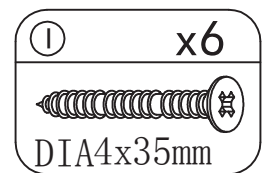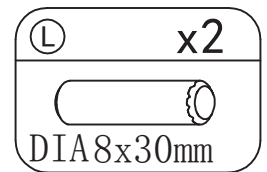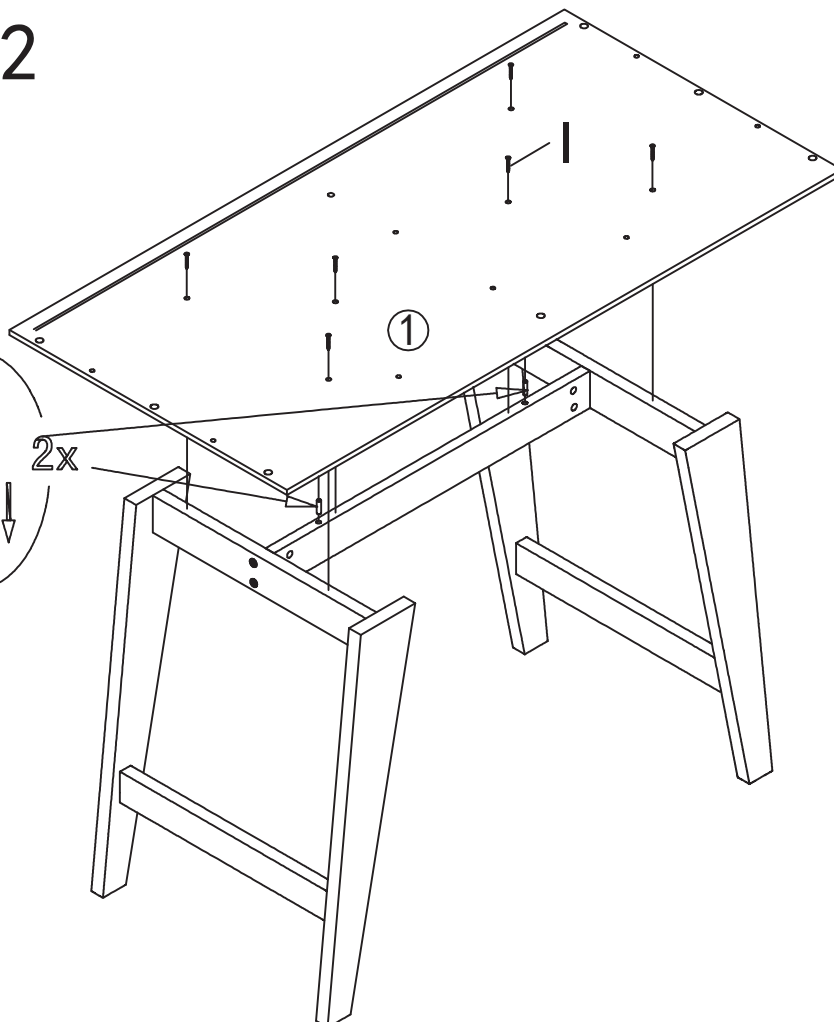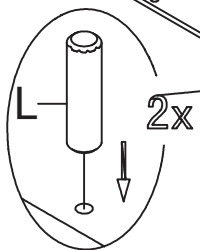





Step3

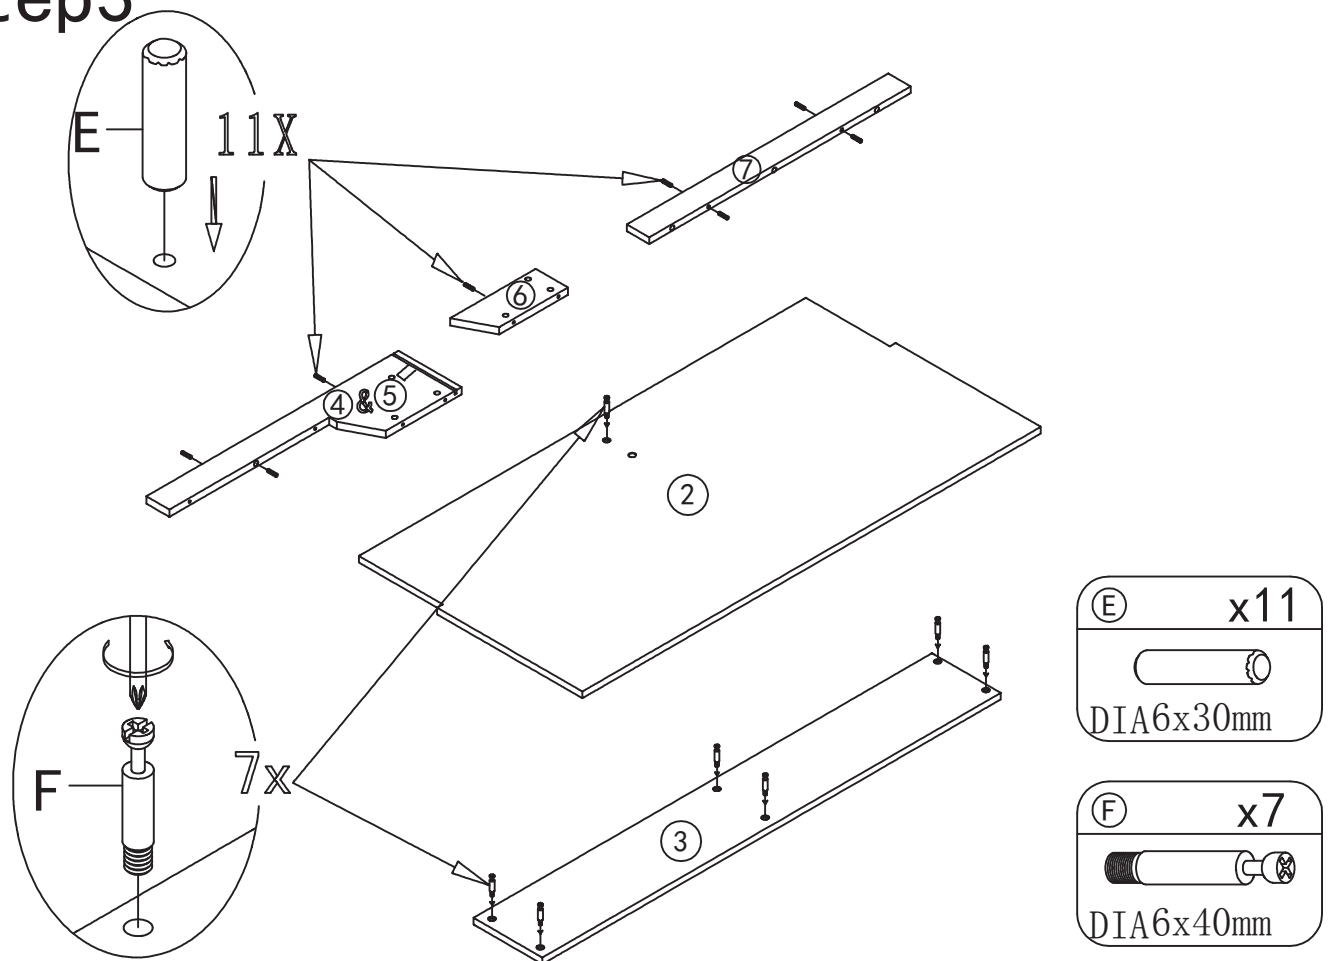



Step4

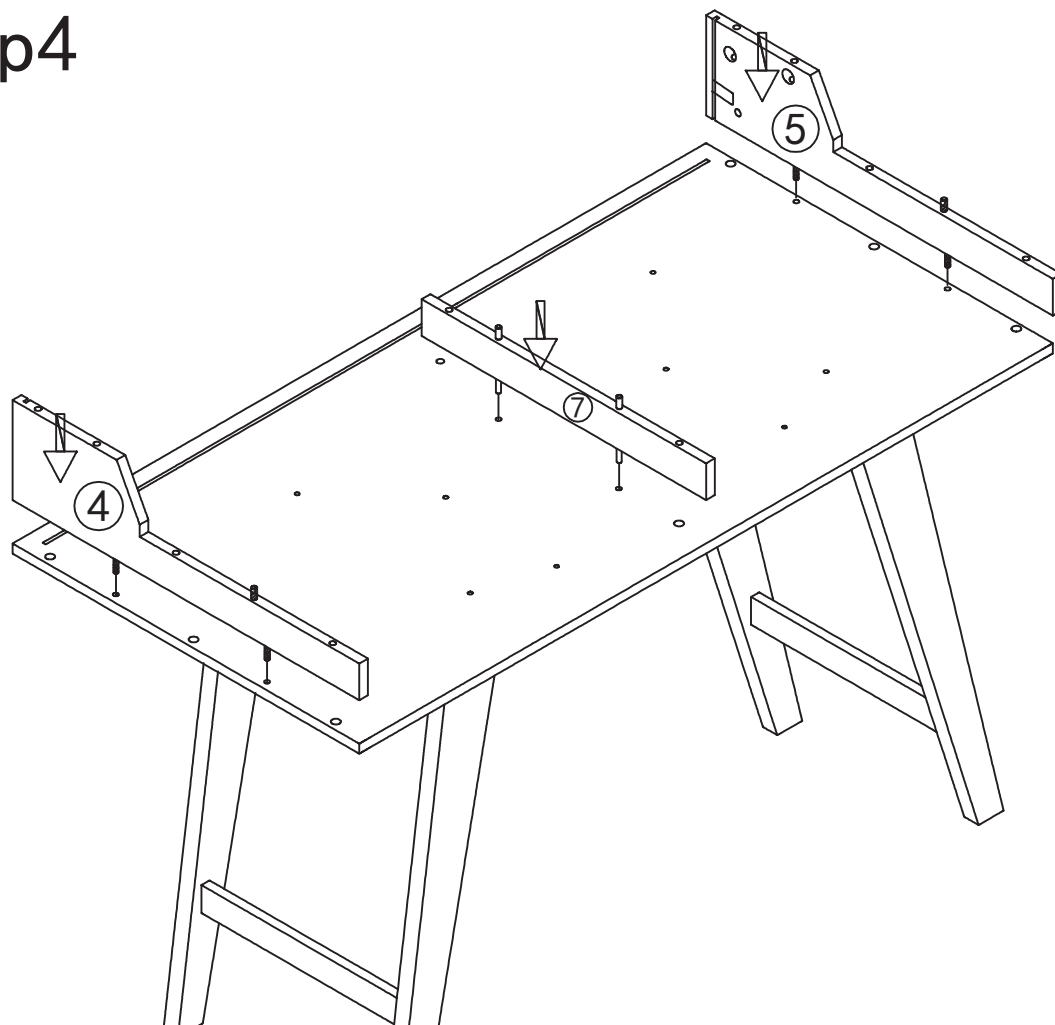


Step5

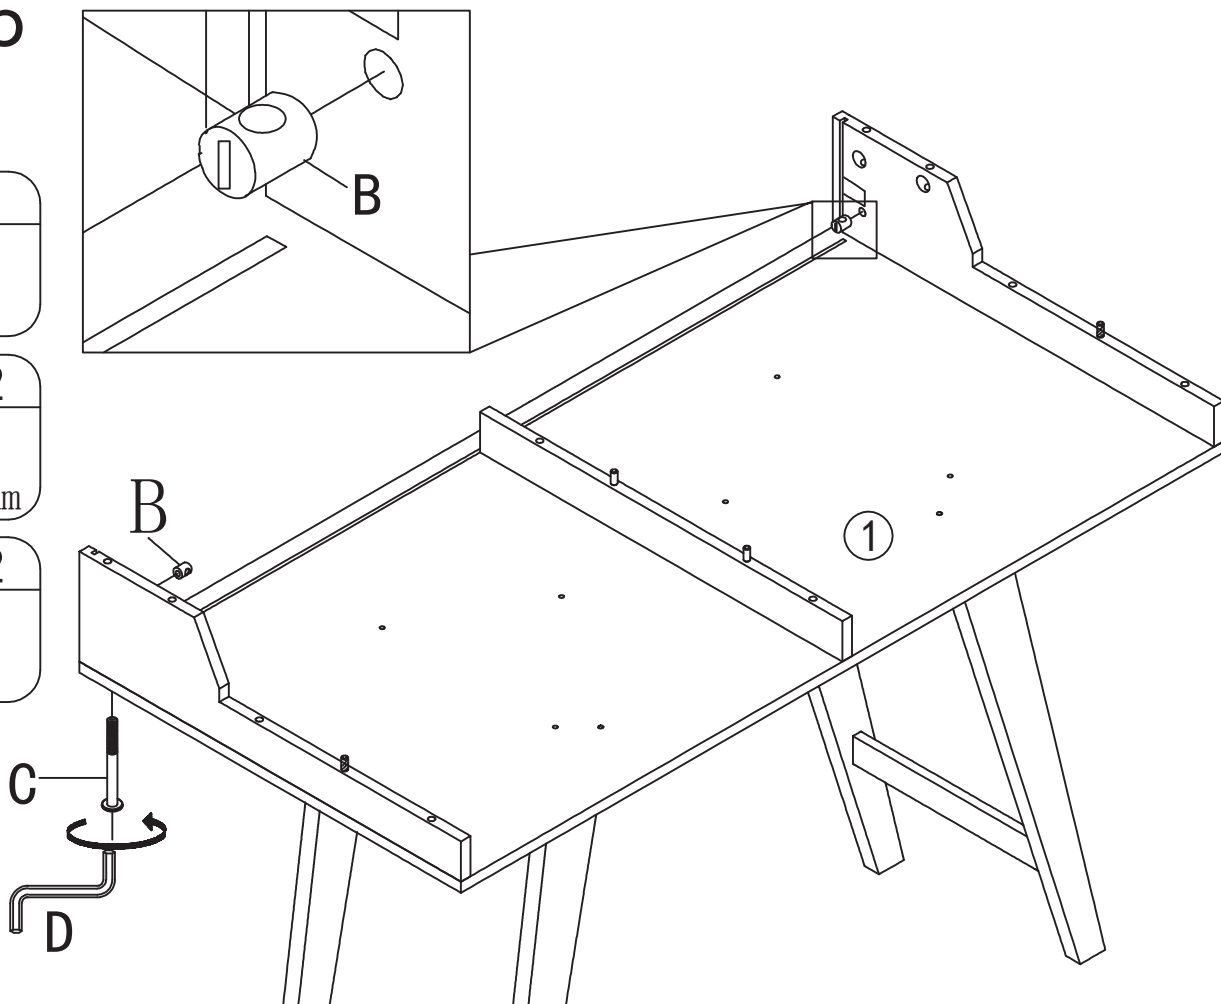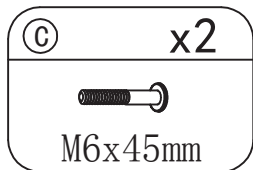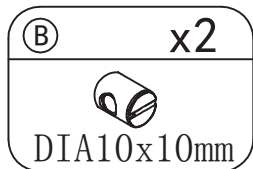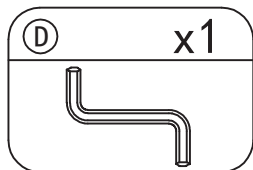





Step6

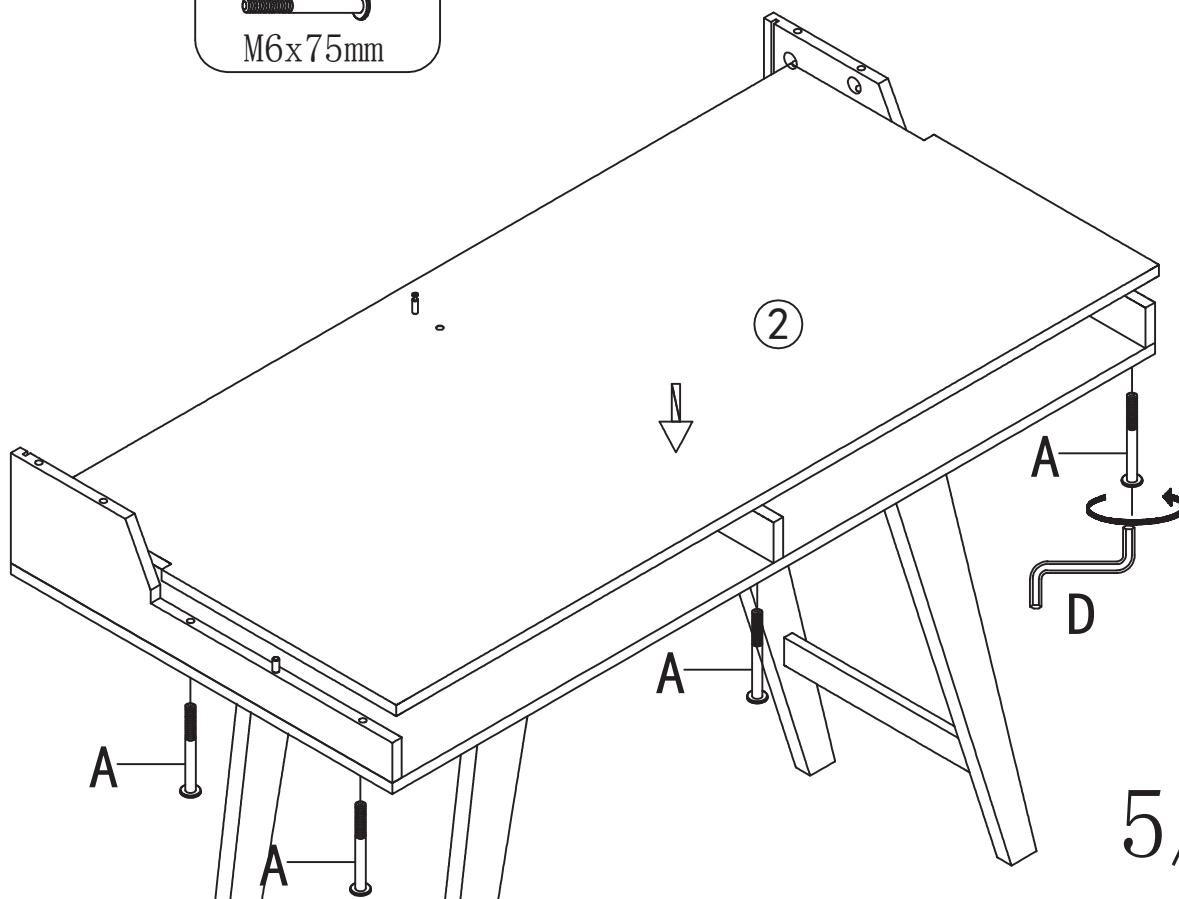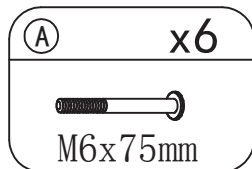





Step7

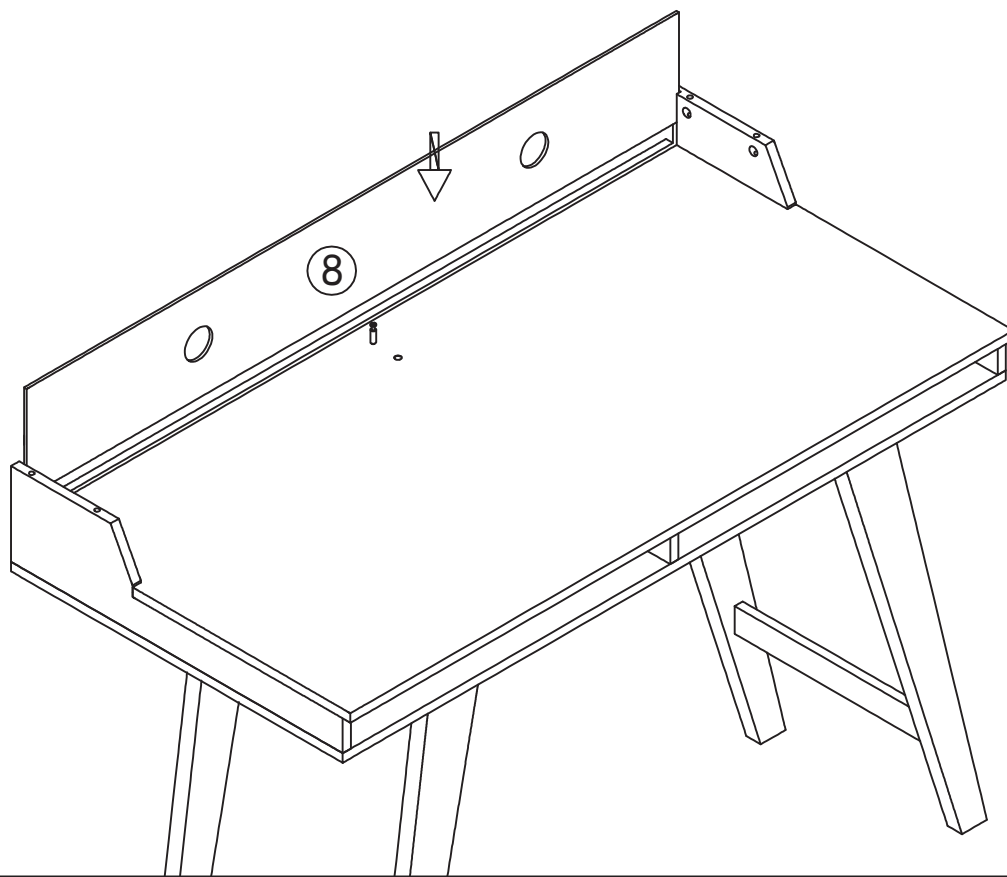






Step8

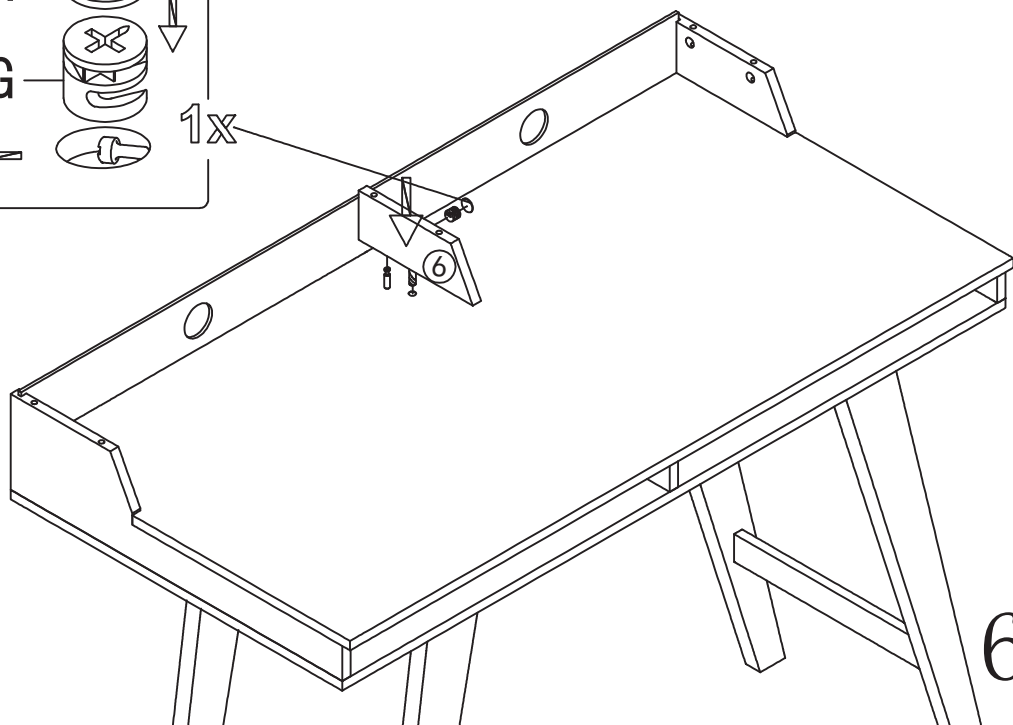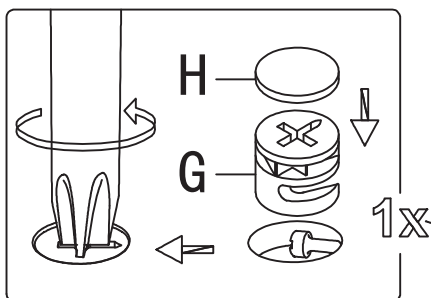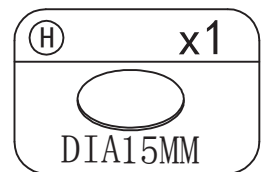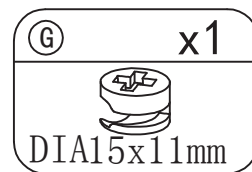


Step9

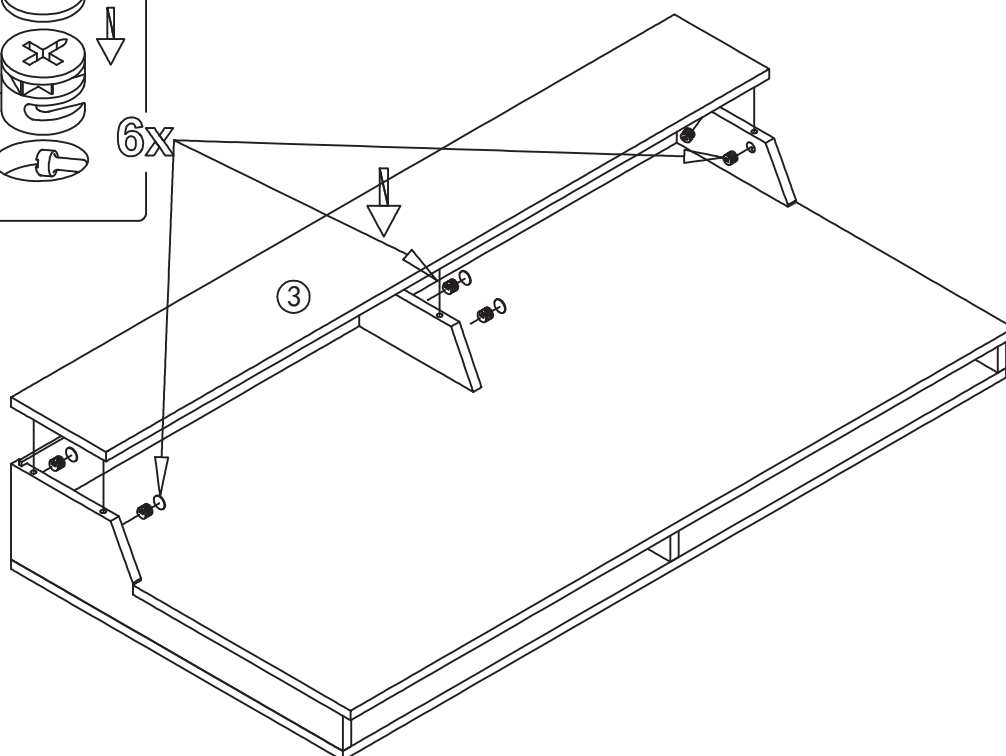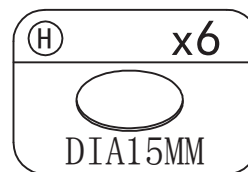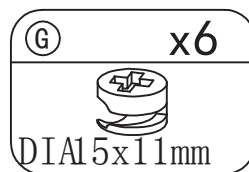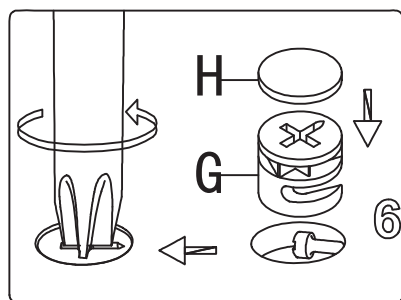


Step10

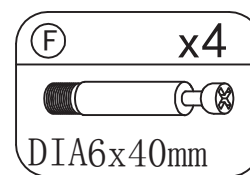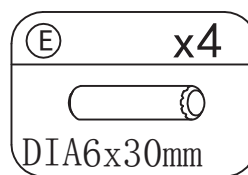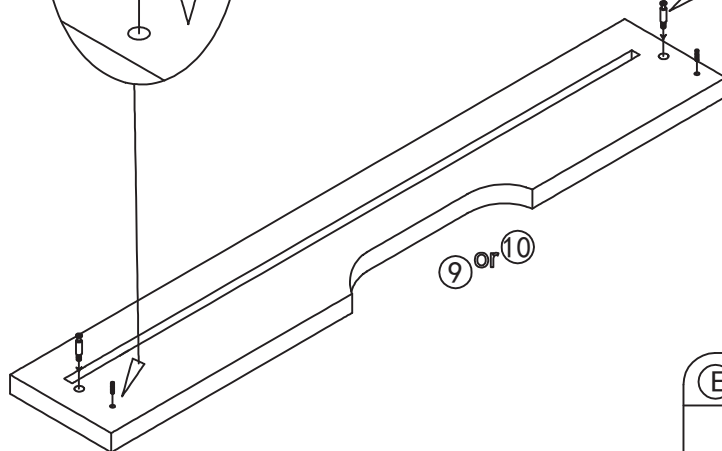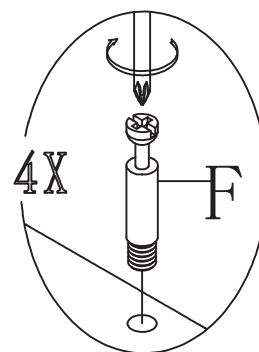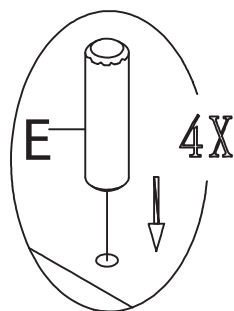

Step11

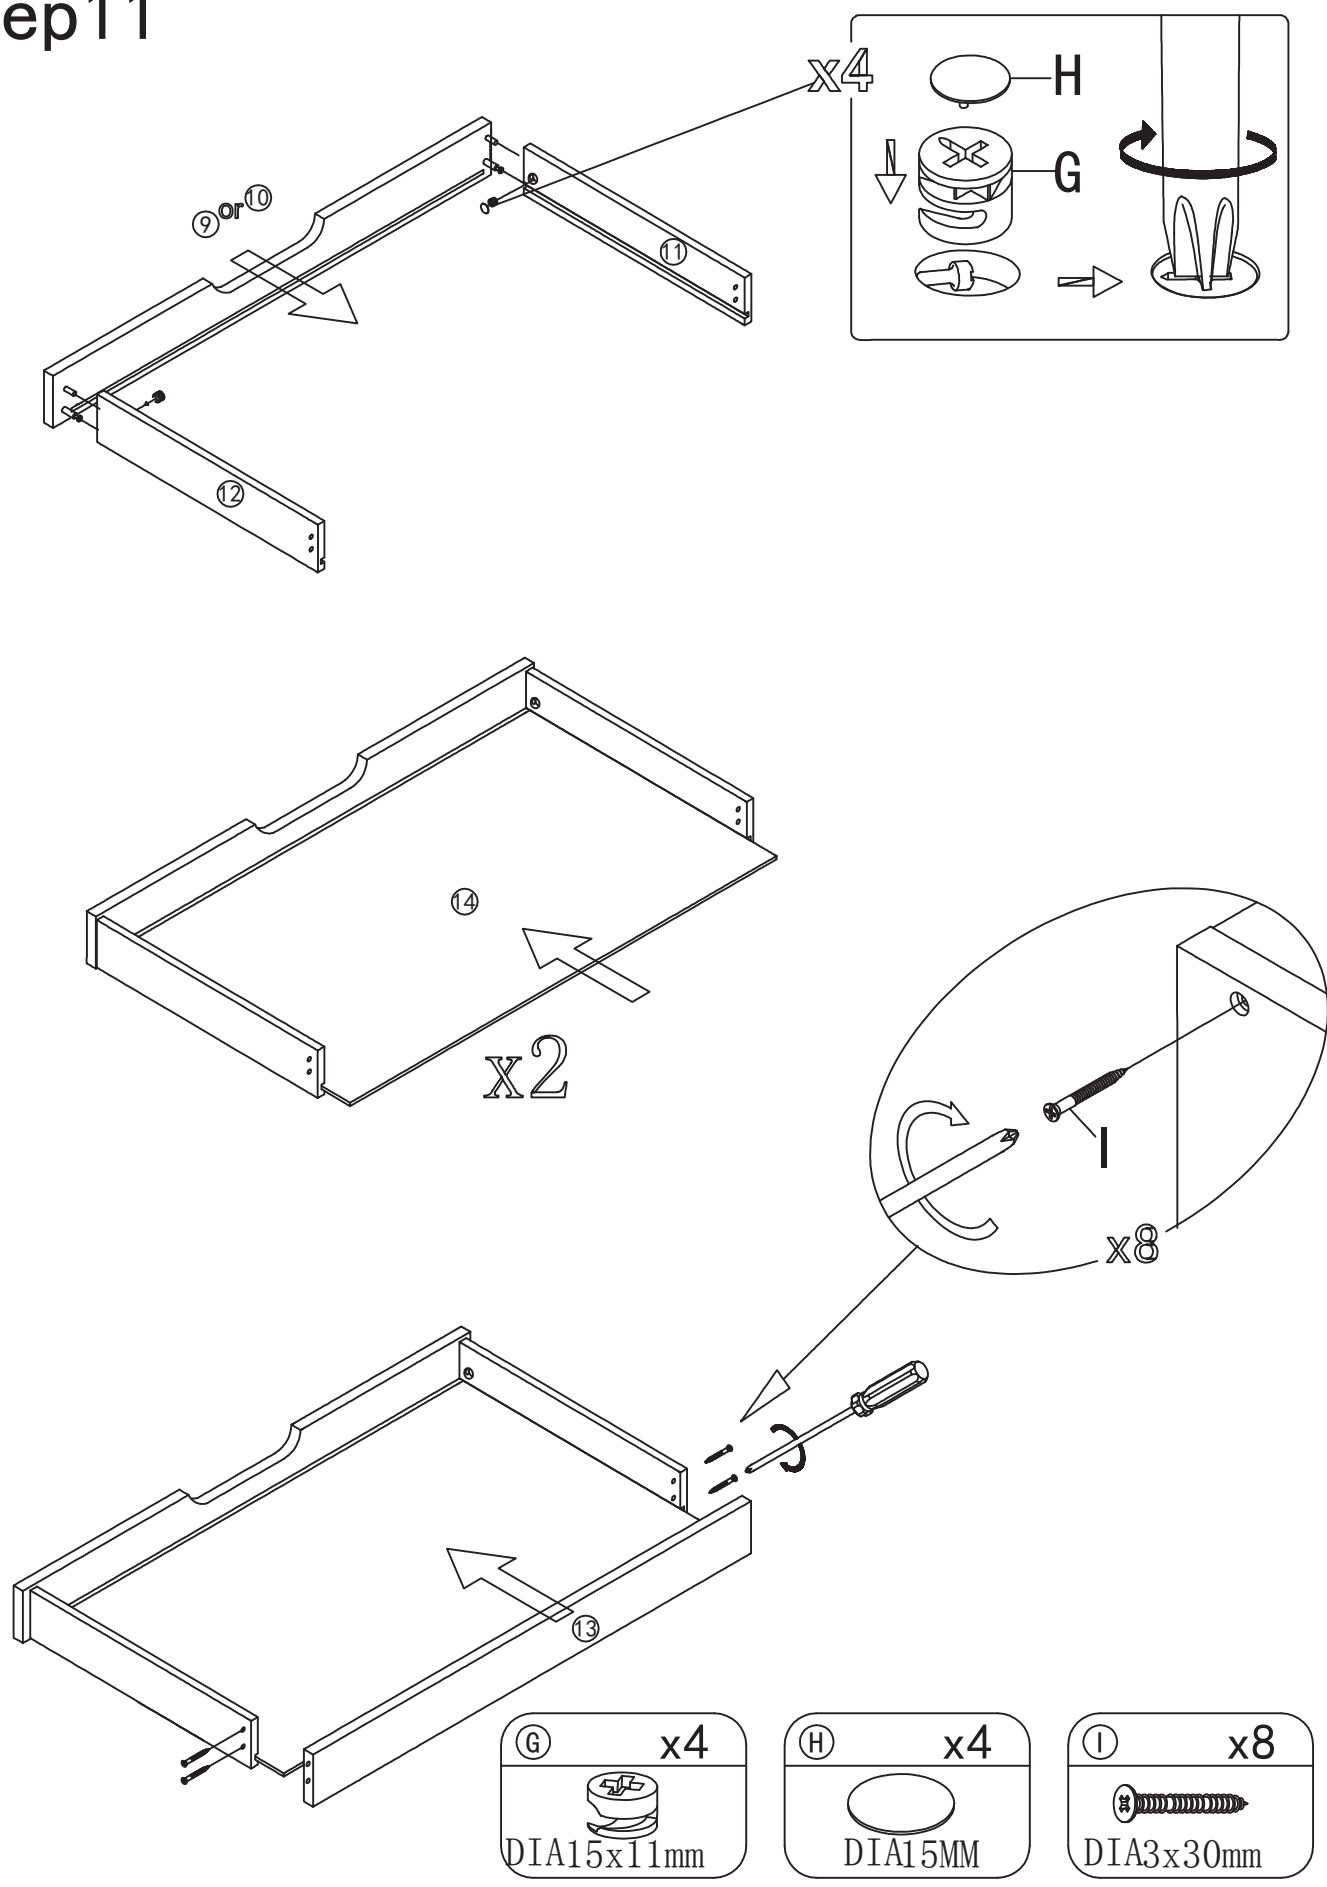

Step12

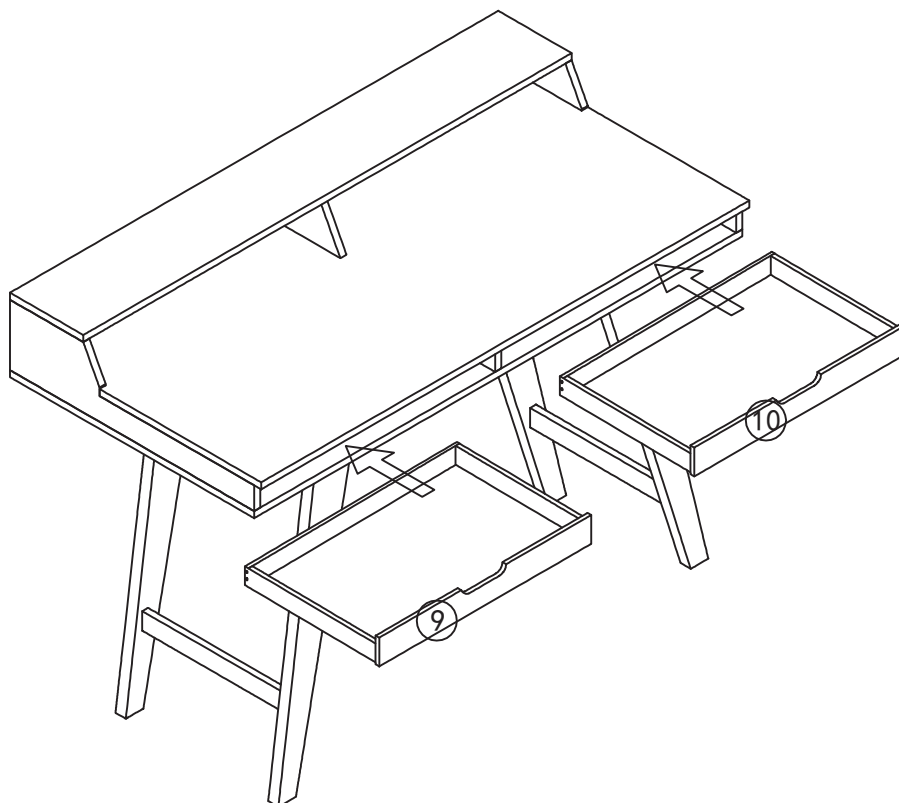

Step13

