

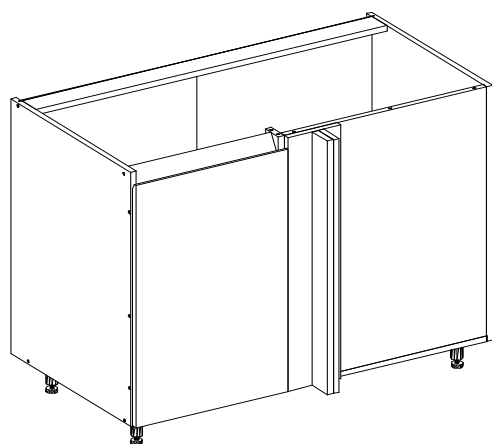


# TOSCANA 110/1AS oldalak 1/6




BAL

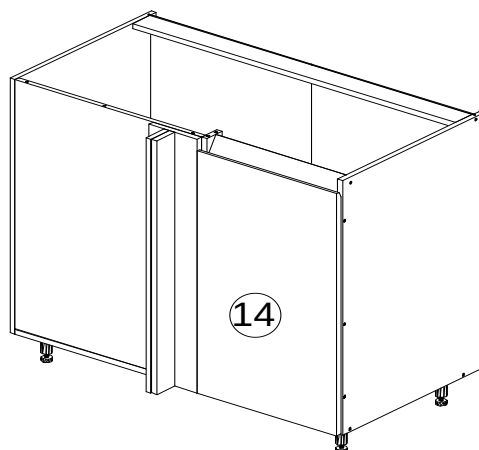

JOBB

|       |          |    |
|-------|----------|----|
| 1-2   | 770X560  | 2X |
| 3     | 1027X536 | 1X |
| 4     | 754X594  | 1X |
| 5     | 754X60   | 1X |
| 6     | 416X70   | 1X |
| 7     | 1027X70  | 1X |
| 8     | 1027X470 | 1X |
| 9     | 767X155  | 1X |
| 10    | 770X72   | 1X |
| 11    | 767X68   | 1X |
| 12-13 | 764X520  | 2X |
| 14    | 733x445  | 1X |



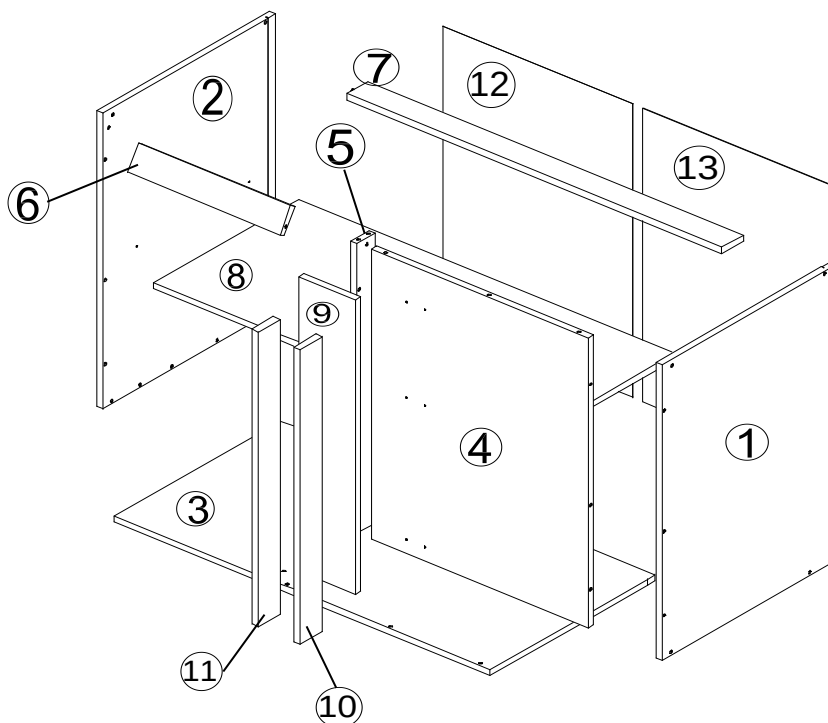


|            |            |
|------------|------------|
| DD20<br>2X | PL00<br>2X |
|------------|------------|






|              |                     |                      |                   |                   |              |
|--------------|---------------------|----------------------|-------------------|-------------------|--------------|
| PP 01<br>4 X | DR 27 3,5*16<br>24X | DR 25 3,5*25<br>12X  | DR 60 4*60<br>3X  | PN 01<br>2x       | PD 01<br>2X  |
|              |                     |                      |                   |                   |              |
| DD 55<br>4 X | KL 01 4 mm<br>1 X   | KV 01 1,5*20<br>30 X | KO 01 8*30<br>13X | KN 03 7*50<br>19X | PL 12<br>19X |
|              |                     |                      |                   |                   |              |


1.

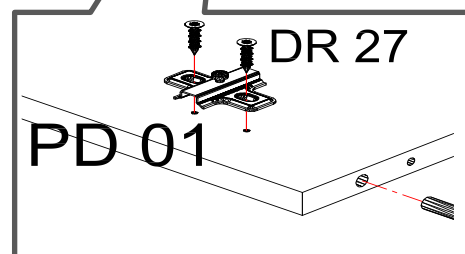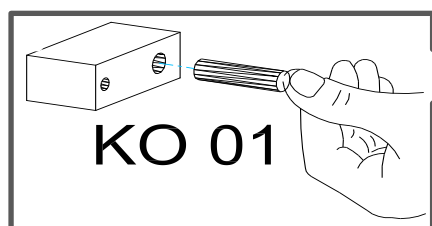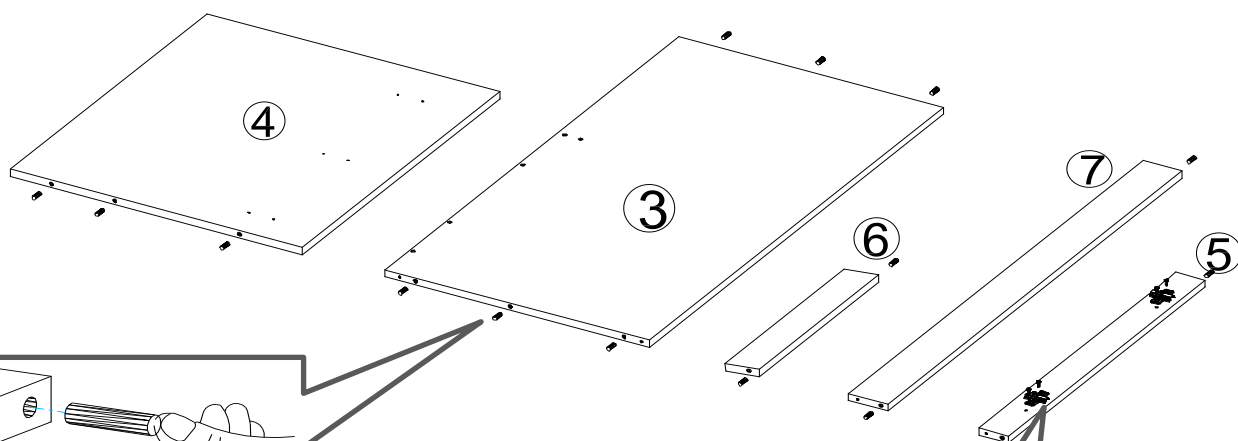


2.

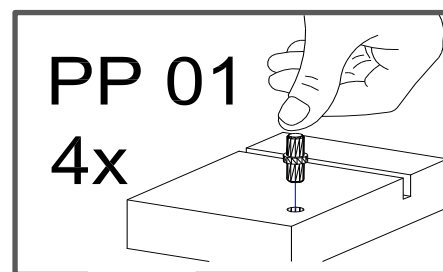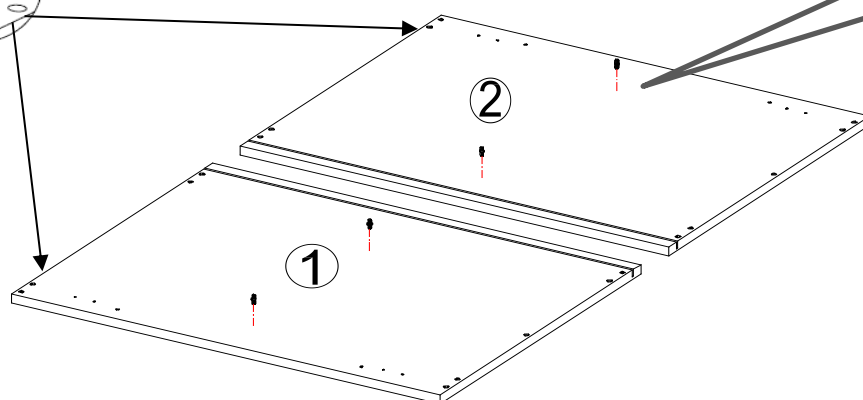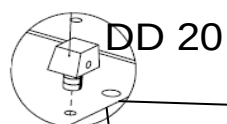







3.

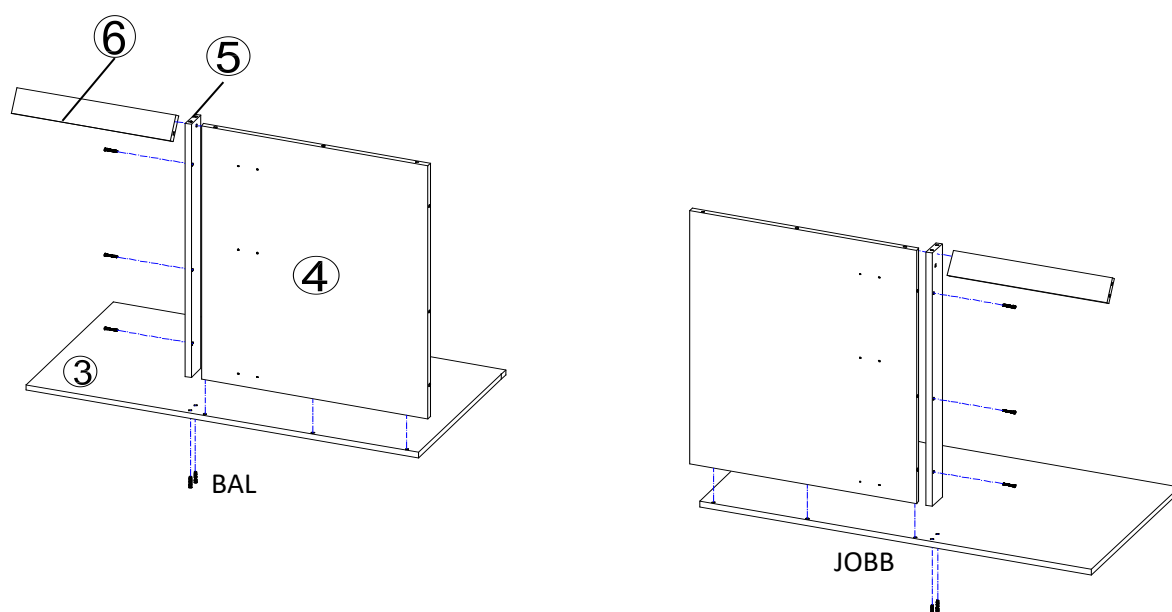


4.

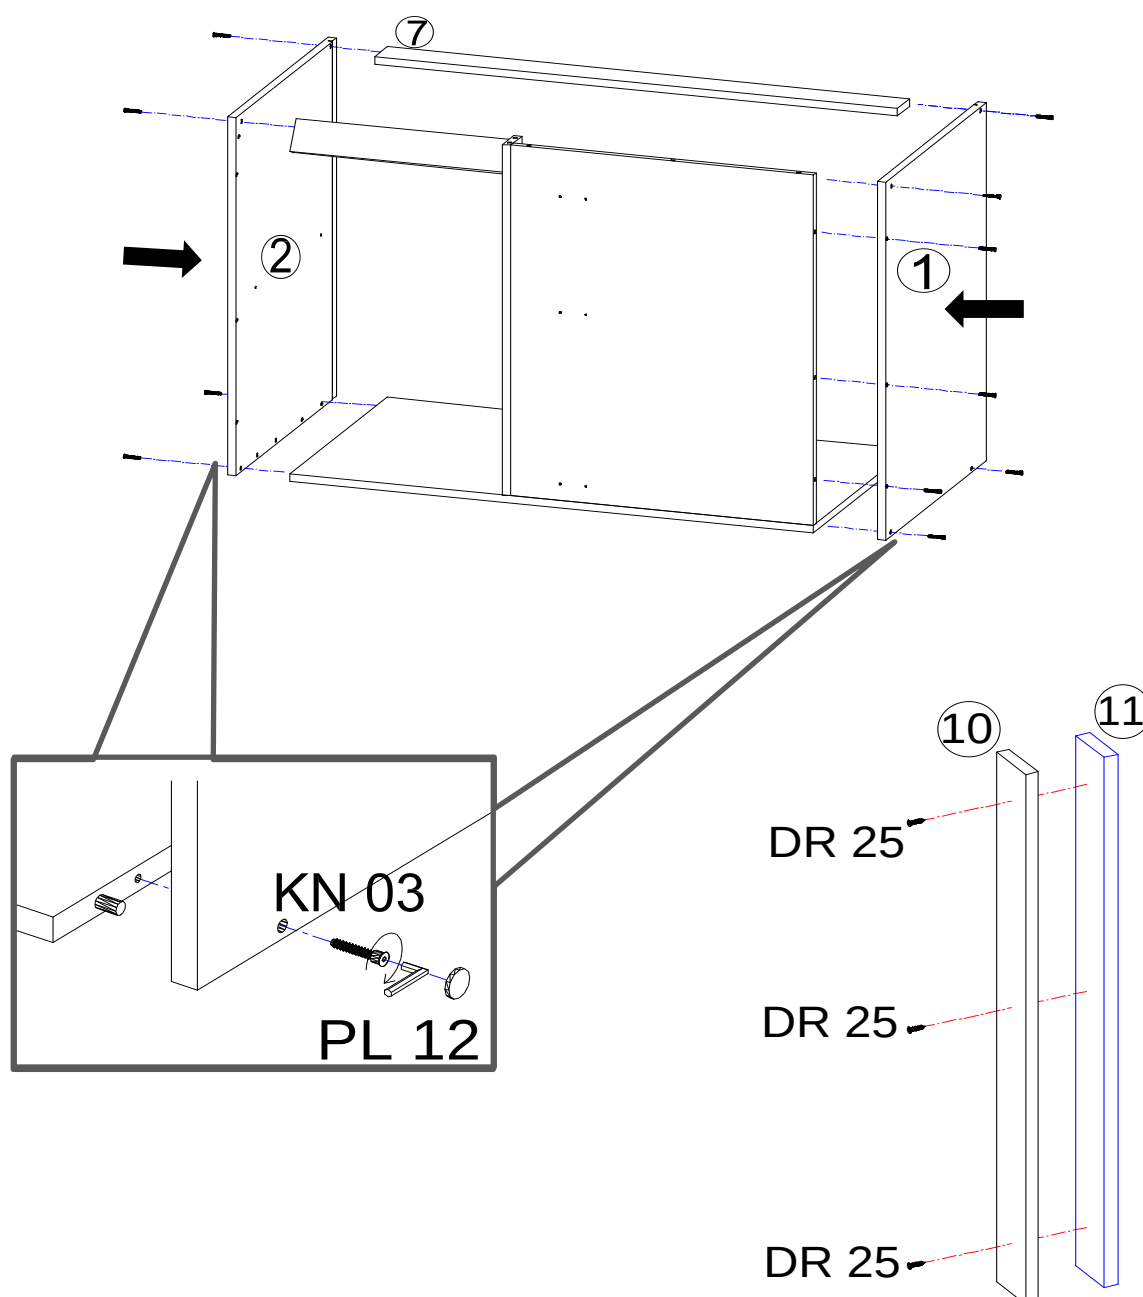


5.

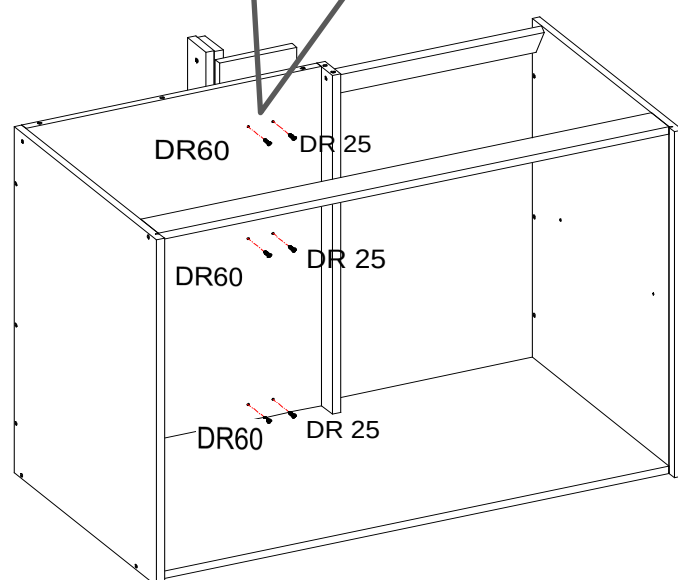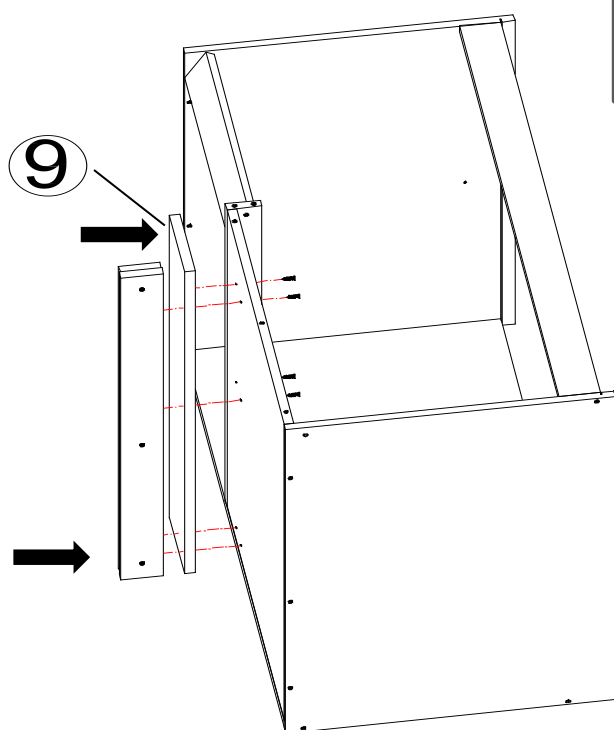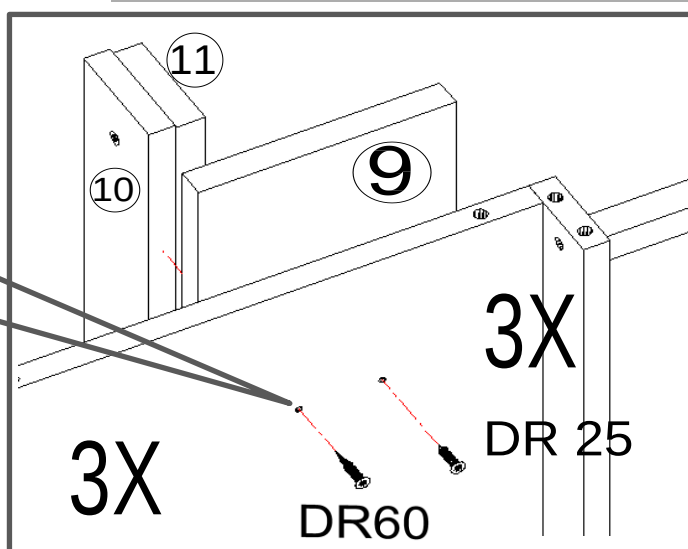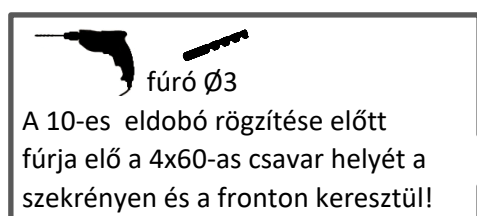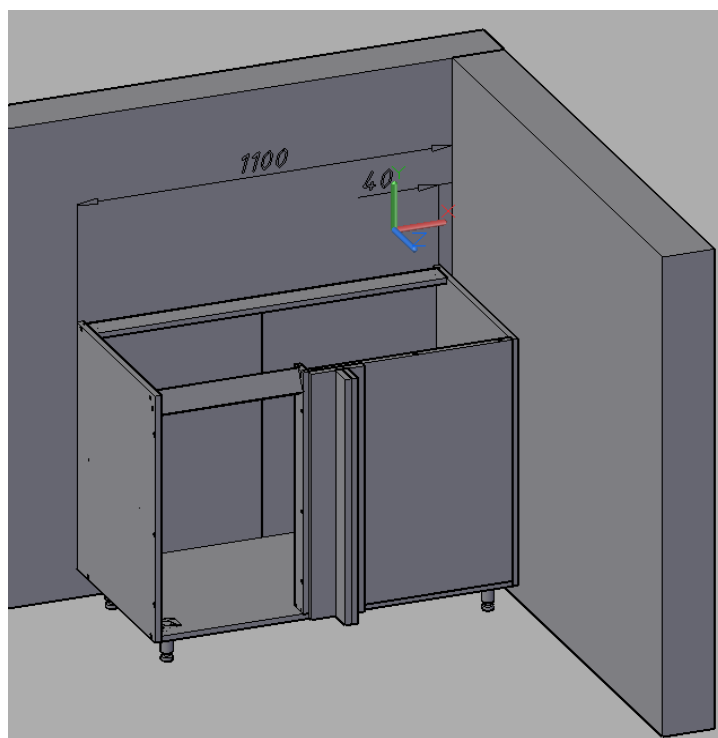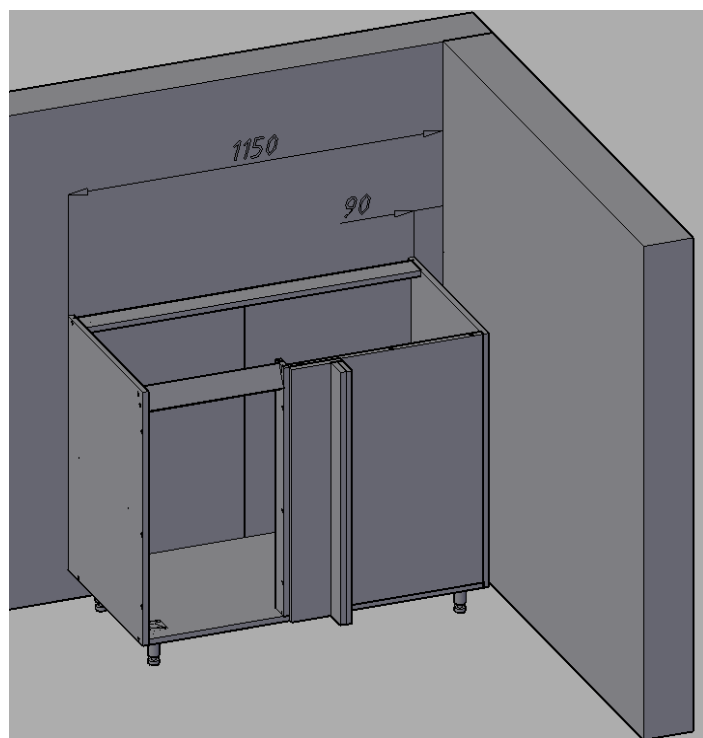


6.

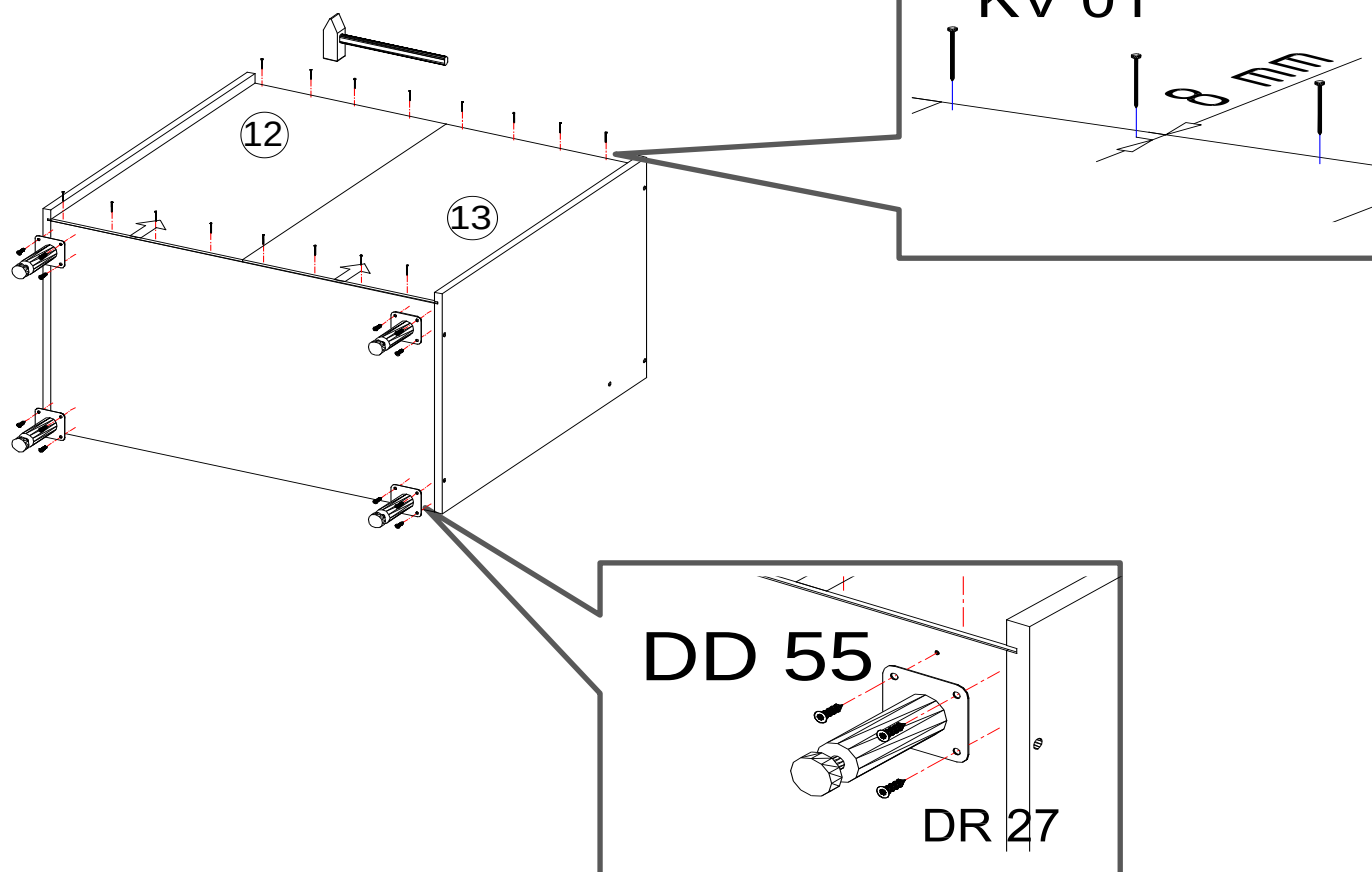


7.

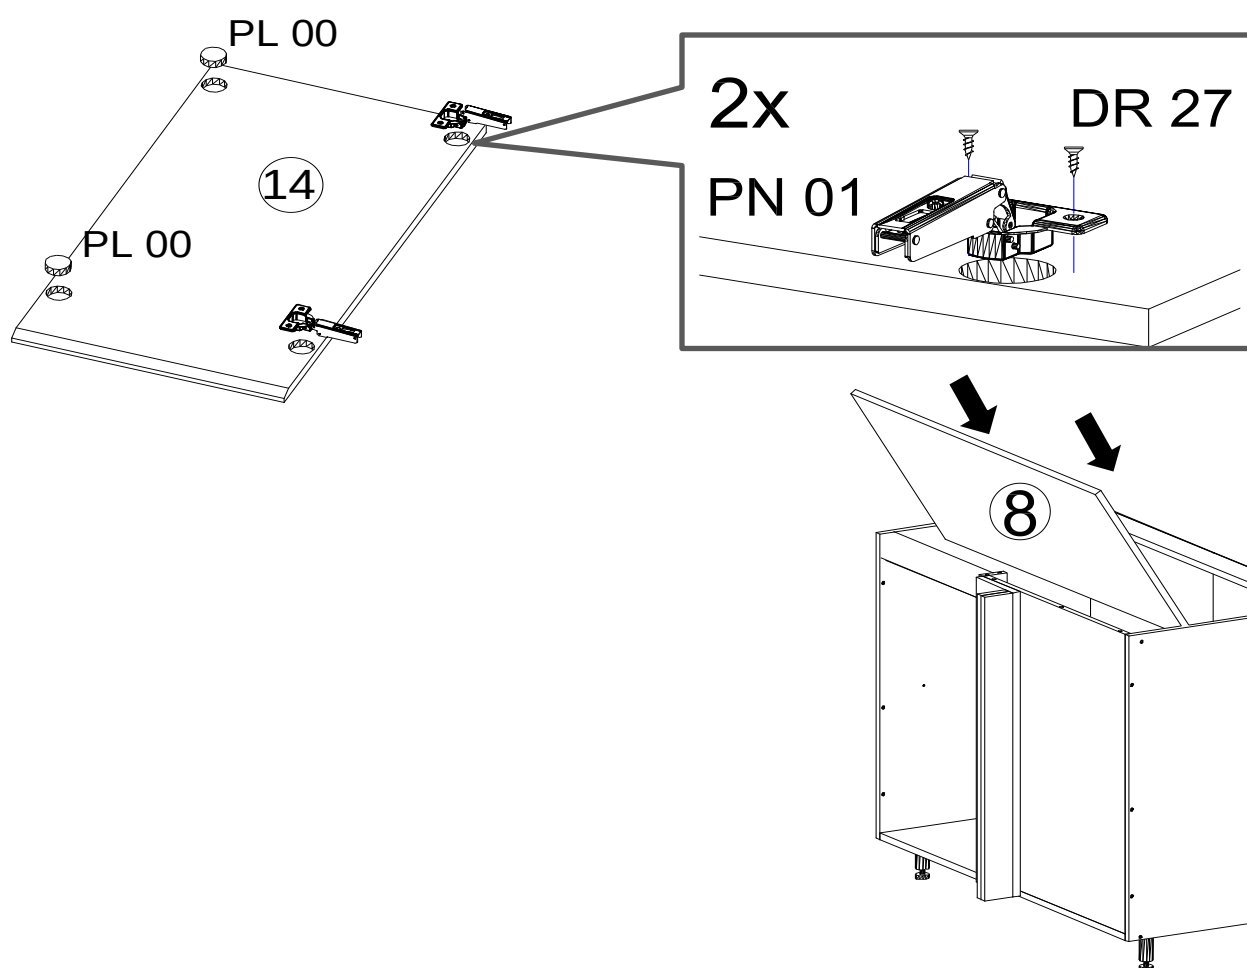

8.

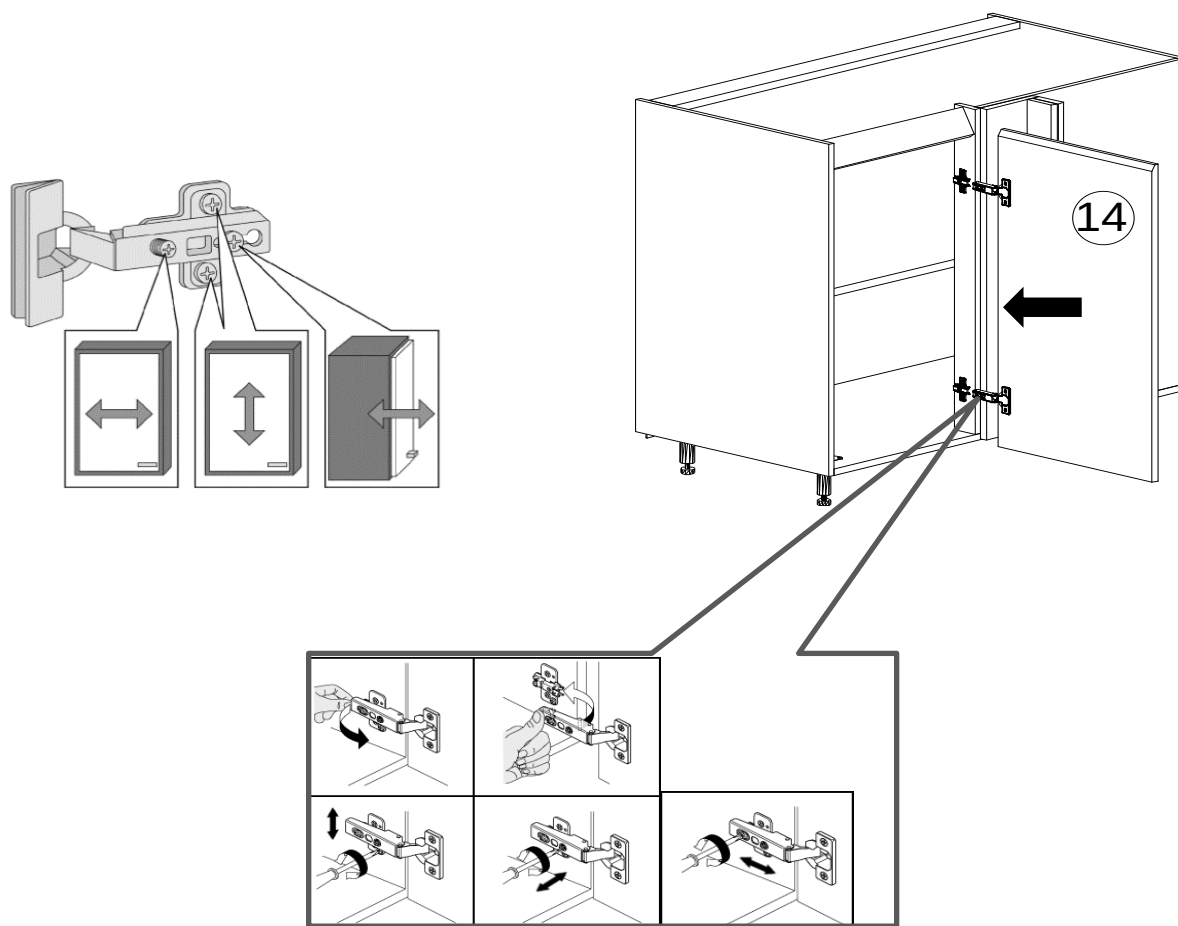

9.

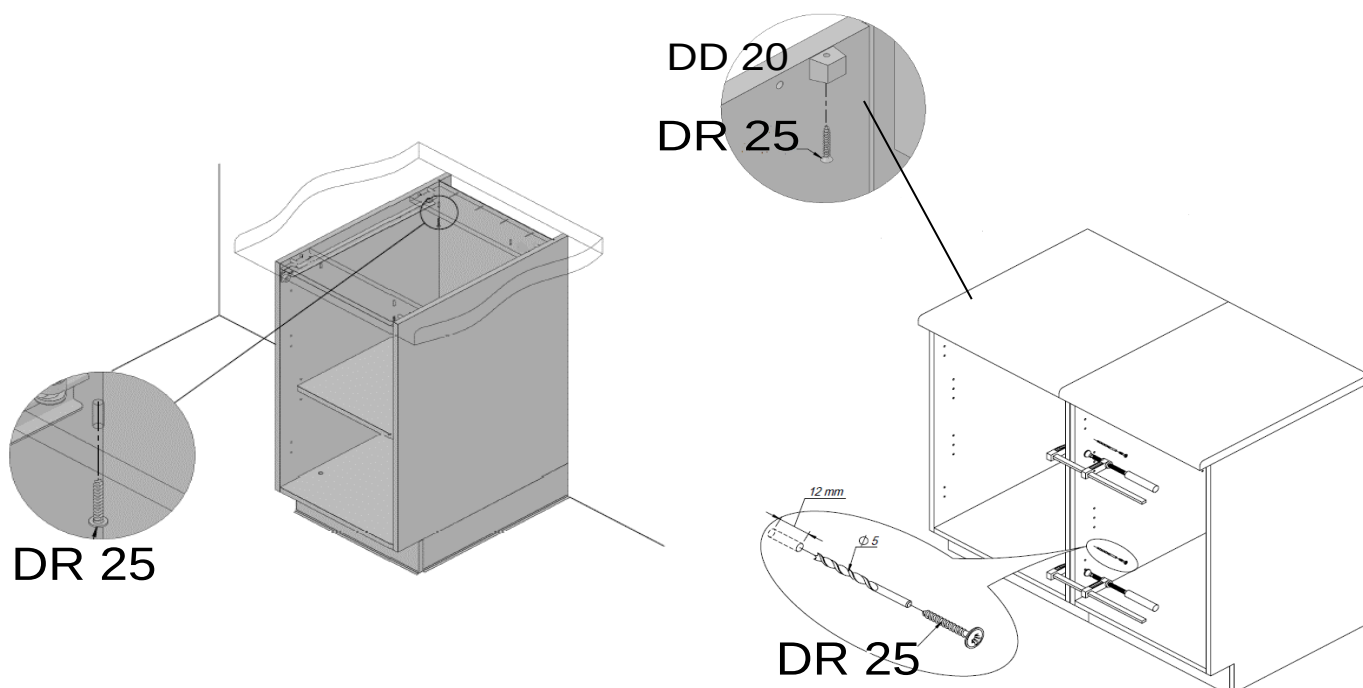

**Az elemek megfelelő stabilitása és baleset megelőzés céljából, az elemeket célszerű egymáshoz rögzíteni egy rejtett pozícióban a (DR 25 4\*25) facsavarral!**