











MODEL : CF 9553-E (3')


ASSEMBLY INSTRUCTION

A	 Arm	2 pcs
B	 Back Panel	1 pc
C	 897mm Slat 14 Pcs	1 pc
D	 Front Side Rail (PU)	1 pc
E	 Back Side Rail	1 pc
F	 Trundle Front Panel (PU)	1 pc
G	 Trundle Back Panel	1 pc
H	 Trundle Side Panel	2 pcs
I	 897mm Slat 14 Pcs	1 pc
J	 Wooden Block	4 pcs
K	 Center Rail 2050mm	1 pc
L	 Center Rail 2030mm	1 pc


Packing Hardware

1	 M5 x 70 mm	1 pc
2	 M4 x 65 mm	1 pc
3	 CSK M4 x 32mm	70 pcs
4	 JCBC M6 X 50	4 pcs
5	 SPRING WASHER	4 pcs
6	 FLAT WASHER	4 pcs
7	 Roller	6 pcs
8	 CSK M3.5 x 16 mm	28 pcs
9	 JCBB M8 X 20	16 pcs

Step 1: Attach side rail (D) & (E) to arm (A) by pushing the bracket down to fit it.

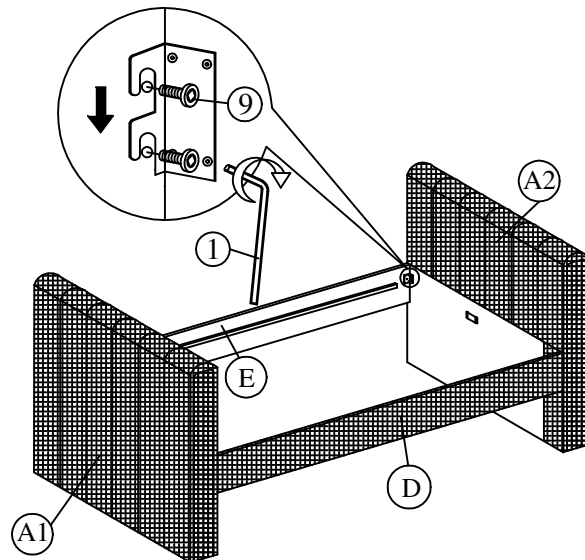


Step 2: Attach the center rail (K) to the arm (A). Tighten CSK screw (8) by using screwdriver (not included) as shown.

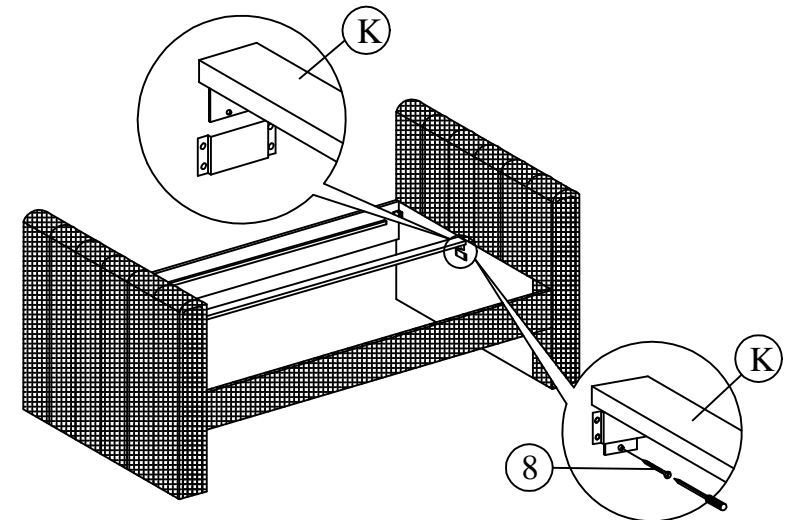


Attention : Please ensure that (8) screw is being attach as per the A.I shown to avoid base being collapse .

Step 3: Attach the Back Panel (B) to the arm (A) as shown.

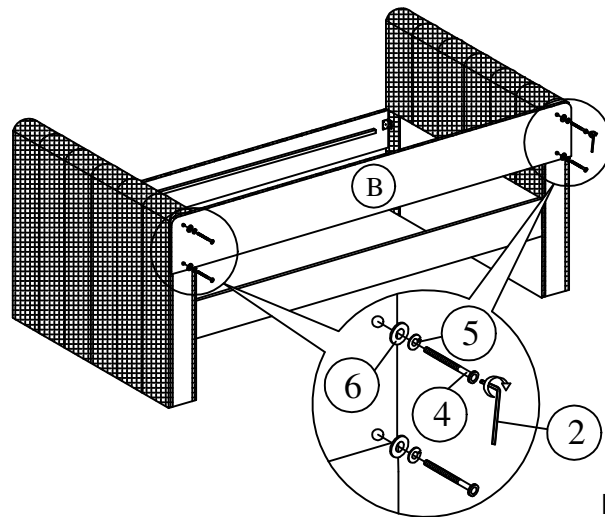


BACK VIEW


Step 4: Tighten the 4 Corner with Allen Key (1). Install the slats to side rail. Tighten the slats with CSK screw (3). The distance of the slats should be sufficient to obtain desirable bed stability.

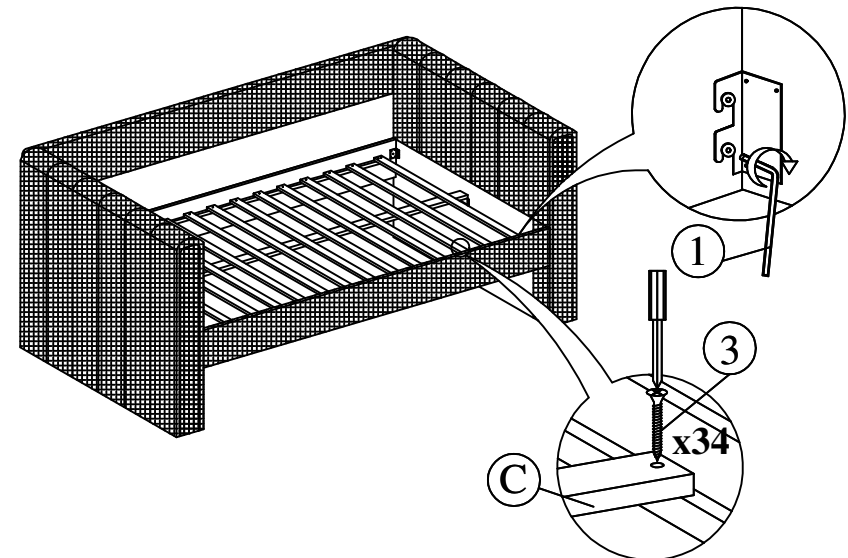


Step 5: Attach trundle side panel (H) and trundle front panel (F) to trundle back panel (G) by pushing the bracket down to fit it.

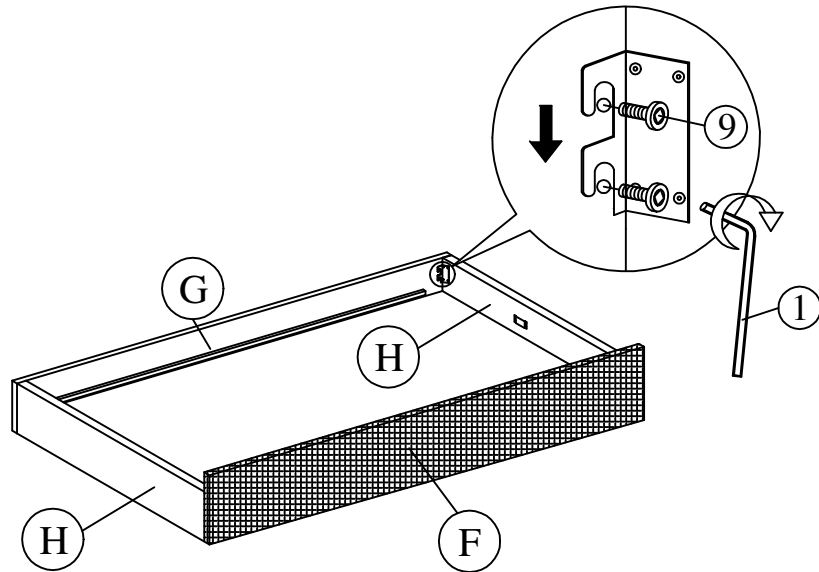


Step 6: Attach the center rail (L) to the trundle side panel (H) as shown.

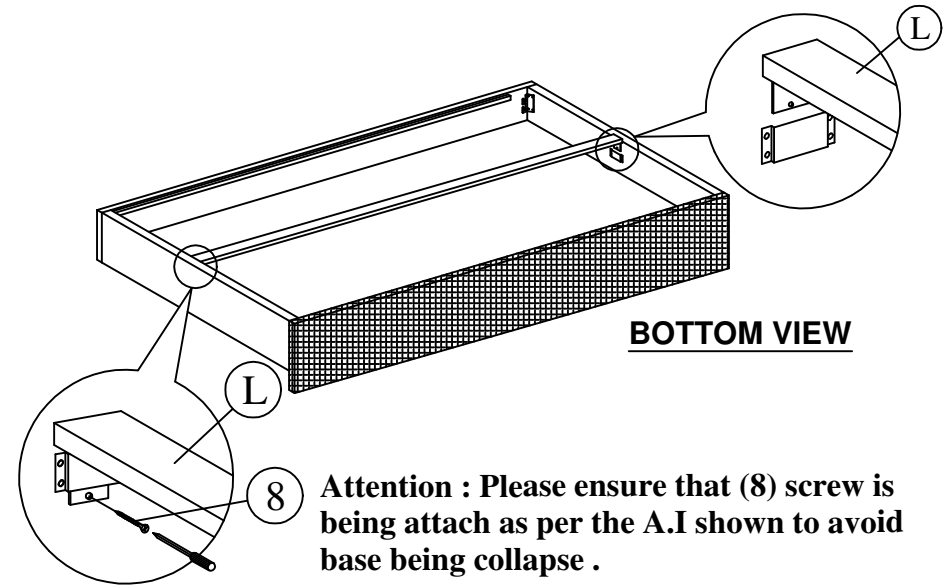

Step 7: Affix the roller (7) to the slat (I) follow the marking on the slat (I).

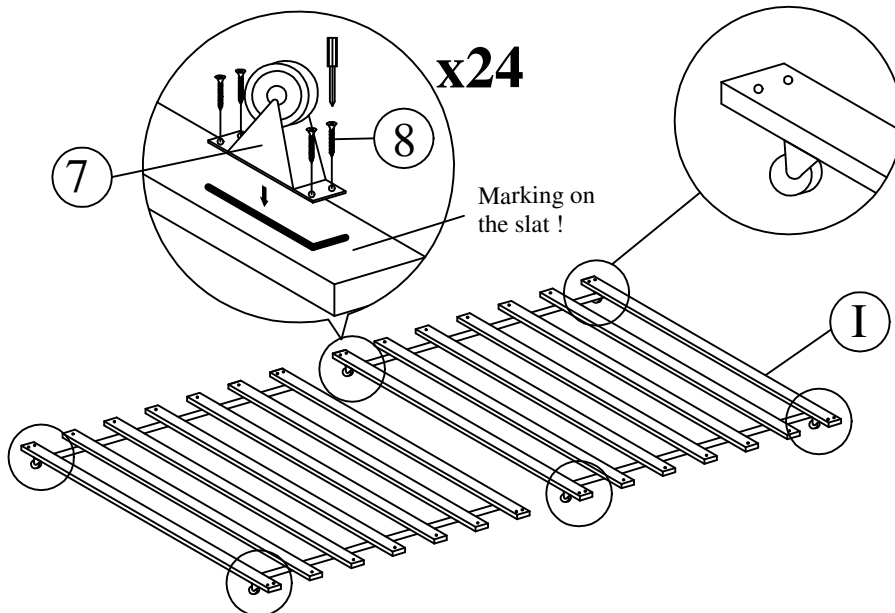

Step 8: Place the wooden blocks (J) at the corner of the trundle and fix the slat (I) to the trundle at (F) & (G).

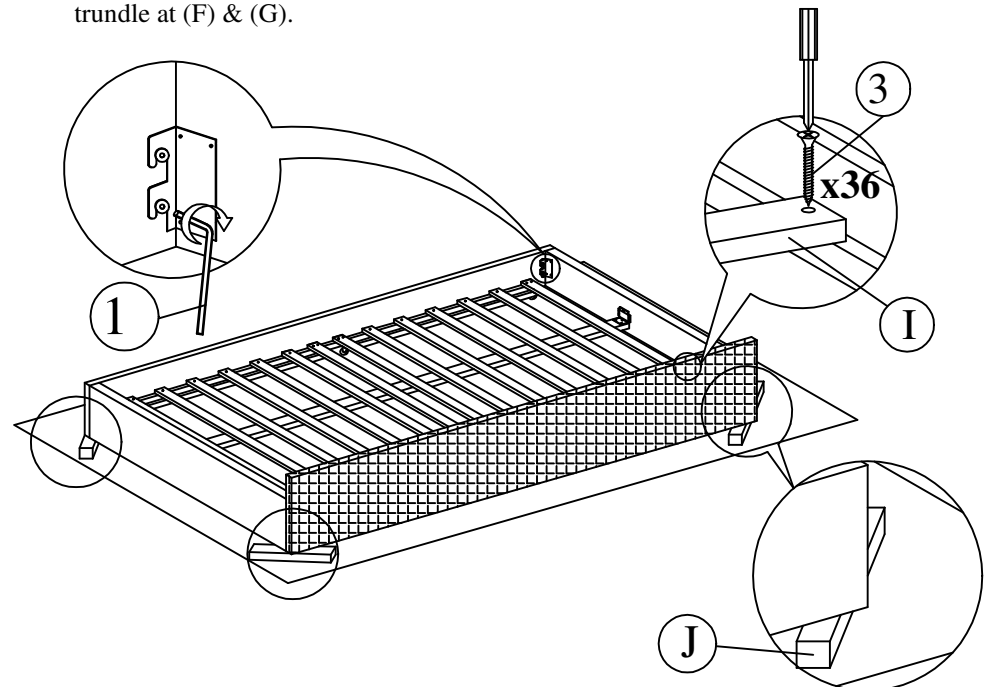

Step 9 : Assembly is complete.

